



# STANDARD WIDTH FRONT BUMPER INSTALLATION INSTRUCTIONS

PART NO. RSFB-JK0001

## Fits:

2007-2018 Wrangler JK/  
2018-2024 Jeep Wrangler JL (Excl. Rubicon/plug-in hybrid  
models/2021-2024 V8 engine) /  
2020-2024 Jeep Gladiator(Excl. Mojave trim)




90-180 min  
Installation time is  
different according  
to individual person.



Cutting Not Required




Drilling Not Required

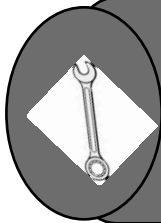

### TOOLS REQUIRED

SCREW DRIVER  
RATCHET SOCKET SET  
TORQUE WRENCH  
ALLEN WRENCH (PROVIDED)  
TRIM PANEL REMOVAL TOOL

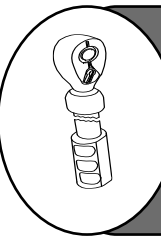

DO NOT OVER TORQUE. PLEASE FOLLOW THE TIGHTEN OPERATING  
LOAD STANDARD BELOW:

**6mm BOLTS & NUTS:** FROM 7 TO 8.5 FOOT POUND.  
**8mm BOLTS & NUTS:** FROM 18 TO 20 FOOT POUND.  
**10mm BOLTS & NUTS:** FROM 35 TO 40 FOOT POUND.  
**12mm BOLTS & NUTS:** FROM 60 TO 70 FOOT POUND.










**TO PROTECT YOUR INVESTMENT,** DO NOT USE ANY TYPE OF POLISH  
OR WAX THAT MAY CONTAIN ABRASIVES THAT COULD DAMAGE THE  
FINISH. MILD SOAP MAY BE USED TO CLEAN THE PRODUCT.



## PARTS LIST:

Description	Qty	Image	Remark
Bumper	1		
3/4"D-Rings	2		
Plastic Retainers	4		
Fog Light Brackets	2		
M12*35 Combo Bolts	4		
M12x35mm Bolts	4		
M12 Nuts	4		

## STANDARD WIDTH FRONT BUMPER

2007-2018 Wrangler JK/2018-2024 Jeep Wrangler JL Sahara & Sport & 4xe Model (exclude Rubicon Model) /  
2020-2024 Jeep Gladiator (exclude Rubicon Model)

Description	Qty	Image	Remark
M12 Flat Washers	8		
M12 Lock Washers	8		
M4x15mm Button Head Bolts	12		Use the provided S=2.5 allen wrench to tighten
M4 Flat Washers	20		
M4 Lock Washers	12		
M4 Nuts	8		
S=2.5 Allen Wrench	1		Use for 4mm hardware

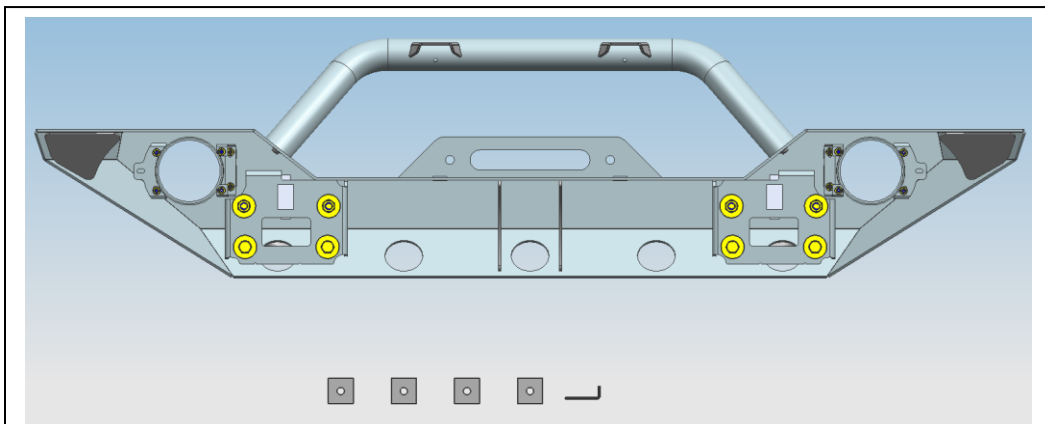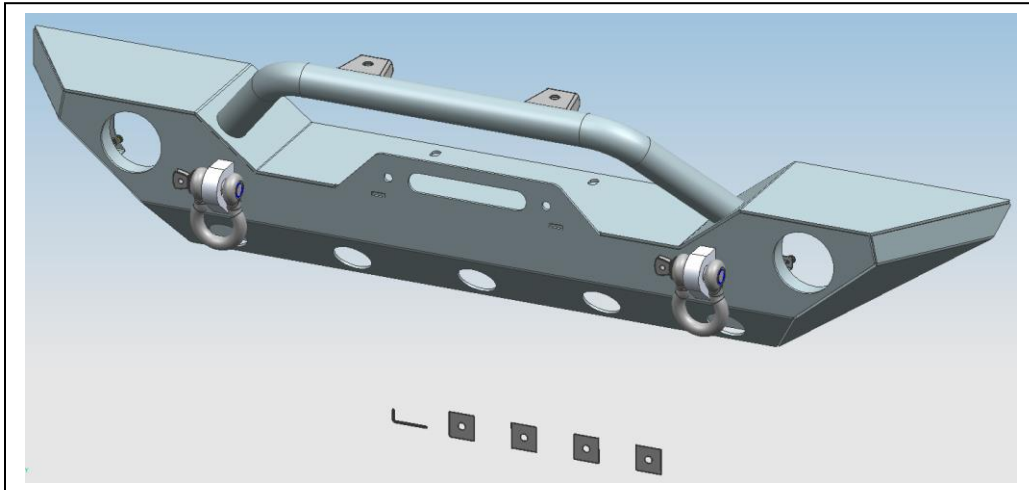

## STANDARD WIDTH FRONT BUMPER

2007-2018 Wrangler JK/2018-2024 Jeep Wrangler JL Sahara & Sport & 4xe Model (exclude Rubicon Model) /  
2020-2024 Jeep Gladiator (exclude Rubicon Model)

### PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. FACTORY INSTALLED OR AFTERMARKET FRONT BUMPERS MUST BE REMOVED.**
- 2. Remove the (6) plastic push pins securing the factory splash shield to the vehicle: (4) Across the front edge, (2) on the rear edge. (Figures 1 )**
- 3. From under the vehicle, remove the factory fog light connectors and free the fog light wiring loom from the bumper. (Figures 2 )**
- 4. From under the vehicle, access and remove the (8) 18mm nuts securing the factory bumper to the vehicle. (Figures 3 )**
- 5. Remove the 2 push pins holding the top cover onto the vehicle. (Figures 4 )**
- 6. Remove the (8) 7mm screws securing the foglights to the factory front bumper. (Figures 5 )**
- 7. Install the fog light bracket using ( 6 ) M4 Bolts, ( 10 ) M4 Flat Washers, ( 6 ) M4 Lock Washers, and ( 4 ) M4 Nuts. Repeat this process for both fog lights. (Figures 6 )**
- 8. Slide the (2) M12 combo Bolts in place (shown in picture) through the open square in the Bumper, and hold them with (2) Plastic Retainers. Repeat this process for both bracket parts. (Figures 7 )**
- 9. Slide the bumper in place. Using the supplied M12 hardware, secure each side of the bumper to the vehicle using ( 4 ) M12 Nuts, ( 4 ) M12 Bo1ts, ( 8 ) M12 Lock Washers, ( 8 ) M12 Flat Washers.(Figures 8 )**
- 10. Install the D-Ring brackets to the bumper. Plug the factory fog light harness into the fog lights. Installation is complete. (Figures 9 )**

## STANDARD WIDTH FRONT BUMPER

2007-2018 Wrangler JK/2018-2024 Jeep Wrangler JL Sahara & Sport & 4xe Model (exclude Rubicon Model) /  
2020-2024 Jeep Gladiator (exclude Rubicon Model)


### Installation Pictured



**(Fig 1)** Remove the (6) plastic push pins securing the factory splash shield to the vehicle



**(Fig 3)** From under the vehicle, access and remove the (8) 18mm nuts securing the factory bumper to the vehicle.

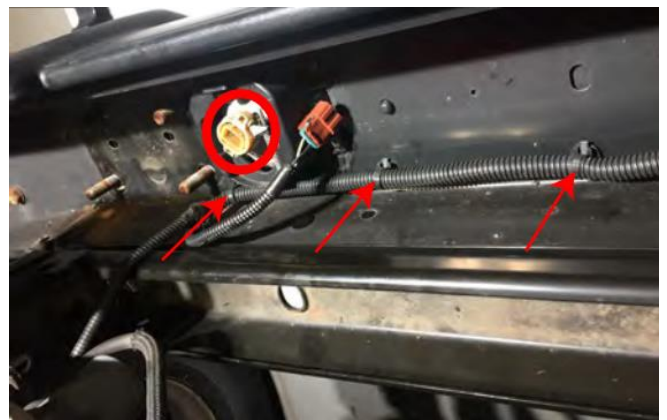

**(Fig 2)** From under the vehicle, remove the factory fog light connectors and free the fog light wiring loom from the bumper.



**(Fig 4)** Remove the 2 push pins holding the top cover onto the vehicle.


## STANDARD WIDTH FRONT BUMPER

2007-2018 Wrangler JK/2018-2024 Jeep Wrangler JL Sahara & Sport & 4xe Model (exclude Rubicon Model) /  
2020-2024 Jeep Gladiator (exclude Rubicon Model)


### Installation Pictured



**(Fig 5) Remove the (8) 7mm screws securing the fog lights to the factory front bumper.**

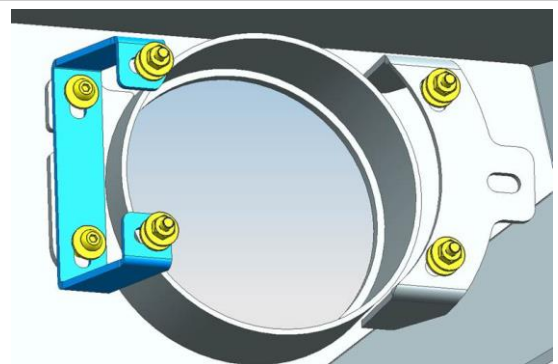

**(Fig 6) Install the fog light using (6) M4 Bolts, (10) M4 Flat Washers, (6) M4 Lock Washers, and (4) M4 Nuts. Repeat the process for both fog lights.**

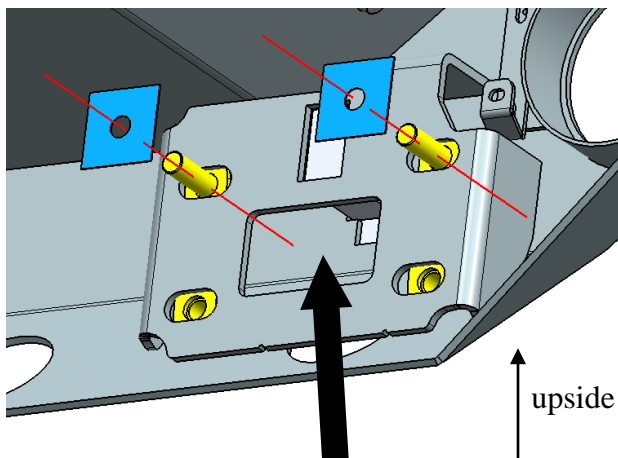


**(Fig 7) Slide the (2) M12 combo Bolts in place (shown in picture) through the open square in the Bumper, and hold them with (2) Plastic Retainers. Repeat this process for both bracket parts.**




## STANDARD WIDTH FRONT BUMPER

2007-2018 Wrangler JK/2018-2024 Jeep Wrangler JL Sahara & Sport & 4xe Model (exclude Rubicon Model) /  
2020-2024 Jeep Gladiator (exclude Rubicon Model)

### Installation Pictured

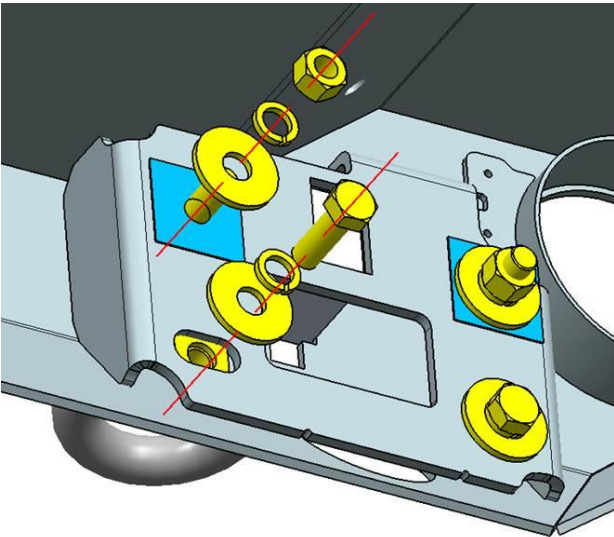

(Fig 8) Slide the bumper in place. Using the supplied M12 hardware, secure each side of the bumper to the vehicle using (4) M12 Nuts, (4) M12 Bo1ts, (8) M12 Lock Washers, (8) M12 Flat Washers. Torque to 40 ft-lbs.

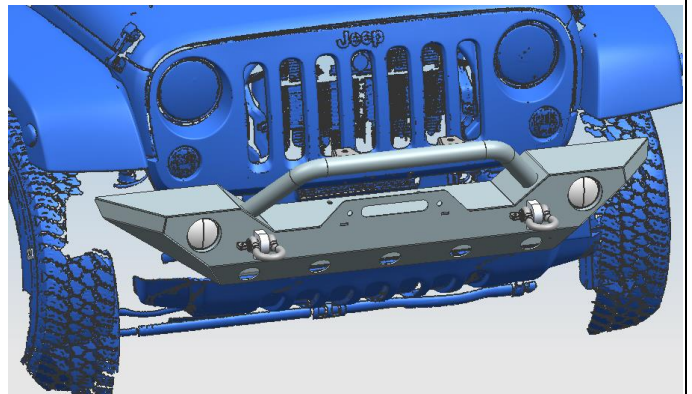

(Fig 9) Install the D-Ring brackets to the bumper. Plug the factory fog light harness into the fog lights. Installation is complete.