


## Filter cotton replacement

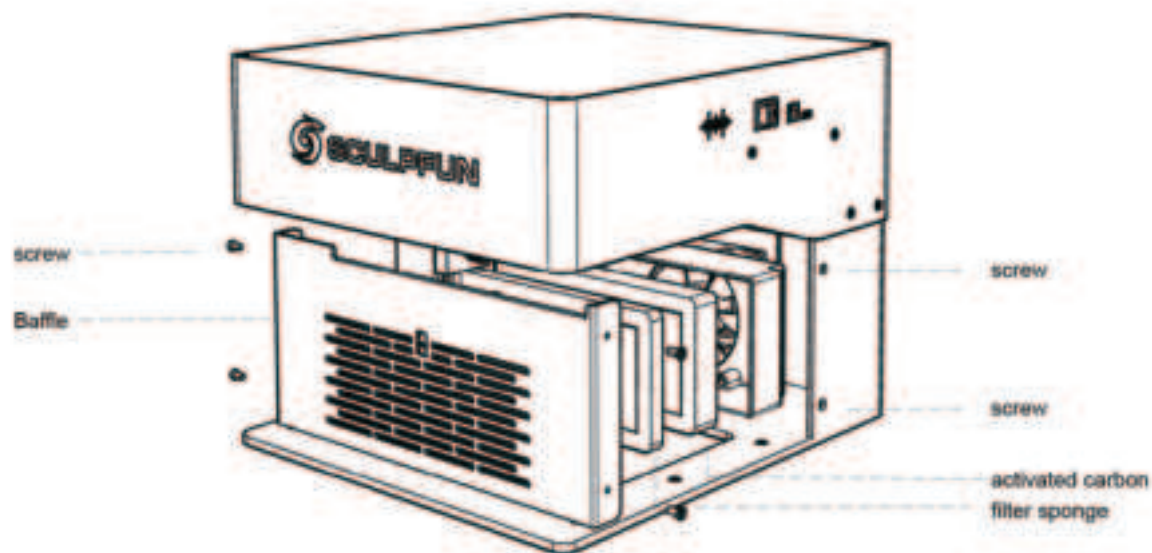

- ① Unscrew the four screws on the left and right sides as shown in the picture
- ② Please carefully disassemble the baffle. There is a buzzer wire behind the baffle (be careful not to tear it)
- ③ Put in activated carbon and filter cotton in sequence
- ④ Align the baffle with the hole and tighten the screws

Tips: Please watch our YOUTUBE channel for detailed replacement video tutorials



Scan the QR code to  
get more content