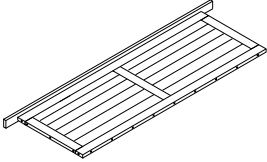




ASSEMBLY INSTRUCTIONS

Full/Queen Headboard (Campagne Wood)


PARTS LIST

Code	Description	QTY
1 . Headboard		1 pc
2 . Crossbar		1 pc
3 . Legs		2 pcs


HARDWARE LIST

Code	Description	QTY
A . Dowel $\varnothing 8 \times 30 \text{mm}$		10 pcs
B . Screw M6x40mm		13 pcs
C . Cam lock $\varnothing 15 \text{mm}$		13 pcs
D . Screwdriver		1 pc
E . Allen key 4mm		1 pc
F . Bed Frame bolt M6x70mm		4 pcs
G . Flat washer		8 pcs
H . Nut M6		4 pcs

Step 1

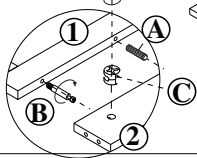

Step 2

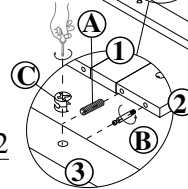

Step 3

