


# HOW TO MEASURE - INSIDE MOUNTED


## STEP 1 – MEASURE WIDTH:

Measure top, middle, and bottom of your window opening. Select your narrowest measurement of these three as your window's width.

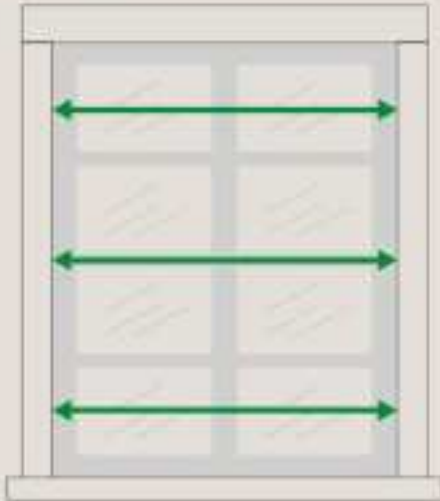

## STEP 2 – MEASURE HEIGHT:

Measure left, center, and right of your window opening. Use the tallest of these three measurements as your window's height.

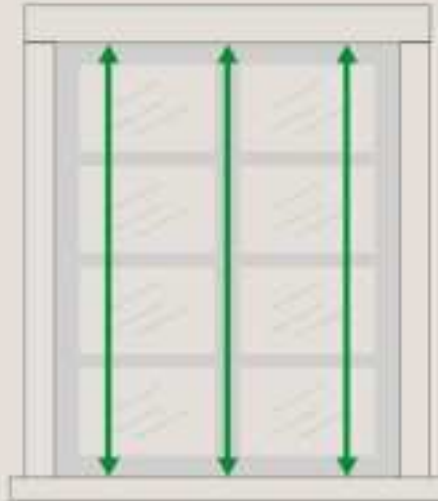


**STEP 3 – MEASURE DEPTH:** Minimum of  $\frac{3}{4}$  inch depth is needed for inside mounting.

**STEP 4 – CHOOSE SIZE:** Before selecting your size to order, take your window's width measurement and subtract  $\frac{1}{4}$  inch or more (no more than 1 inch) to determine the width to order. This deduction will allow your shade to move easily up and down without wall interference. Example: Your window measured 30 inches wide, you would order a shade between 29 and 29- $\frac{3}{4}$  inches wide.


**ALL PRODUCT SIZES SHIP AS LISTED**

# HOW TO MEASURE - OUTSIDE MOUNTED

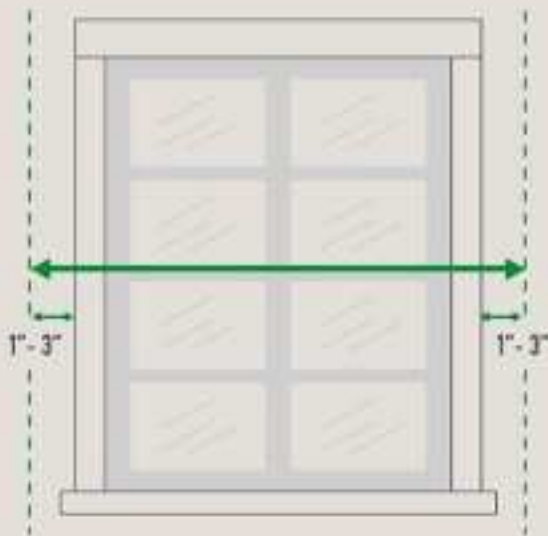

## STEP 1 – MEASURE WIDTH:

We recommend selecting a width location that adds 1 to 3 inches on each side of your window opening. Once selected, measure between these two points for your width measurement.

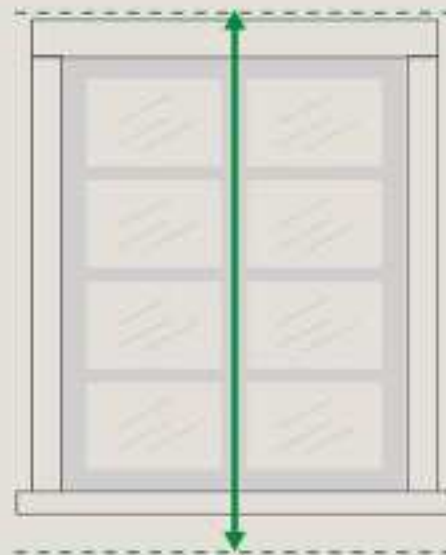

## STEP 2 – MEASURE HEIGHT:

Select a location above your window opening for the headrail with at least 7/8 inch of flat space for mounting hardware. Then select how far below the window you want your shade to reach and measure between these two points for your height measurement.

**STEP 3 – CHOOSE SIZE:** Before selecting your size to order, choose the product size that is the same or wider than your width measurement and the same or taller for your height measurement.

**ALL PRODUCT SIZES SHIP AS LISTED**