


COSTWAY

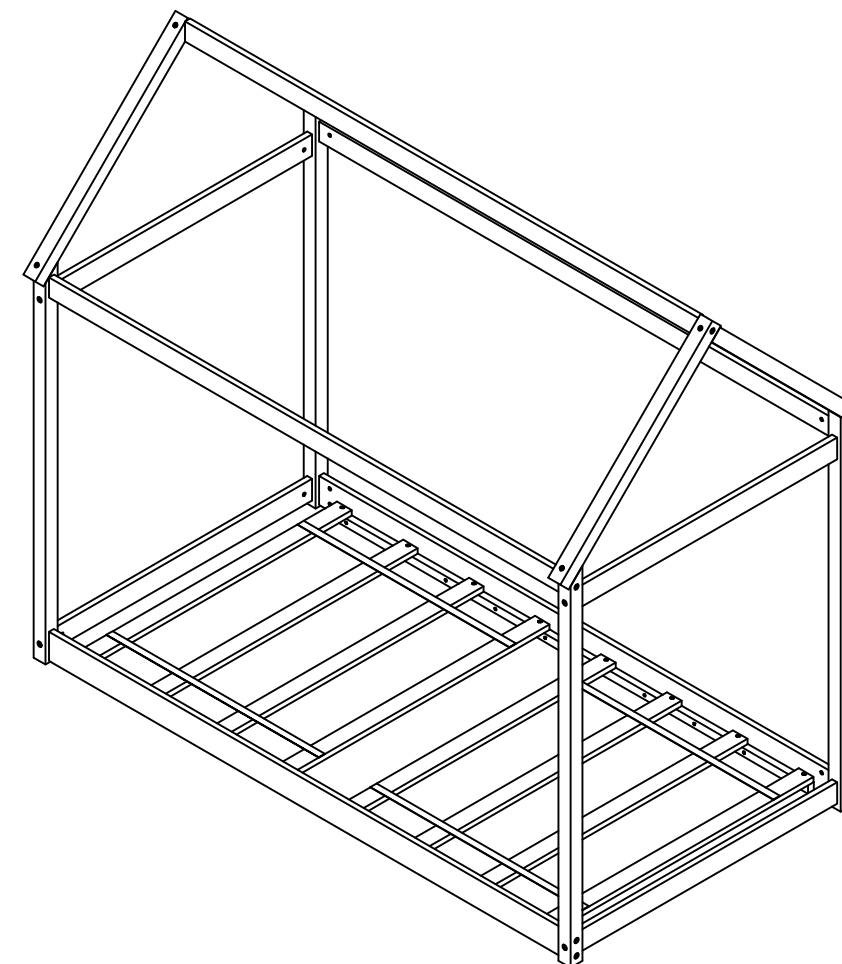


## USER'S MANUAL HOUSE BED FRAME HU10054

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

### Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP!

FLOOR AREA  
2MX2M

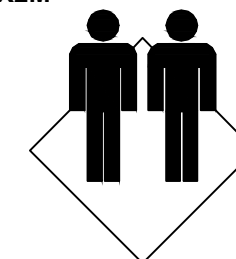

ASSEMBLED BY 2 ADULTS

Follow Costway




# Contact Us!

## Do NOT return this item.


Contact our friendly customer service department for help first.



## Before You Start

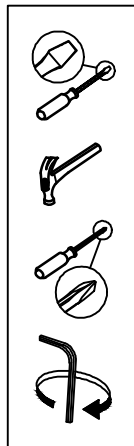


- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

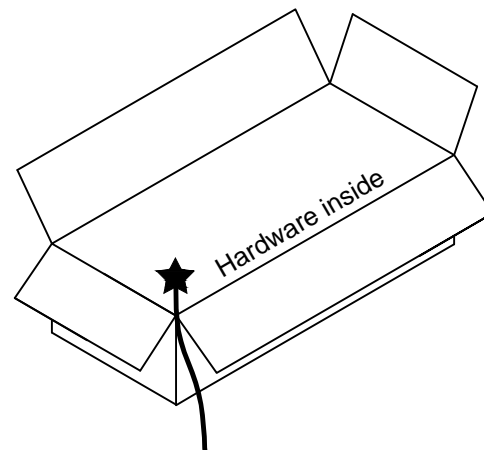

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you  
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California  
UK office: Ipswich

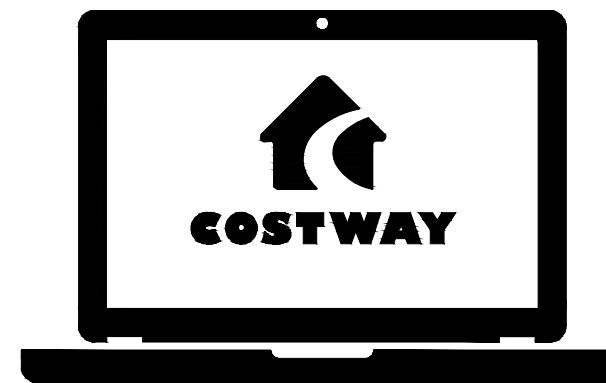

- \* Reward Points
- \* Exclusive Customer Service
- \* Presonalized Recommendations
- \* Premanent Shopping Cart
- \* Order History

## 5 Star Rating



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
YOU  
😊

## Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

## Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.


Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.











Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.
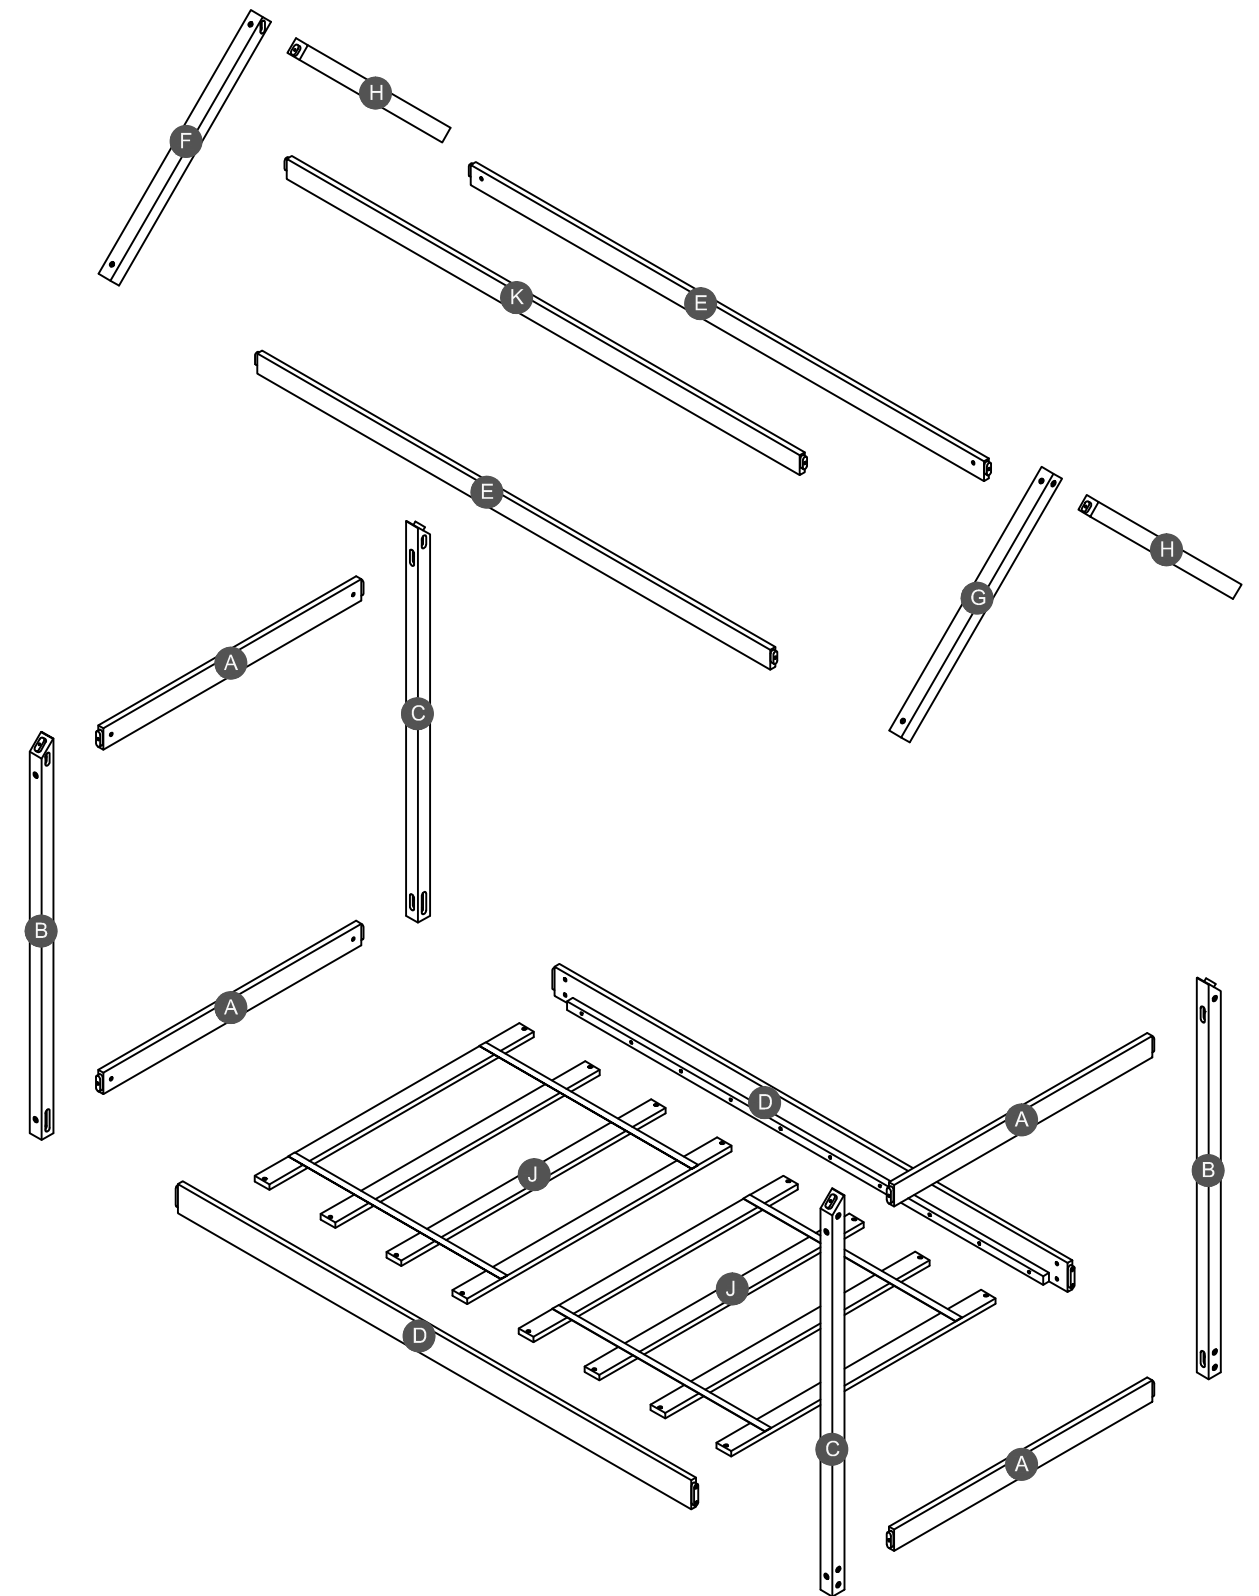
### Detail View



# Part List



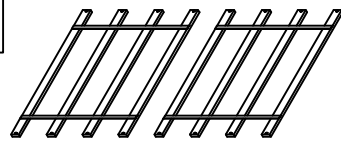

<b>A</b>  Horizontal bar HB/FB - 4pcs	<b>B</b>  Leg (Left front&Right back) - 2pcs	<b>C</b>  Leg (Left Back&Right front) - 2pcs
<b>D</b>  Side rail (Front Back) -2pcs	<b>E</b>  Upper horizontal (Front Back) - 2pcs	<b>F</b>  Upper (Left Front) - 1pc
<b>G</b>  Upper (Right Front) - 1pc	<b>H</b>  Upper (Back) - 2pcs	<b>J</b>  Slat - (8pcs)
<b>K</b>  Upper horizontal (Middle) - 1pc		

## STEP 6:

6




16PCS

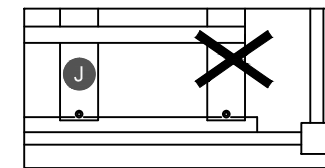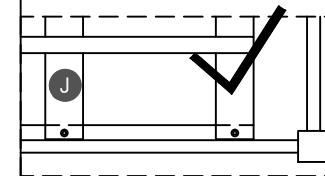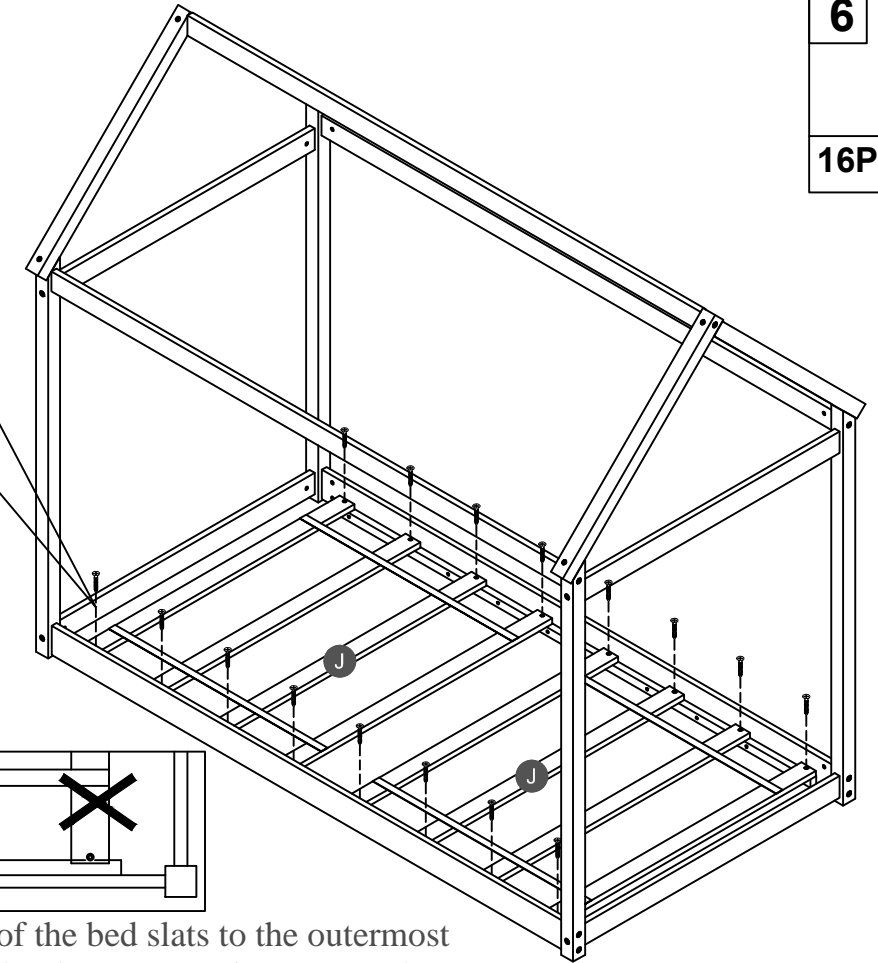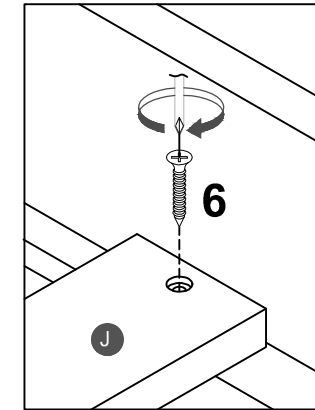




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

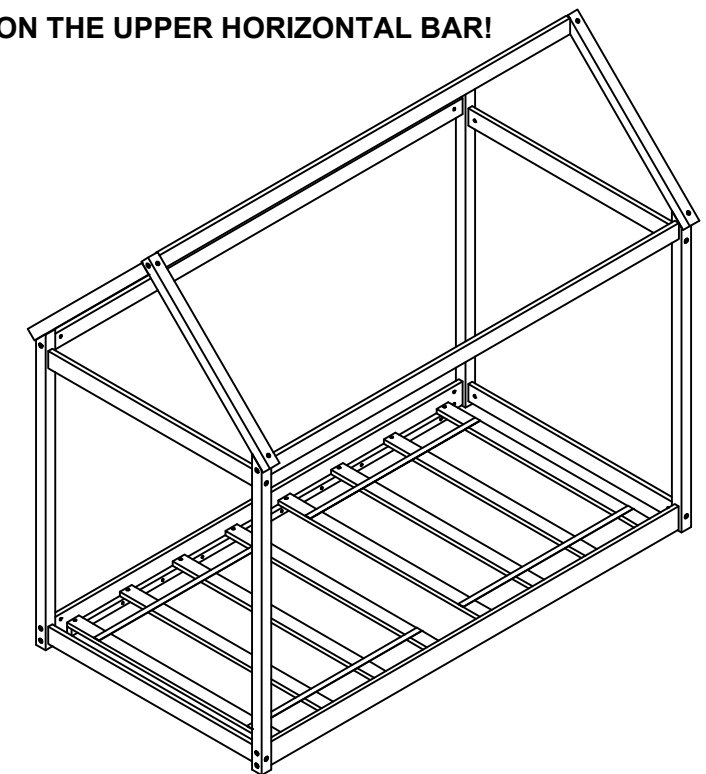**REMARK: WARNING DO NOT HANG ON THE UPPER HORIZONTAL BAR!**

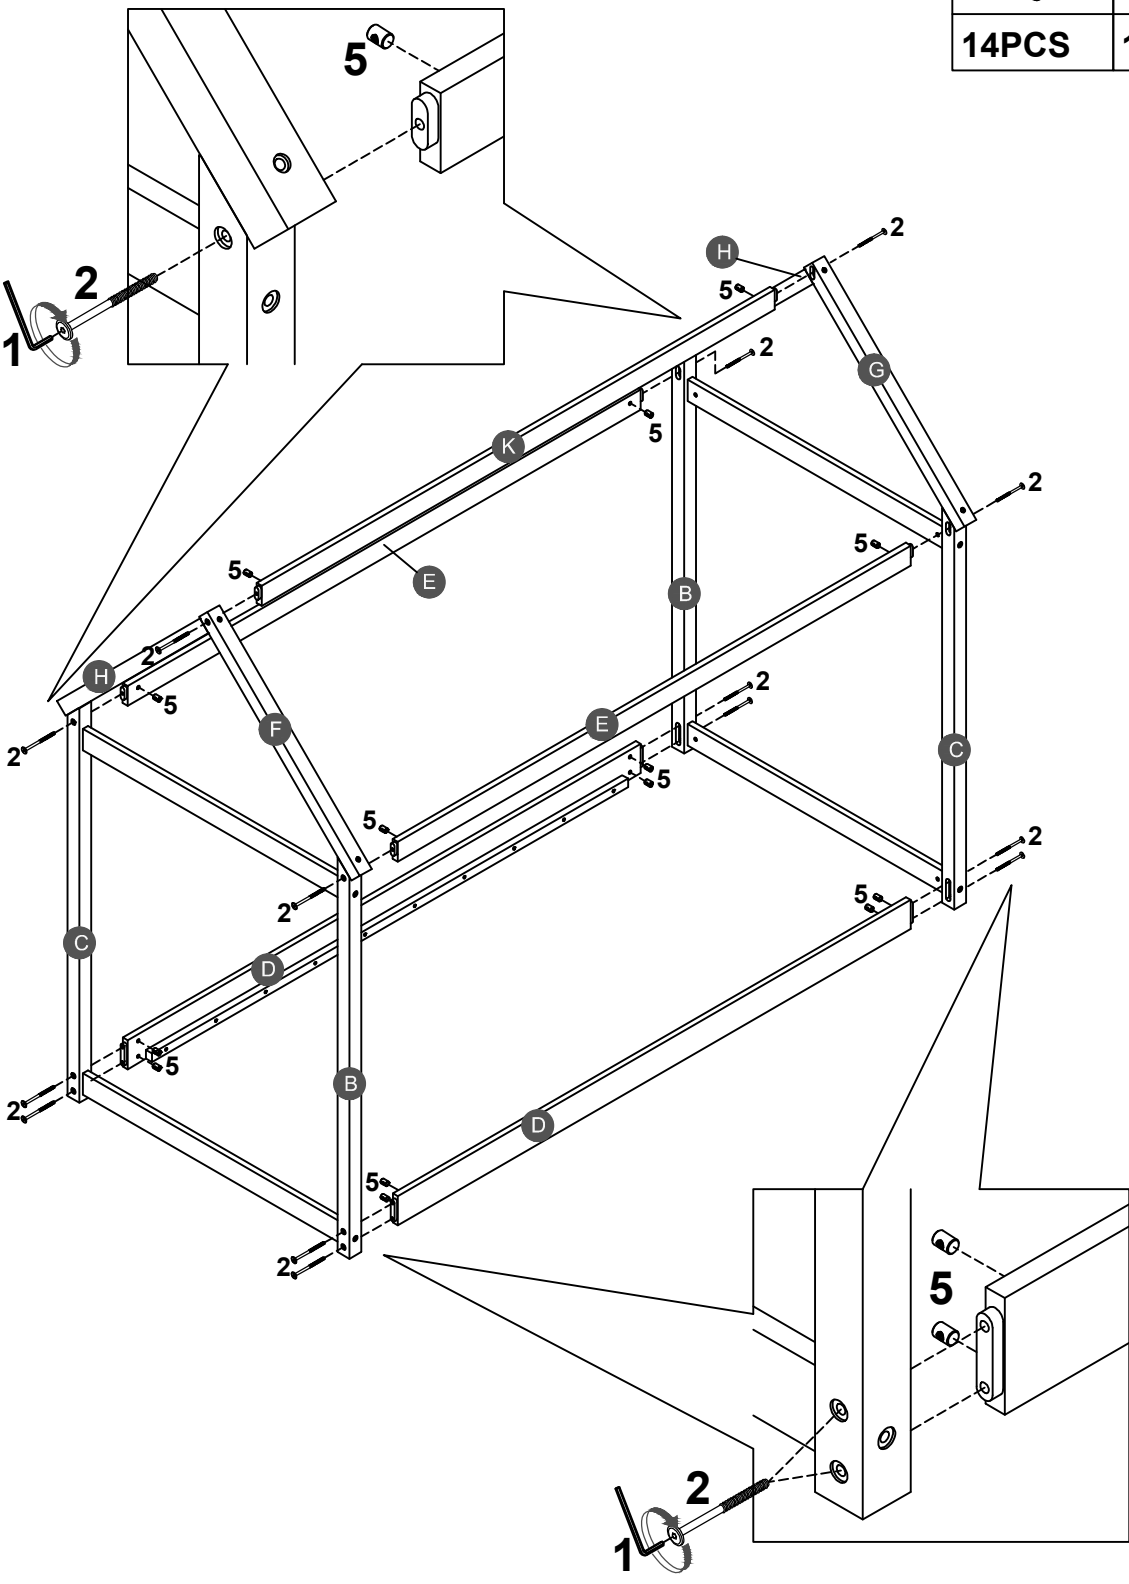







STEP 5:




2		5	
14PCS		14PCS	

Remark: Upper horizontal (K) paste stickers  
WARNING: DO NOT HANG ON THIS BAR!

Hardware List


1	 (1/4")4.5*58mm Allen key (1pc)	2	 (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (8pcs)
4	 (Ø12)1/4"*65mm Hex-Head bolts (6pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(22pcs)	6	 Ø4*30mm Wood screws (16pcs)

ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE  
POSITION WHEN YOU USE POWER TOOLS !


**STEP 1:**

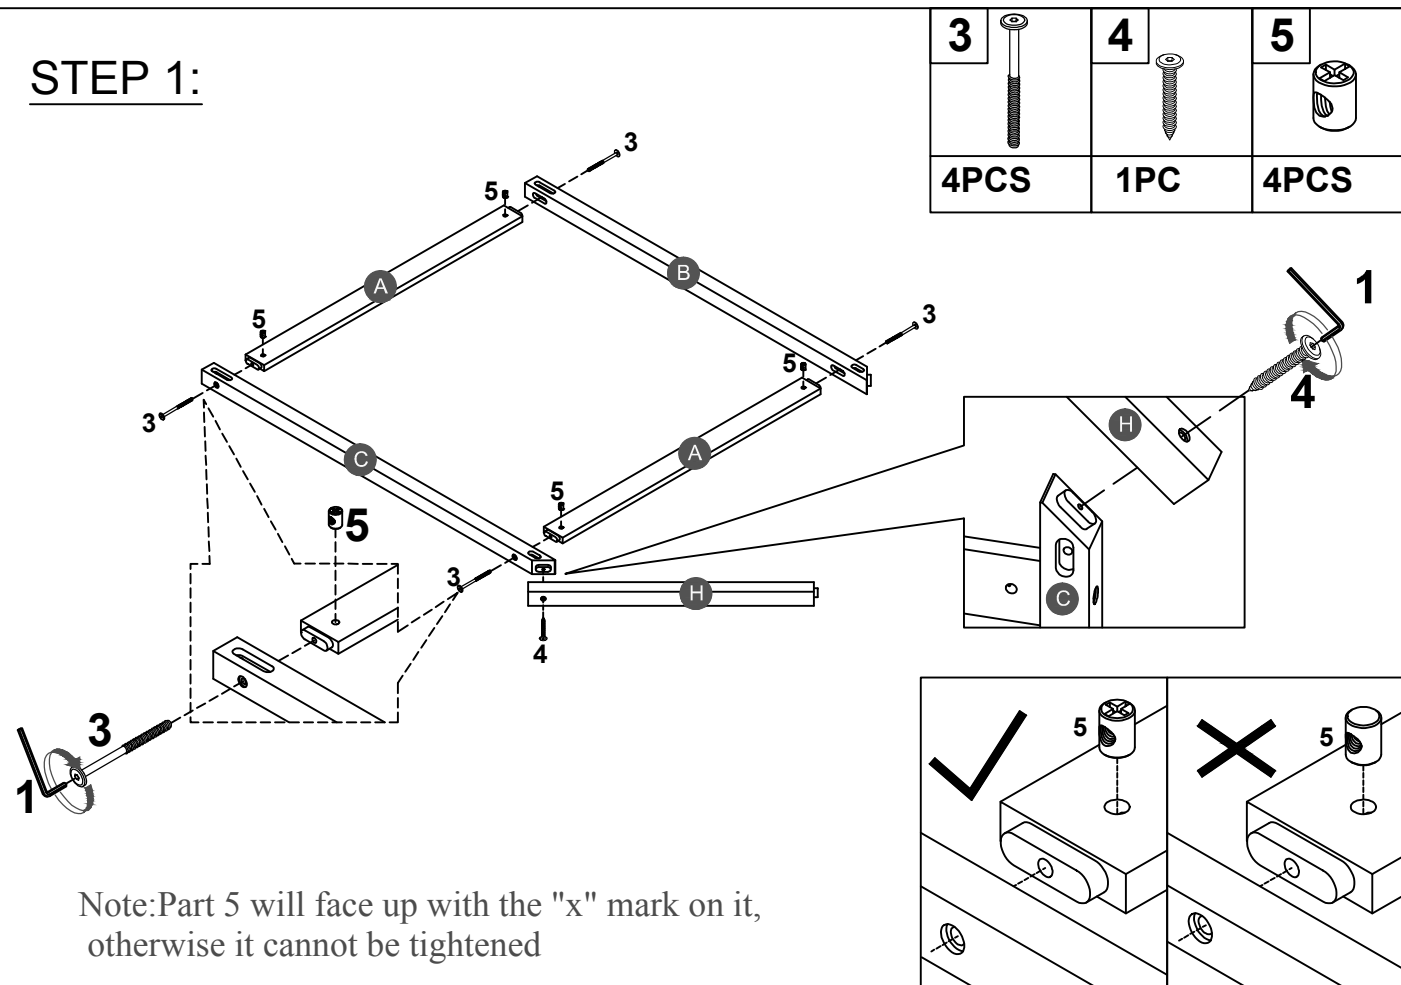

**STEP 2:**

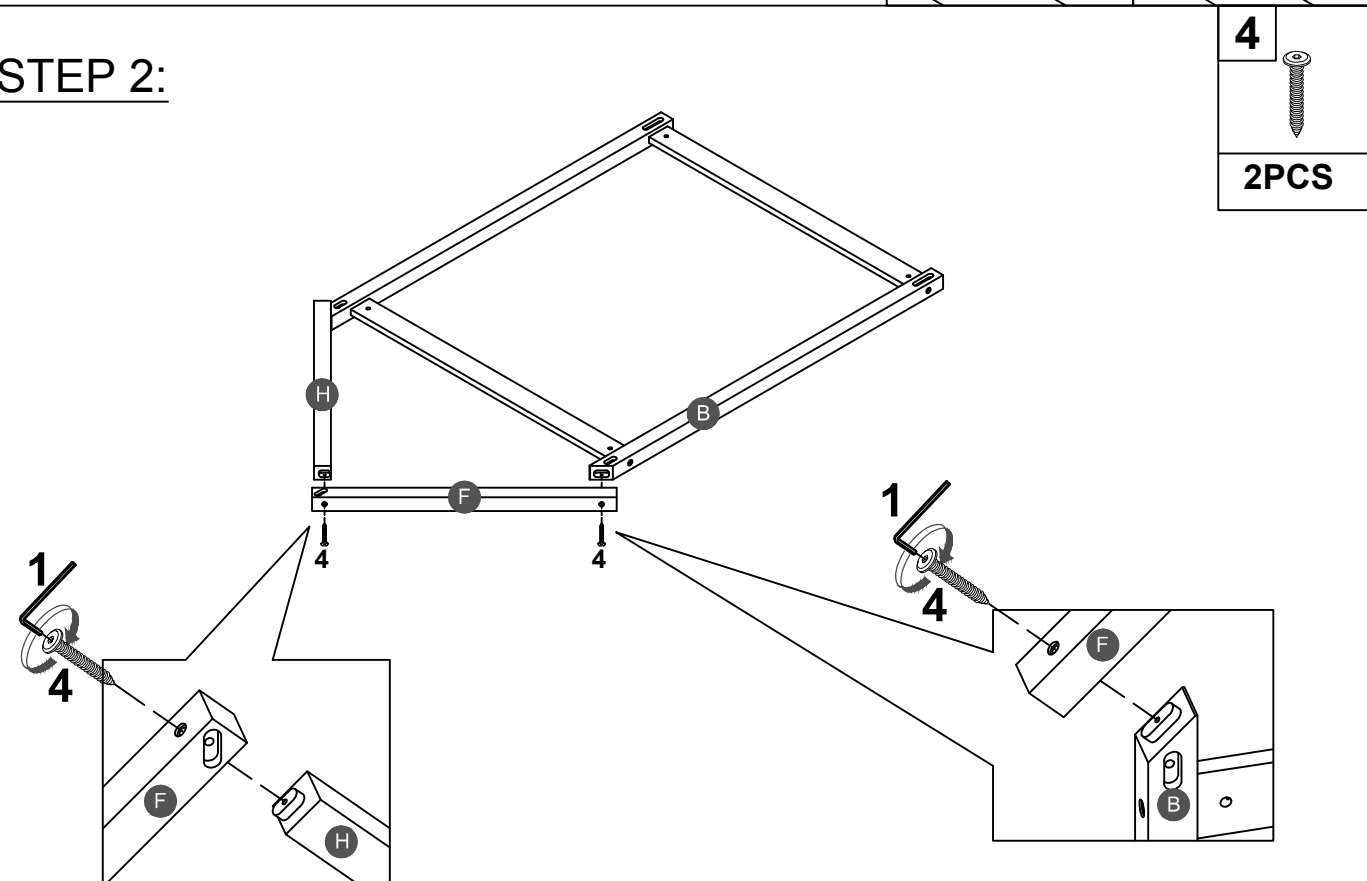

**STEP 3:**

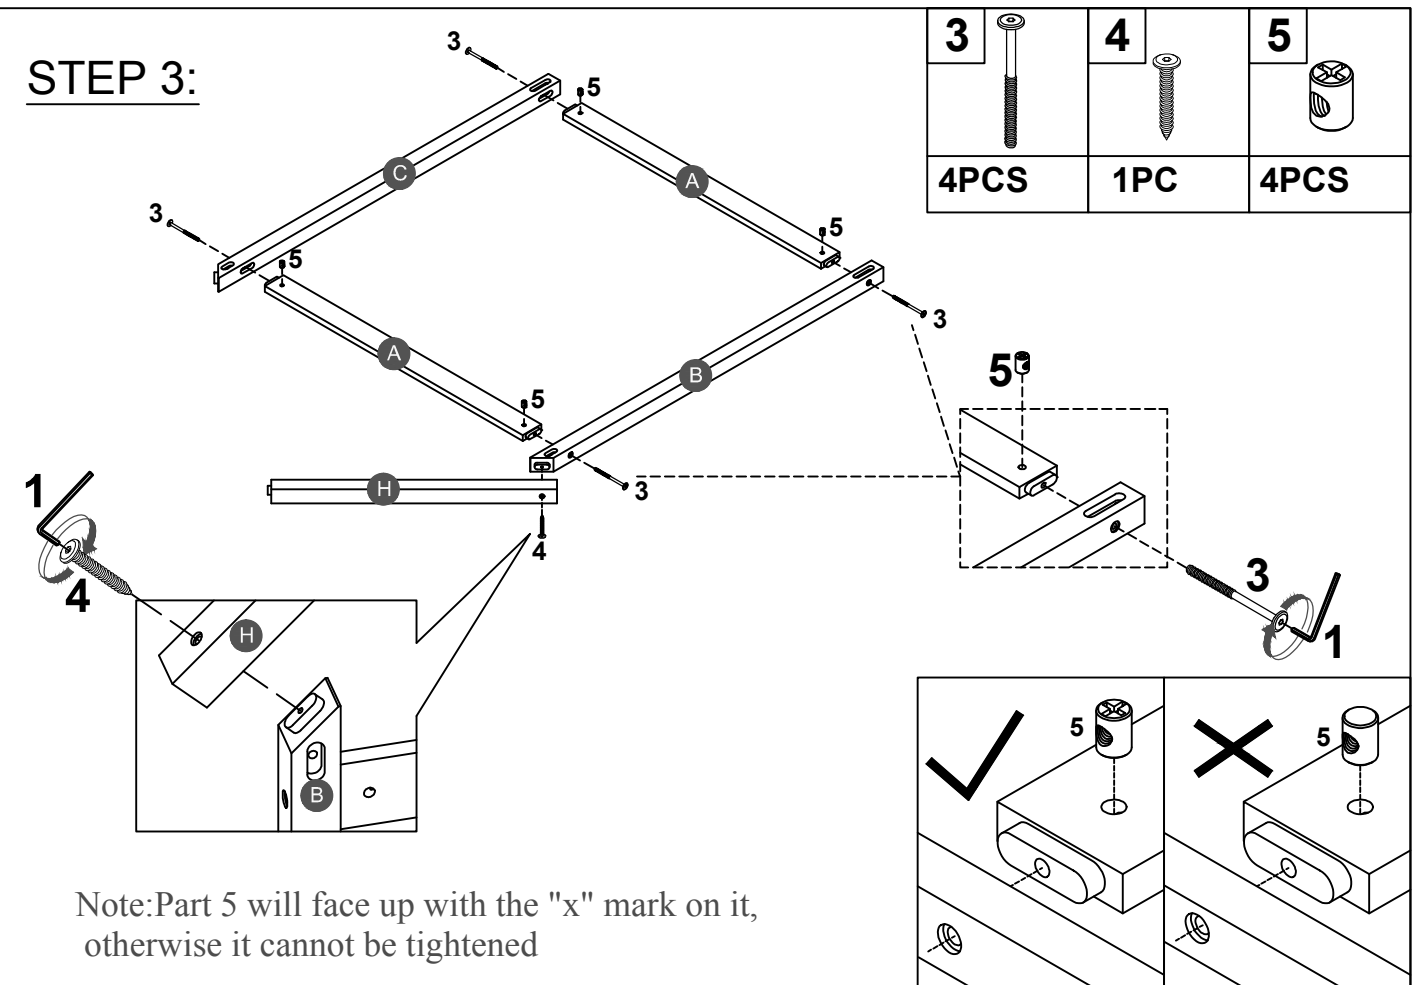

**STEP 4:**

