




## TENSION DEVICE INSIDE & OUTSIDE MOUNT INSTALLATION INSTRUCTIONS

Rollashade.com  
info@rollashade.com  
951.245.5077


RAS-INS-MAR-TD-001-Rev1 © Copyright Roll A Shade® Inc. All Rights Reserved.

© ROLL A SHADE

#### HARDWARE INCLUDED



Tension Device +  
Chain

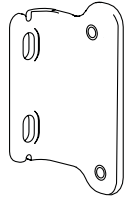

Tension Device  
Bracket




Short  
Screws



Screws

#### TOOLS REQUIRED




3/8" Hex Head



Phillips Head




1/8" Drill Bit



Drill

#### INSIDE OR OUTSIDE APPLICATION

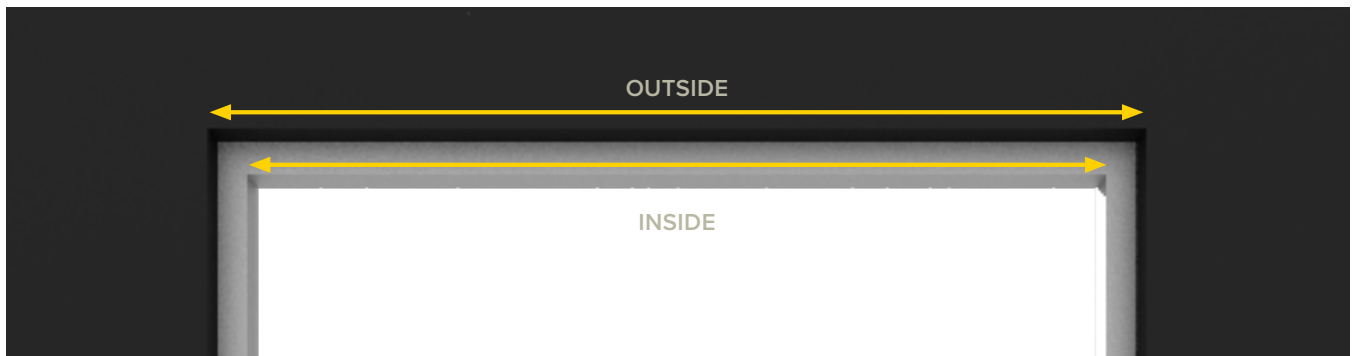

INSIDE



OUTSIDE

## INSIDE MOUNT & TENSION DEVICE INSTALLATION


Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall.

**A**

KEEP  
TENSION



**B**

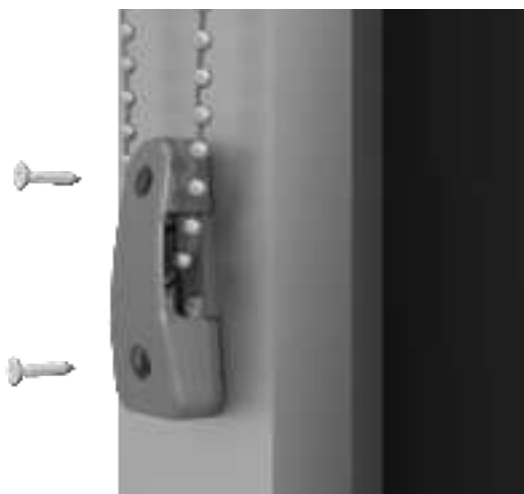

**C**

SECURE  
TENSION  
DEVICE



**NOTE:** Please make sure shade operates smoothly.

## OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.

A

PULL CHAIN  
DOWN &  
MARK  
LOCATION



B

REMOVE  
TENSION  
DEVICE  
& DRILL



C



D



E

PLACE  
TENSION  
DEVICE ON  
BRACKET



F

SECURE  
TENSION  
DEVICE



**NOTE:** Please make sure shade operates smoothly.




## TENSION DEVICE FLOOR INSIDE & OUTSIDE MOUNT INSTALLATION INSTRUCTIONS

Rollashade.com  
info@rollashade.com  
951.245.5077


RAS-INS-MAR-TD-002-Rev1 © Copyright Roll A Shade® Inc. All Rights Reserved.

© ROLL A SHADE

## HARDWARE INCLUDED



Tension Device +  
Chain

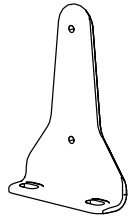

Tension Device  
Floor Bracket




Short  
Screws



Screws

## TOOLS REQUIRED




3/8" Hex Head



Phillips Head





1/8" Drill Bit

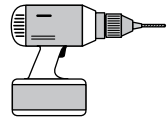


Drill

## INSIDE OR OUTSIDE APPLICATION

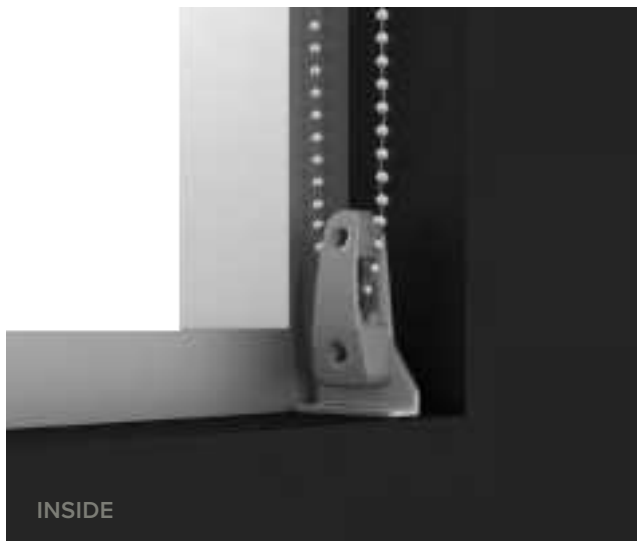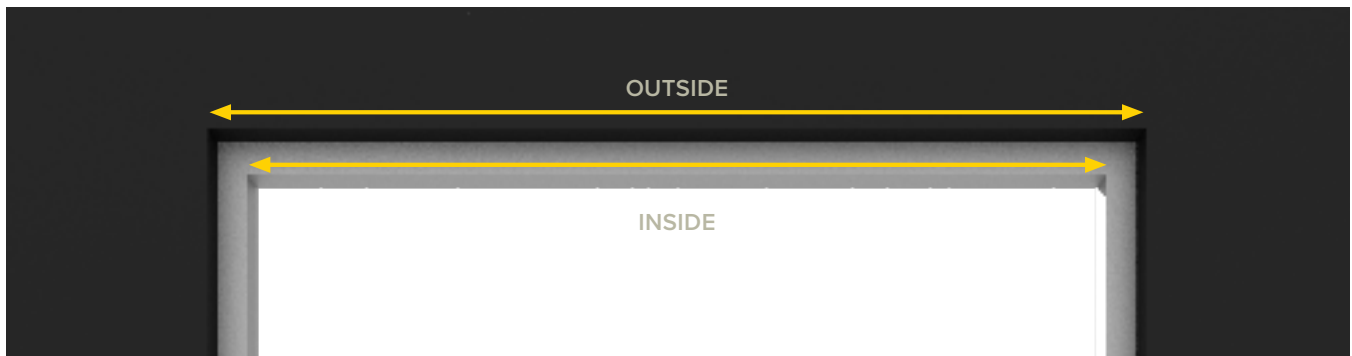

INSIDE

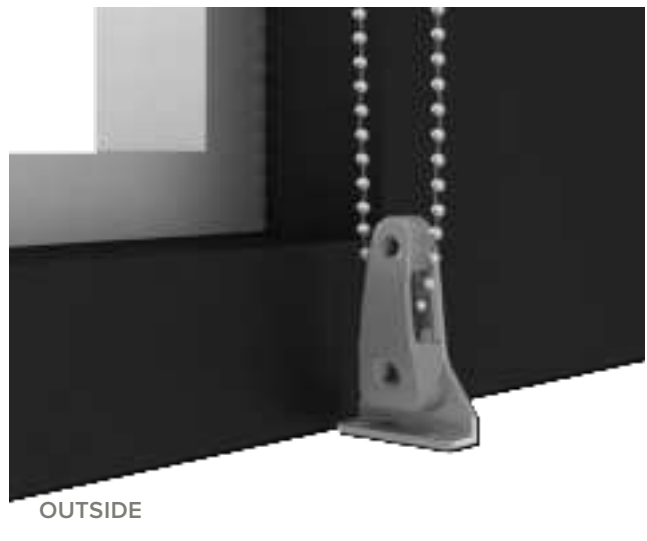


OUTSIDE

## OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws.

A

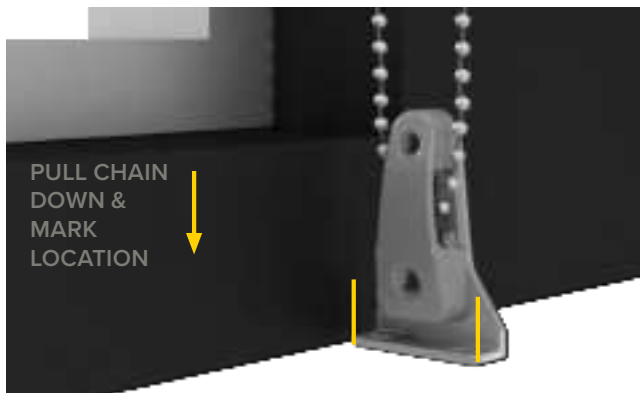

B



C



D



E



F



**NOTE:** Please make sure shade operates smoothly.