

Required Hardware:

8-Bay Lockers

QTY 2 KwikBoost Standard Replacement Cable Bundle:

- USB-C x 8
- Lightning x 8
- Zip ties x 8

10-Bay Locker

QTY 2 KwikBoost Standard Replacement Cable Bundle:

- USB-C x 10
- Lightning x 10
- Zip ties x 10

Required Tools:



Rear Access Panel Door Key
(supplied with Locker)



Wire Cutters
(or scissors)

Assembly:

1 Unplug the Charging Locker from the wall outlet.



2 Access the electronics by unlocking and opening the door located on the back of the locker.

TIP: Before proceeding to Step 3, take photos of the cable routing and zip tie placement for future reference.

3 Unplug the charging cables from the charging modules.

NOTE: Your charging module may differ slightly in appearance from the example shown in the photo.

4 Use the wire cutter to remove the zip ties securing the old cables. Then, remove the old cables by sliding them out of the cable holes.

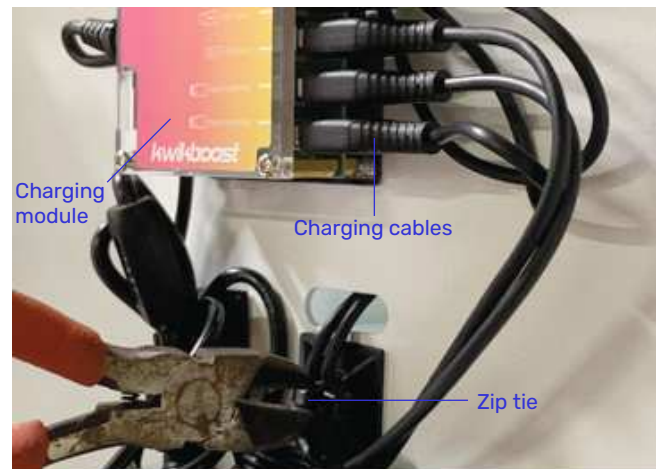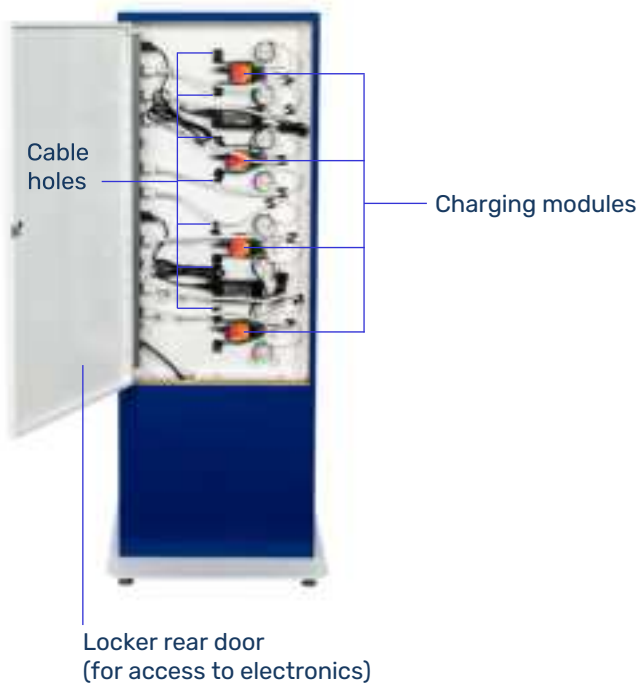

5 Plug the replacement cables into the charging modules, secure the cables with zip ties, and then route the cables through the cable holes into the charging lockers.