




DESIGNED FOR LIFE

Assembly Instructions

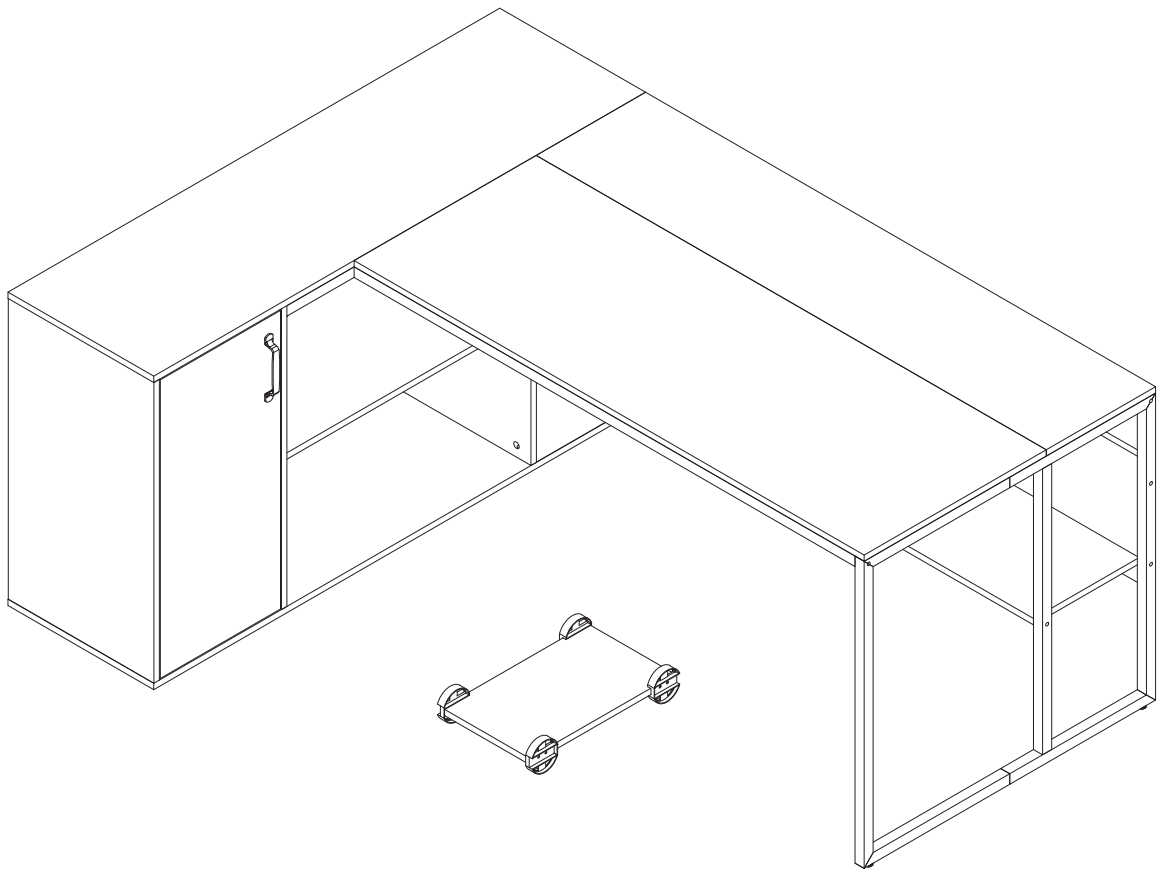




Boss Table

Model No.
HOGA-YS0120\YS0121
HOGA-YS0122\YS0298




LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

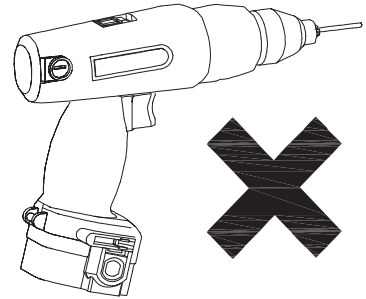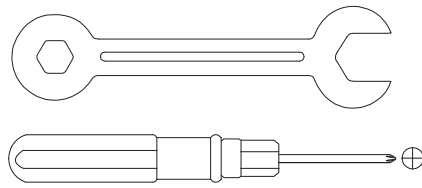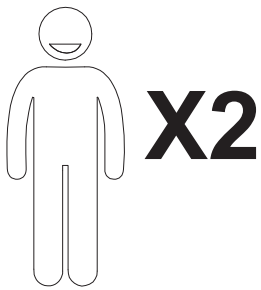



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

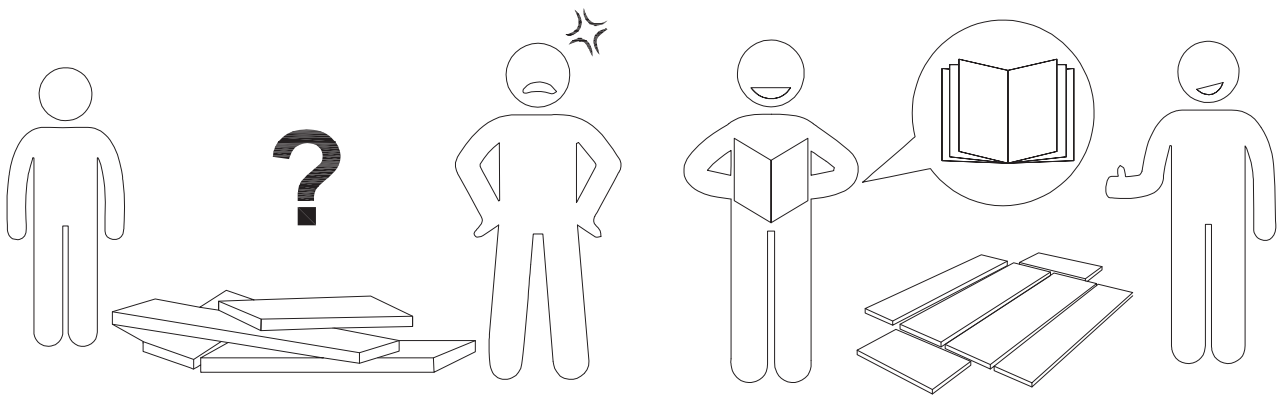

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.






















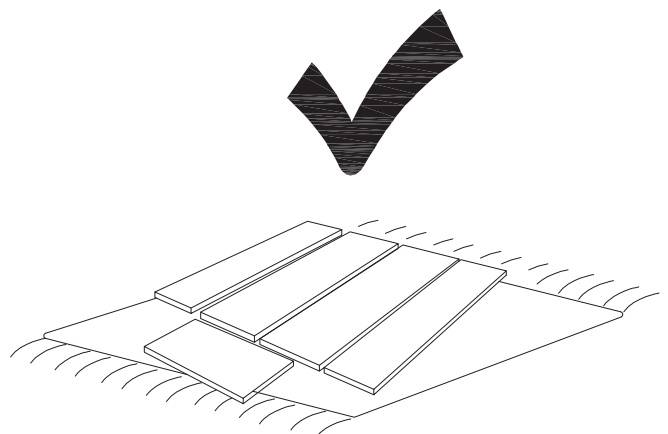
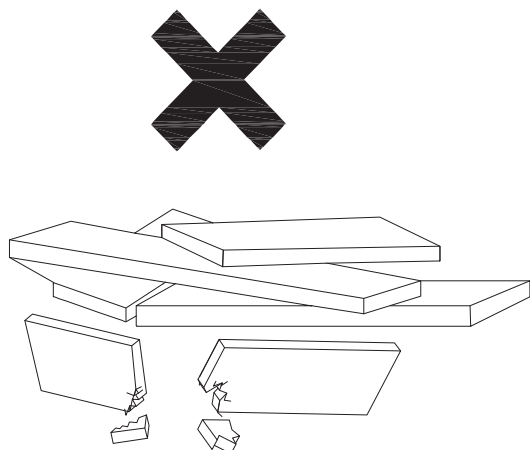


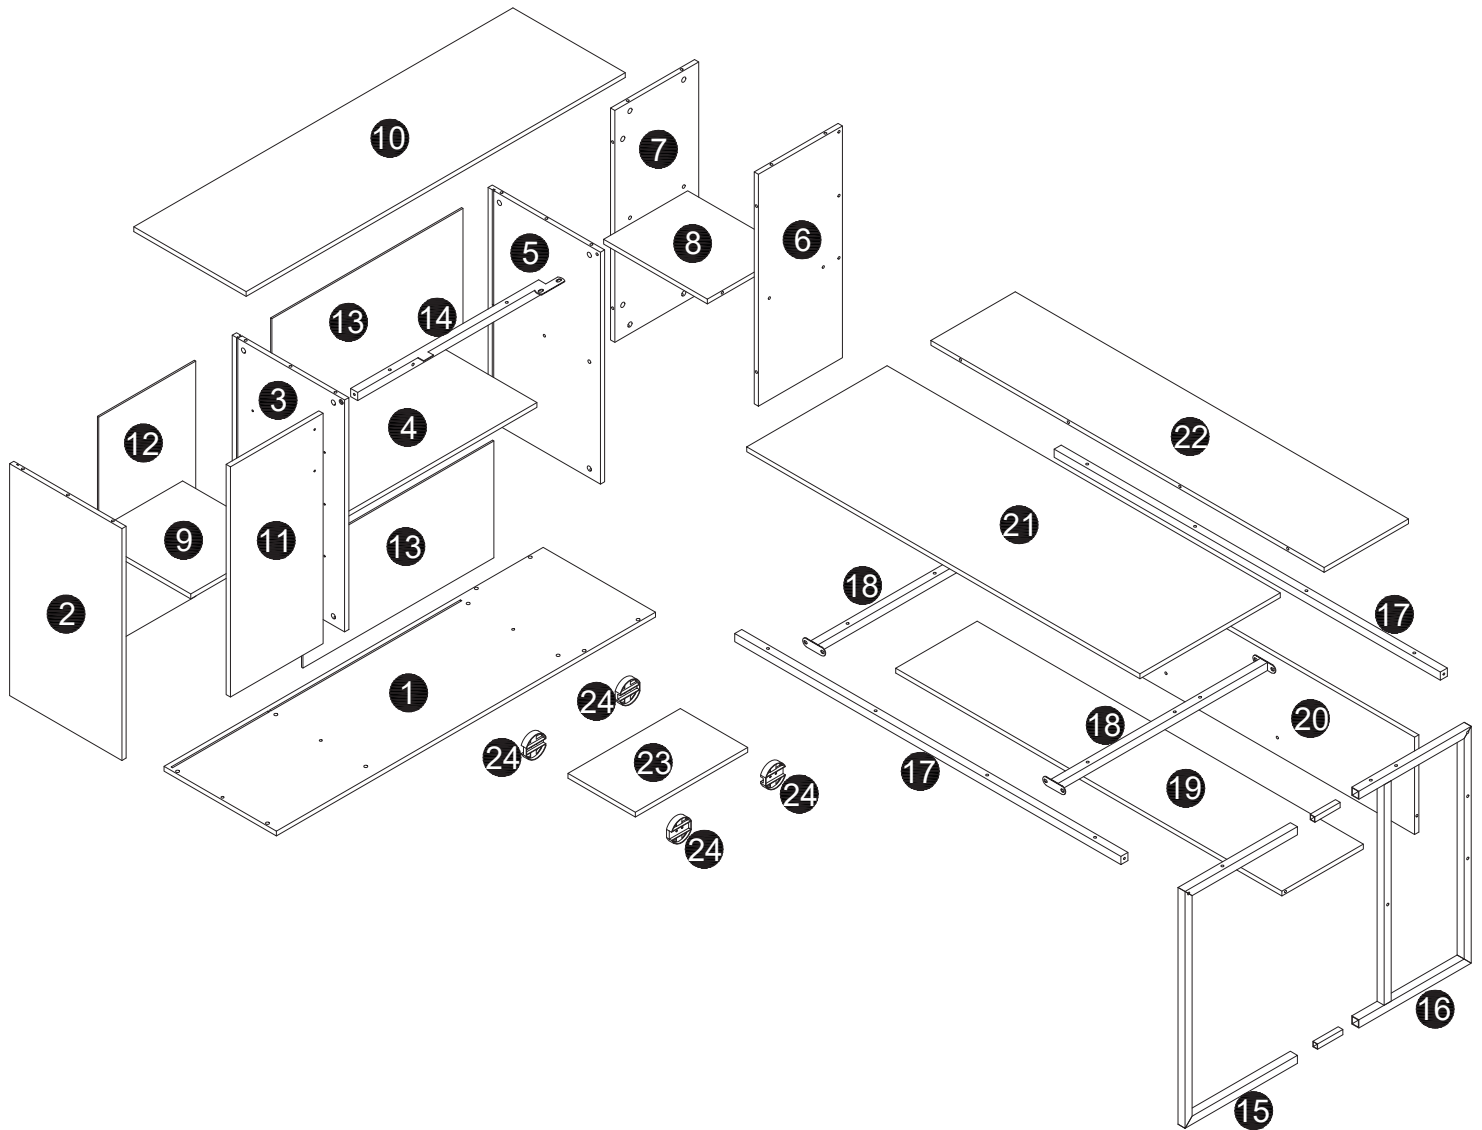


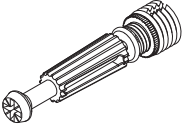
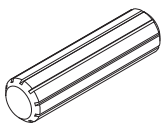
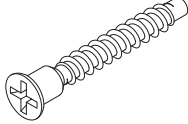


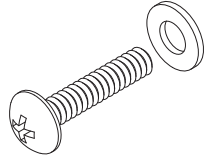
⚠ Caution







Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.






Parts List
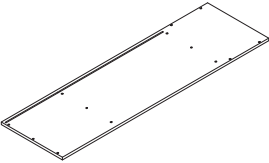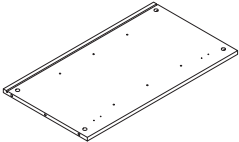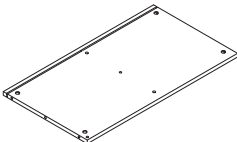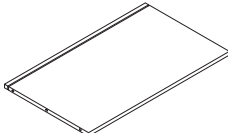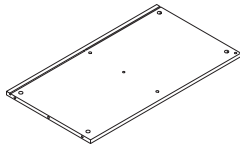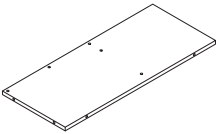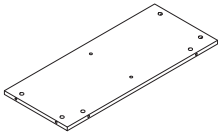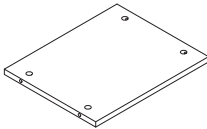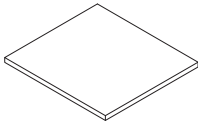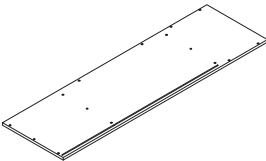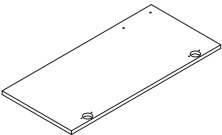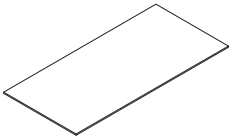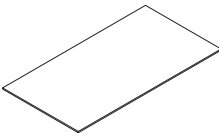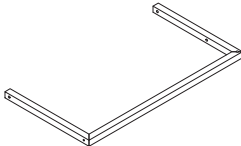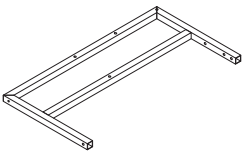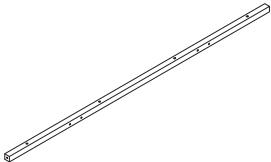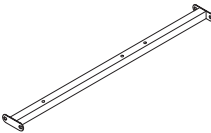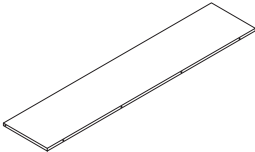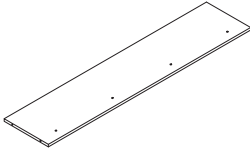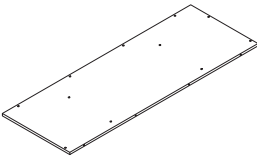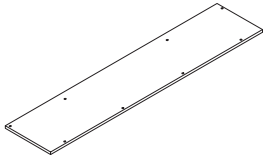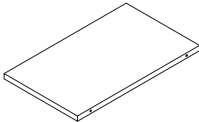
<div>1</div> <div></div> <div>1 pc</div>	<div>2</div> <div></div> <div>1 pc</div>	<div>3</div> <div></div> <div>1 pc</div>	<div>4</div> <div></div> <div>1 pc</div>	<div>5</div> <div></div> <div>1 pc</div>
<div>6</div> <div></div> <div>1 pc</div>	<div>7</div> <div></div> <div>1 pc</div>	<div>8</div> <div></div> <div>1 pc</div>	<div>9</div> <div></div> <div>1 pc</div>	<div>10</div> <div></div> <div>1 pc</div>
<div>11</div> <div></div> <div>1 pc</div>	<div>12</div> <div></div> <div>1 pc</div>	<div>13</div> <div></div> <div>2 pcs</div>	<div>14</div> <div></div> <div>1 pc</div>	<div>15</div> <div></div> <div>1 pc</div>
<div>16</div> <div></div> <div>1 pc</div>	<div>17</div> <div></div> <div>2 pcs</div>	<div>18</div> <div></div> <div>2 pcs</div>	<div>19</div> <div></div> <div>1 pc</div>	<div>20</div> <div></div> <div>1 pc</div>
<div>21</div> <div></div> <div>1 pc</div>	<div>22</div> <div></div> <div>1 pc</div>	<div>23</div> <div></div> <div>1 pc</div>	<div>24</div> <div></div> <div>4 pcs</div>	

Hardware List


A	B	C	D	E	F
					
M6x35mm	Ø8x30mm	Ø7x48mm	E X6 Ø3.5x14mm	Ø3.5x14mm	Ø4x20mm
32pcs	12 pcs	11 pcs	2 pcs	20 pcs	2 pcs

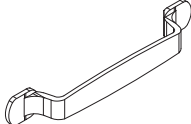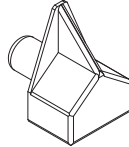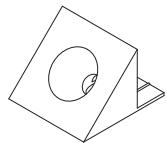G	H	I	J	K	L
					
128mm			M6x6mm	M6x12mm	M6x35mm
1 pc	4 pcs	12 pcs	8 pcs	14 pcs	22 pcs

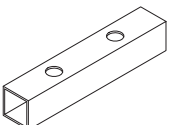
M	N	O	P		
					
M6x40mm		M4	Ø15x12mm		
3 pcs	2 pcs	1 pc	32pcs	1 pc	

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

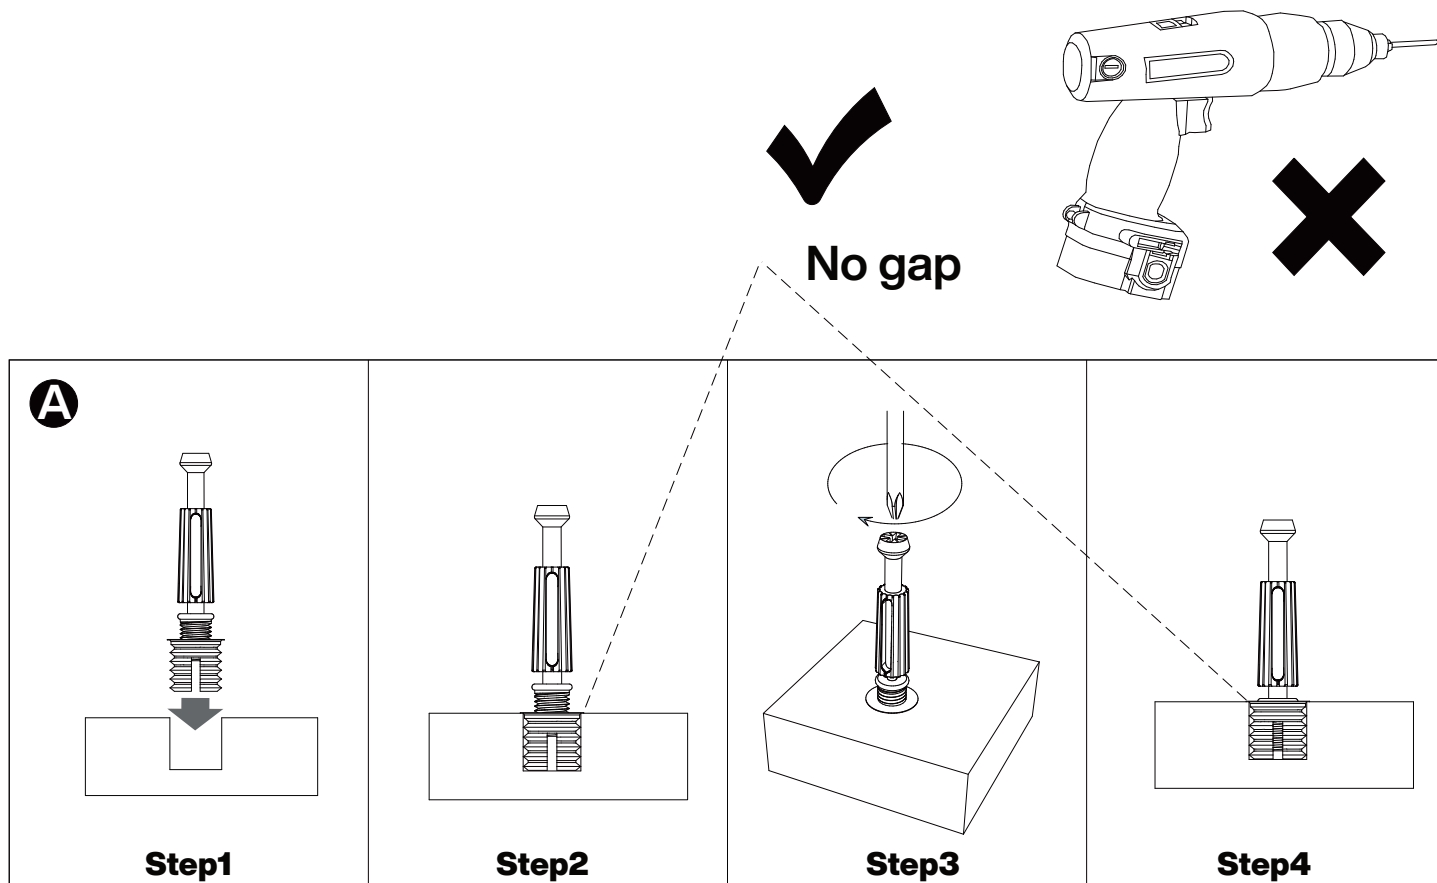


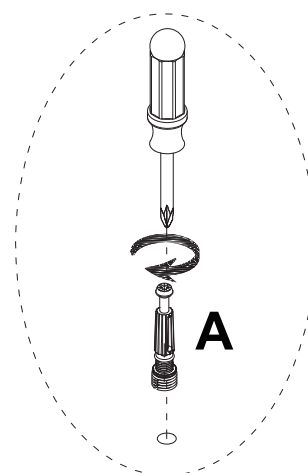
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

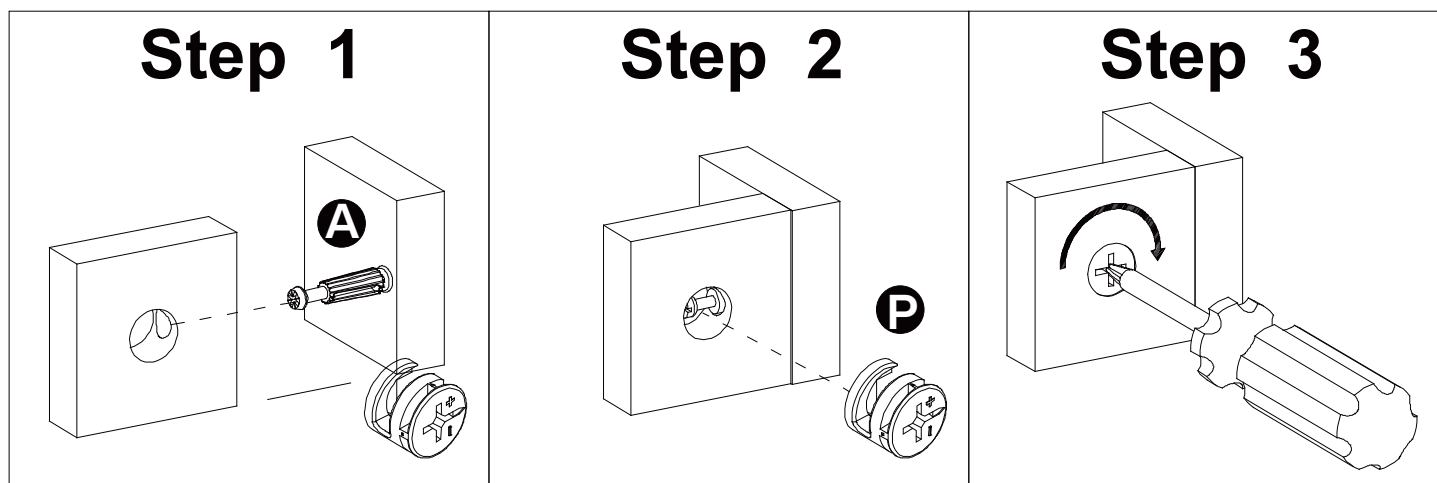



1


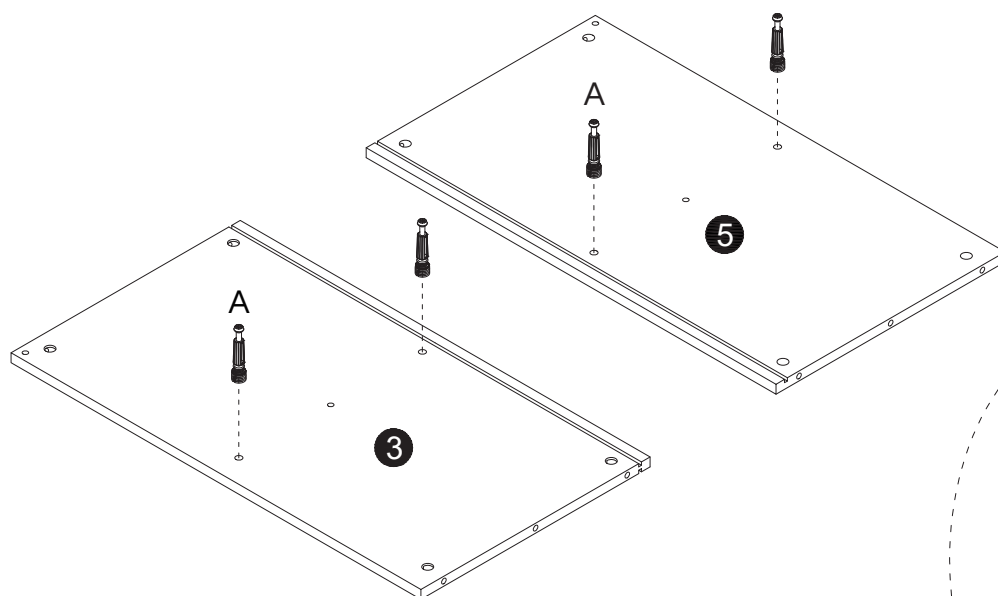



A

M6x35mm
4 pcs

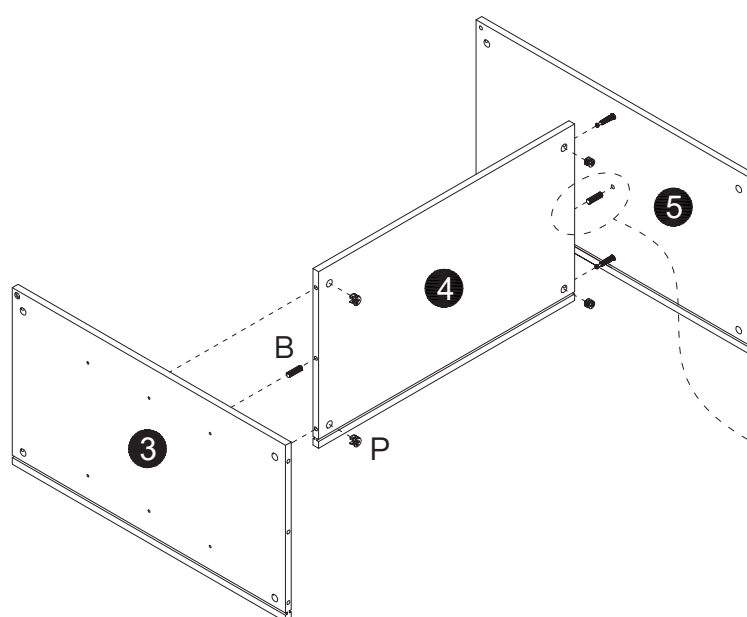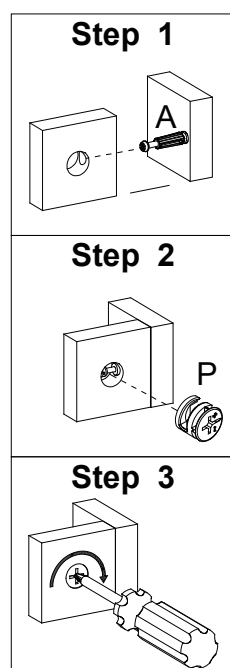


2




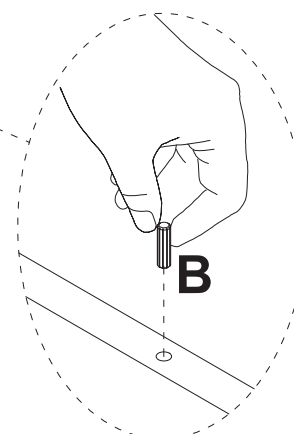P	B
	
Ø15x12mm	Ø8x30mm
4 pcs	2 pcs





3

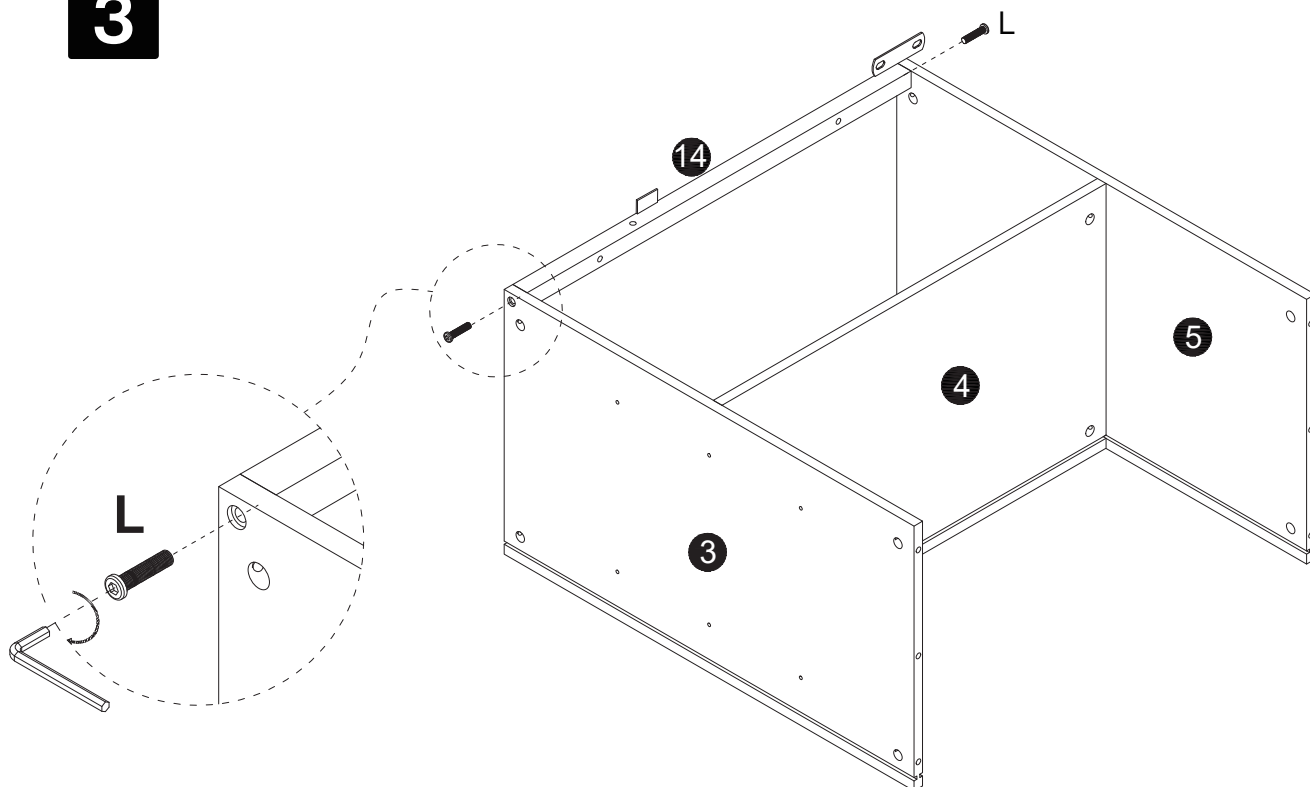


L

M6x35mm
2 pcs

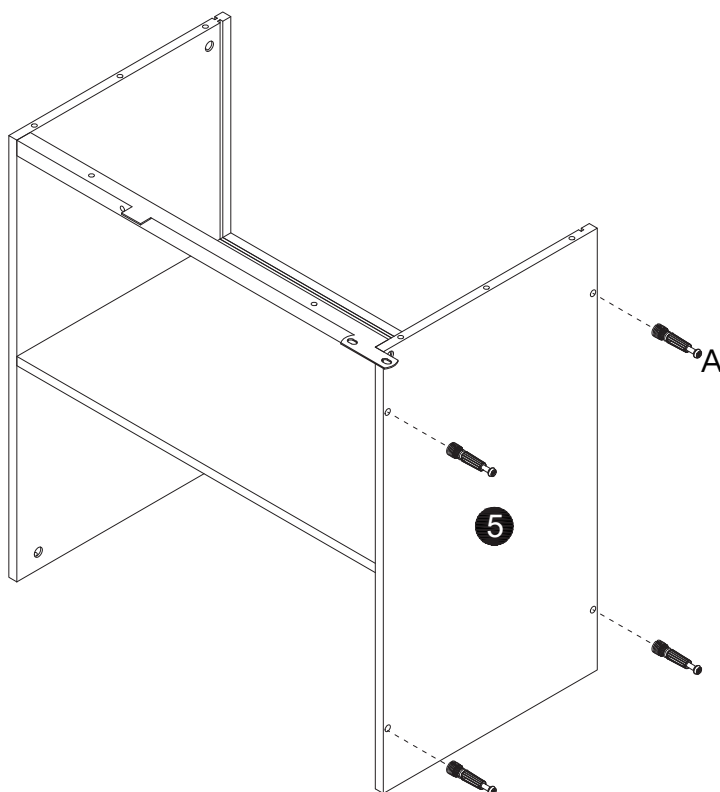
4

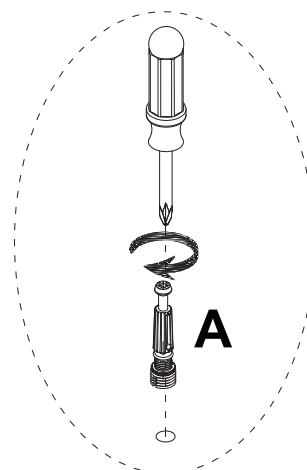



A

M6x35mm
4 pcs

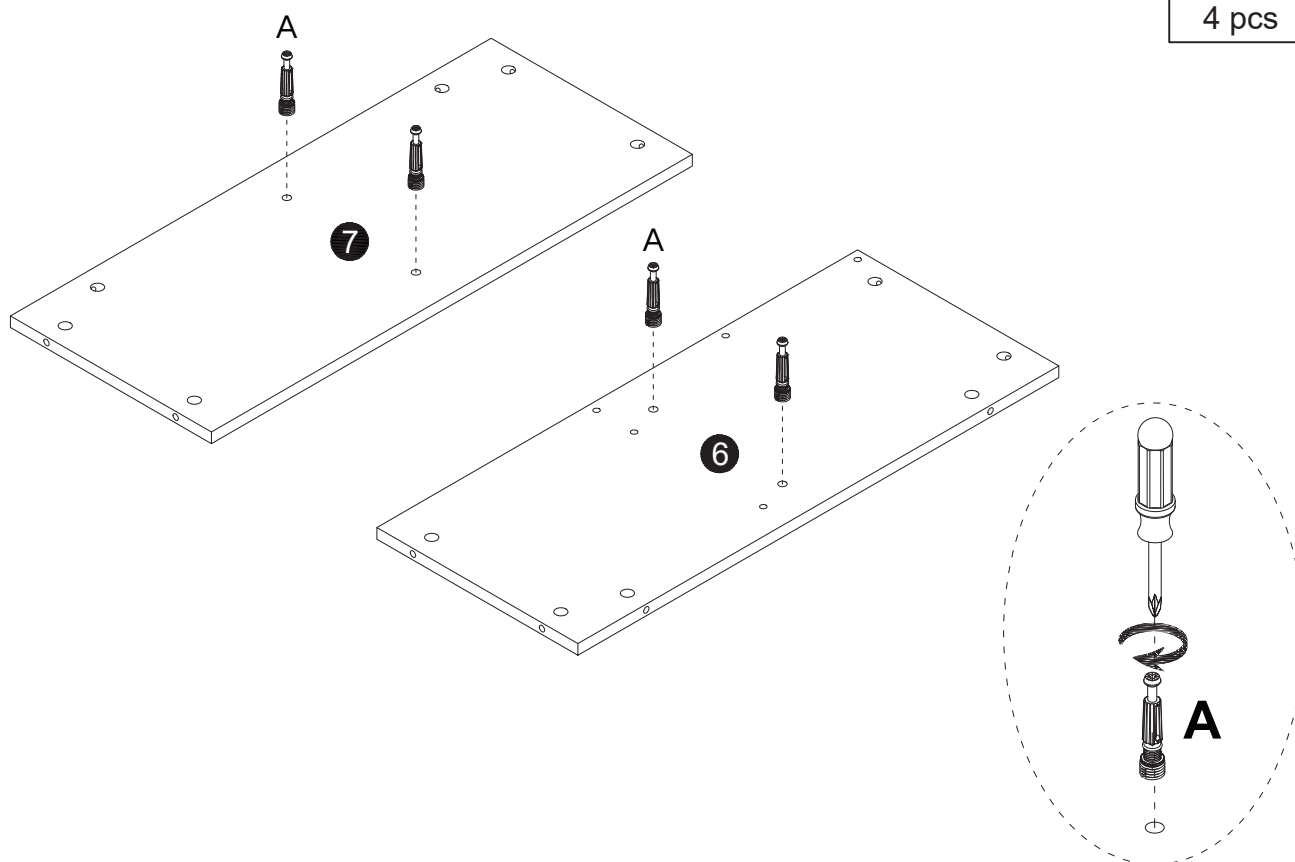


5

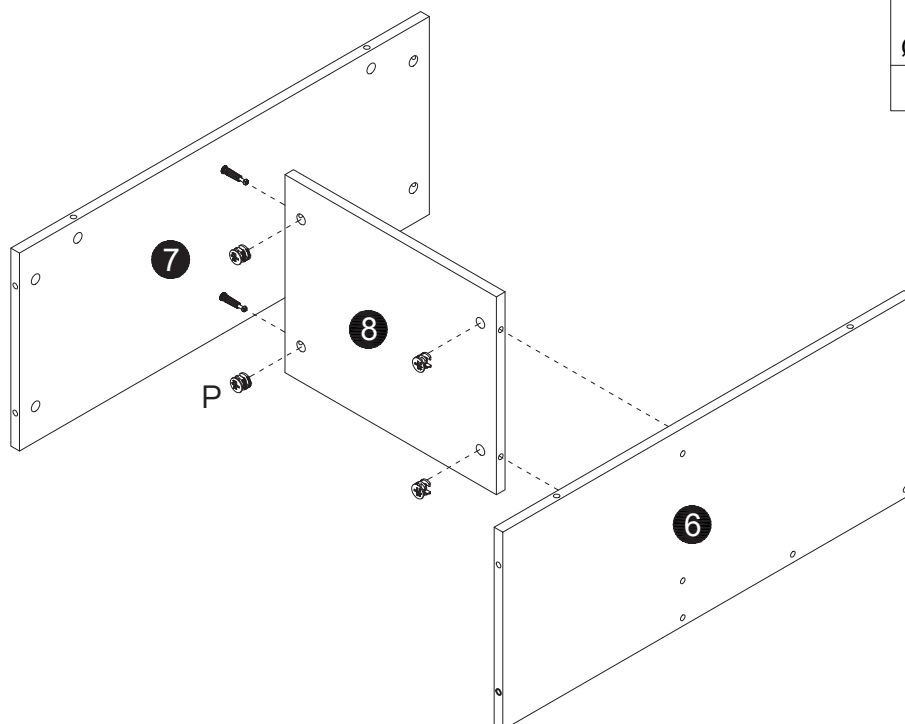
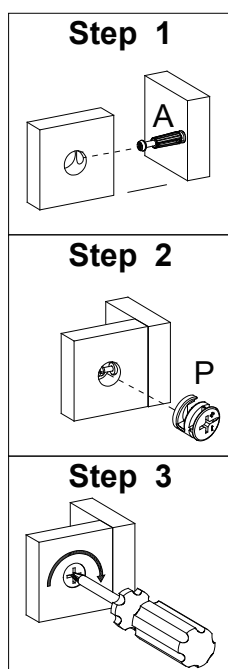


6




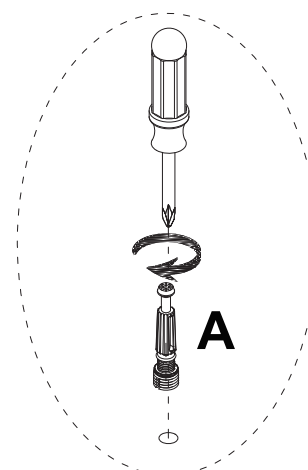
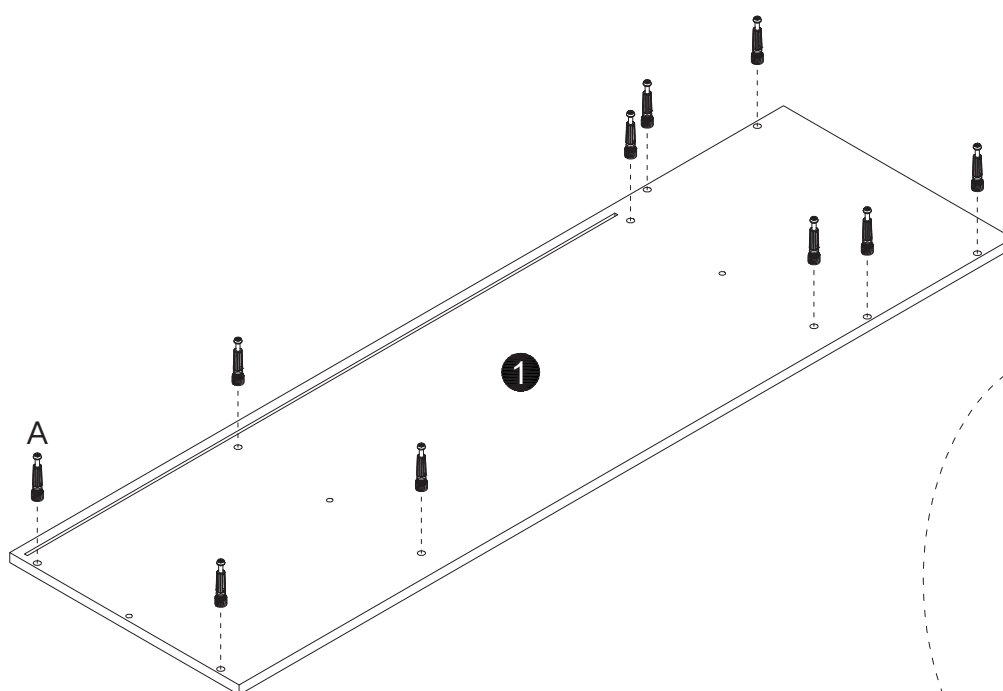
7

P

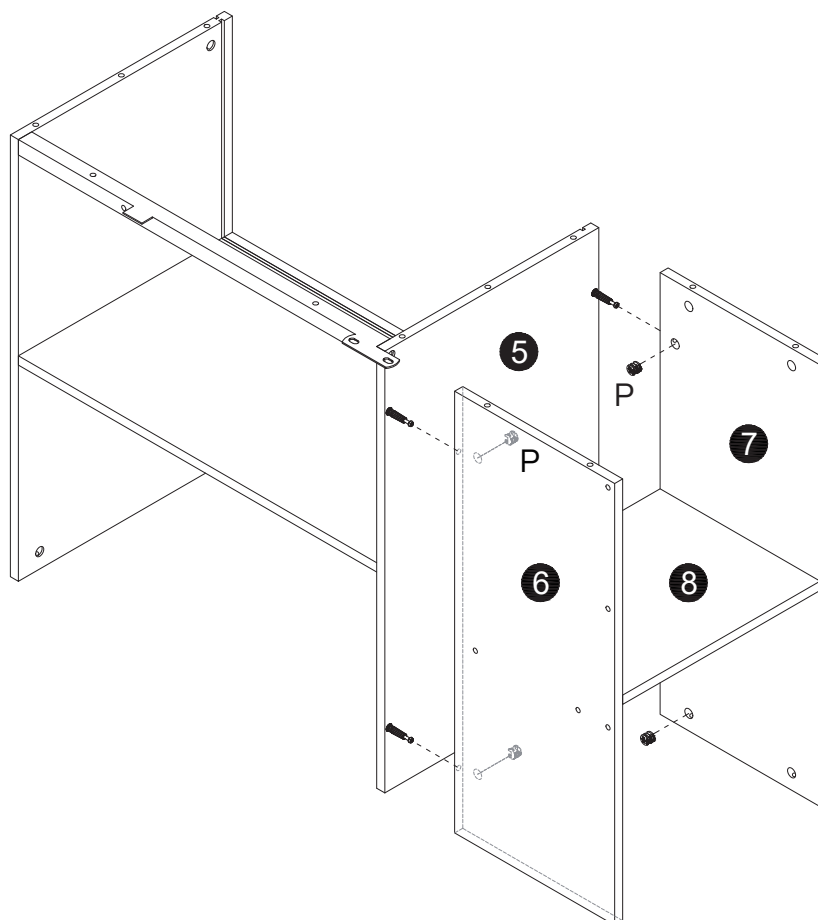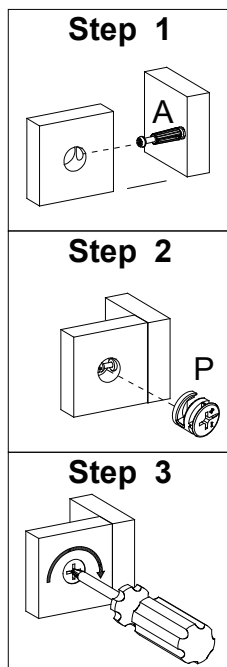Ø15x12mm
4 pcs








8

A

M6x35mm
10 pcs




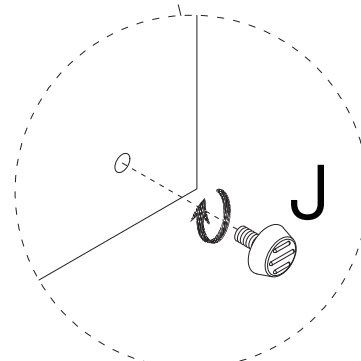
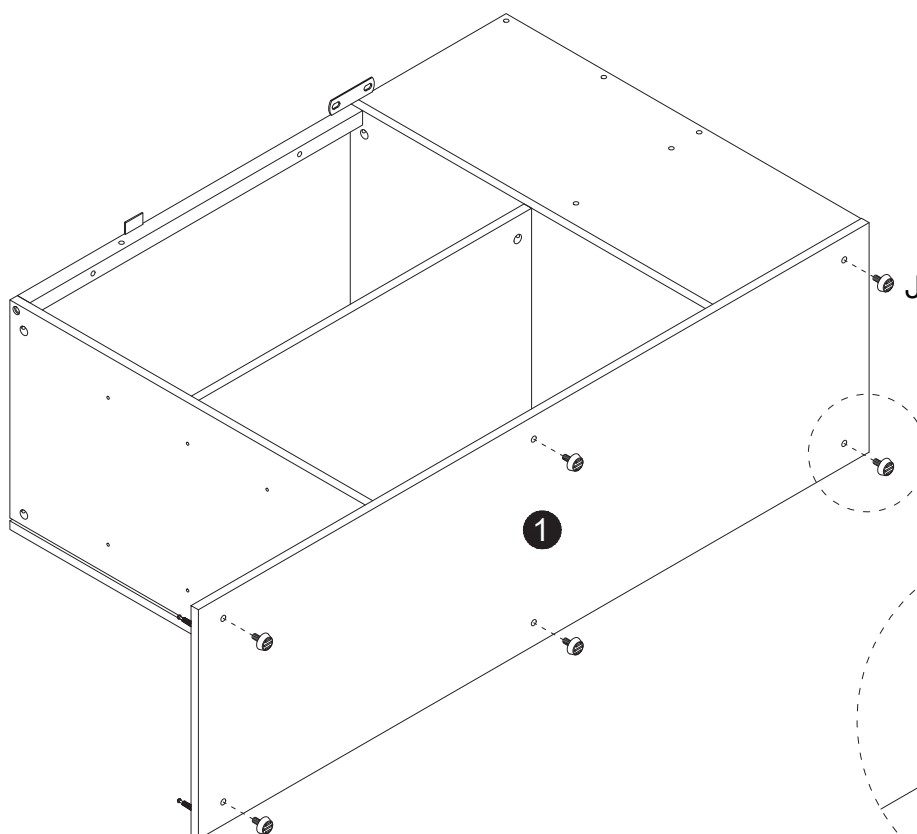
9

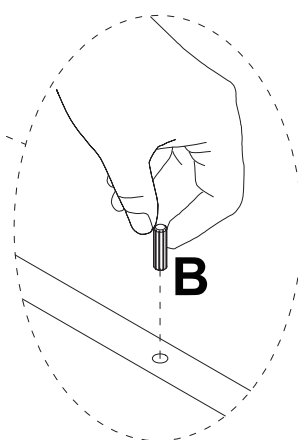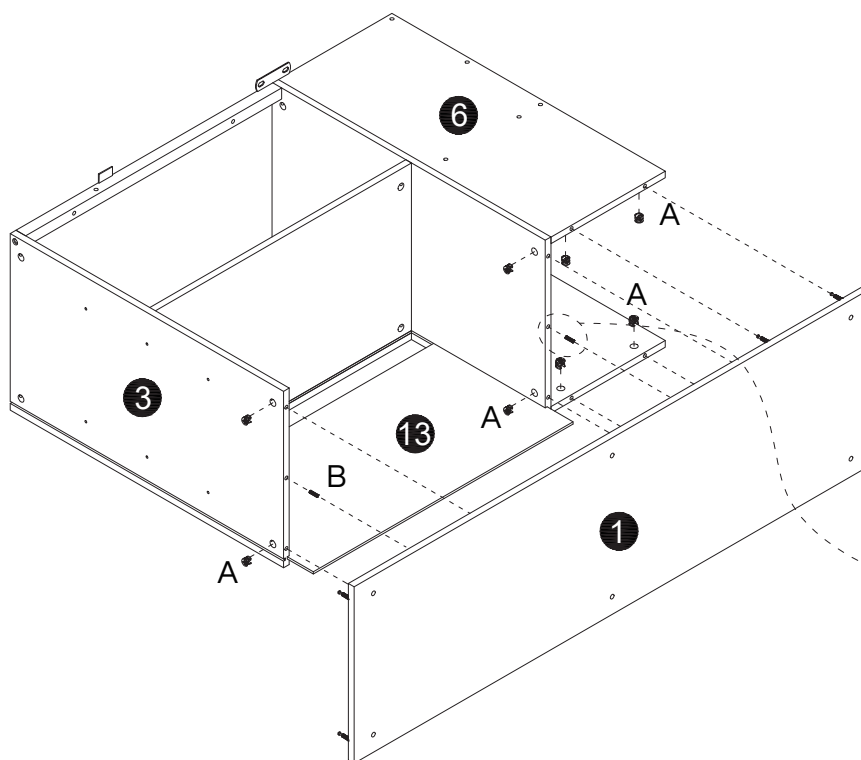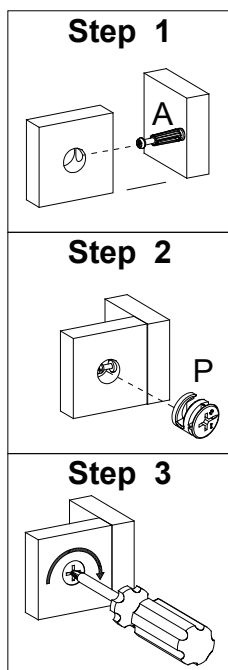P	B
	
Ø15x12mm	Ø8x30mm
8 pcs	2 pcs







10


J

M6x6mm
6 pcs

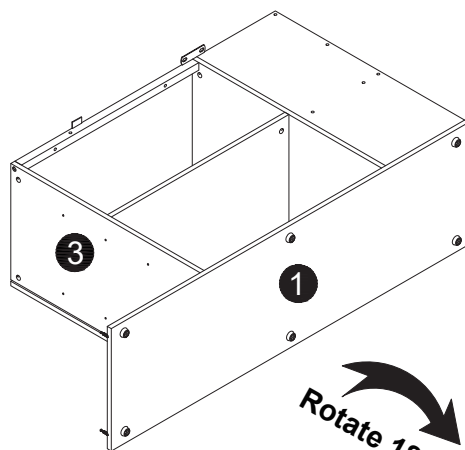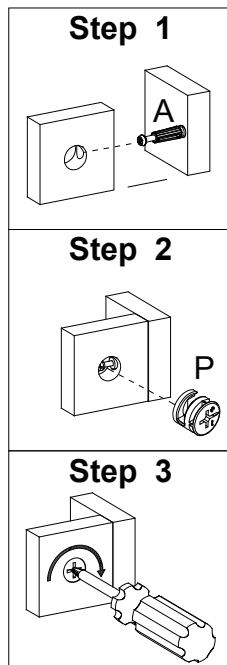


11



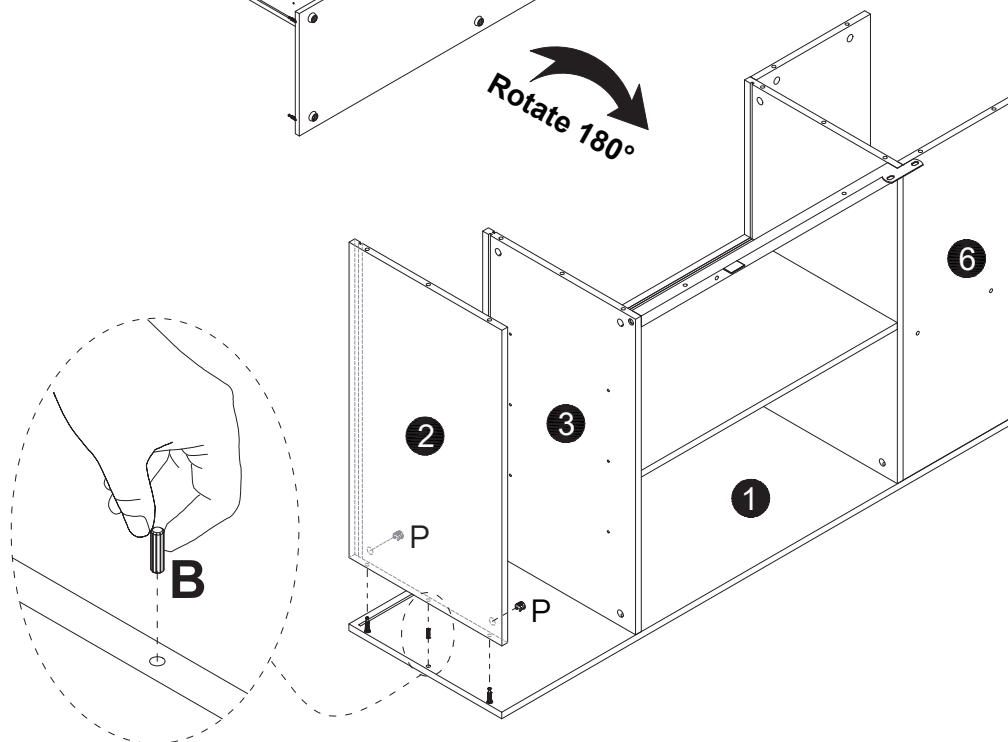
P	B
	
Ø15x12mm 2 pcs	Ø8x30mm 1 pc




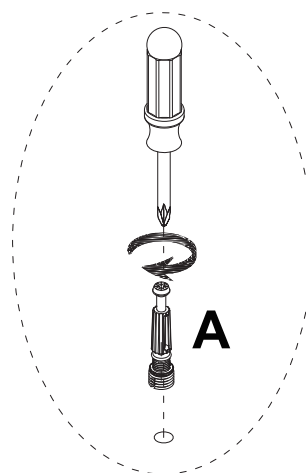
12

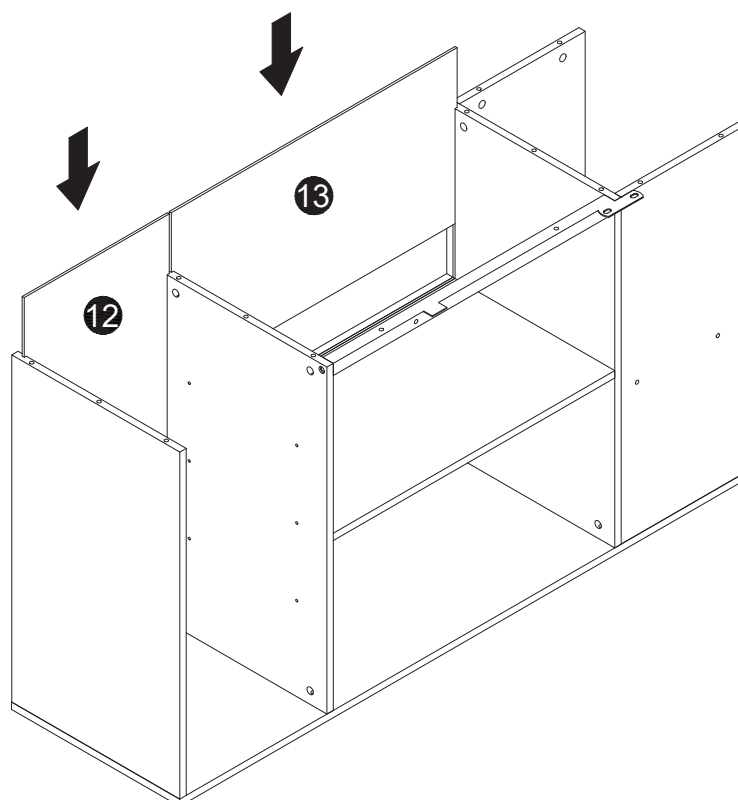



13



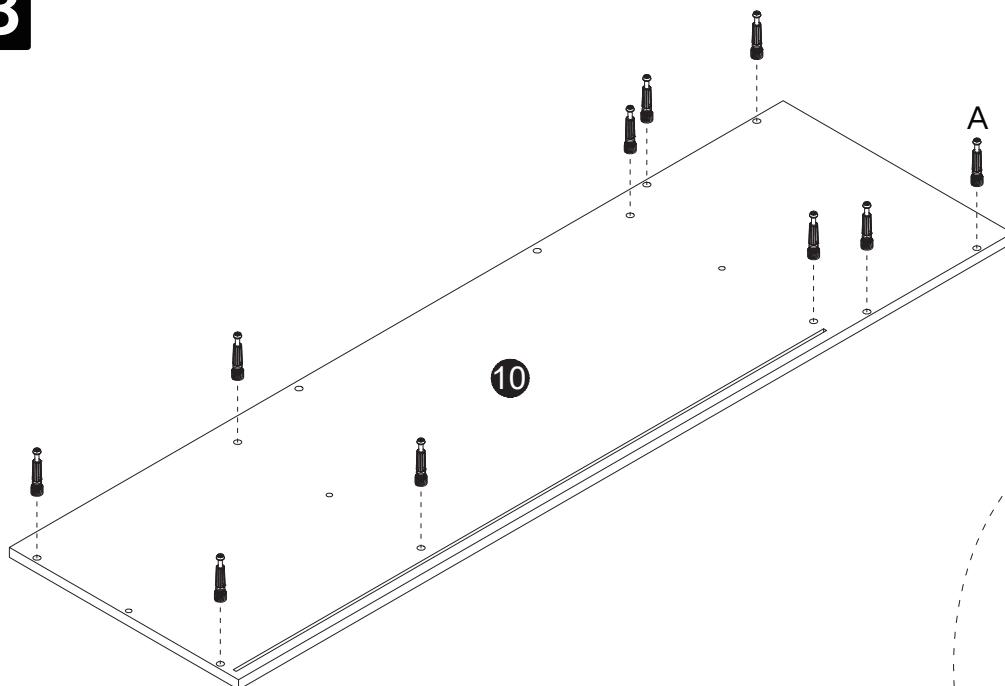




A

M6x35mm
10 pcs

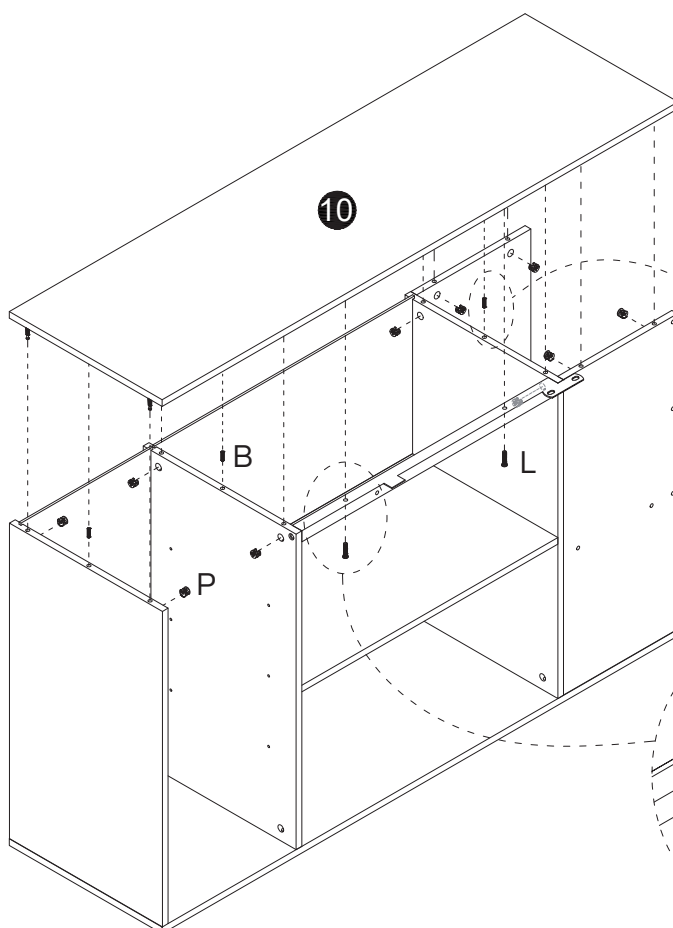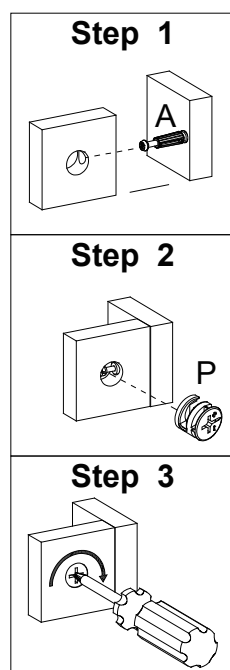




14



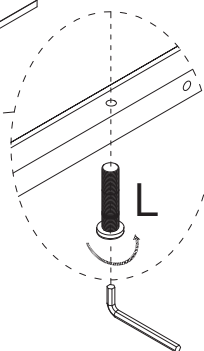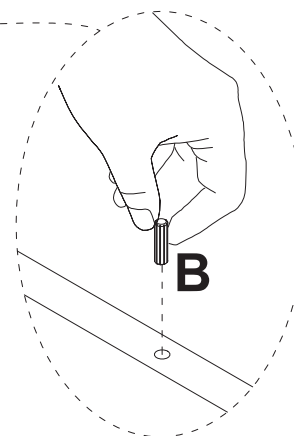
P	B	L
		
Ø15x12mm	Ø8x30mm	M6x35mm
10 pcs	3 pcs	2 pcs




15

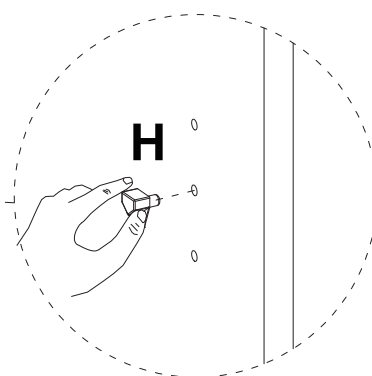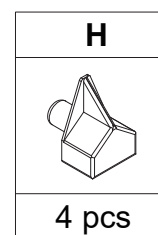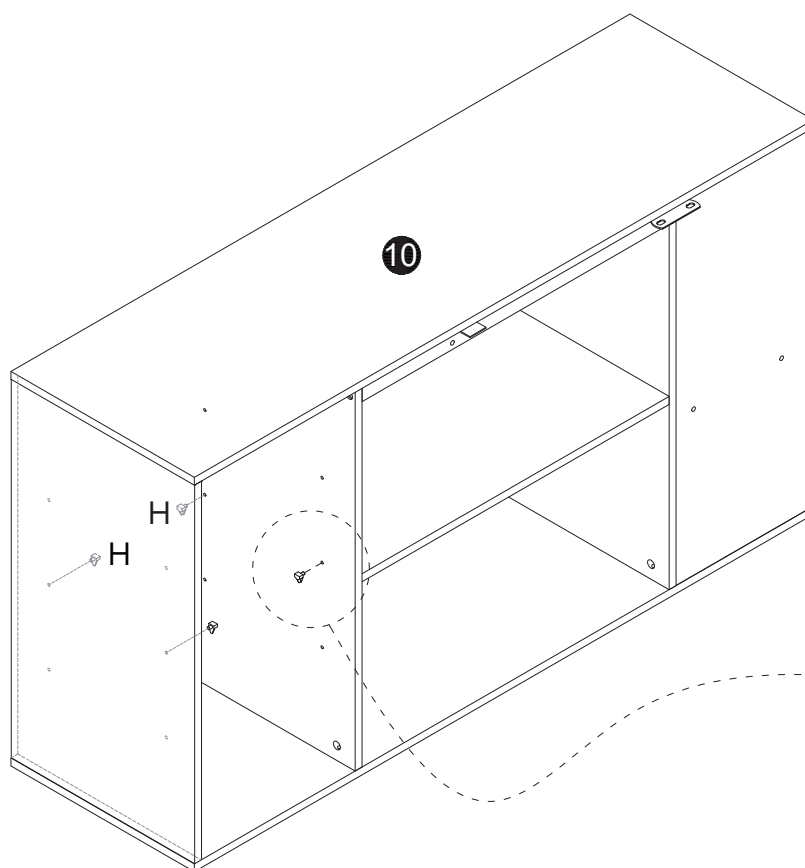







16

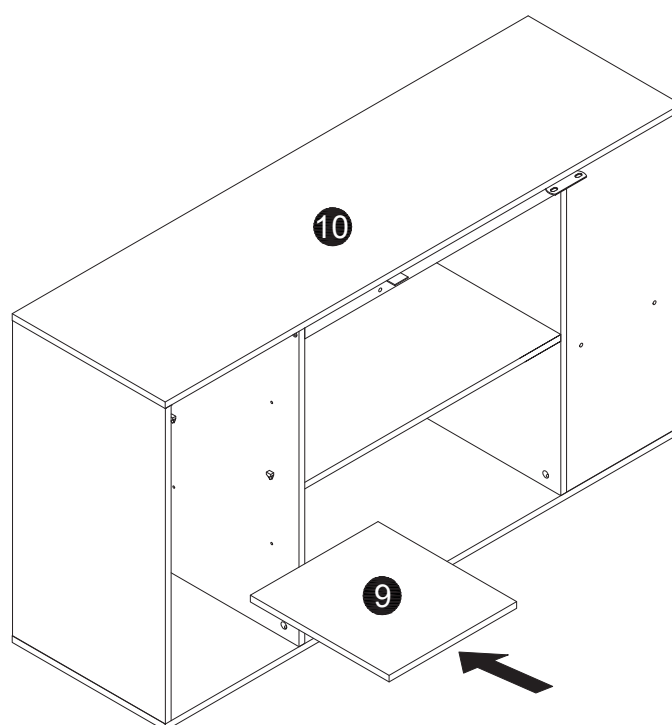


17

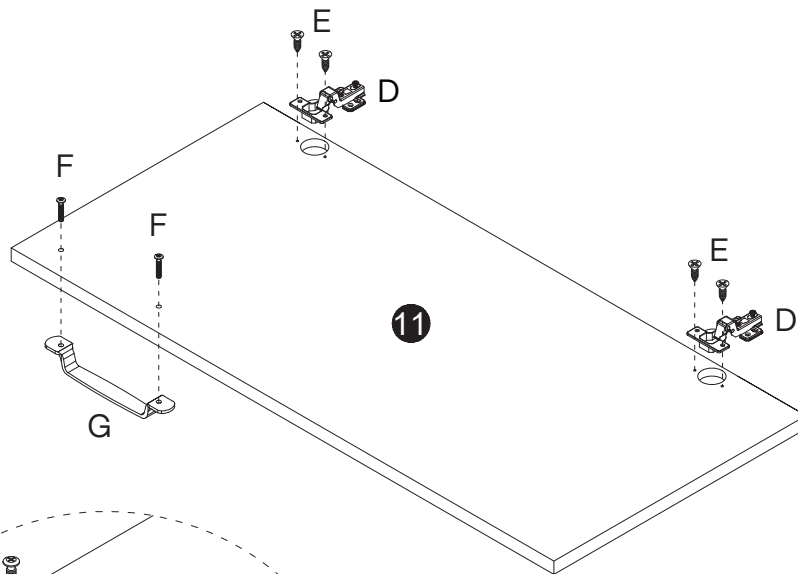



F	G
	
Ø4x20mm	128mm
2 pcs	1 pcs
D	E
	
2 pcs	Ø3.5x14mm
	4 pcs

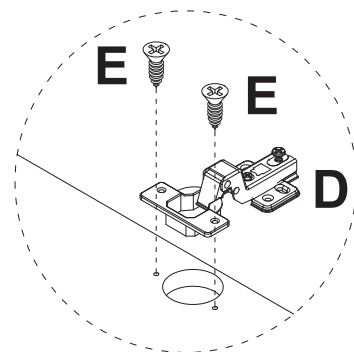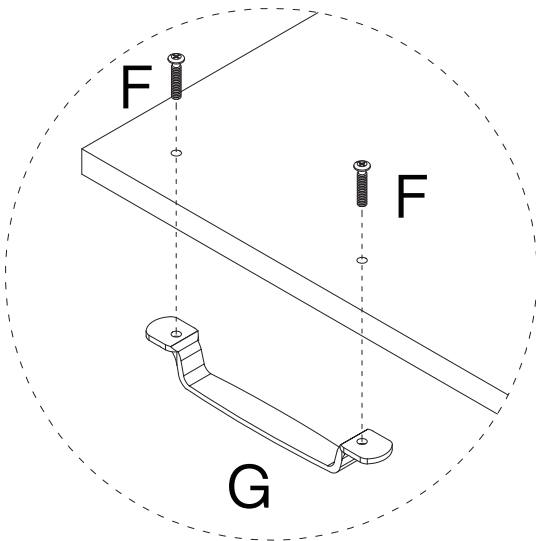

18

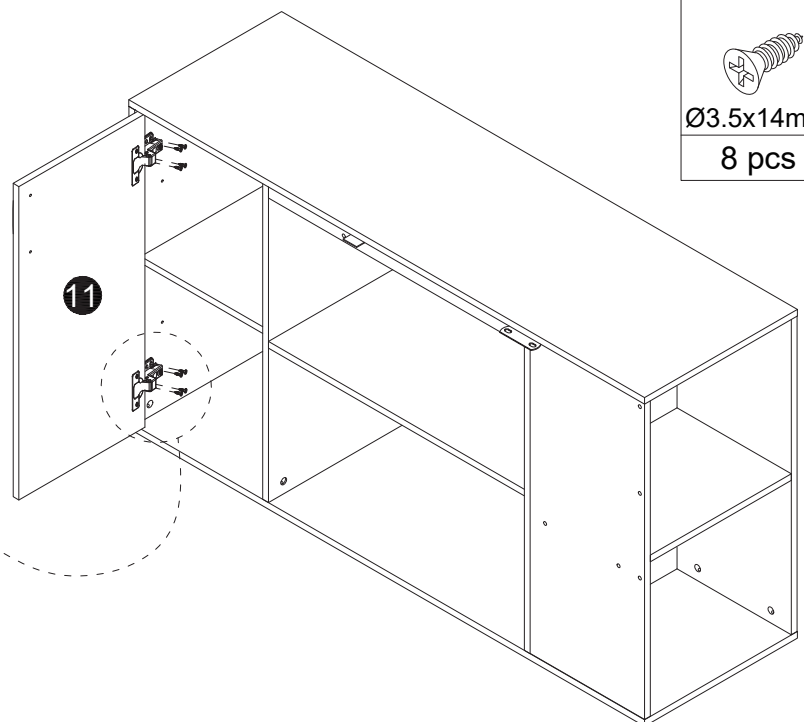


E

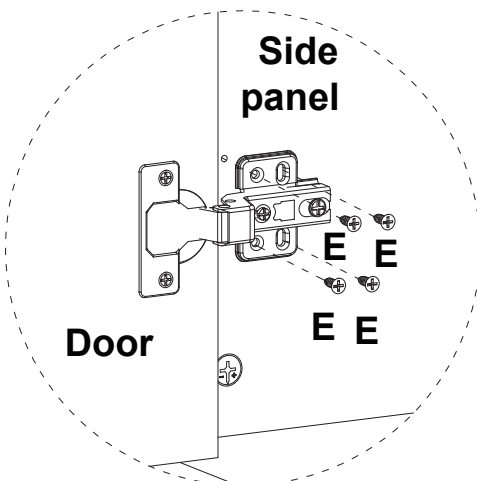Ø3.5x14mm
8 pcs



To prevent the door hinge from falling off, please install 4 screws

Step 1

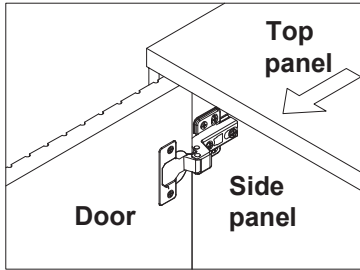
Open the door.



ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

Adjust the door panel to be flush with side panel and top panel edge.

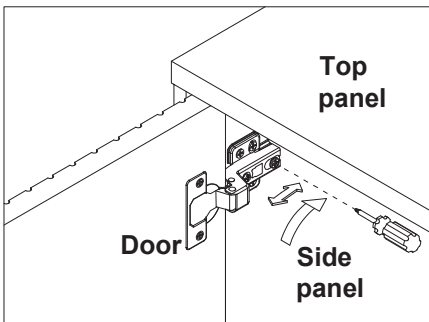



Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

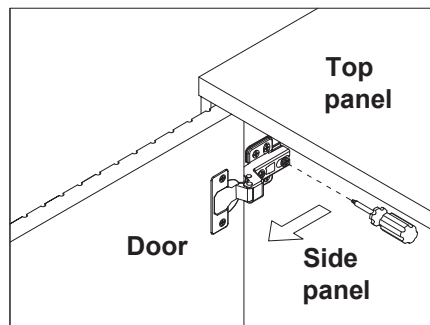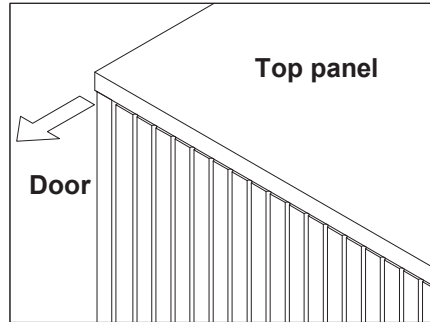

Pull the hinge forward a little.


Step 2b MOVE DOOR IN

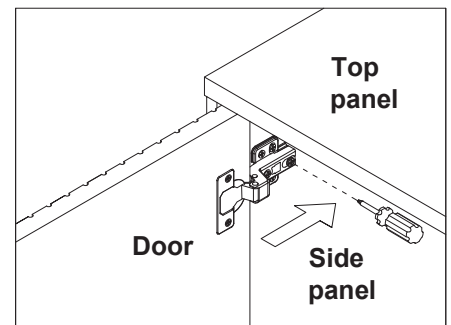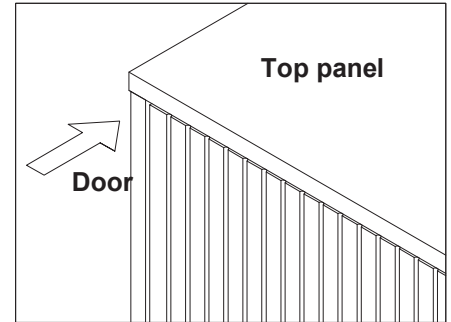

Push the hinge back a little.



Step 3

Adjust the gap between the door panel and the side panel.

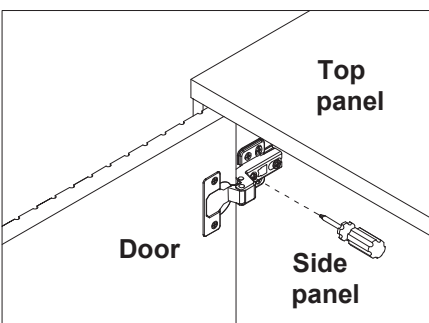



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

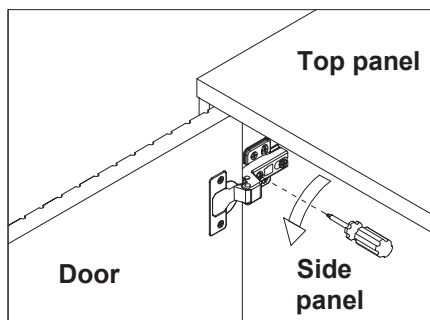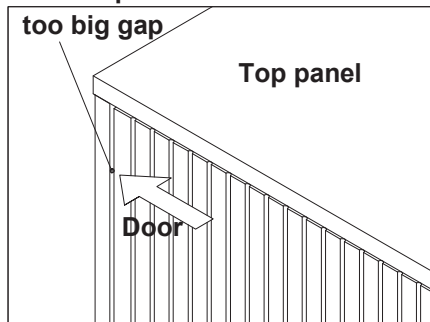


Turn the screw clockwise a little as shown to make the gap smaller

Step 3b MOVE DOOR RIGHT

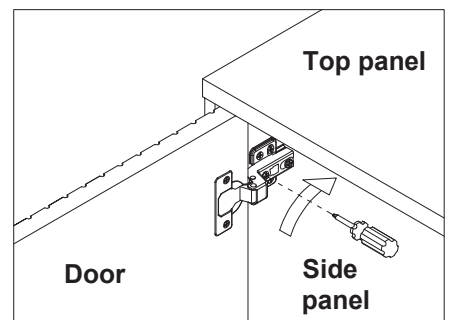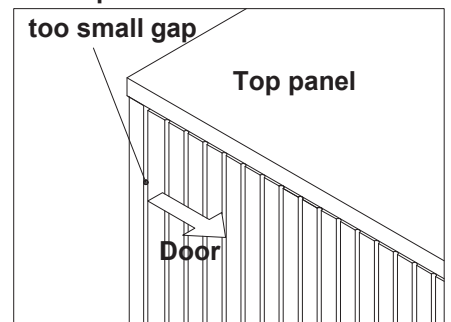


Turn the screw counterclockwise a little as shown to make the gap bigger


19

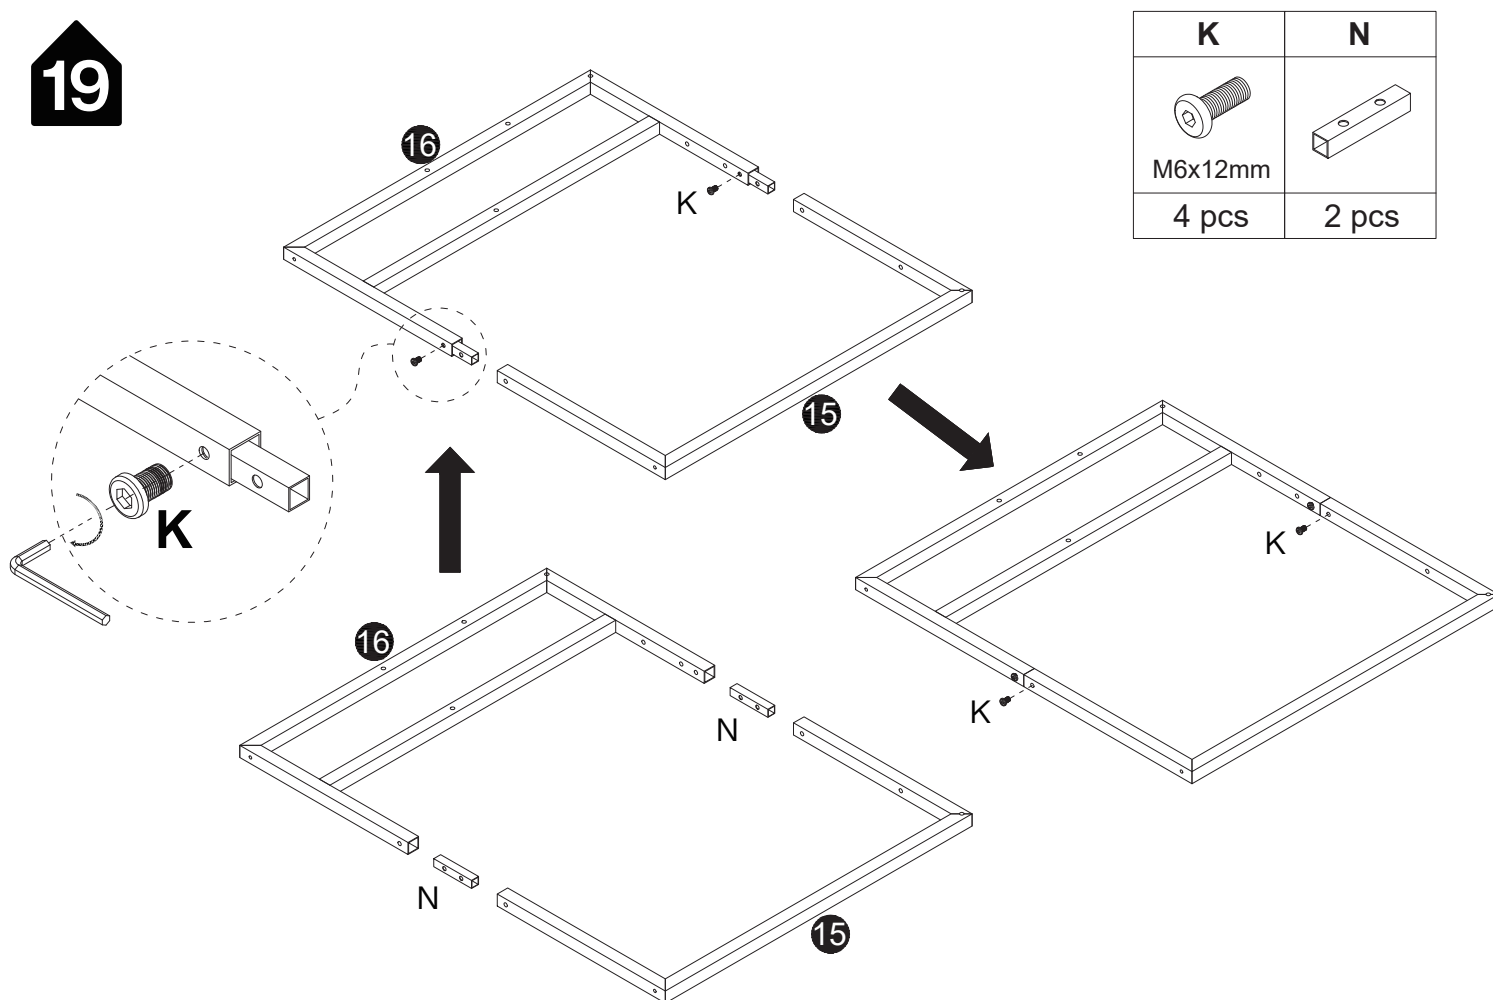


20

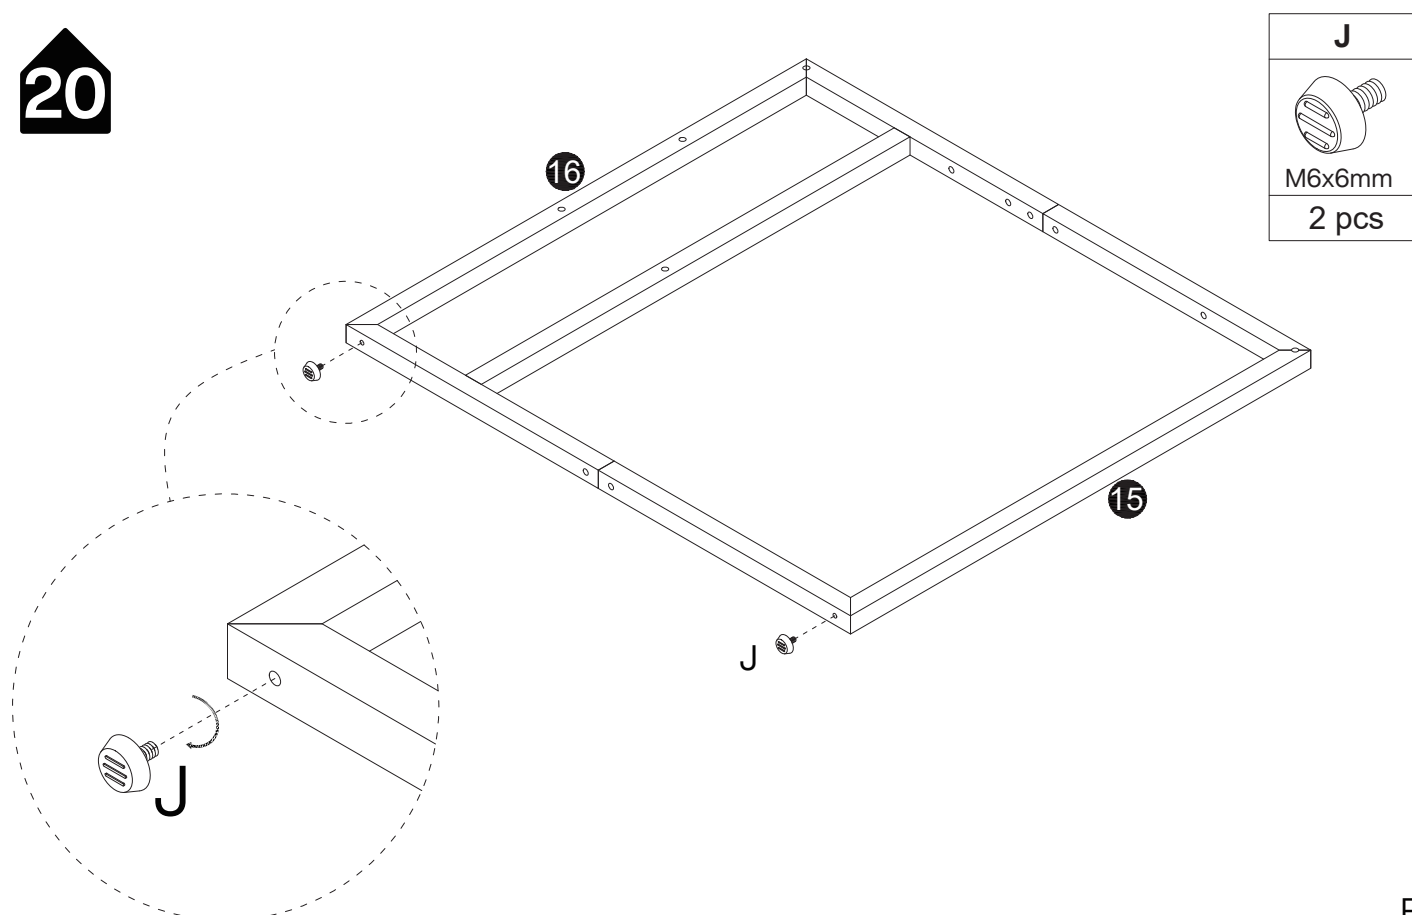



21

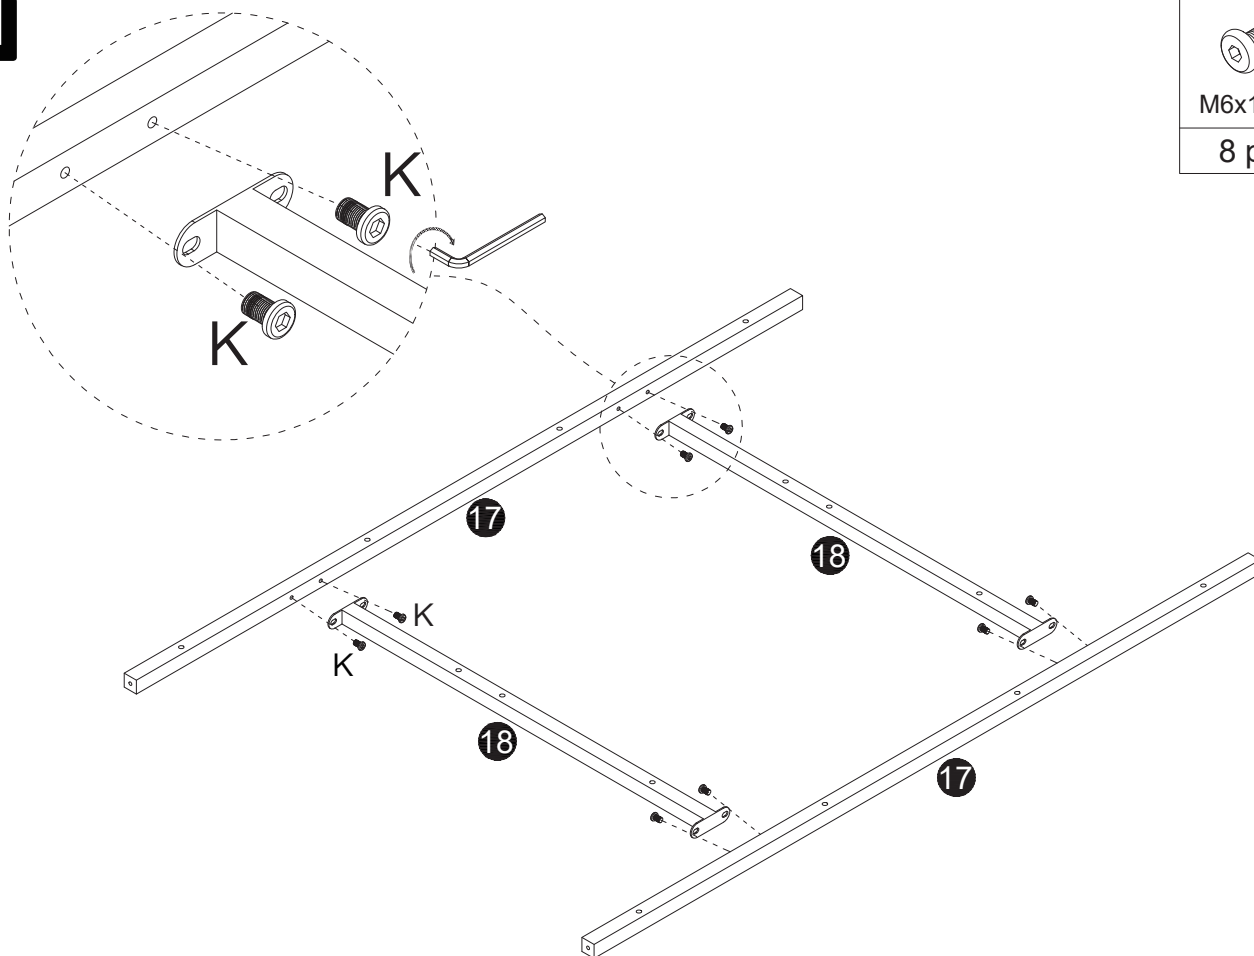


K

M6x12mm
8 pcs


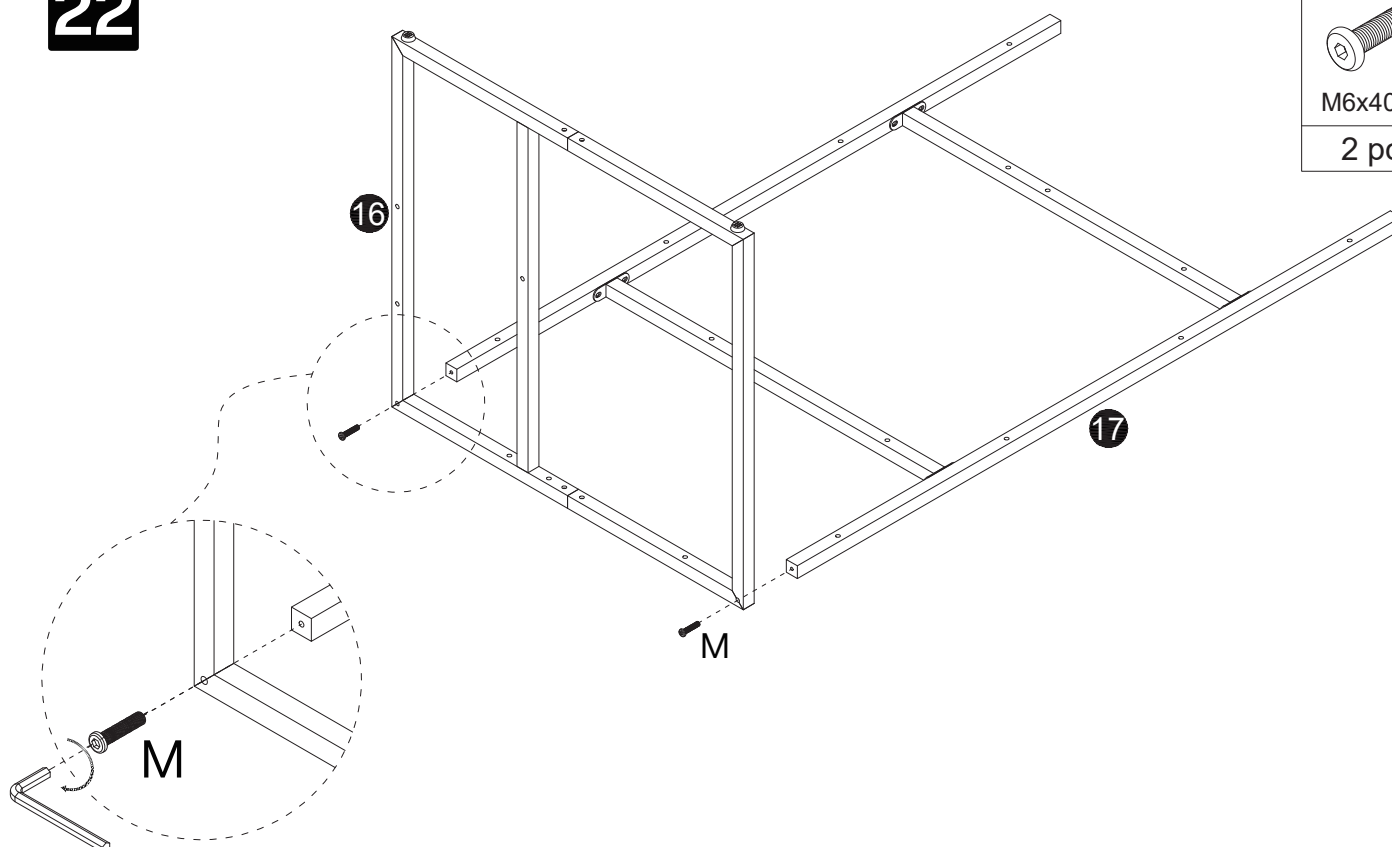
22




M

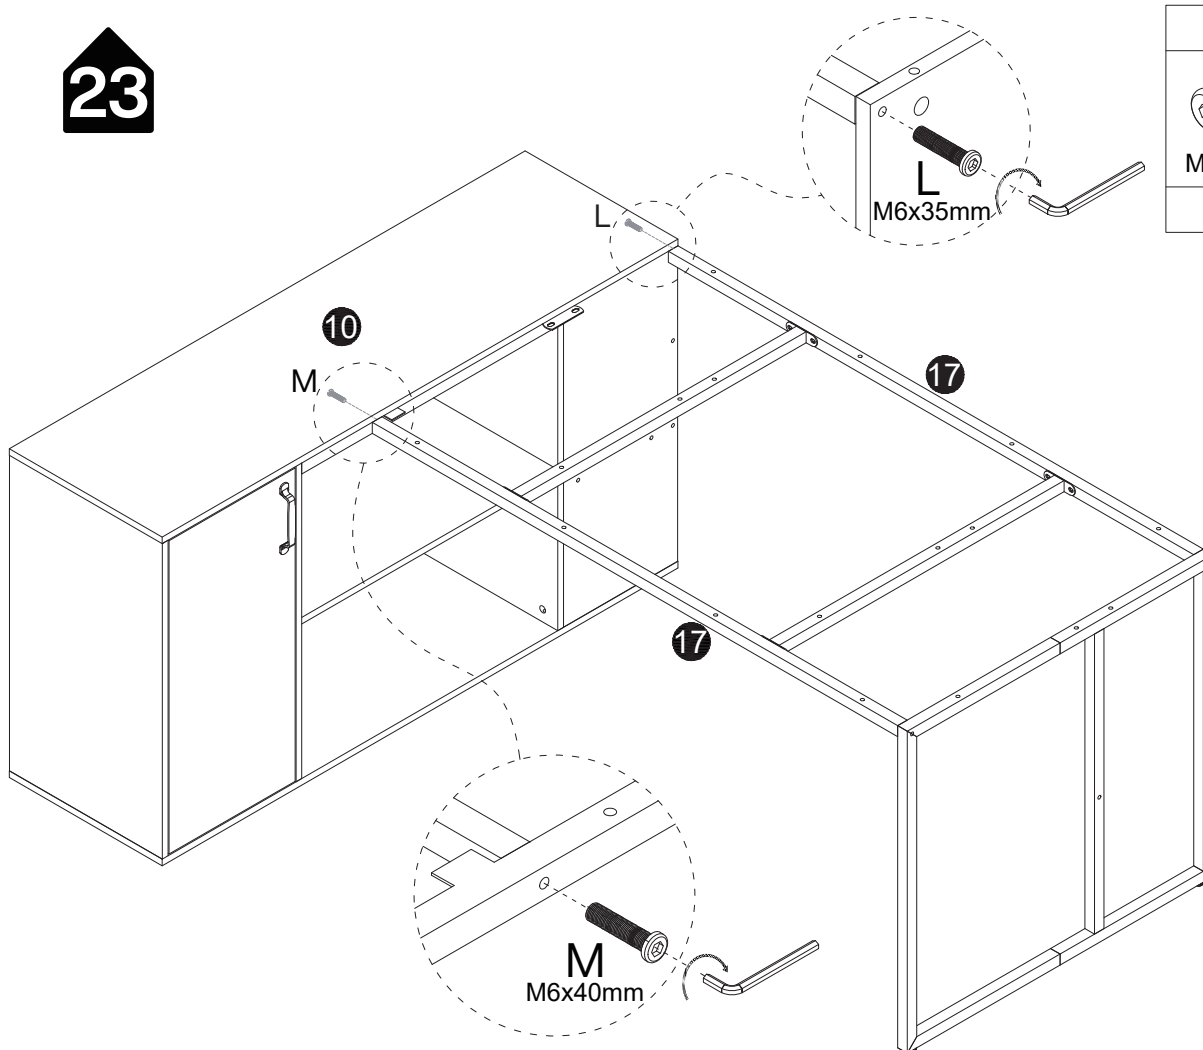M6x40mm
2 pcs


23




L	M
	
M6x35mm	M6x40mm
1 pc	1 pc

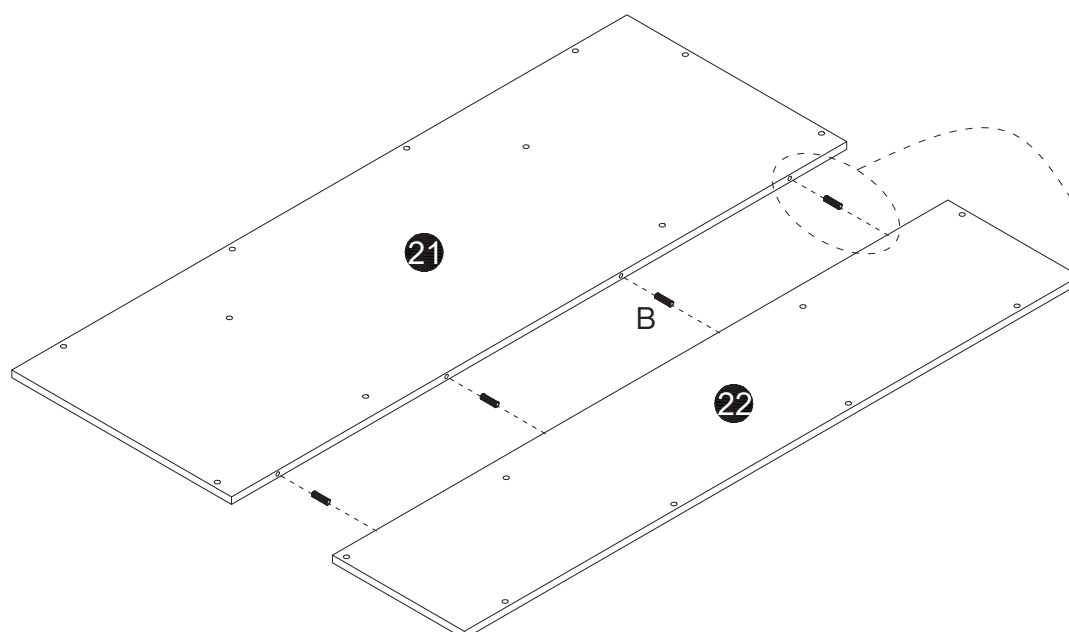
24




B

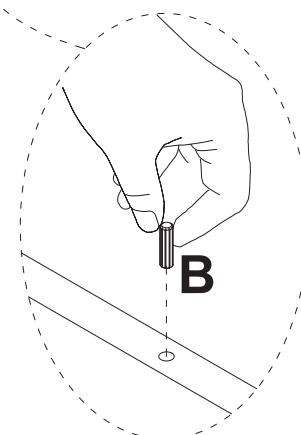Ø8x30mm
4 pcs

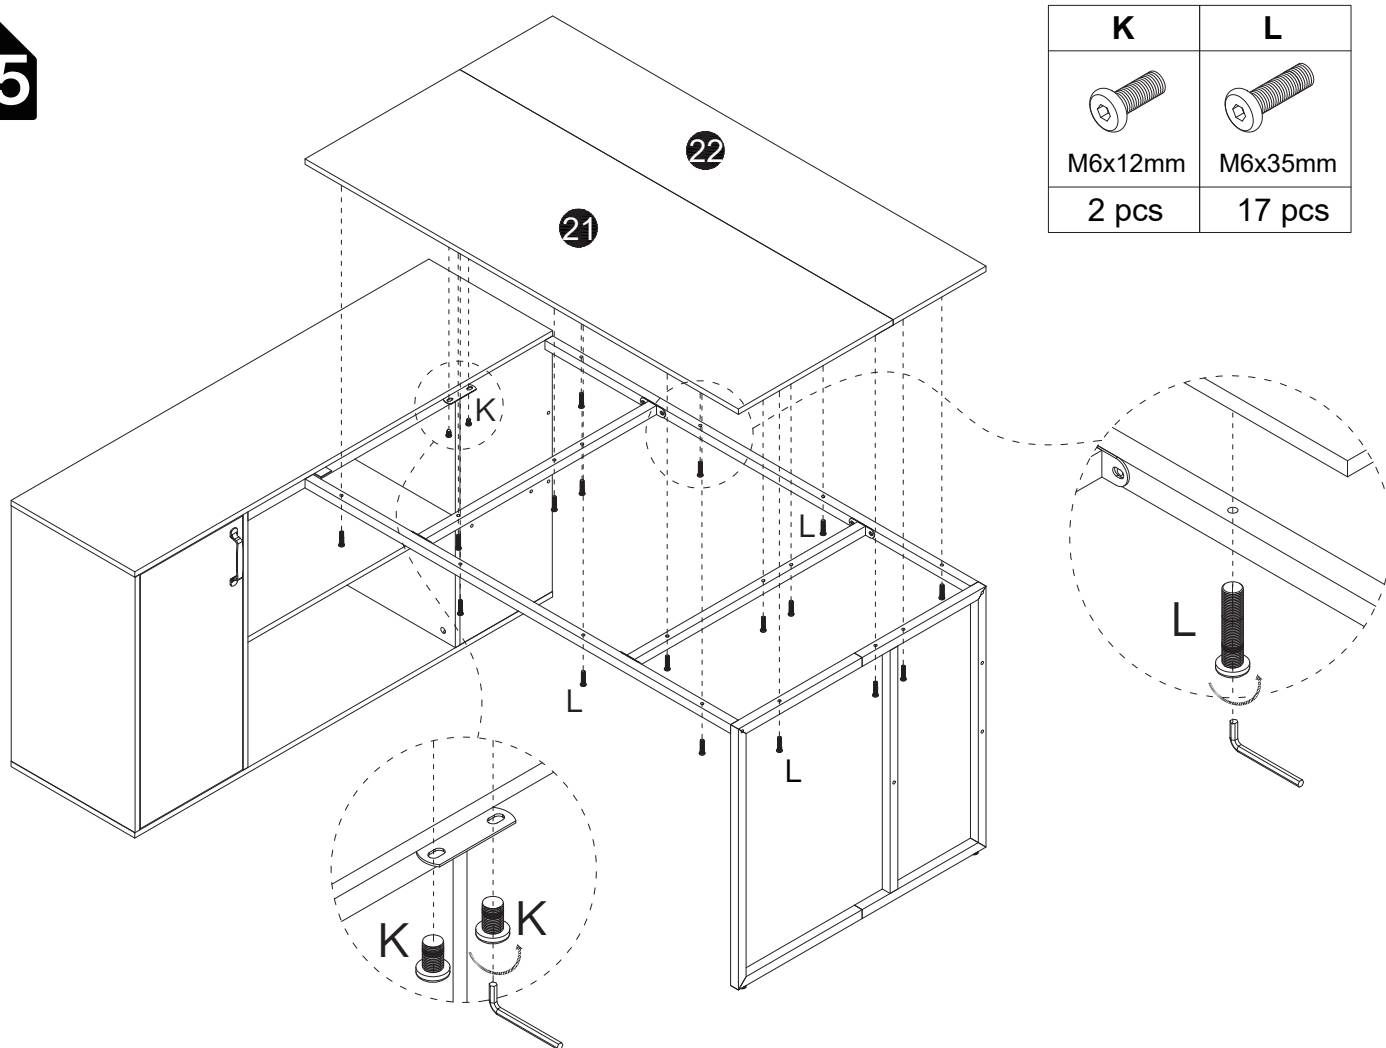


25

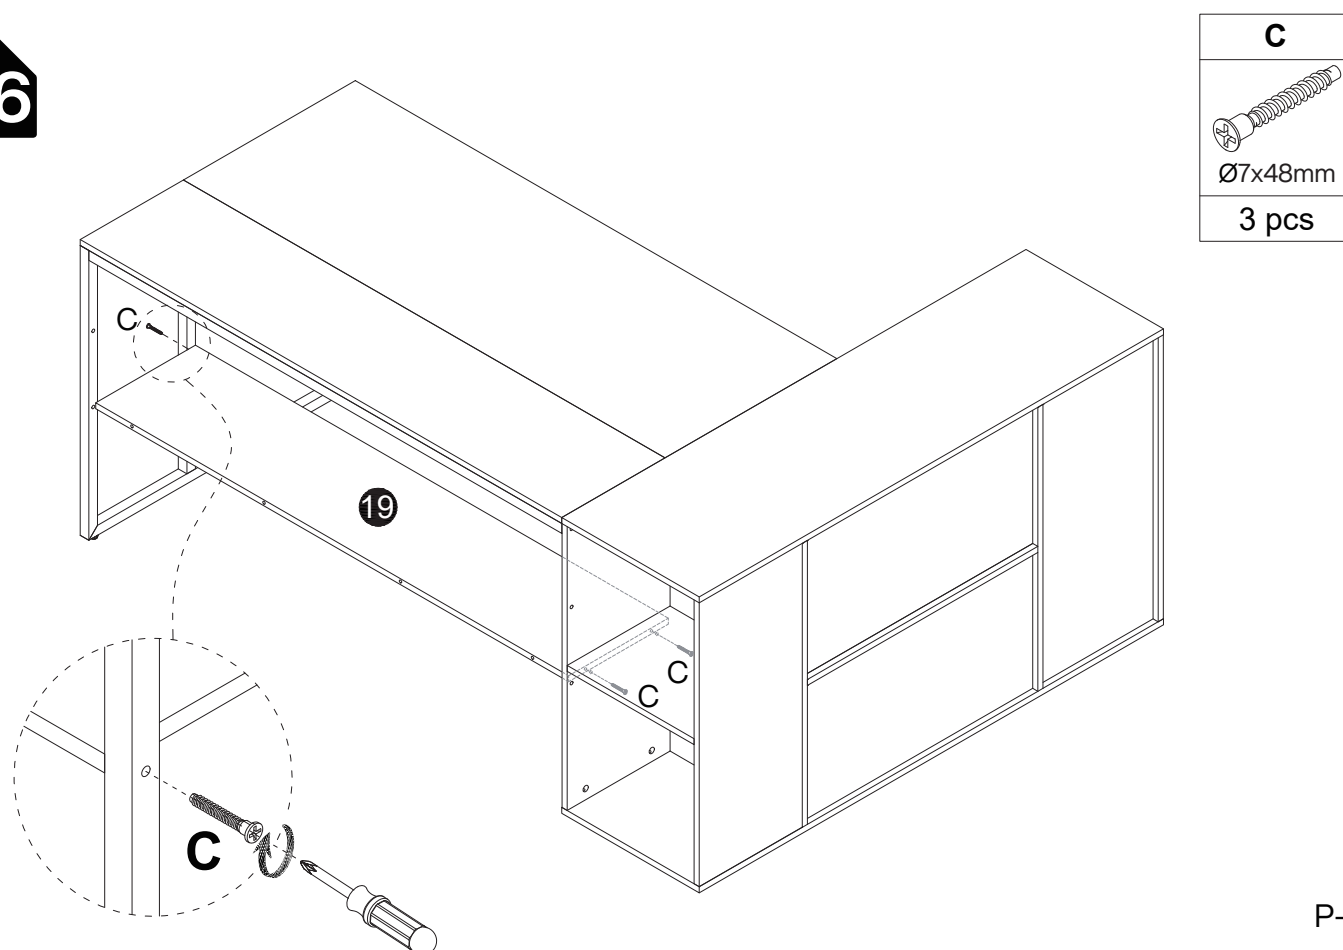


26






27

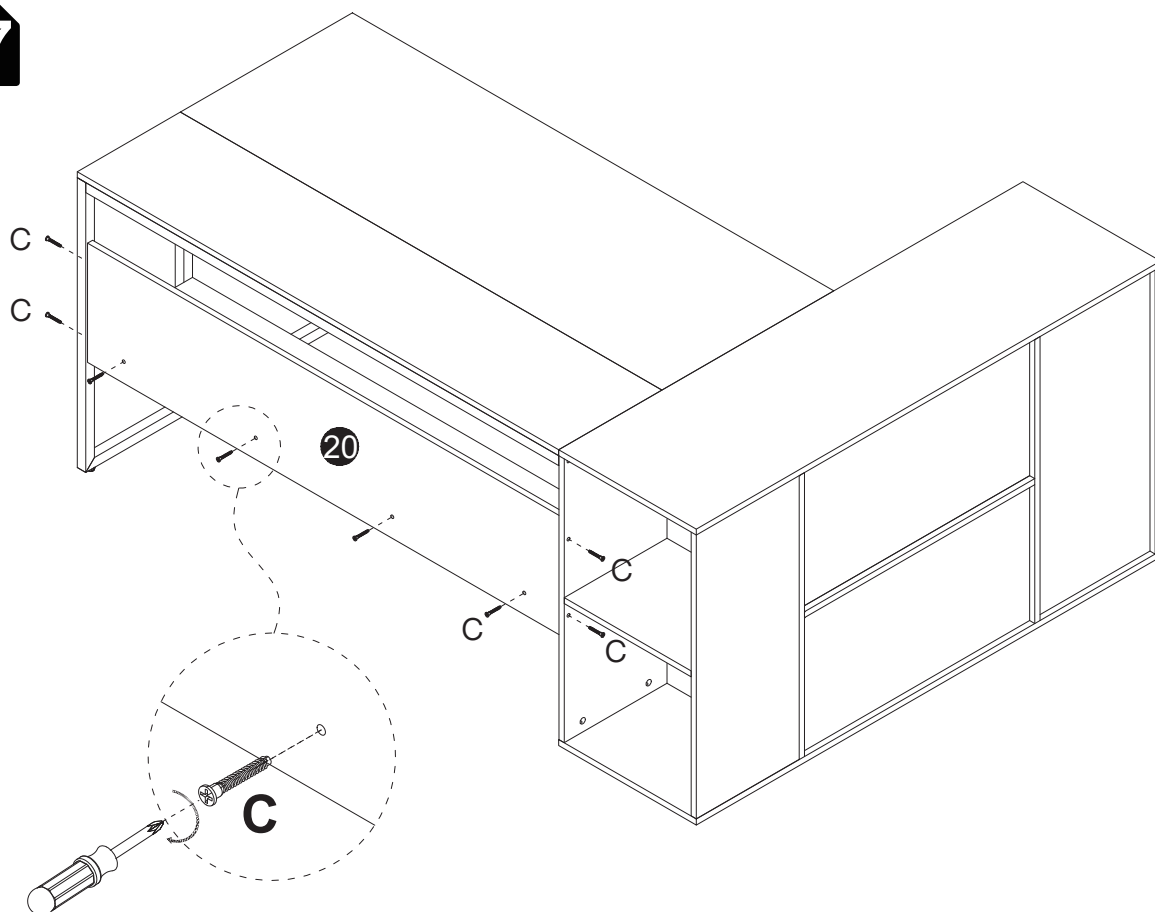

C

Ø7x48mm
8 pcs

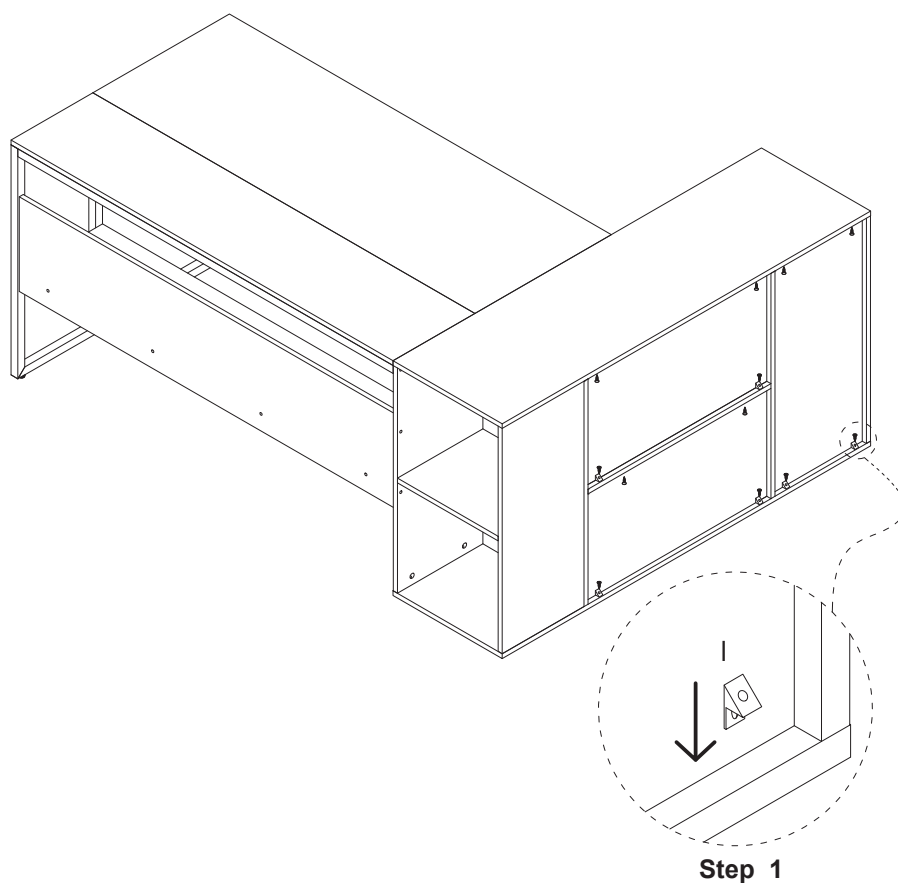28





I	E
	
12 pcs	Ø3.5x14mm
	12 pcs

Step 1

Step 2

29

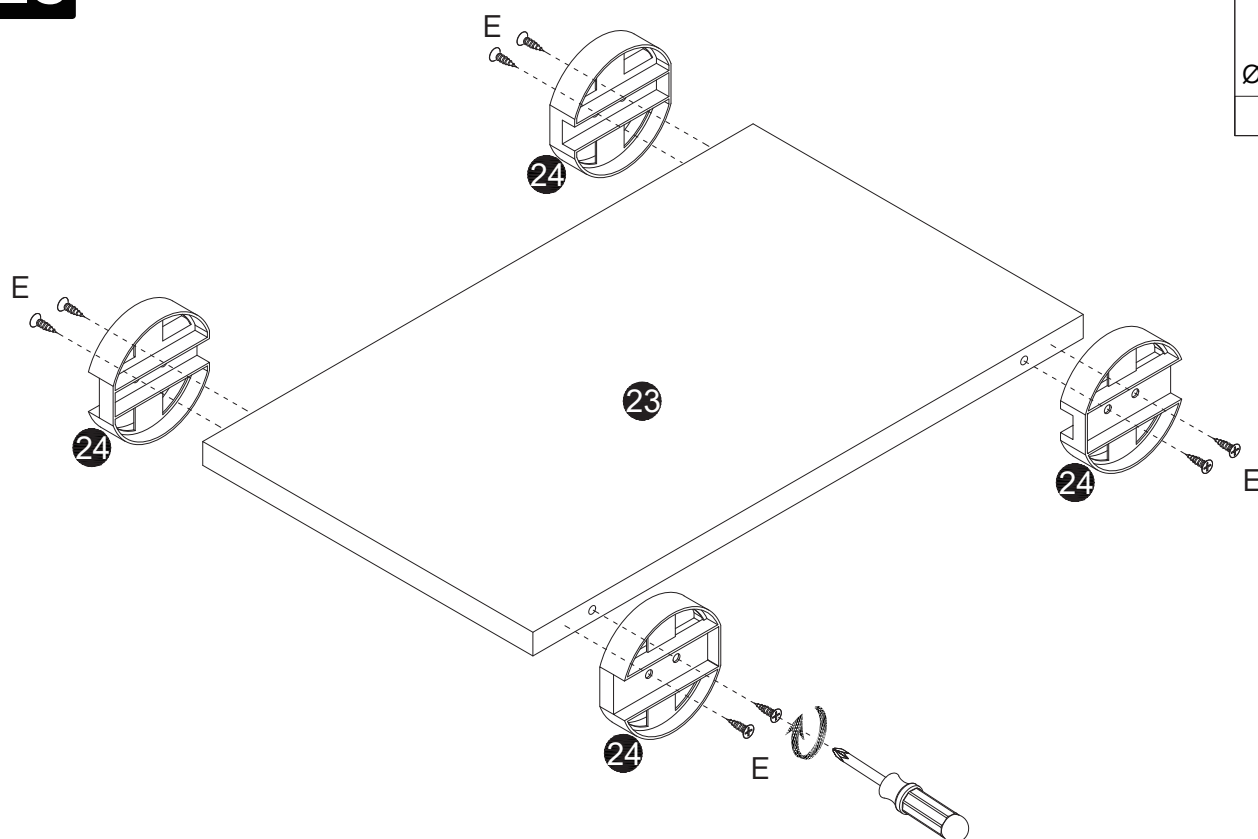

E

Ø3.5x14mm
8 pcs

30

