

YAMAHA MT07 '21-

M O U N T I N G I N S T R U C T I O N S

REF 21129

DOWNFORCE NAKED FRONTAL SPOILERS



1 Person



15 min



EASY



ALLEN

Nº 3
Nº 4



ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Aleró frontal naked	Naked frontal spoiler	1	21129J/CM3
2		Soporte	Support	1	SOPORIP1--21129
3		Tope de goma Ø3,7-3,8 x 3,2mm	Ø3,7-3,8 x 3,2mm bumper foot	3	TOPE--POF-40022
4		Tornillo Allen M5x25 Ø11 ISO 7380	M5x25 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-766
5		Silentblock Ø12xØ6x9	Ø12xØ6x9 silentblock	2	AROPASACABLES-1
6		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	2	CASQUI-1A---750


* Algunos componentes se suministran montados.
Some components are supplied assembled.

YAMAHA MT07 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

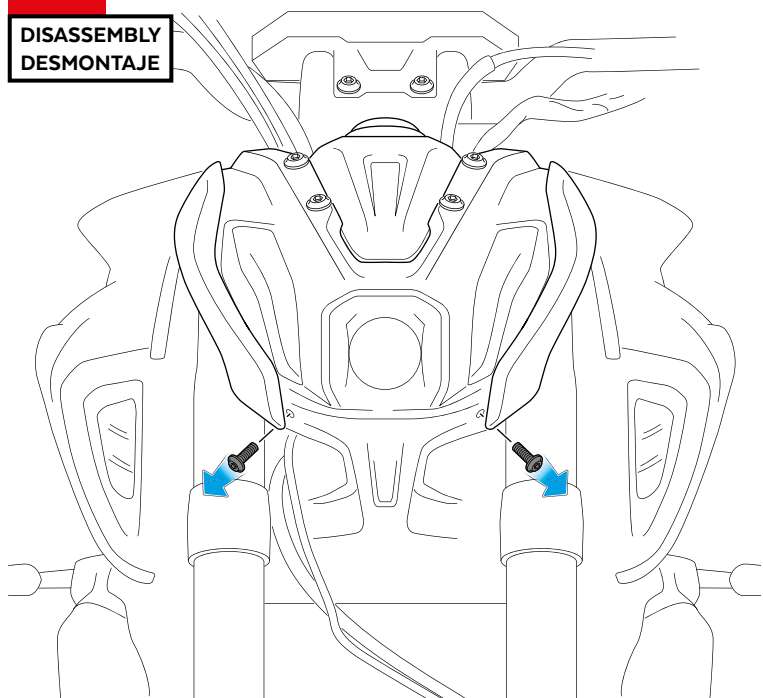

2

ASSEMBLY
MONTAJE

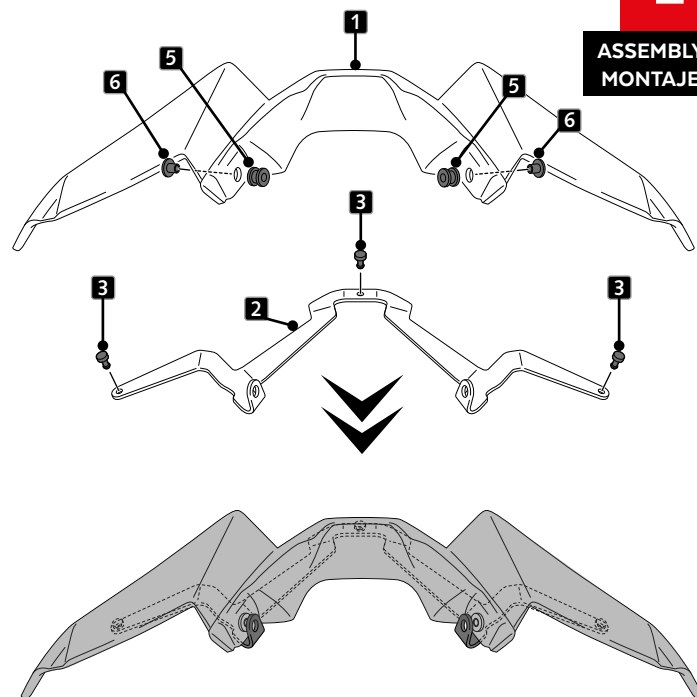

3

ASSEMBLY
MONTAJE

