

Brooke & Lou

a quick guide to WALLPAPER INSTALLATION

step 01 | SUPPLIES

GENERAL SUPPLIES NEEDED TO INSTALL WALLPAPER


- Tape Measure
- Broad Knife
- Paint Roller
- Plumb Bob or Level
- Pencil
- Bucket
- Scissors
- Paste
- Lint Free Towels
- Drop Cloth
- Ladder
- Sponge
- Straight Edge Ruler
- Water Tray
- Seam Roller
- Spackle
- Wallpaper Sprayer
- Razor Trim Knife
- Smoothing Brush
- Universal Wallcovering Primer

step 02 | INSTALLATION

Straight-match instructions

The total printed area for our wallpaper is 24.75" W X 324" H (9 yards).

That width is including the .75" overlap for installation. Installers will use the "Double Cut" method (shown below) to hang each panel, removing both the overlap and underlap after cutting.

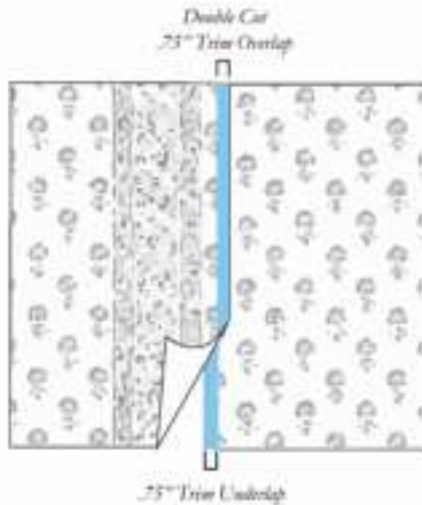

- Professional installation is suggested for our wallpaper
- Wallpaper does not come pre-pasted and requires a double cut installation
- Our recommended Paste: Roman Pro 880 or Roman 838 Heavy Duty Clear.
- Standard Glue on Paper Installation. Let paste sit 3-5 minutes.

Drop-match instructions

Check the pattern repeat on the wallpaper label (e.g., 24" half drop).

Unroll and identify the pattern — lay out at least two strips side by side on the floor to see how they align.

Calculate extra paper: drop-match repeats usually mean more waste. Account for this when cutting your lengths — add a few extra inches to allow for matching.

Double Cut
.75" Trim Overlap



.75" Trim Overlap