



MAKE A DIFFERENCE

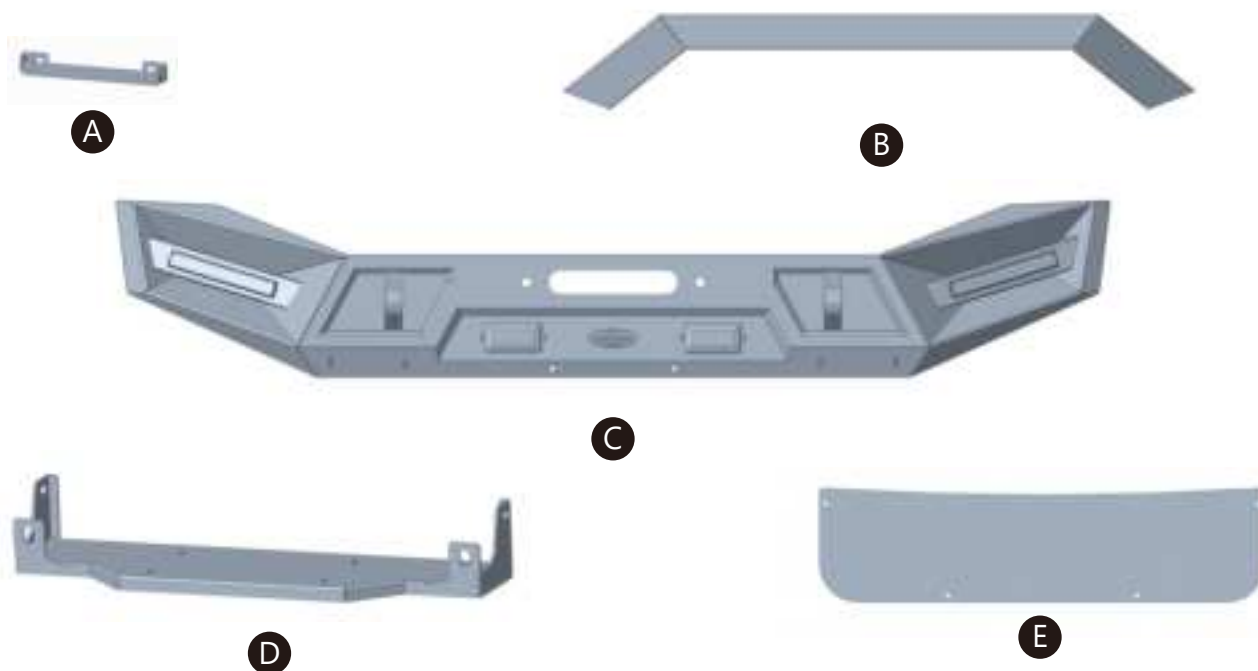
Front Bumper

BXG.3090

(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

CONTENTS



A: License Plate Bracket

D: Winch Bracket

B: Bull Bar

E: Decorative Plate

C: Main Body

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
6	Hex Bolt	M12×35		2	Flat Washer	M8×16×1	
2	Hex Bolt	M8×20		4	Flat Washer	M6×12×1	
4	Button Bolt	M6×16		2	Flat Washer	M6×12×1	
2	Button Bolt	M6×16		6	Hex Nut	M12	
8	Split Lock Washer	D12		2	Nylon Insert Lock Nut	M6	
2	Split Lock Washer	D8		2	D-ring		
12	Flat Washer	M12×30×2					

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 10mm, 13mm Wrench

◆ 4mm Hex Bit Socket

◆ 19mm Wrench

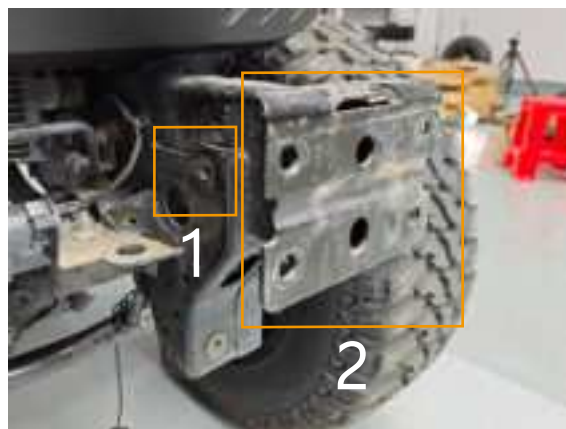
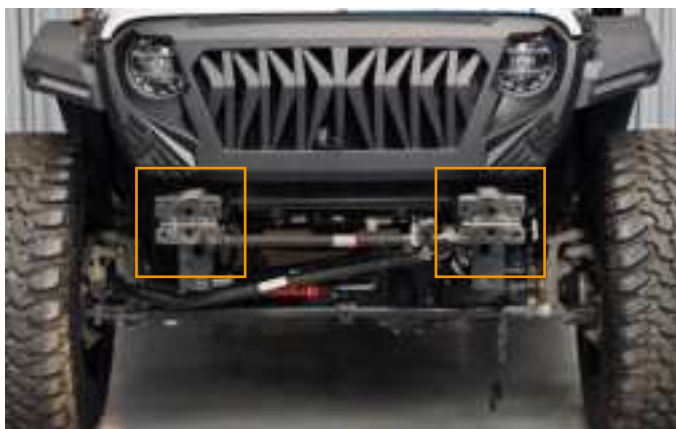
To view online instruction, please scan the QR code.



3 INSTALLATION INSTRUCTION

Step 1

Place the vehicle in park, remove the factory bumper from the frame. IF you also purchased Hooke Road skid plate, please install it first.



Step 2

Secure the winch bracket to the frame.

Adjust the bumper to the desired position, and tighten the hardware. Repeat this step on the other side of the bumper.

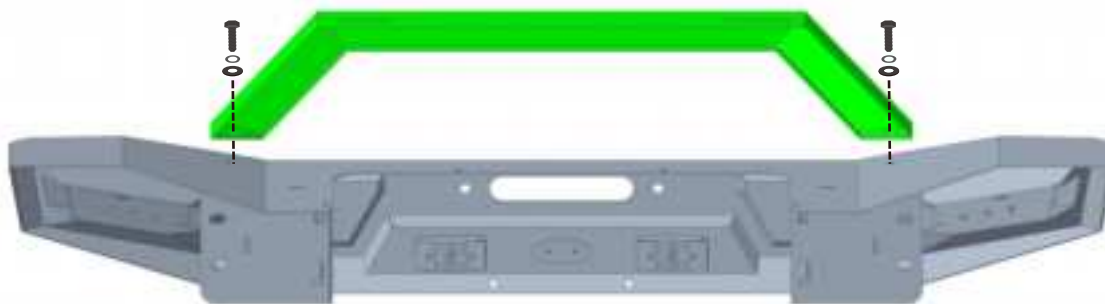
- (2) Factory Bolts



Step 3

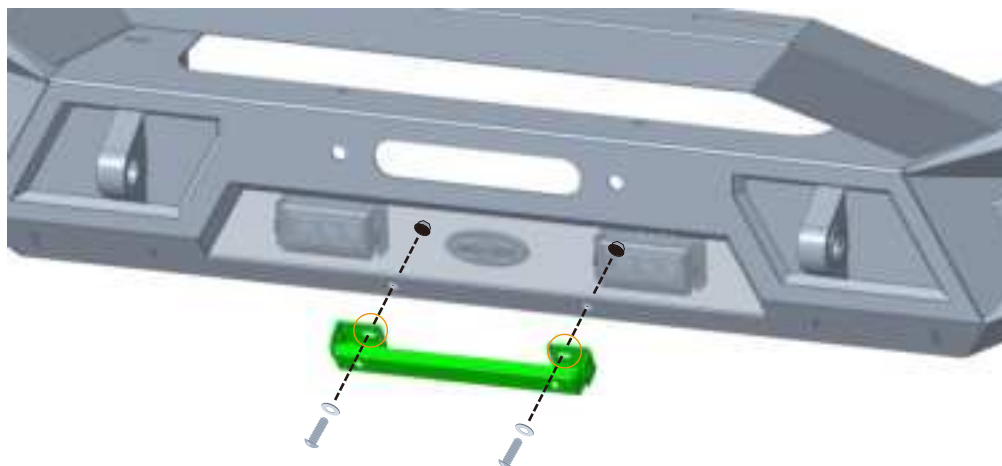
Secure the bull bar to the bumper, and tighten the hardware.

- (2) M8×20 Hex Bolts
- (2) D8 Split Lock Washers
- (2) M8×16×1 Flat Washers

**Step 4**

Secure the license plate bracket to the bumper, and tighten the hardware.

- (2) M6×16 Bottom Bolts
- (2) M6×12×1 Flat Washers
- (2) M6 Nylon Insert Lock Nuts

**Step 5**

Secure the bumper to the vehicle frame. Adjust it to the desired position, then tighten the hardware. Repeat this step on the other side of the vehicle.

- (6) M12×30 Hex Bolts
- (12) M12×30×12 Flat Washers
- (8) D12 Split Lock Washers
- (6) M12 Hex Nuts

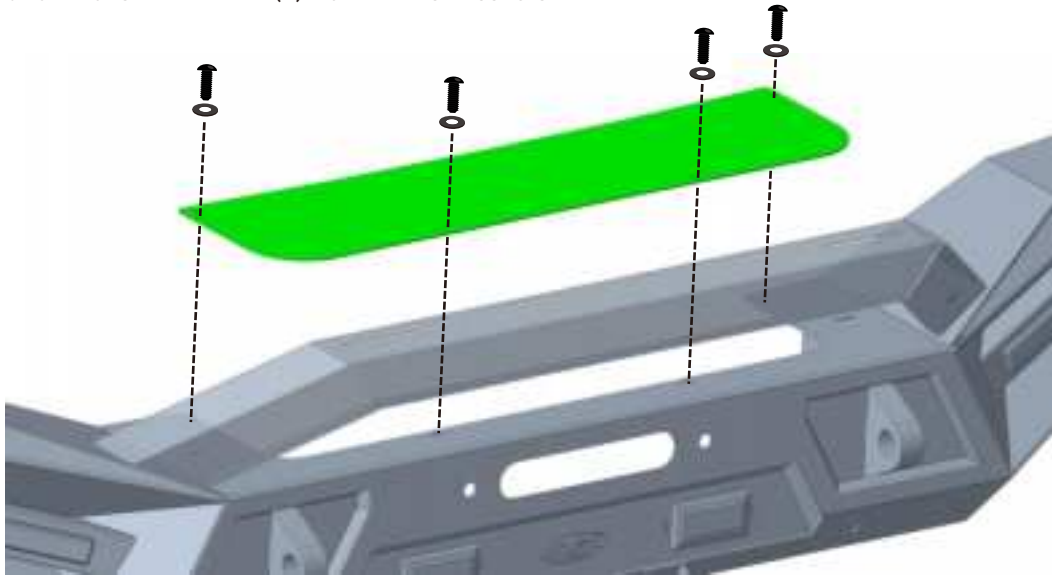


Step 6

Secure the decorative plate to bumper, and tighten the hardware.

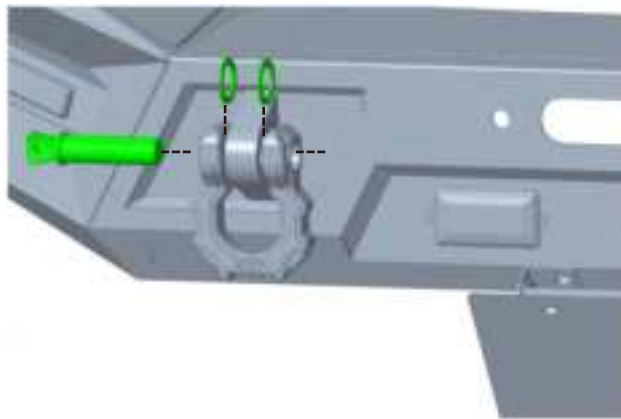
•(4) M6×16 Bottom Bolts

•(4) M6×12×1 Flat Washers

**Step 7**

Install the D-rings.

•(2) D-rings

**Step 8**

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

