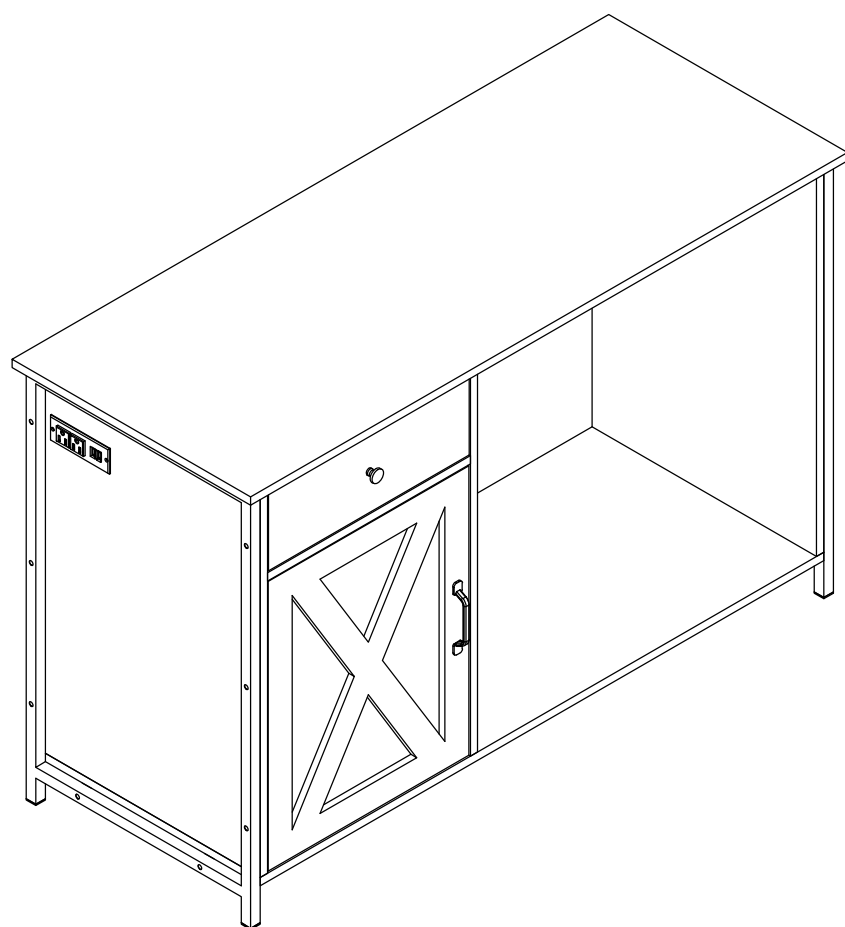
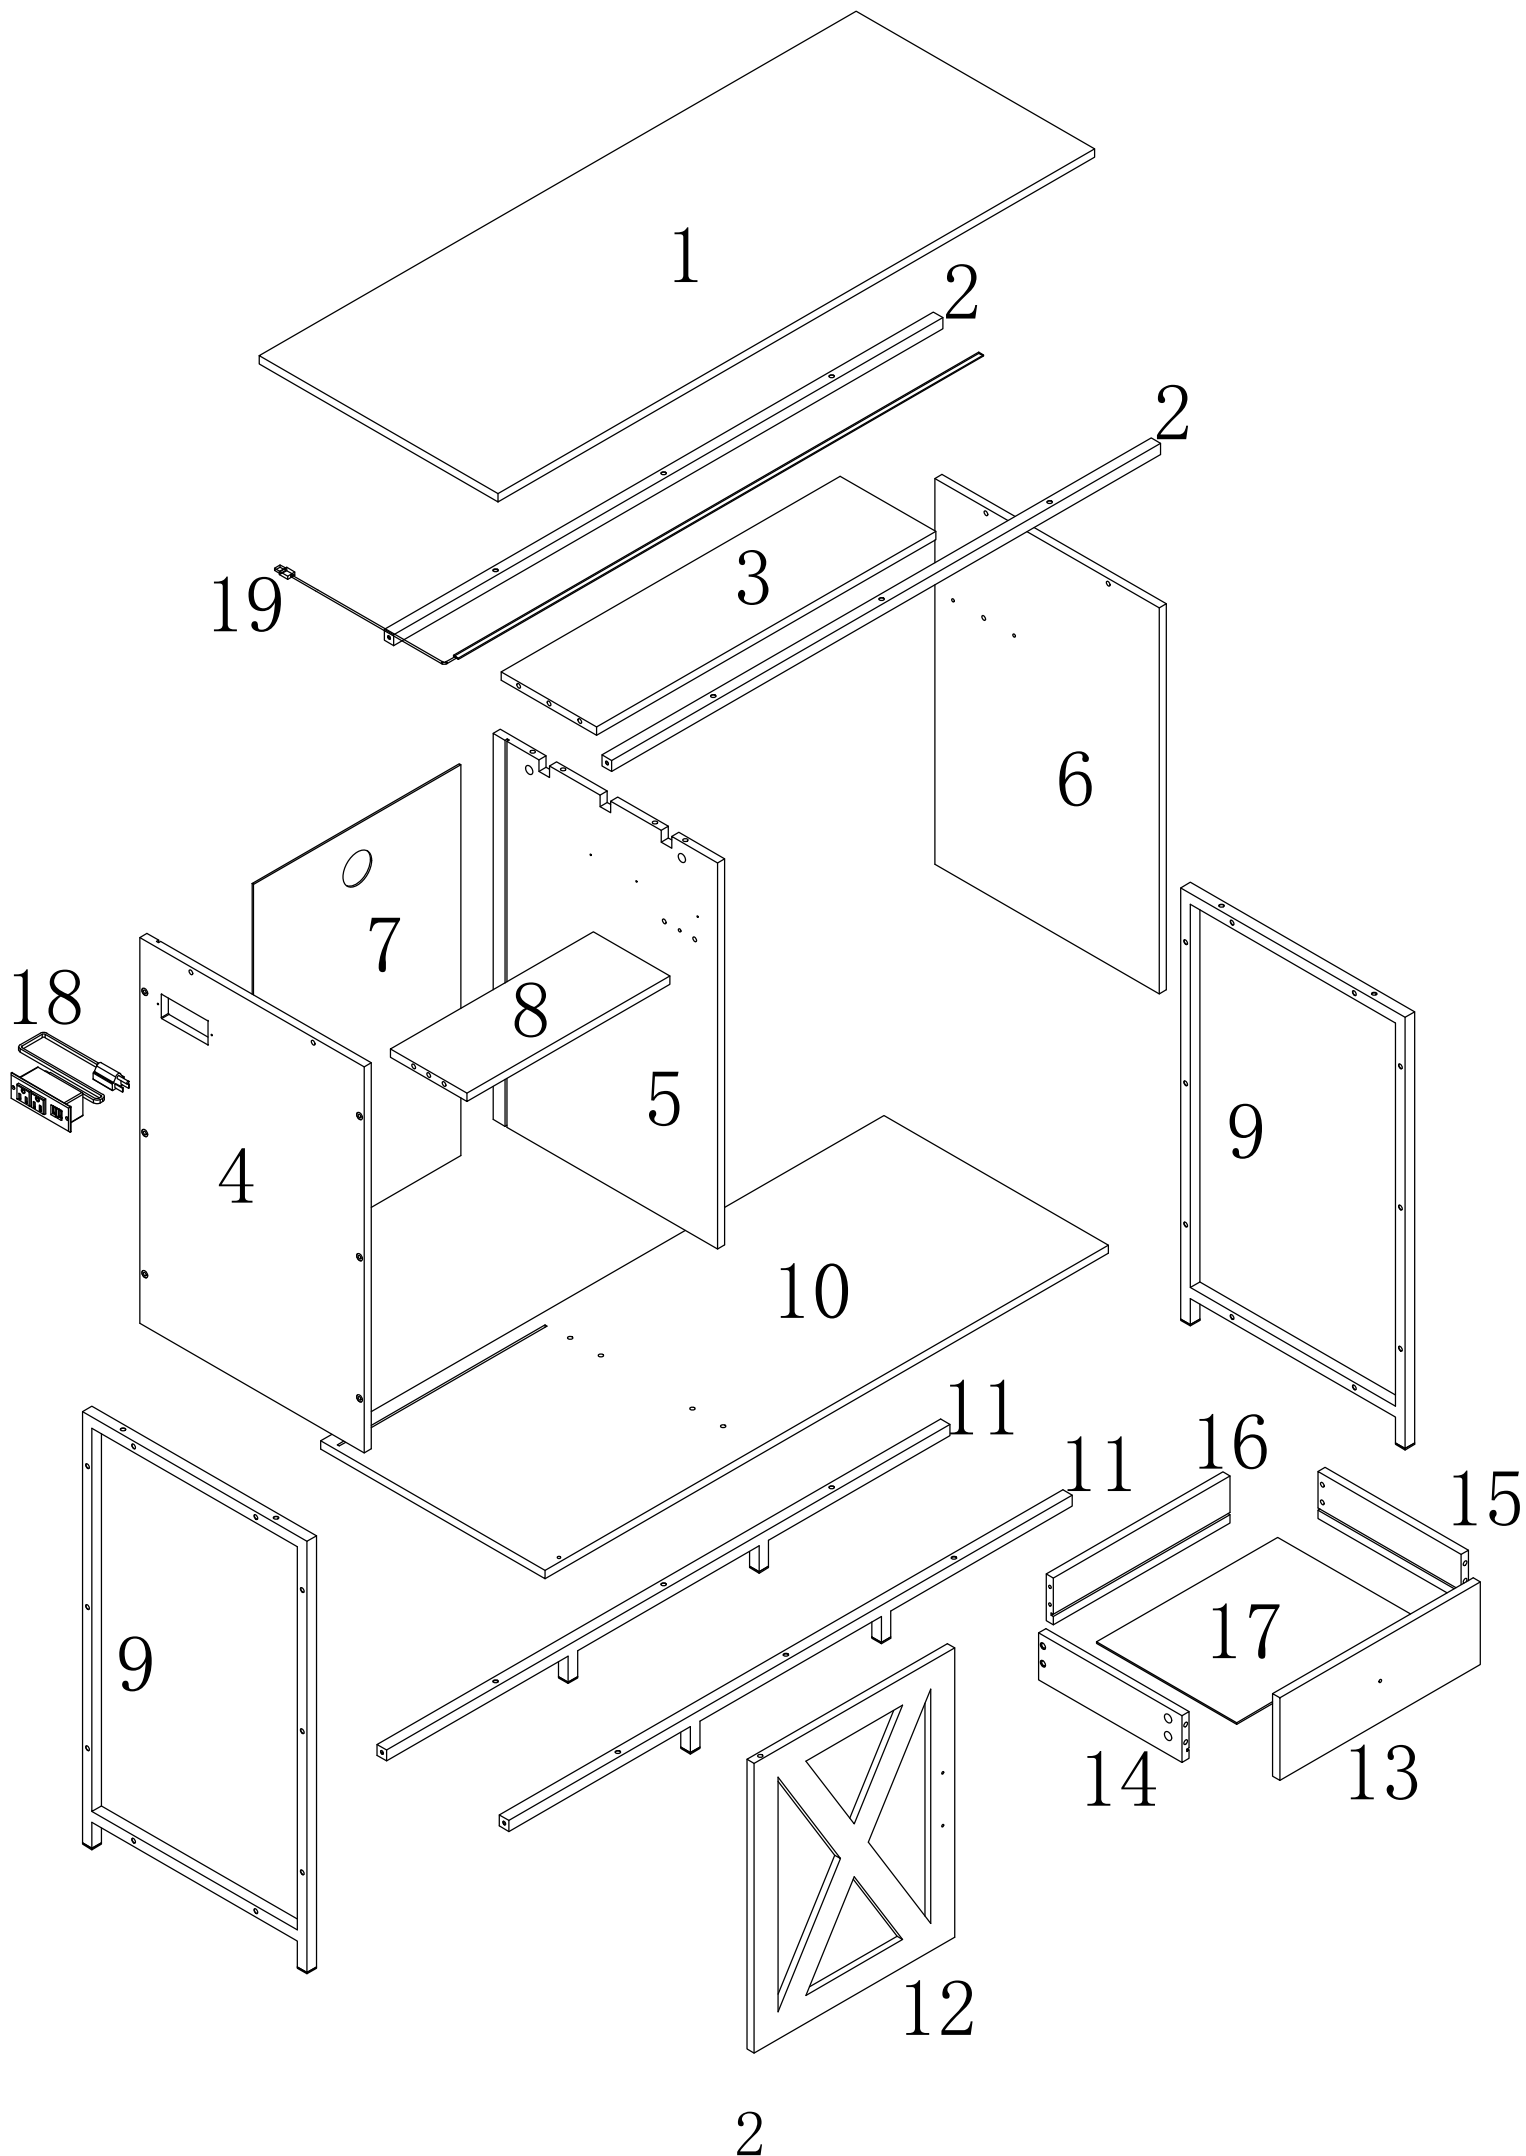






Trouble Shooting

Missing/Damaged pieces/
Wrong size and installation issues



Contact us with your problem,pic,
number and qty to the "Contact seller"
button in the detail page of your order



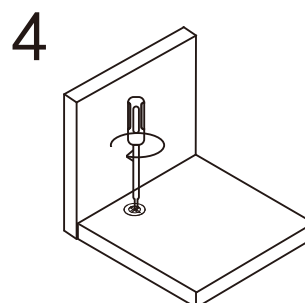
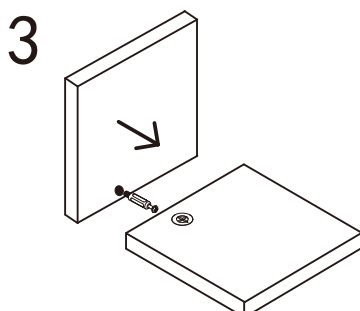
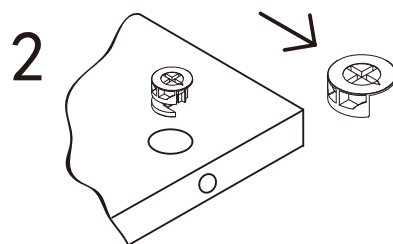
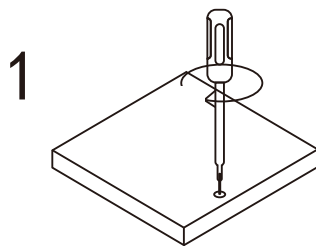
Respond with 24 hours to solve issue

Before You Start


















1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw

Cam Lock Fastening System
















This Cam Lock Fastening System will be used throughout the assembly process





Parts List

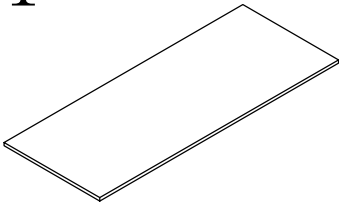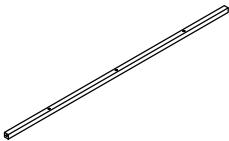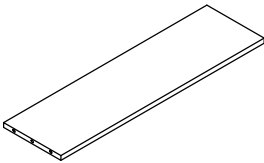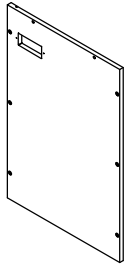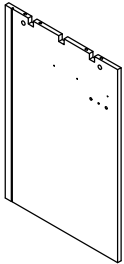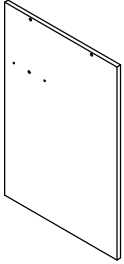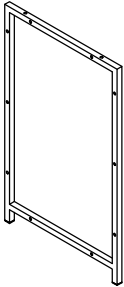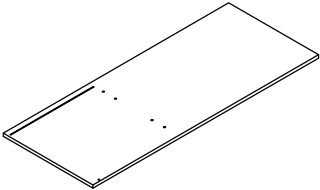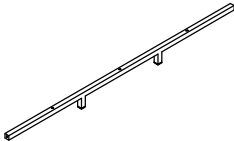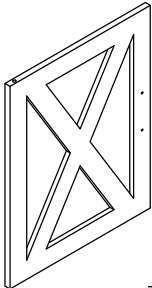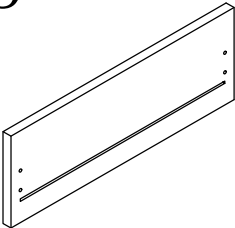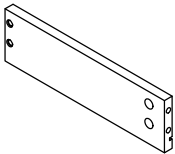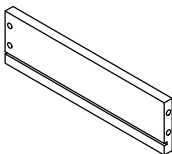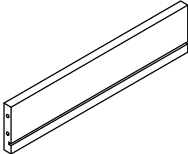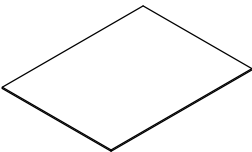
1  1PC	2  2PCS	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  1PC
9  2PCS	10  1PC	11  2PCS	12  1PC
13  1PC	14  1PC	15  1PC	16  1PC
17  1PC	18  1PC	19  1PC	

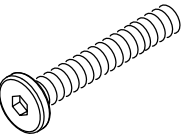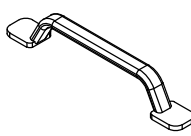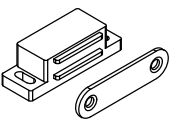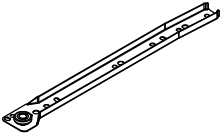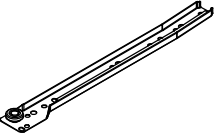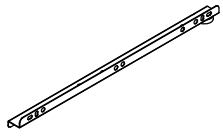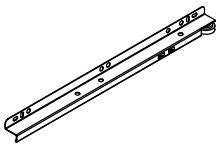Hardware List

A  12PCS	B  12PCS	C  ø8*30 10PCS	D  M6*30 28PCS
E  M6*50 8PCS	F  M4*18 3PCS	G  7*40 2PCS	H  3*14 16PCS
I  4*14 2PCS	J  1PC	K  1PC	L  1PC
M  1PC	N  1PC	O  1PC	P  1PC
Q  2PCS	R  ø21 4PCS	S  4*40 4PCS	T  1PC
			U  1PC


STEP 1

A	C	H	M	N	T
					
2PCS	ø8*30 4PCS	3*14 6PCS	1PC	1PC	1PC

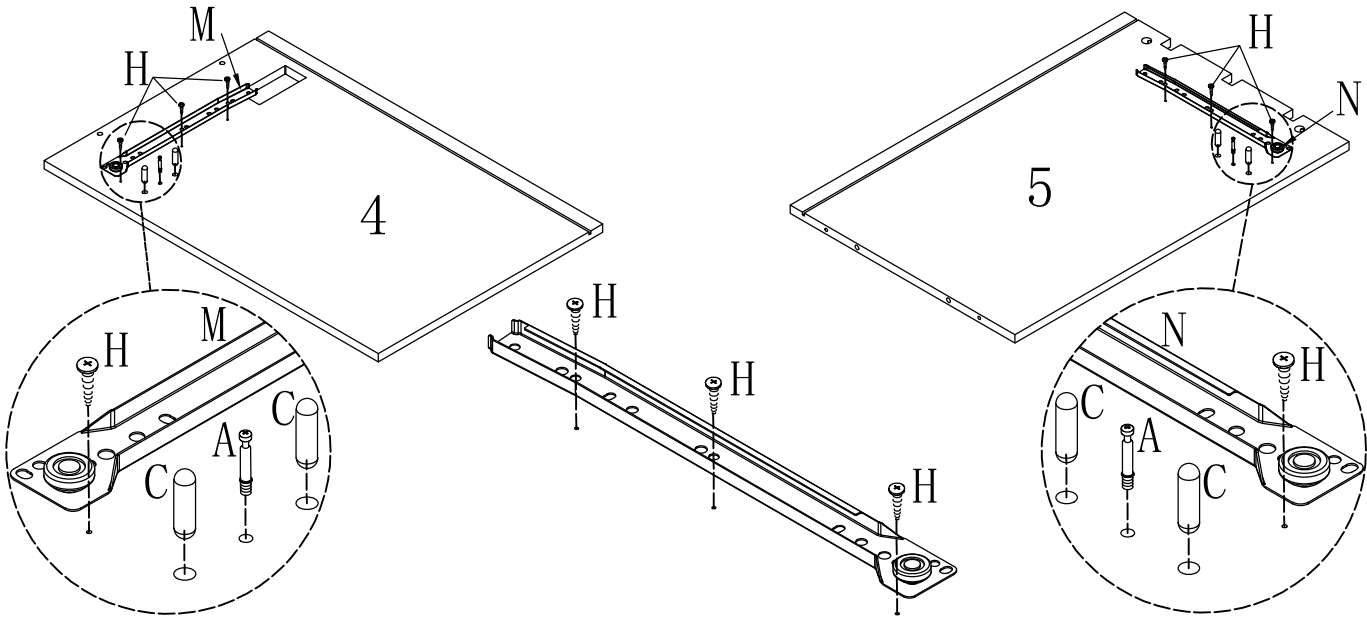


STEP 2

A	B	C	H	L	T
					
2PCS	2PCS	ø8*30 1PC	3*14 2PCS	1PC	1PC

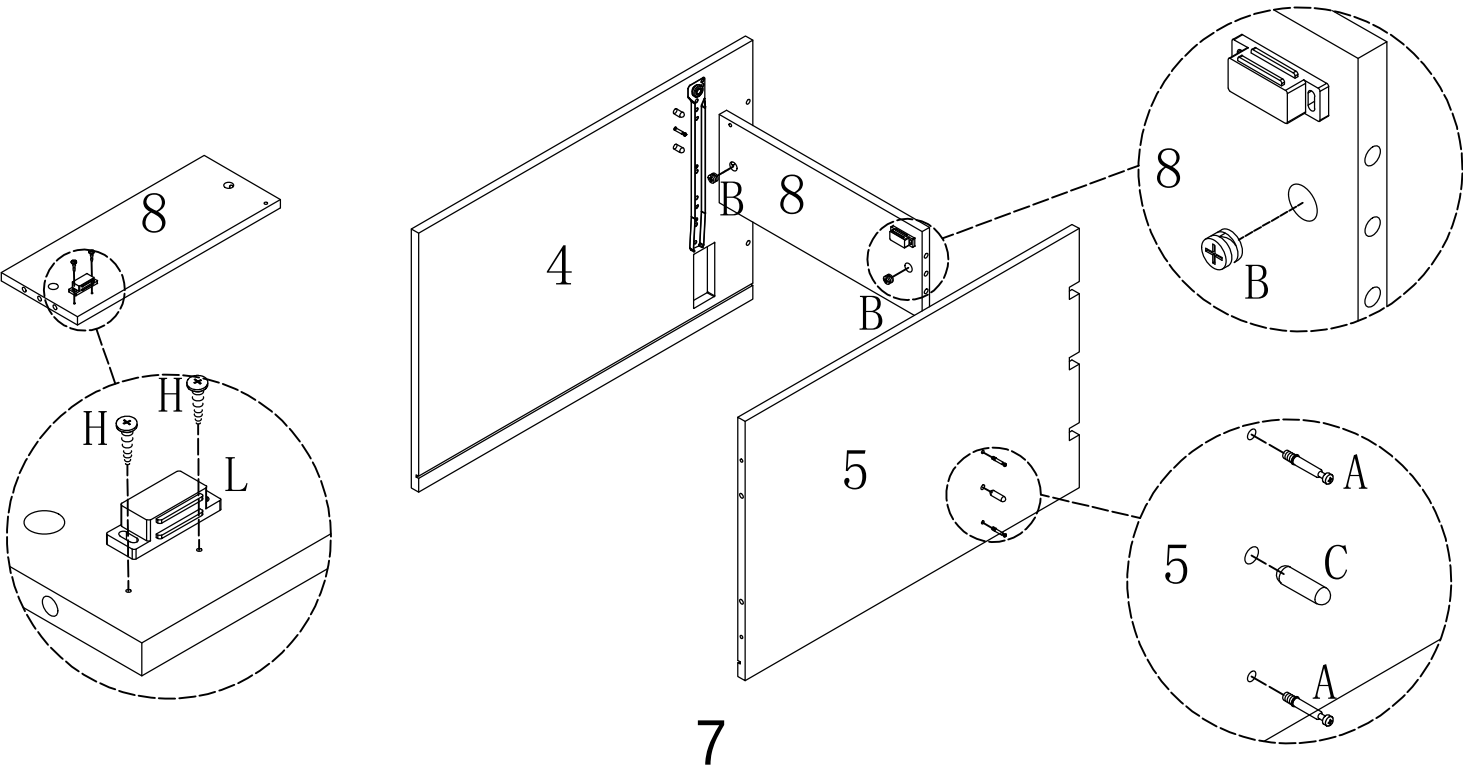



STEP 3

A  2PCS	B  4PCS	C  ø8*30 1PC
T  1PC		


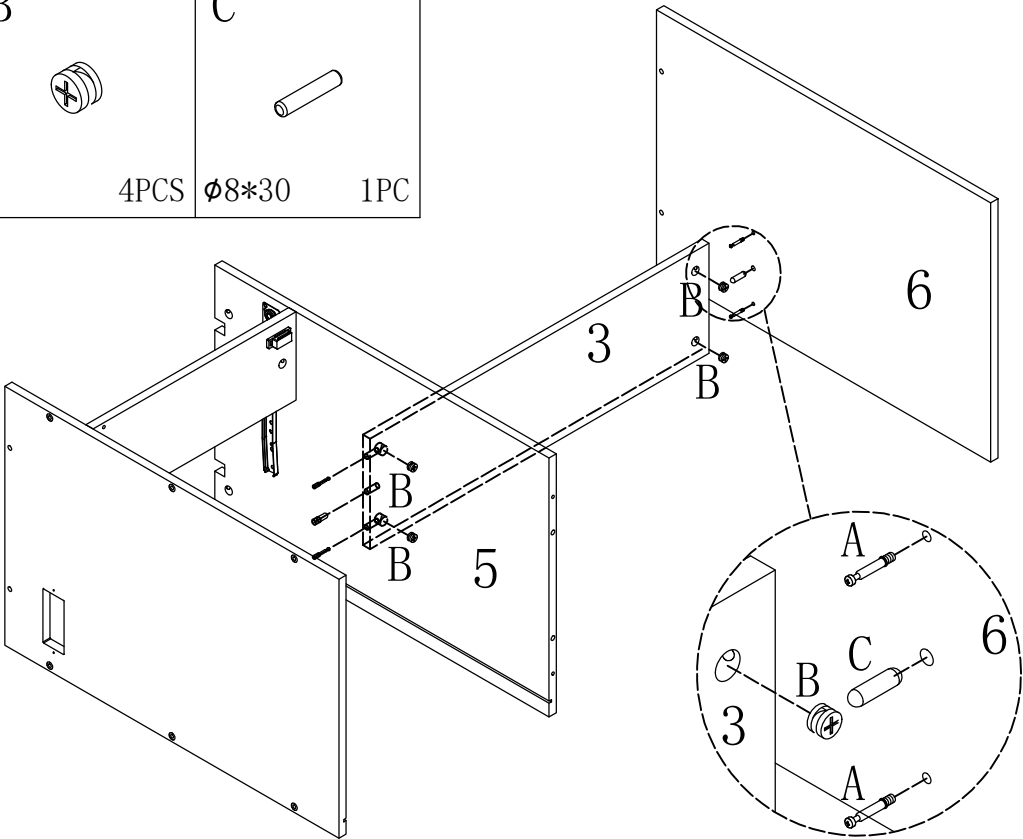



STEP 4

C  ø8*30 2PCS	D  M6*30 6PCS	G  7*40 2PCS
U  1PC		

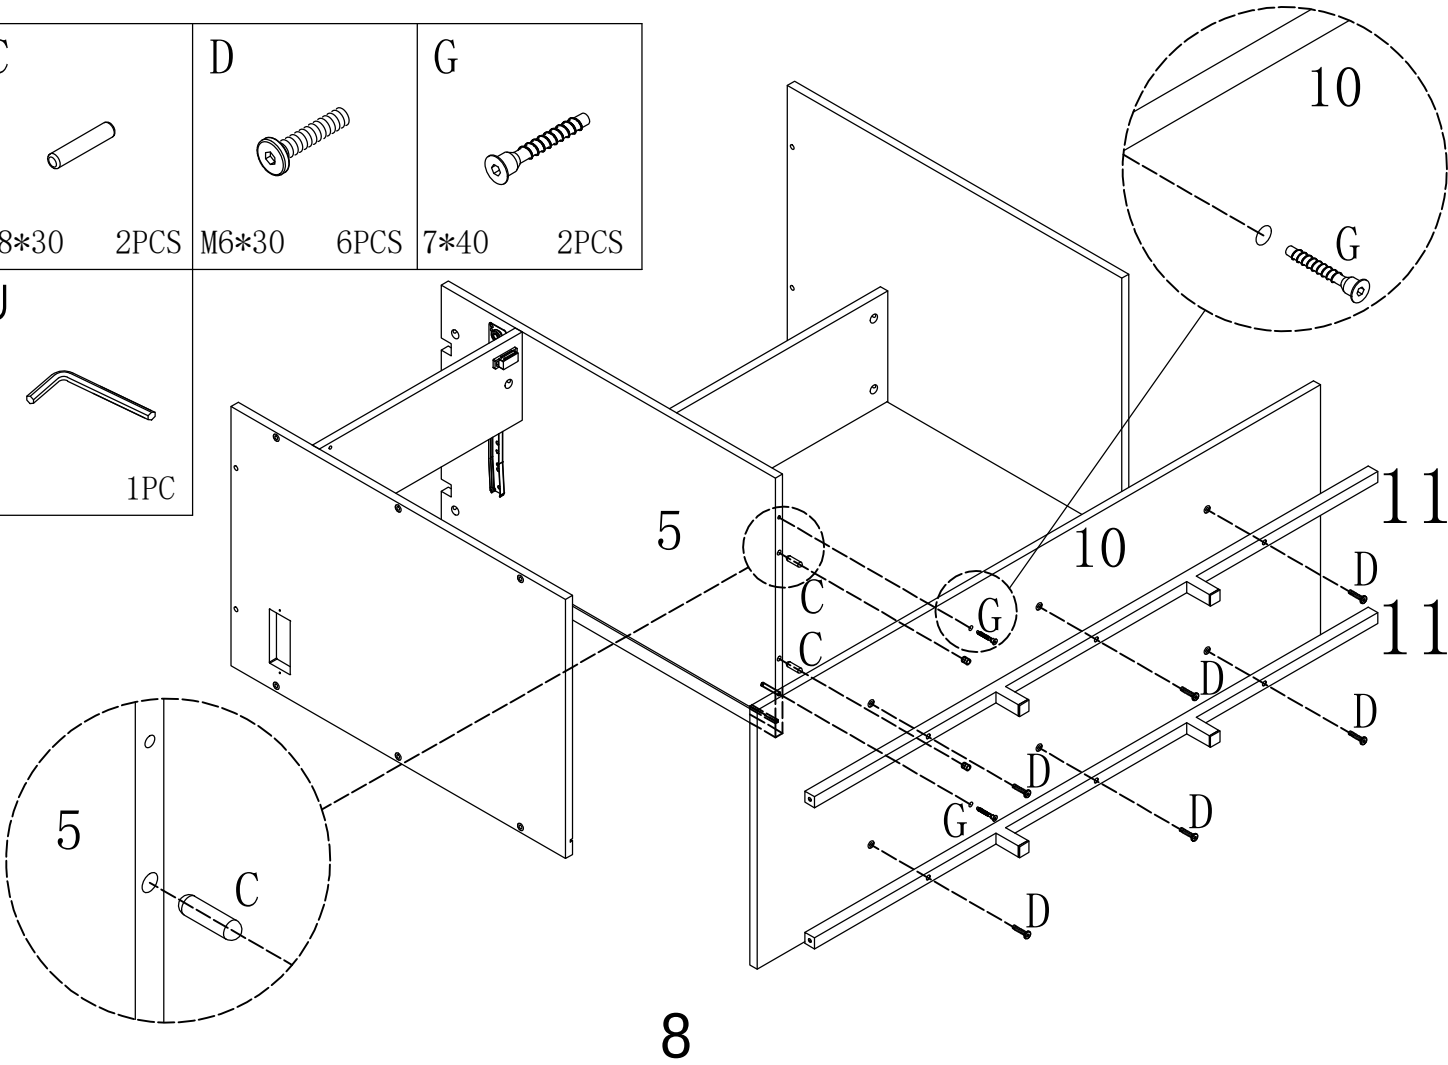


STEP 5


D  M6*30 12PCS	E  M6*50 4PCS
U  1PC	

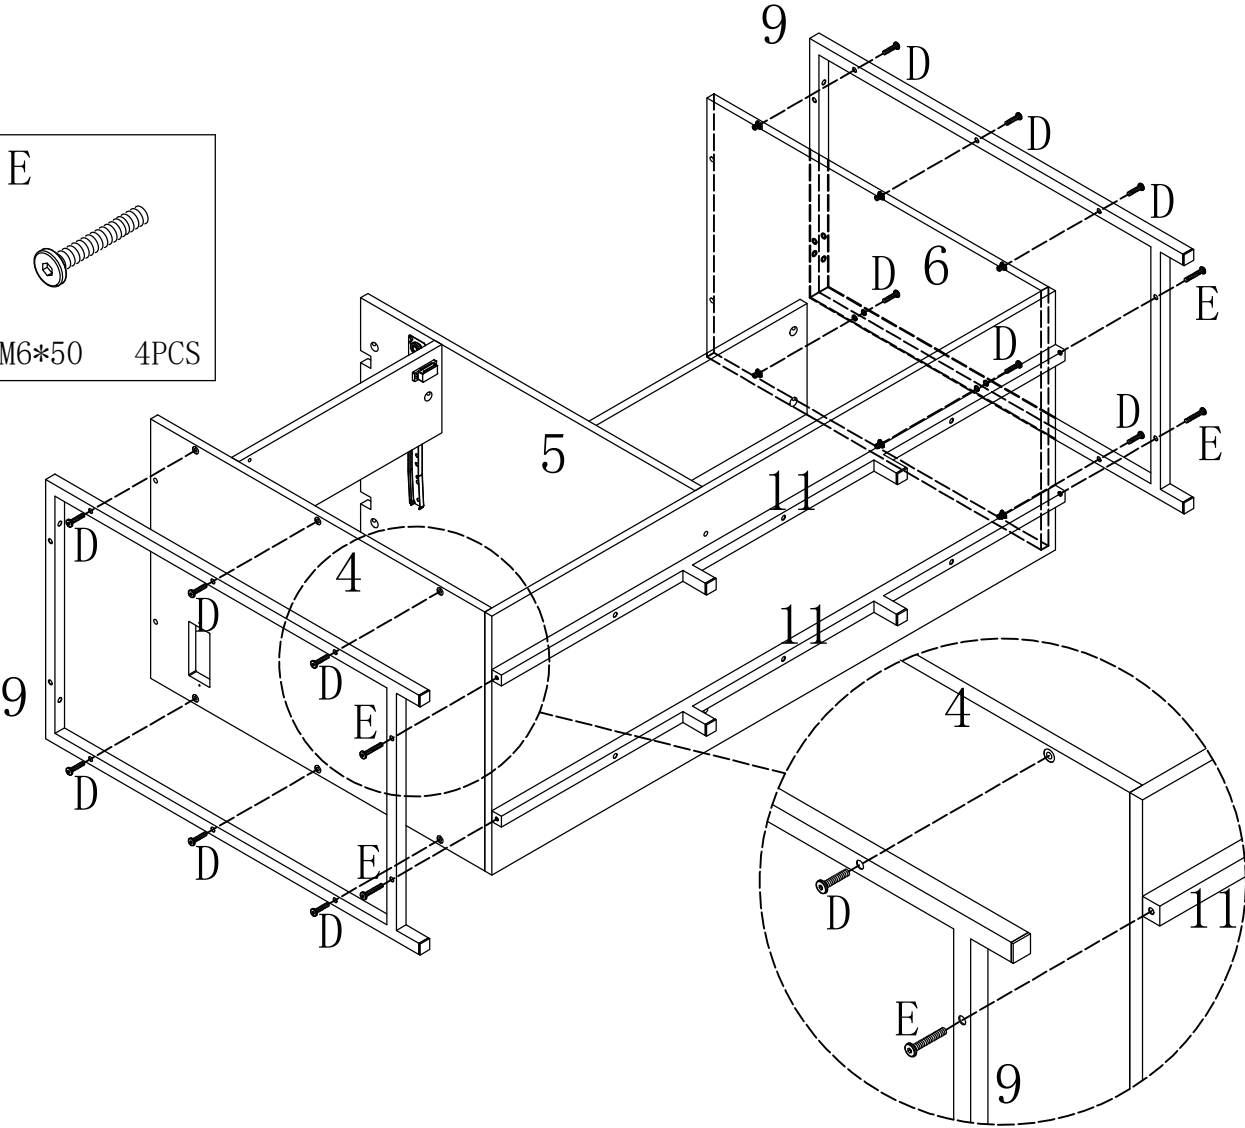


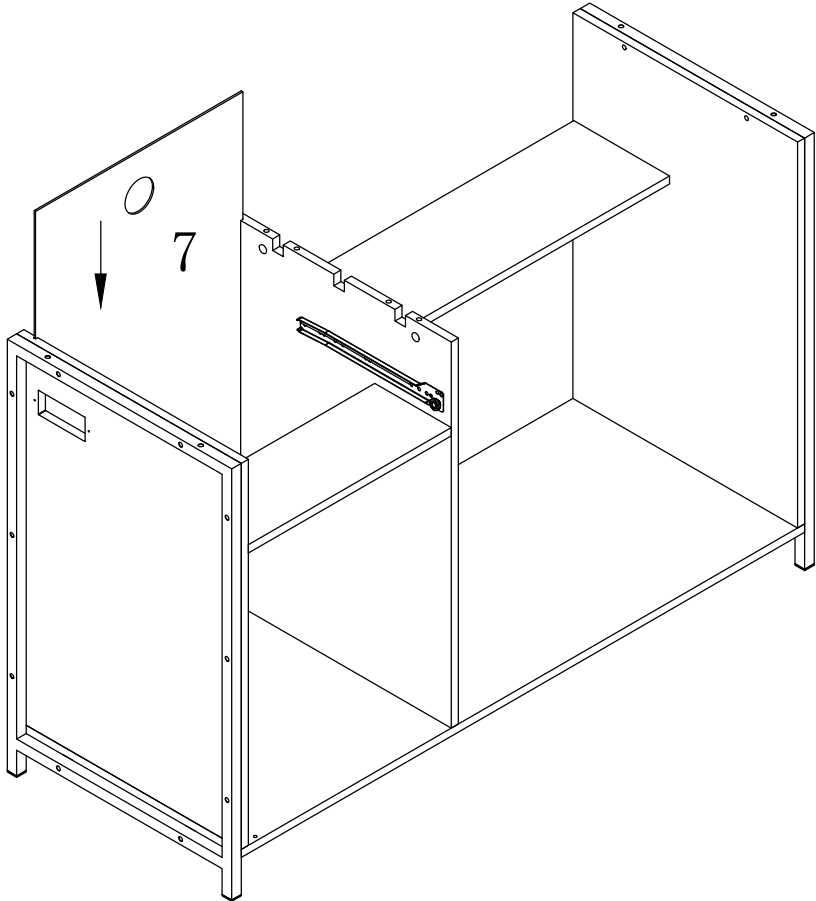STEP 6







STEP 7

I  4*14 2PCS	E  M6*50 4PCS
T  1PC	
U  1PC	

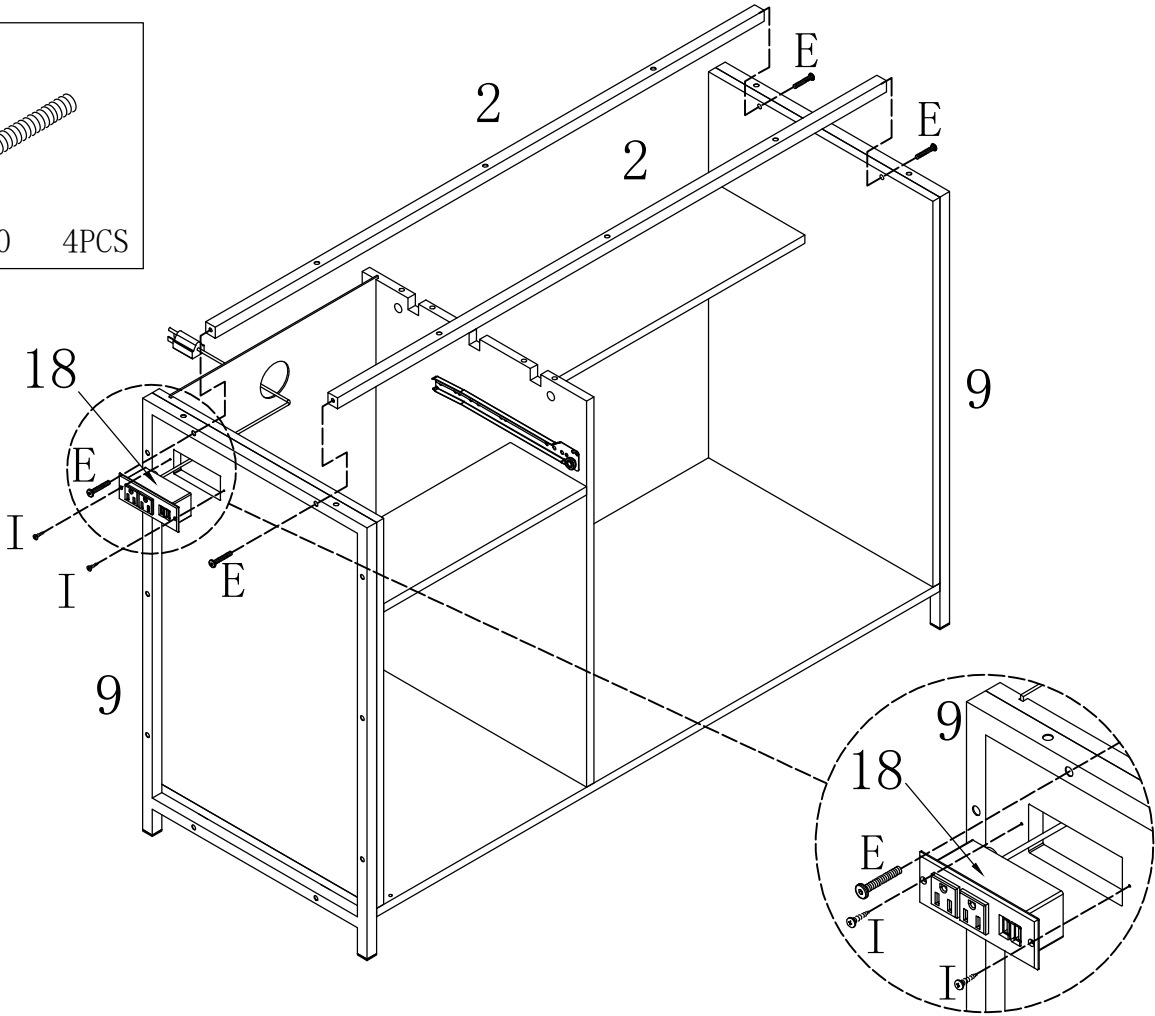



STEP 8

A  2PCS	C  Ø8*30 2PCS	T  1PC
--	--	---

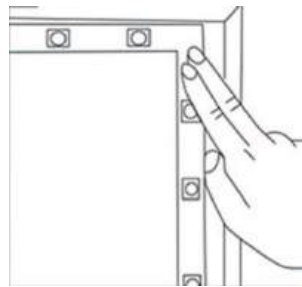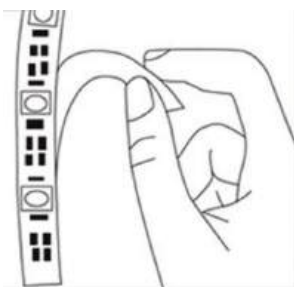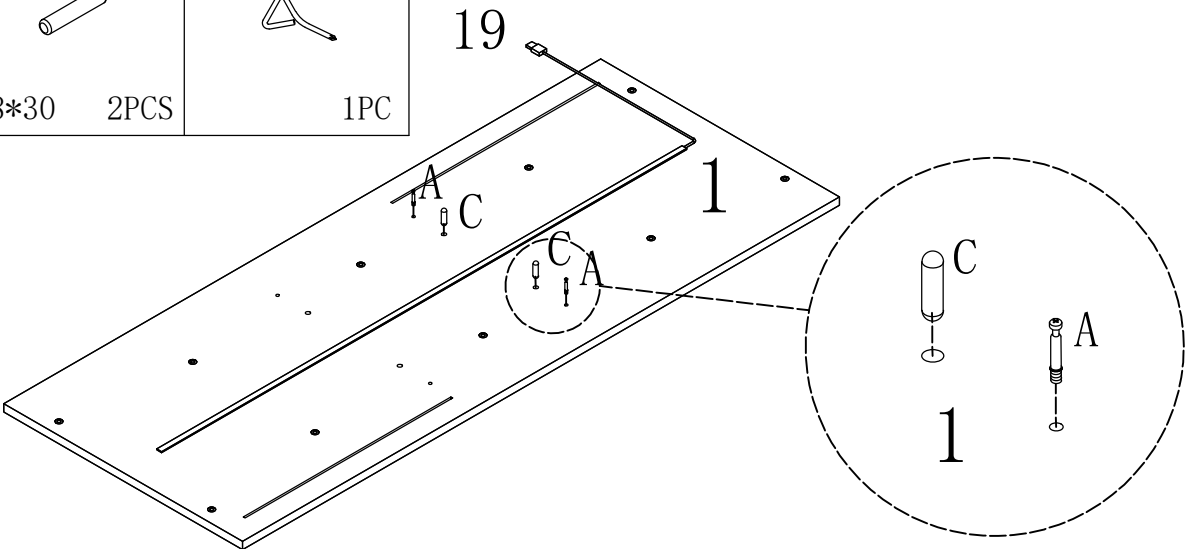



STEP 9

B	D
	
2PCS	M6*30 10PCS
T	U
	
1PC	1PC

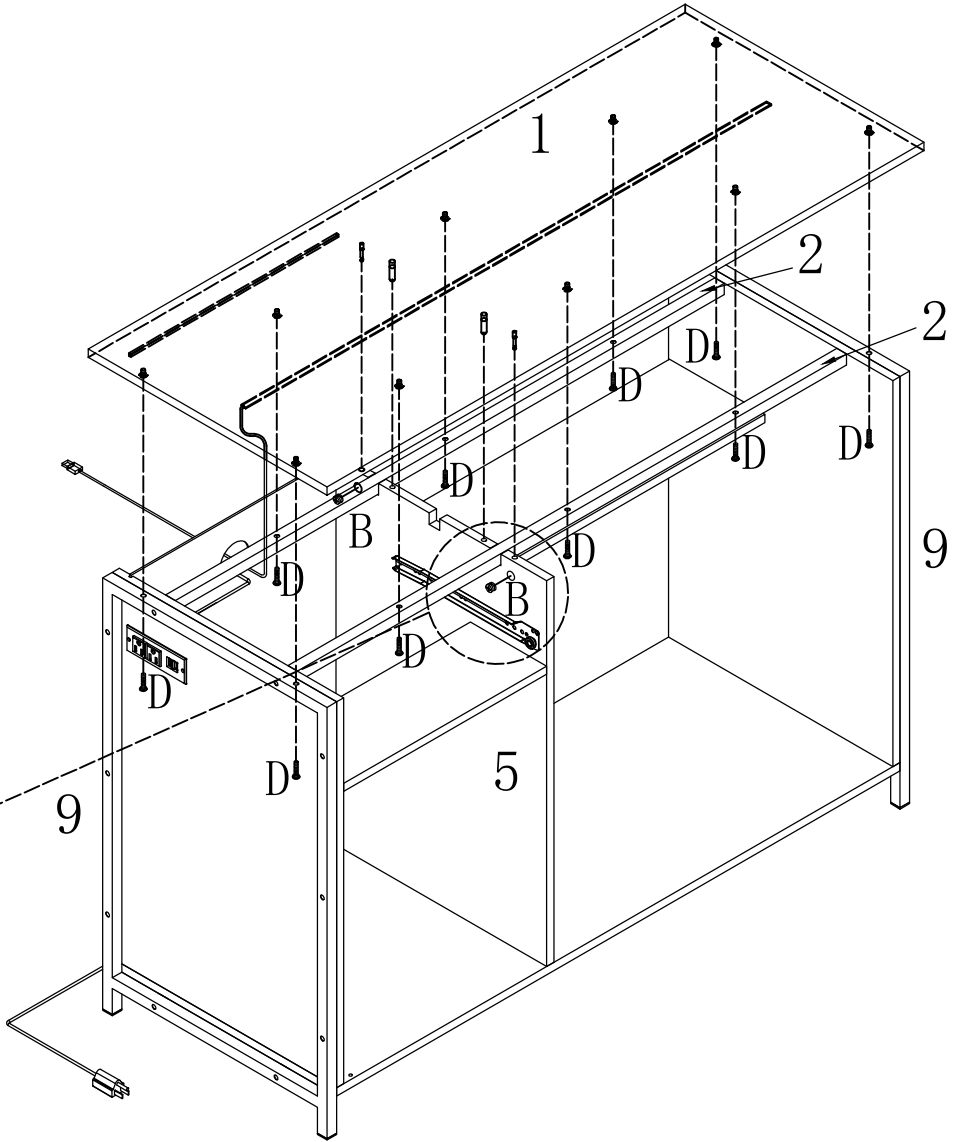
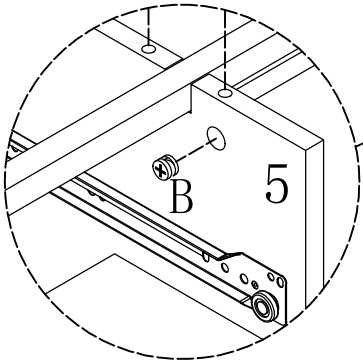




STEP 10

A	B	F	J	S
				
4PCS	4PCS	M4*18 1PC	1PC	4*40 4PCS
T				
				
1PC				

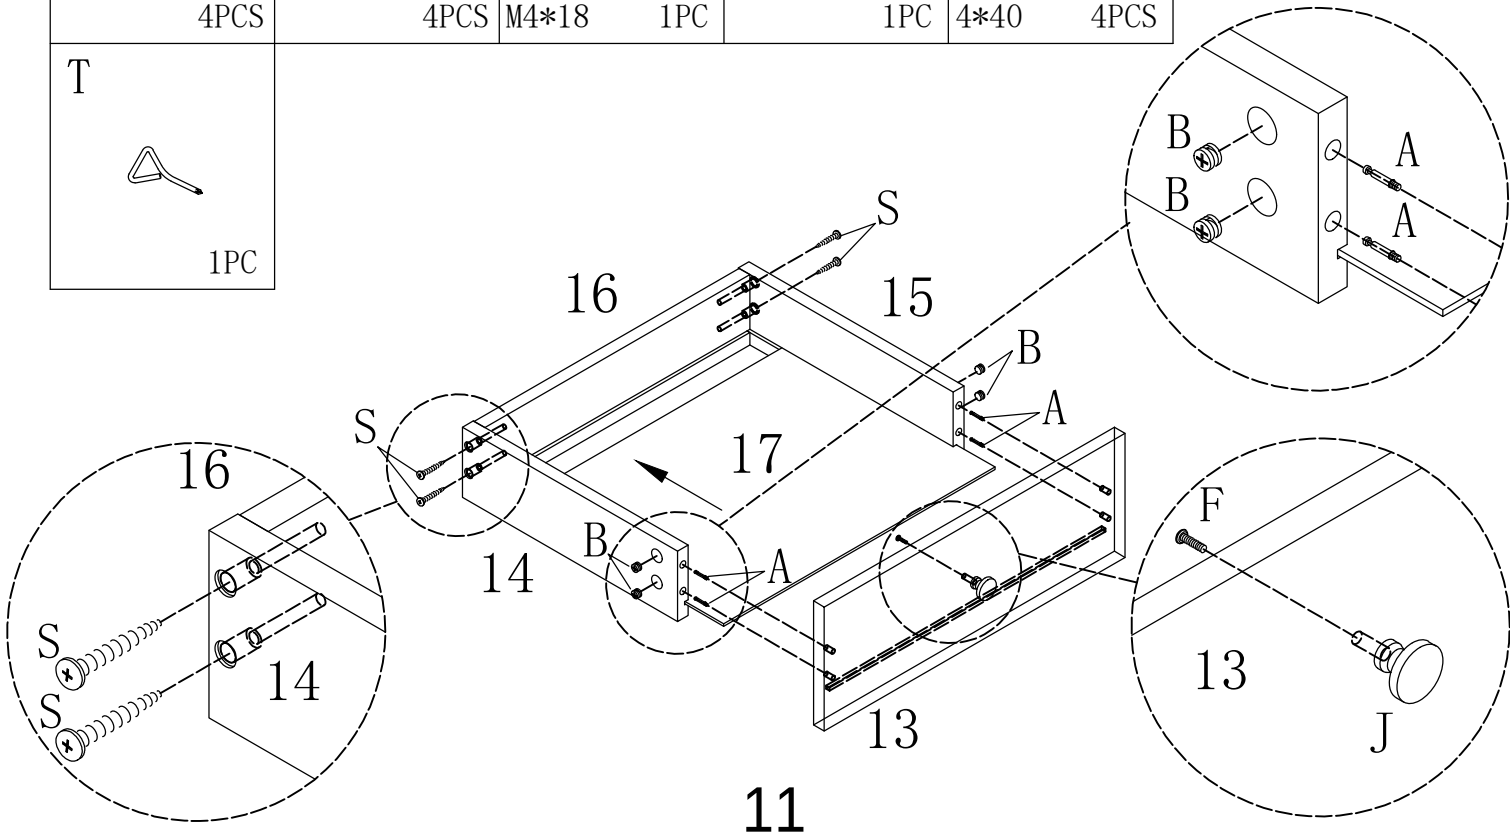



STEP 11

H	O	P	T
			
3*14 6PCS	1PC	1PC	1PC

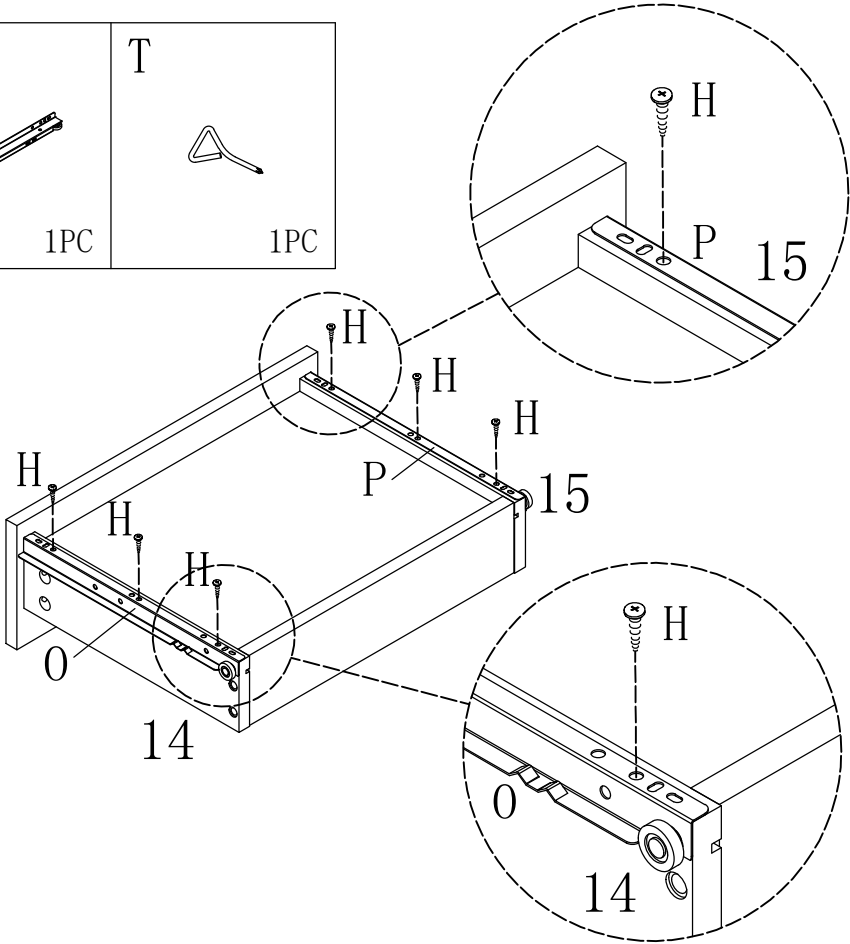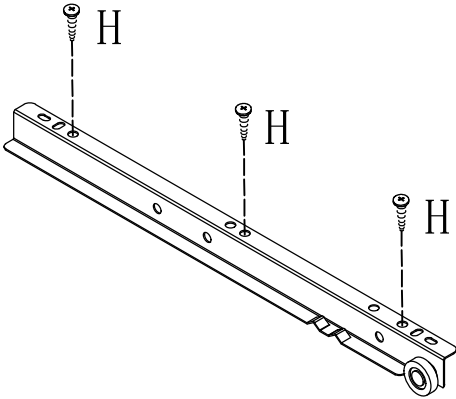


STEP 12

F	K
	
M4*18 2PCS	1PC
H	Q
	
3*14 2PCS	2PCS
L	T
	
1PC	1PC

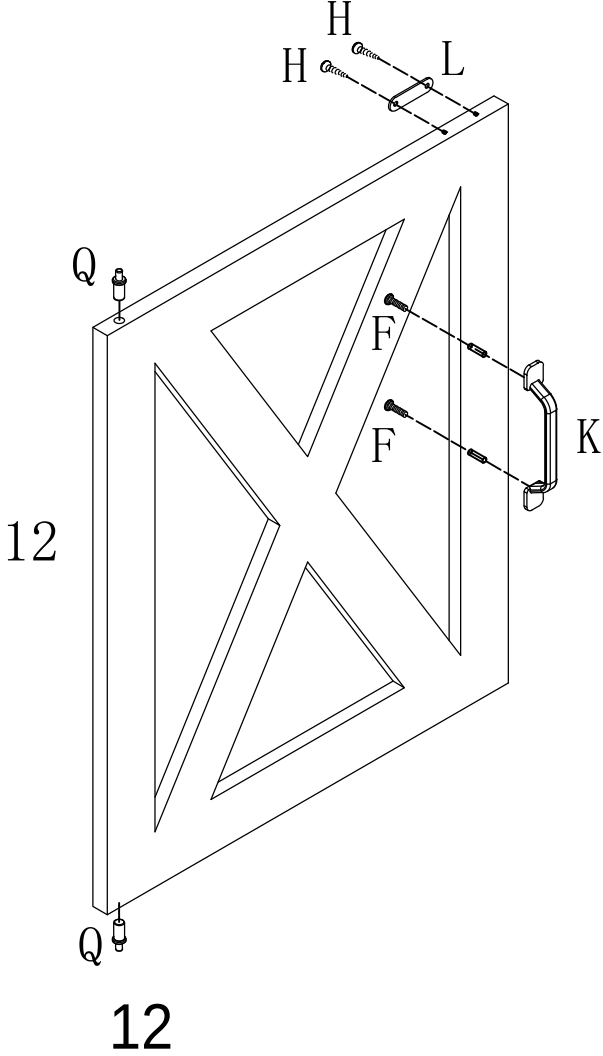

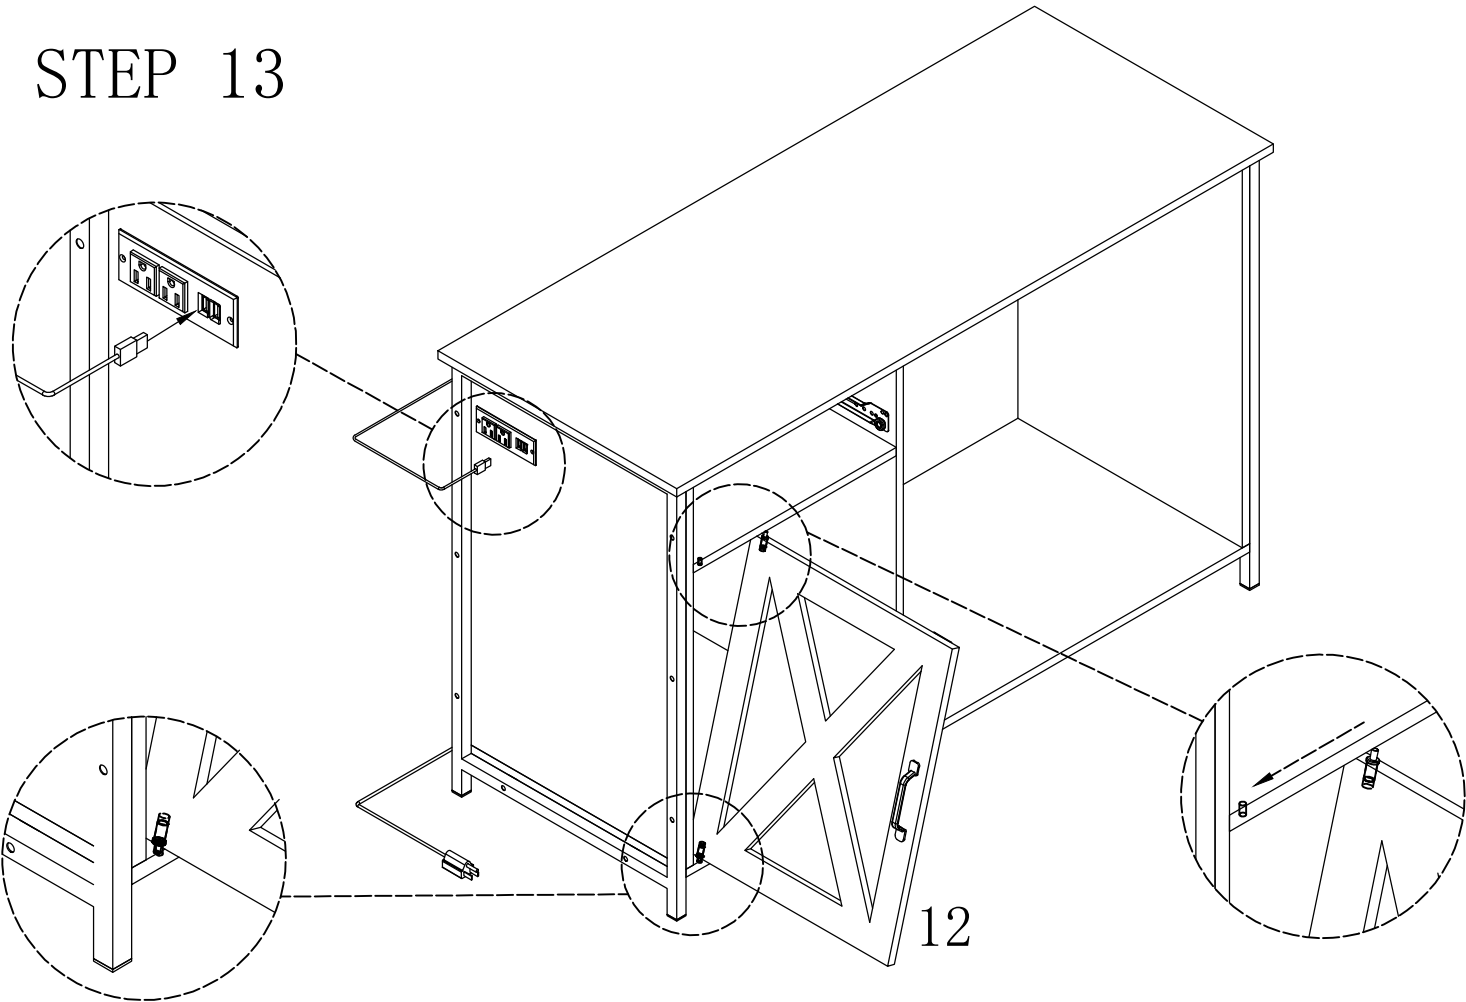STEP 13



STEP 14

