




INSTALLING THE OEB


1. Remove the three screws from the T100 amplifier.



2. Attach the OEB and rack mount to the T100 using two of the removed screws from the T100 and the included screw.

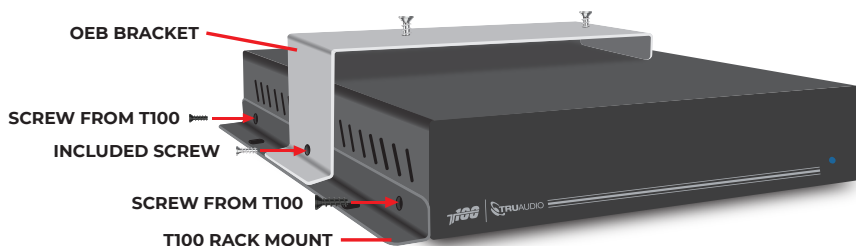

3. Attach the A.1x to the two pre-installed screws on top of the OEB using the keyholes on the back of the A.1x.

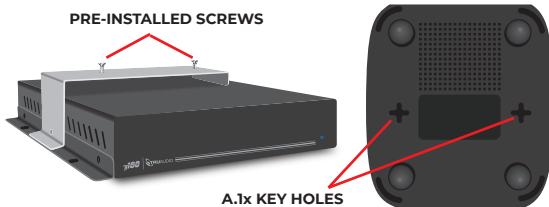

4. Finished Installation

