

# PANEL LP STORAGE


## TWIN/FULL/QUEEN/E-KING SIZE

### ASSEMBLY INSTRUCTIONS

#### PARTS AND FITTING PACKAGING DETAIL


##### BOX #1

- A. HEADBOARD 1 PC  
B. FOOTBOARD 1 PC

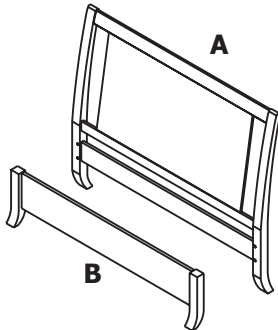


##### BOX #2

- C. LEFT SIDERAIL 1 PC  
D. RIGHT SIDERAIL 1 PC  
E. CENTER SLAT 1 PC  
F. LEG SUPPORTS 4 PCS  
HARDWARE BOX\*

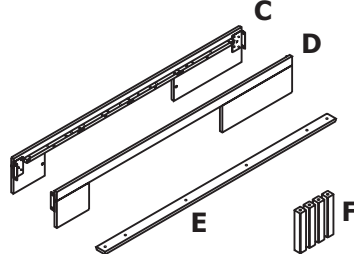


##### BOX #3

- G. STORAGES 2 PCS  
H. STORAGE FEET 12 PCS

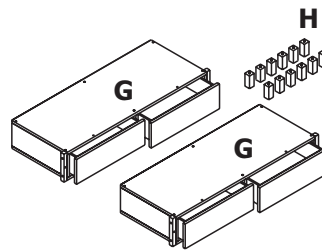


##### BOX #4


- I. BED SLATS 12 PCS

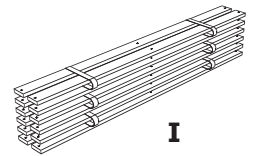



**TOOL REQUIRED :**  
PHILLIPS HEAD SCREW  
DRIVER (NOT PROVIDED)

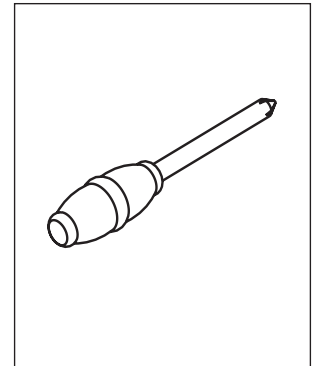

#### PANEL LP STORAGE ASSEMBLED

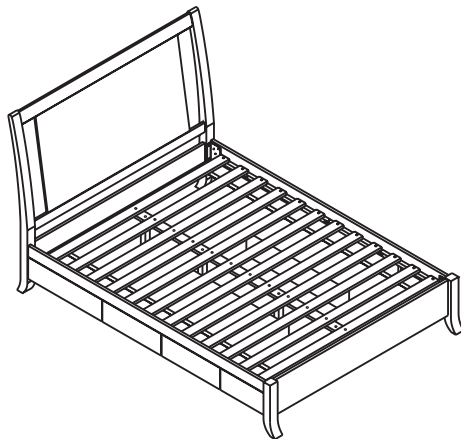


#### HARDWARE\* PACKED IN BOX #2

|                                                                                     |                             |          |                                                                                       |                        |           |                                                                                       |                |          |
|-------------------------------------------------------------------------------------|-----------------------------|----------|---------------------------------------------------------------------------------------|------------------------|-----------|---------------------------------------------------------------------------------------|----------------|----------|
| 1                                                                                   | PHILLIPS HEAD<br>BOLTS 20MM | 8<br>PCS | 2                                                                                     | WOOD SCREWS<br>Ø8X30MM | 12<br>PCS |    |                |          |
|    |                             |          |    |                        |           |                                                                                       |                |          |
| 3                                                                                   | ALLEN KEY                   | 1<br>PC  | 4                                                                                     | ALLEN BOLTS<br>40MM    | 18<br>PCS | 5                                                                                     | WASHERS<br>8MM | 8<br>PCS |
|  |                             |          |  |                        |           |  |                |          |

#### STEP 1 :


FIX LEFT SIDERAIL (C) TO THE HEADBOARD (A) USING PHILLIPS HEAD BOLTS (1) AND WASHERS (5).

DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

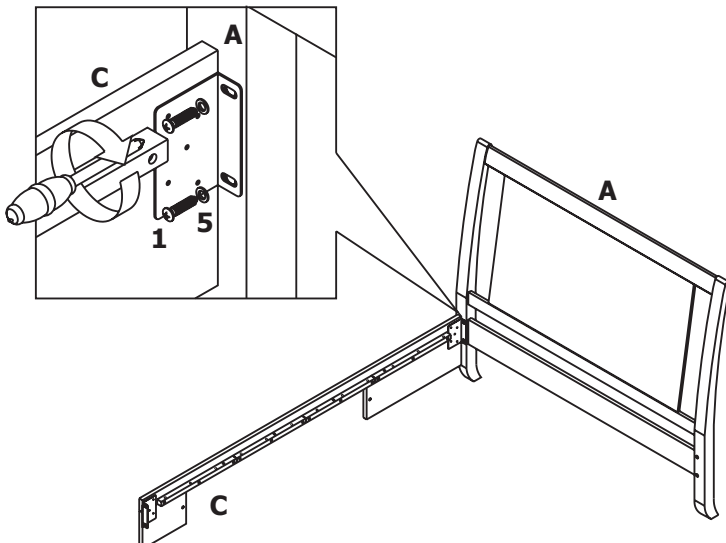


#### STEP 2 :

FIX THE OTHER END OF LEFT SIDERAIL (C) TO THE FOOTBOARD (B).

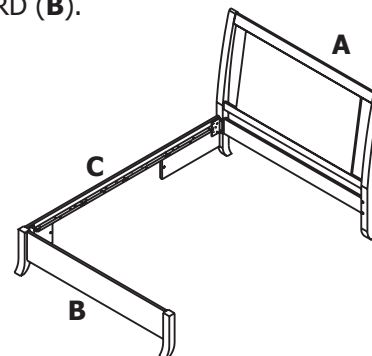


#### STEP 3 :

FIX RIGHT SIDERAIL (D) TO THE HEADBOARD (A) AND FOOTBOARD (B).

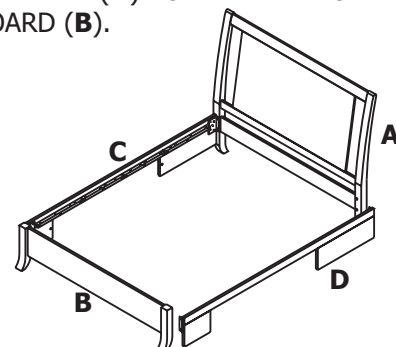


#### STEP 4 :

REMOVE PLASTIC COVER FROM STORAGE FEET (H) BOLT. FOLLOW THE ILLUSTRATION TO FIX STORAGE FEET (H) TO STORAGES (G).

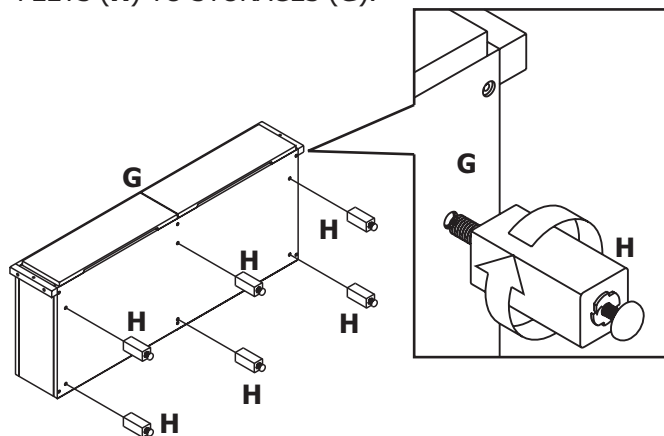


#### STEP 5 :

FOLLOW THE ILLUSTRATION TO FIX STORAGE (G) TO LEFT SIDERAIL (C) USING ALLEN BOLTS (4). USE ALLEN KEY (3) TO TIGHTEN THE BOLTS.

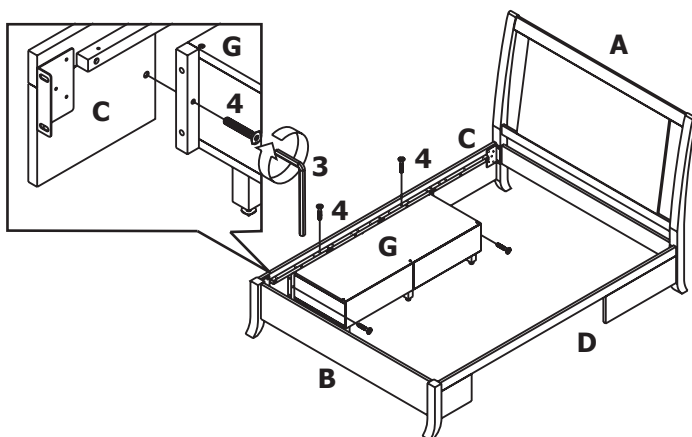

#### STEP 6 :


FIX STORAGE (G) TO RIGHT SIDERAIL (D) USING ALLEN BOLTS (4).

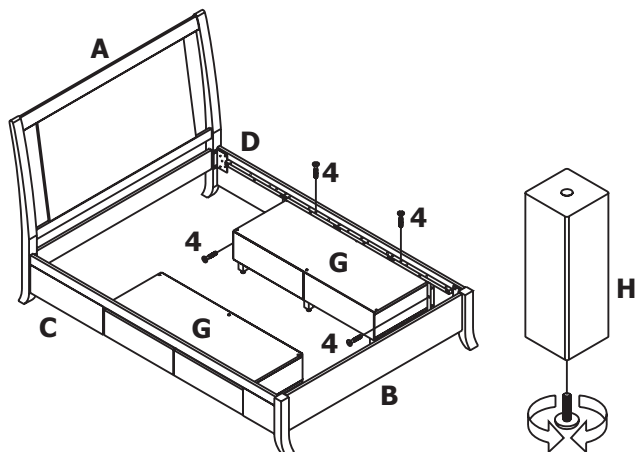

TURN LEVELER UNDERNEATH STORAGE FEET (H) TO ADJUST THE STORAGES (G) LEVEL AS SHOWN ON ILLUSTRATION.


#### STEP 7 :

FIX LEG SUPPORTS (F) TO CENTER SLAT (E) USING ALLEN BOLTS (4). SLIDE ALLEN BOLTS (4) INTO PREDRILLED HOLES THAT DON'T HAVE A T-NUT IN IT ON THE CENTER SLAT (E). MAKE SURE THE T-NUT IS FACING THE FLOOR.

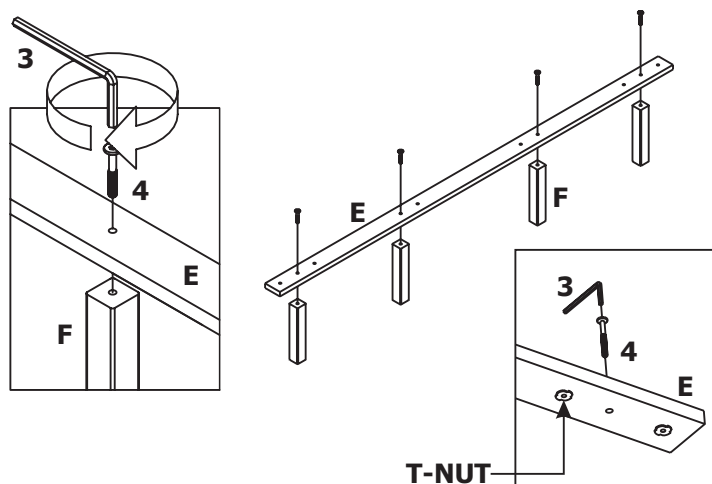

#### STEP 8 :

FOLLOW THE ILLUSTRATION TO SPREAD OUT ALL THE BED SLATS (I). FIX THE CENTER SLAT (E) TO THE BED SLATS (I) BY SLIDING IN THE ALLEN BOLTS (4) THROUGH THE HOLES FROM THE TOP OF BED SLATS (I) TO THE CENTER SLAT (E). USE THE 1ST, 2ND, 5TH, 8TH, 11TH AND 12TH PRE- DRILLED HOLES ON BED SLATS (I)

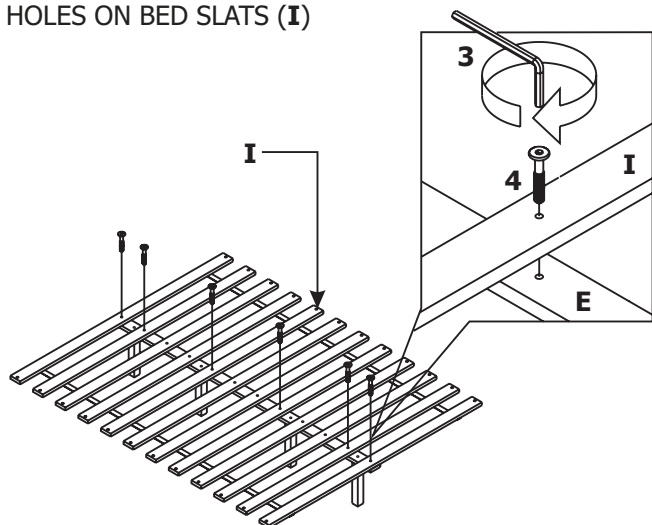

#### STEP 9 :

FOLLOW THE ILLUSTRATION TO PLACE THE BED SLATS (I) ON THE BED FRAME, AND FIX THE BED SLATS (I) USING WOOD SCREWS (2). USE THE PILOT HOLES ON THE SIDERAILS (C,D) AS YOUR REFERENCE, FOR EASY ASSEMBLY. YOU MAY NEED TO ADJUST THE SIDERAILS (C,D) POSITION TO LINE UP THE HOLES. MAKE SURE ALL BOLTS AND SCREWS ARE TIGHTENED BEFORE USING.

