


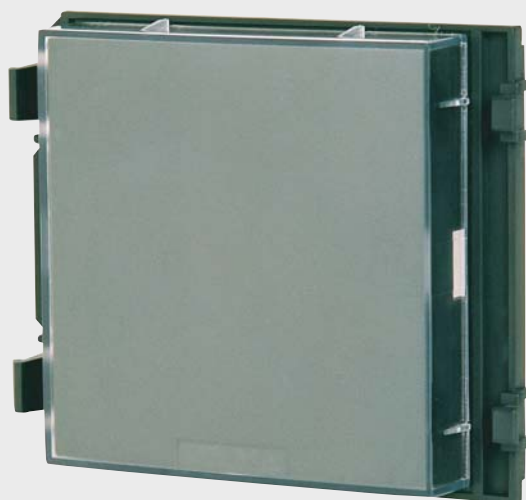

FDP 0001 A

F.01U.500.374




BOSCH


cs Instalační manuál
Krycí deska
da Installationsmanual
Kunstig dækplade
de Installationsanleitung
Blindabdeckung
el Οδηγίες συναρμολόγησης
Ομοίωμα καλύμματος
en Installation Guide
Dummy Cover Plate
es Manual de Instalación
Placa de cubierta falsa
fi Asennusohjeet
Peitelevy
fr Manuel d'installation
Plaque de recouvrement factice
hr Priručnik za instaliranje
Prazna prednja ploča
hu Telepítési kézikönyv
Fedő lemez

it Manuale di installazione
Finta piastra di copertura
nl Installatiehandleiding
Dummy-afdekplaat
no Monteringsinstruksjoner
Blinddeksel
pl Instrukcja instalacji
Ośłona modułu
pt Manual de Instalação
Placa de cobertura falsa
ro Manual de Instalare
Placă de acoperire fictivă
ru Инструкция по установке
Глухая внешняя накладка
sl Priročnik za montažo
Nepravi pokrov
sv Installation manual
Dummy-täckplatta
tr Kurulum kılavuzu
Paravan kapak plakası


CPH 0006 A

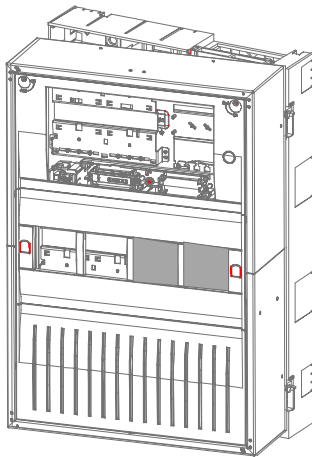


MPH 0010 A

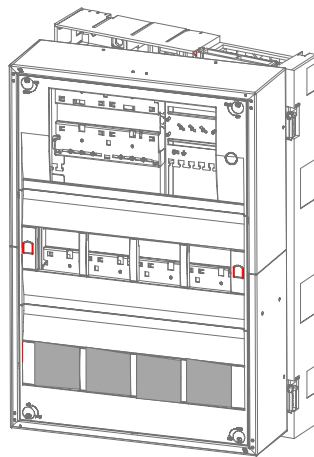


EPH 0012 A

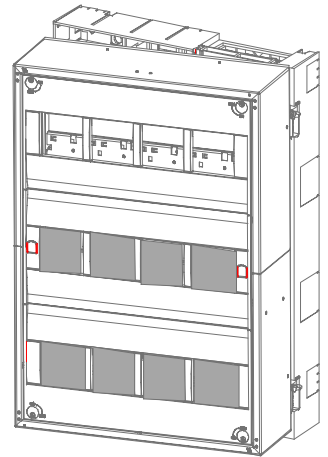


HCP 0006 A





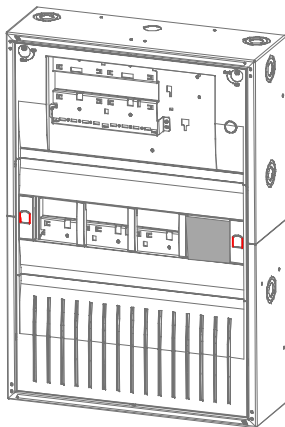


HBC 0010 A

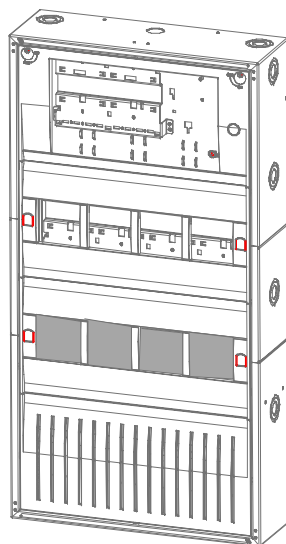

HBE 0012 A

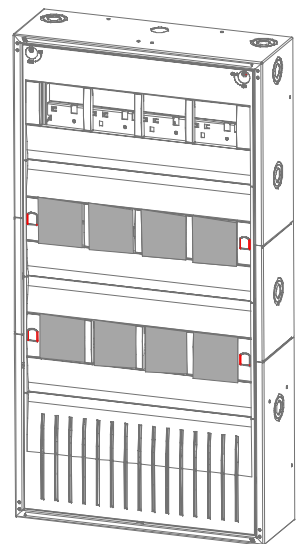

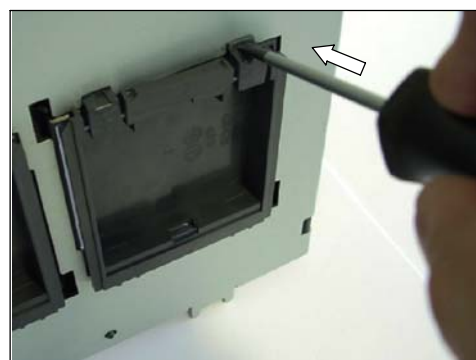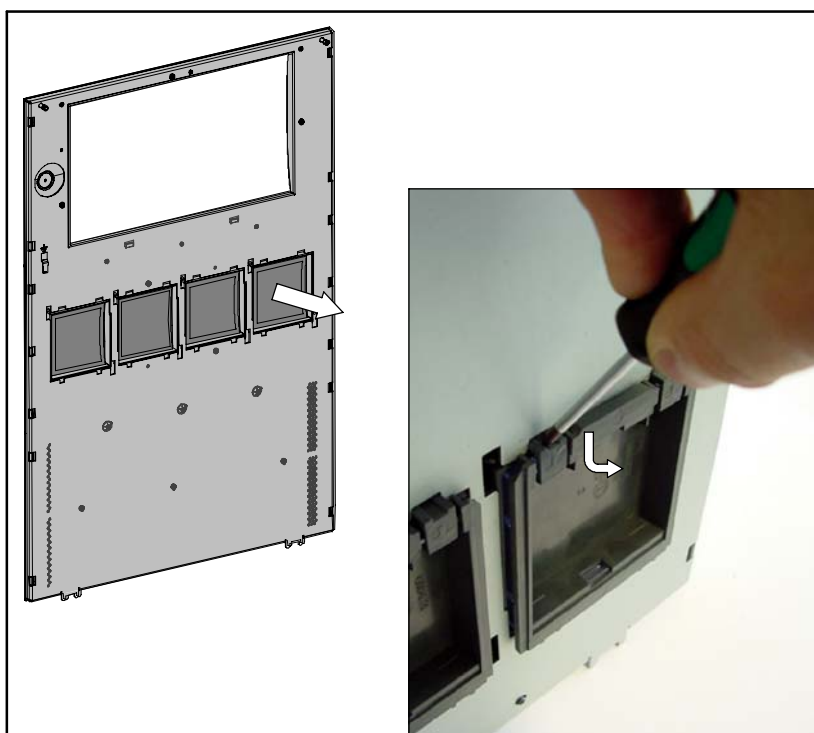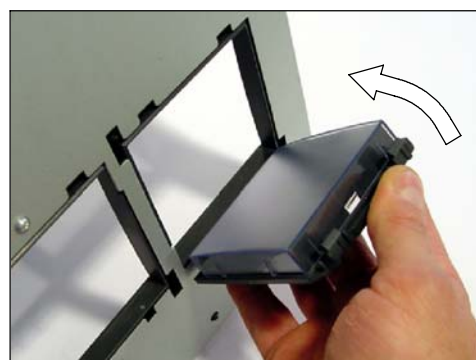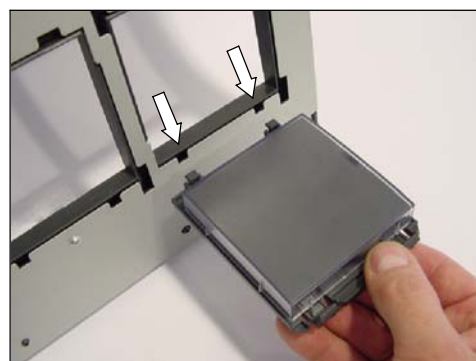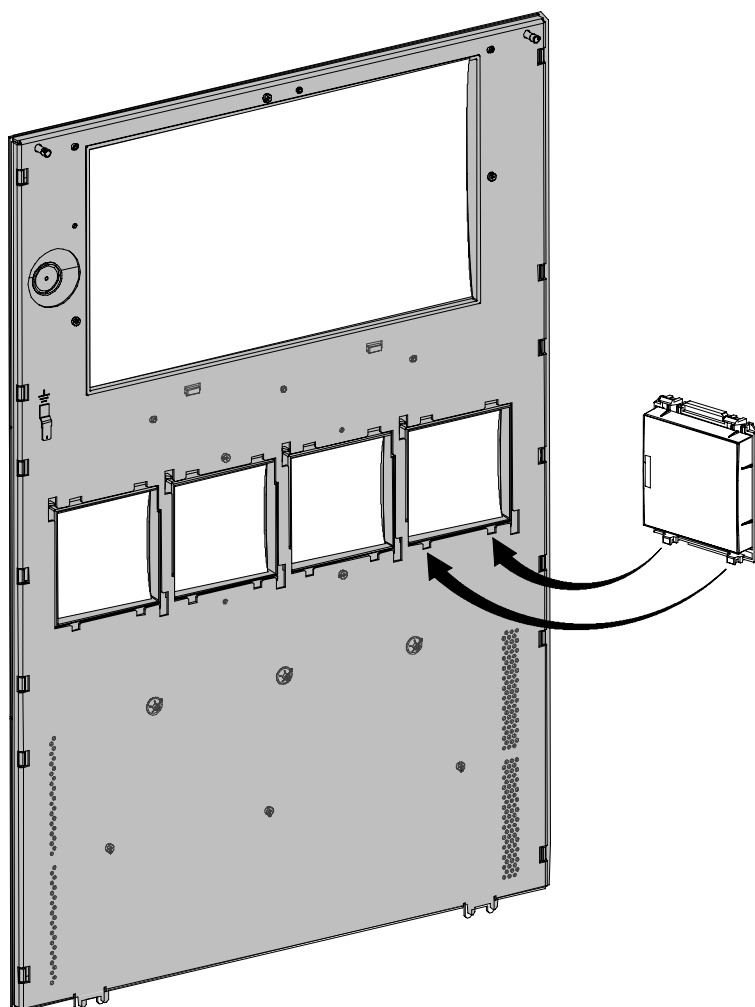

Bosch Sicherheitssysteme GmbH

Robert-Koch-Strasse 100

DS-85521 Ottobrunn

Germany

Telefon +49 (0)89 6290-0

Telefax +49 (0)89 6290-1020

www.boschsecurity.com

©Bosch Sicherheitssysteme GmbH, 2009