




# **PADDINGTON PREMIUM STAINLESS STEEL KITCHEN ISLAND TROLLEY**


SLPKITBENWA, SLPKITBENWB



# COMPONENTS




**A** (x1)




**B** (x1)




**C** (x1)



**D** (x1)




**E** (x1)



**F** (x1)



**G** (x1)



**H** (x1)




**I** (x1)




**J** (x1)




**K** (x2)

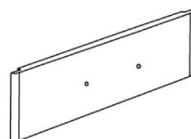


**L** (x2)

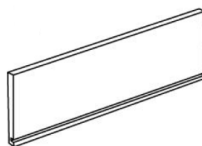

**M** (x2)

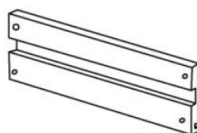

**N** (x4)



**O** (x2)



**P**(x2)



**Q**(x2)



**R**(x2)

## Hardware



**S**(x4)



**T**(x12)



**U**(x4)



**V**(x8)



**W**(x16)




**X**(x4)




**Y**(x1)

# ASSEMBLY

**Step 1:** Using a Phillips head screwdriver (not supplied), secure **R** to **L** using two **S** screws. Align **L** with **O**, then secure **M** and **N** with **W** screws. This will create one drawer. Repeat this process to create another drawer.

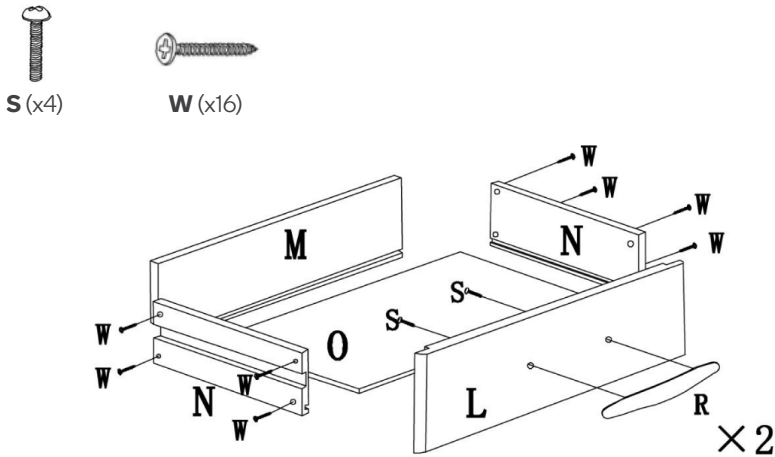

**Step 2:**

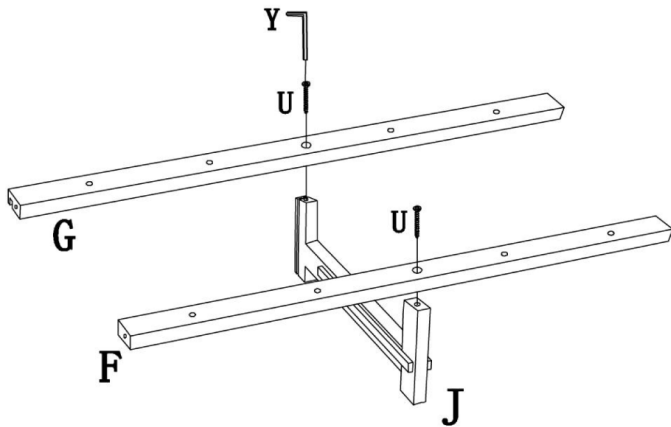


Step 3:



V (x8)



Y (x1)

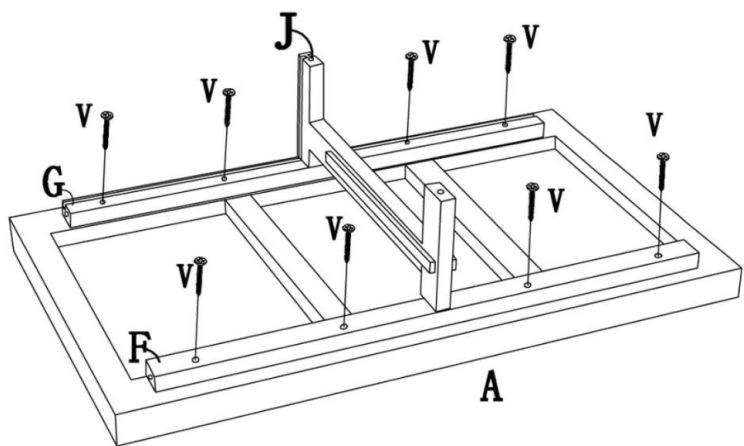


Step 4:



U (x2)



Y (x1)

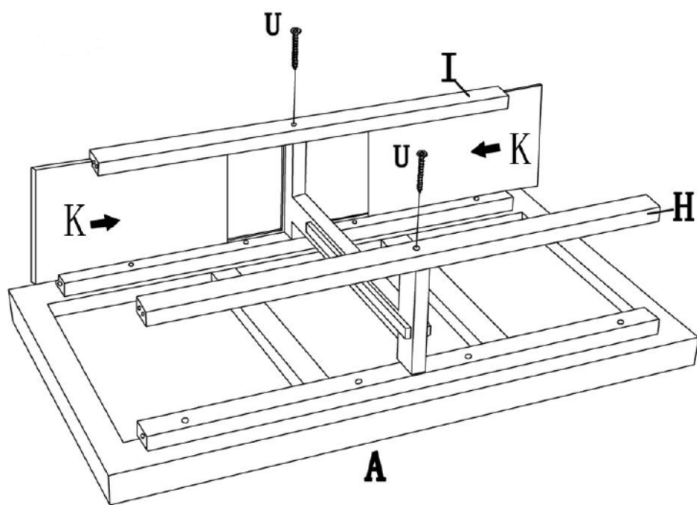

Step 5:




T (x4)



X (x4)



Y (x1)

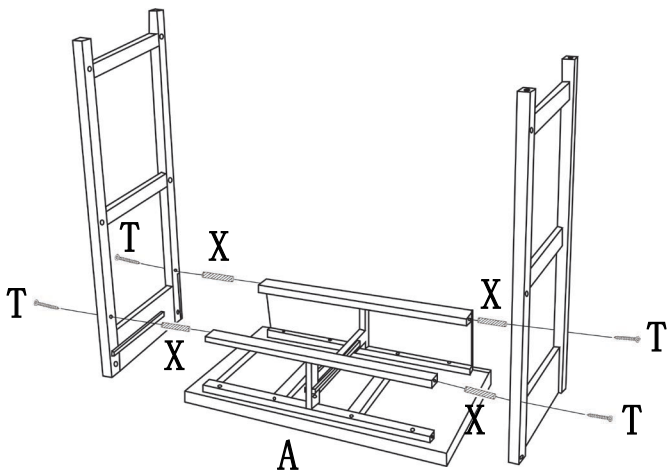


Step 6:



T (x4)



Y (x1)

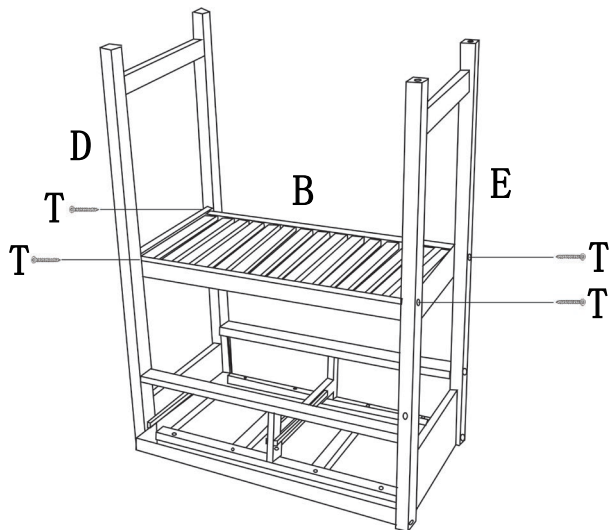


Step 7:



T (x4)




Y (x1)

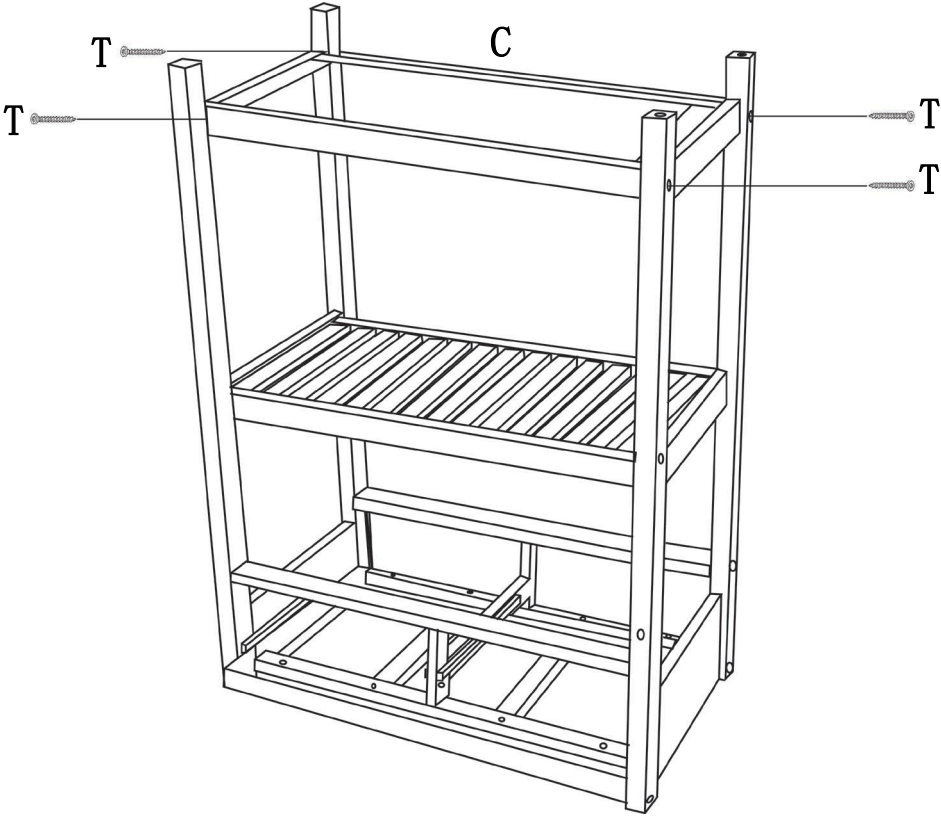




Step 8:

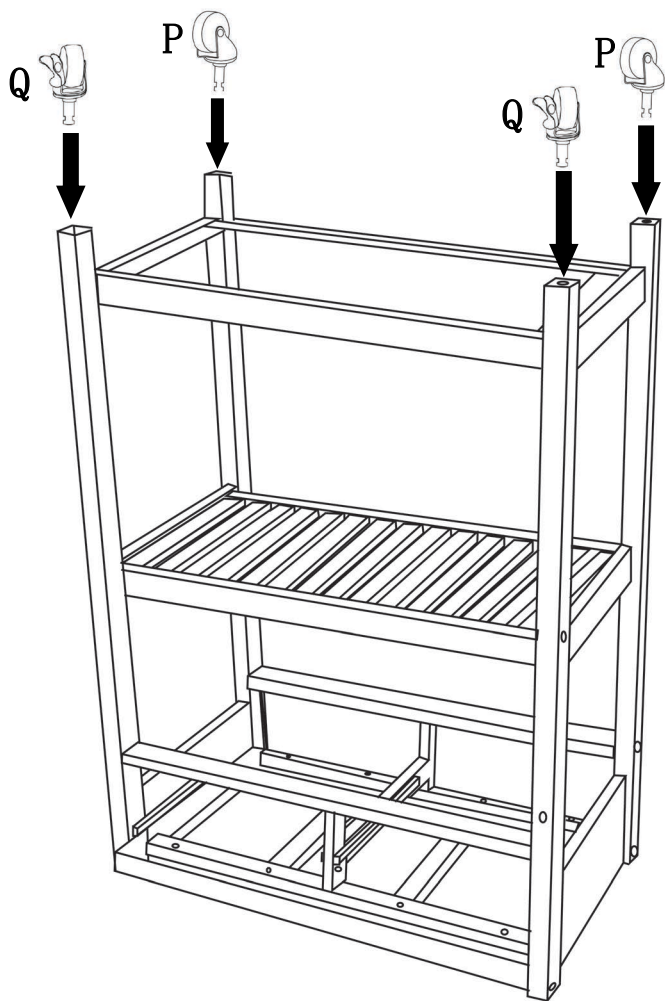

Step 9:

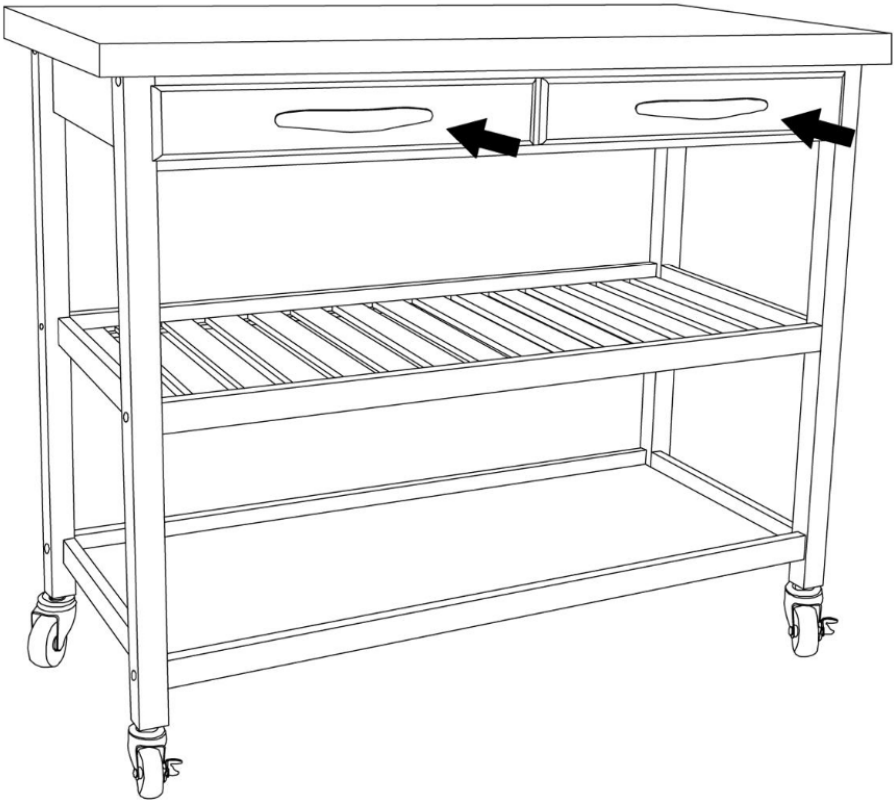



Assembly complete.

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **[help.kogan.com](https://help.kogan.com)**

**kogan.com**