

Assembly Instructions

WARNING:

- It is strongly suggested that all hardwired fixtures be installed by a professional electrician..
- To reduce the risk of fire, electrical shocks or personal injuries, always turn off the light fixture and let it cool prior to replacing the light bulbs.
- Do not touch the bulb when fixture is turned on; do not look directly at a lit bulb.
- Keep flammable materials away from a lit bulb.
- Shut off all the main electrical supply from the fuse box/circuit breaker
- Use E26 TYPE A CFL 10W, LED 6W bulb types and wattages. Do not exceed recommended wattages


SKU:# 3662/3773D3/3518XD3
(Not included the bulb)

Parts included:


Part	Description	QTY
B	Green Screw	1
D	Mounting Plate	1
E	Canopy	1
F	Canopy Nuts	1
H	Hexnut	6
I	Threaded Collar	6
J	Power Cord	3
K	Support Rod	3
L	Plastic Clip	3
M	Lip	3
N	Socket	3
O	Wiring Terminal	3
P	Metal Circle	3
Q	Shade	3
R	Socket Ring	3

Hardware enclosed:


Part	Description	QTY
A	Wire Connector	3
C	Mounting Screw	2
G	Allen Wrench	1

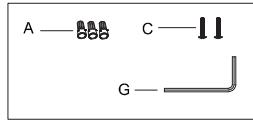


Dear customer,
Thank you for choosing Our Lighting. If you have any concerns or questions about our products, please do not hesitate to contact us directly. We'll provide the best service for you. Hope you enjoy the shopping experience!
Any questions please free to contact us:
Email: nikki@doraimilight.com

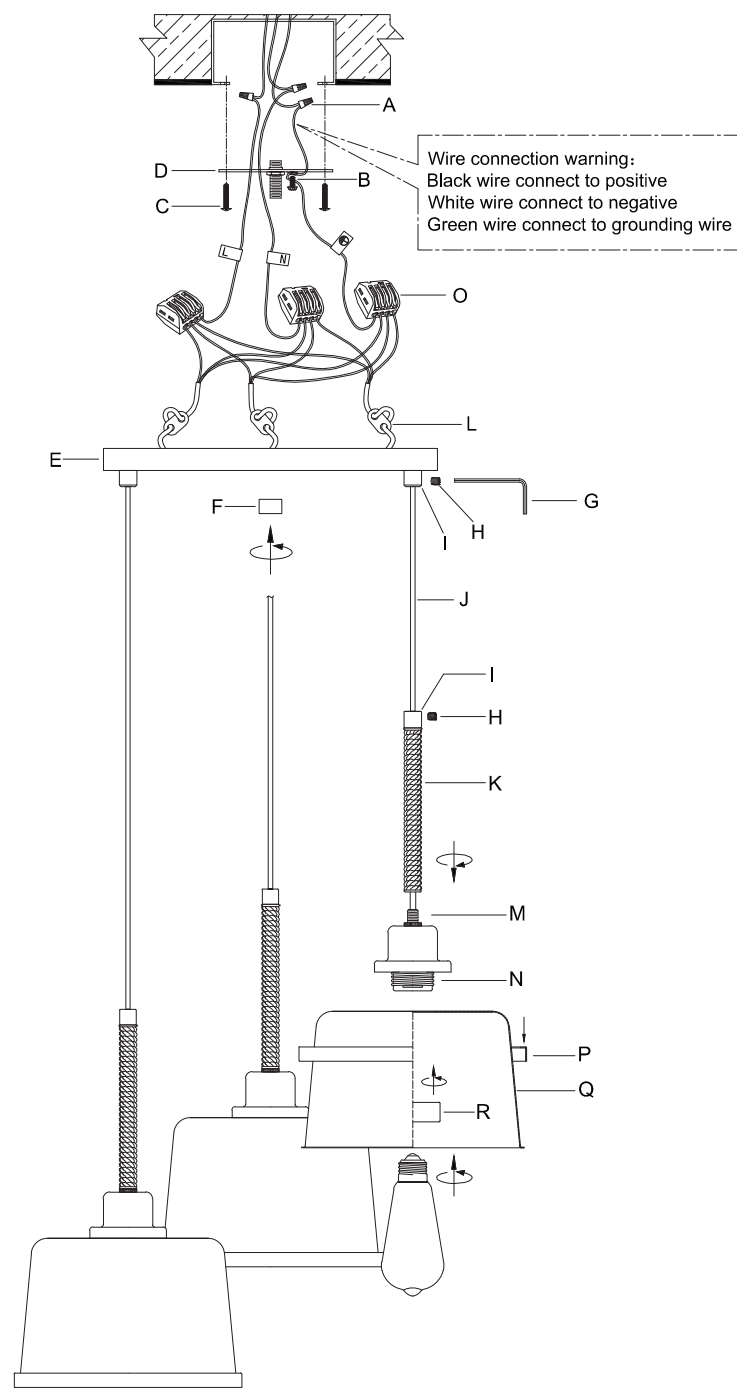


Step 1:
Canopy Nuts(F) and Mounting Plate(D) from the pipe.

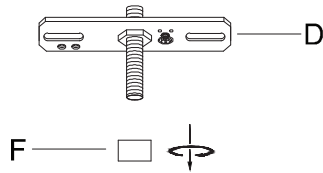


Step 2:
Secure Support Rod(K) onto Lip(M), then secure Hexnut(H) into Threaded Collar(I) with Allen Wrench(G).

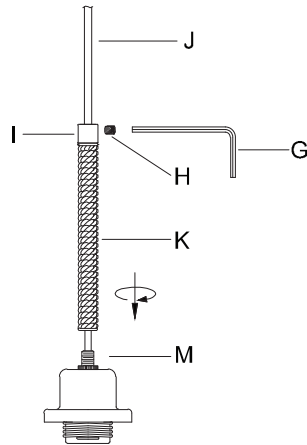


Step 3:
1. Unsecure Screw(H) from Threaded Collar(I) with Allen Wrench(G).
2. Across Power Cord(J) into Threaded Collar(I) and adjust length as needed, then secure Screw(H) with Allen Wrench(G), attach Plastic Clip(L) into Power Cord(J).

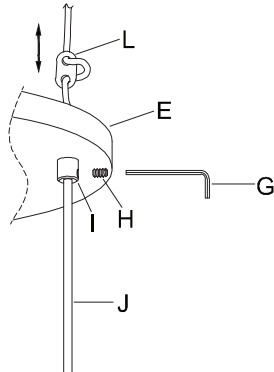


Step 4:
1. Open the Janitors from Wiring Terminal(O).
2. Insert the white/black wire into the hole of Wiring Terminal(O), then close the Janitors.

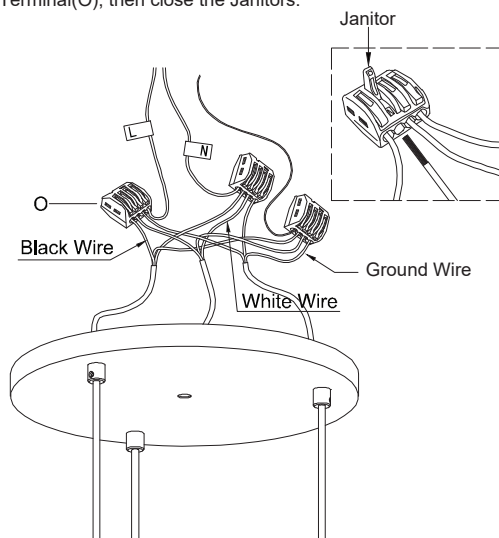


Step5:
1. Gently pull the wire in the ceiling junction box and let the wire hang.
2. Attach Mounting Plate (D) to the junction box.
3. Secure the Mounting Plate (D) by tightening 2 Mounting Screw (C) with a screwdriver.

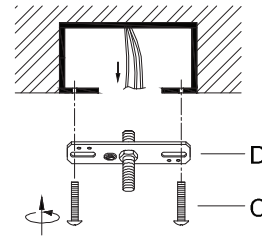

Step6:
Connect the white wire of the fixture to the white wire of the supply circuit. Connect the black wire of the fixture to the black wire of the supply circuit. Connect the Ground fixture wire with the Ground J-Box wire with the Wire Connector(A).

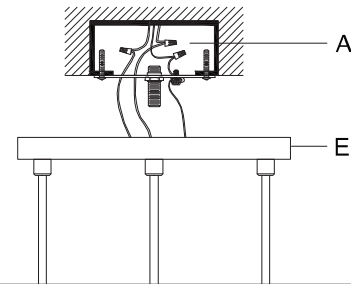

Step7:
Place the canopy (E) against the mounting surface and fasten the Canopy Nuts(F) to the Mounting Plate (D)

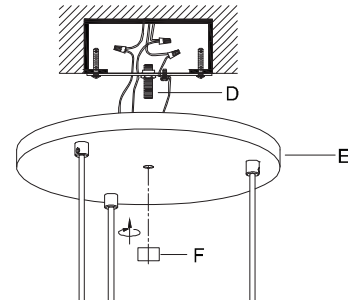

Step8:
1. Attach Metal Circle(P) on Shade(Q).
2. Place Shade(Q) on Socket(N) and secure with Socket Ring(R).
3. Install bulbs(not included) into the Socket(N).

