


STEP 1: Installing the Mounting Brackets

- 1a. Mark the center of the gable.




- 1b. Align the Mounting Brackets with the mark keeping it flush against the gable.

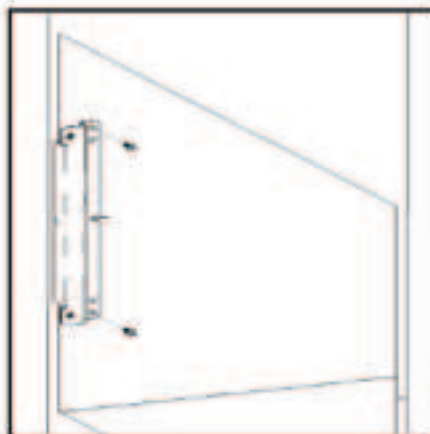


- 1c. Secure each mount to the gables using two of the provided #6 wood screws.

STEP 2: Installing the Runners

- 2a. Insert the Alignment Tabs into the Runners as shown below.

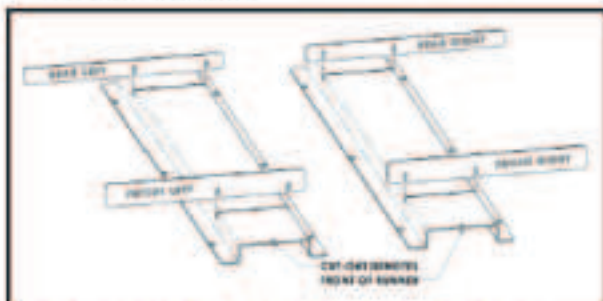

- 2b. Place Runners on shelf and slide them so that the tabs stop against the gables.

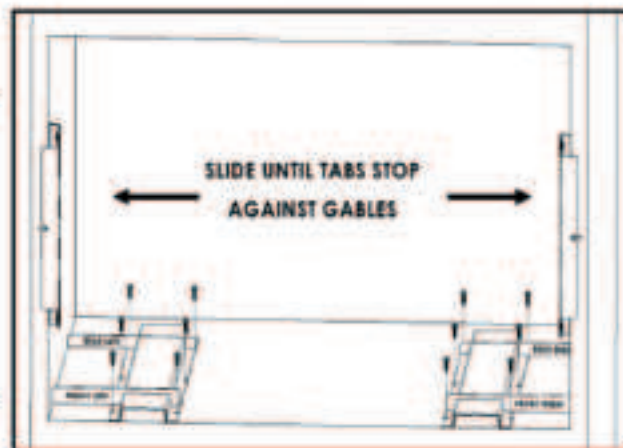


- 2c. Secure the Runners down with the provided #6 wood screws.

STEP 3: Installing the Microwave

- 3a. Place the Microwave on the Runners.


- 3b. Lift and slide the microwave so that the front feet sit behind the lip of the front Alignment Tabs.

This step ensures you have clearance to install the Frame mounting screws.

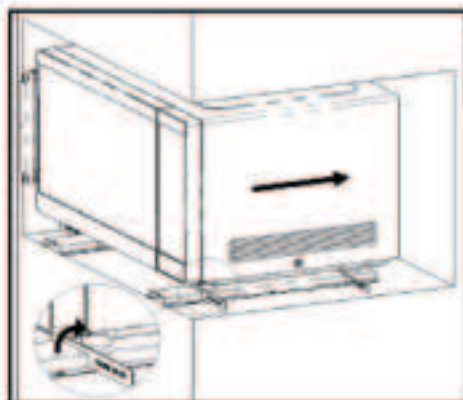



STEP 4: Installing the Frame

- 4a. Peel the protective film off of the **Frame**.
- 4b. Place the **Frame** onto the cabinet face and secure onto the **Mounting Brackets** using the provided **8-32 screws**.

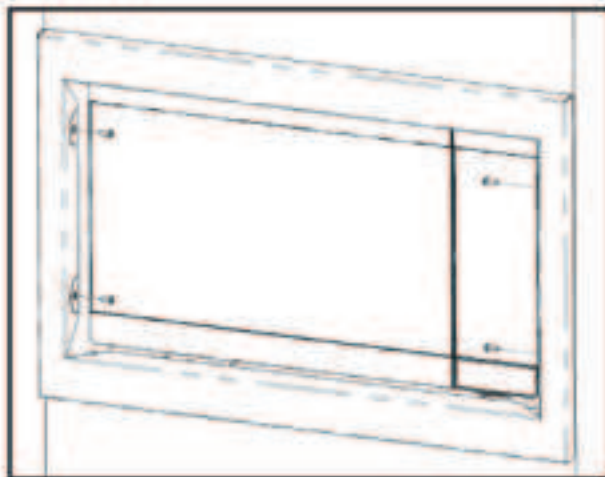


STEP 5: Finalizing the Installation

- 5a. Open the **Microwave Door** and lift the **Microwave** up and towards you until the front legs clear the lip of the front **Alignment Tabs**.
- 5b. Push the **Microwave** back until the front legs make contact with the lip of the front **Alignment Tabs**. The **Microwave** face will now be flush with the **Frame**.
- 5c. Adjust the **Microwave** horizontally as needed to center it in the **Frame** opening.
- 5d. Your installation is complete - Stand back and admire a job well done.

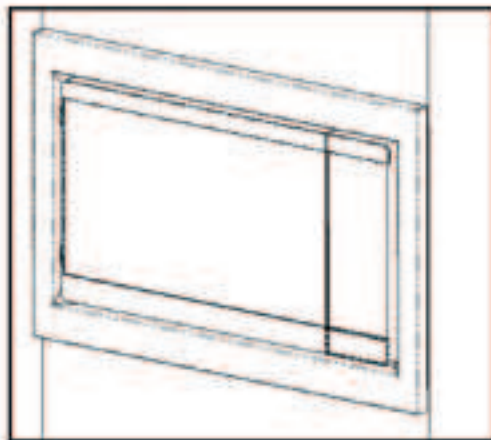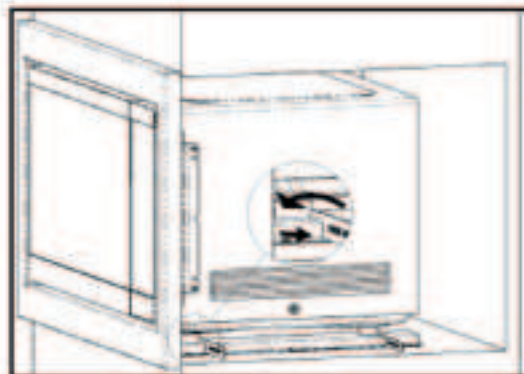

ÉTAPE 1 : Installation des supports de fixation

- 1a. Marquez le centre du pignon:


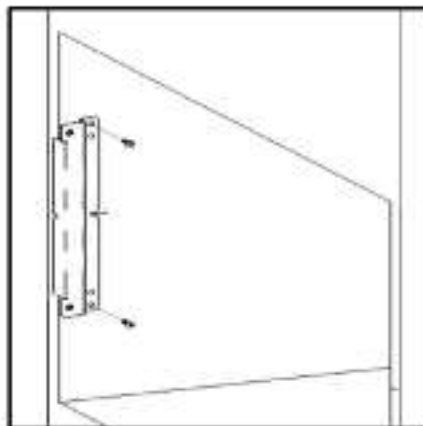


- 1b. Alignez les **supports de fixation** avec la marque en les maintenant contre le pignon.

- 1c. Fixez chaque support aux pignons à l'aide des **deux vis à bois n° 6** fournies.

ÉTAPE 2 : Installation des coulisses

- 2a. Insérez les **languettes d'alignement** dans les **coulisses** comme il est indiqué ci-dessous.

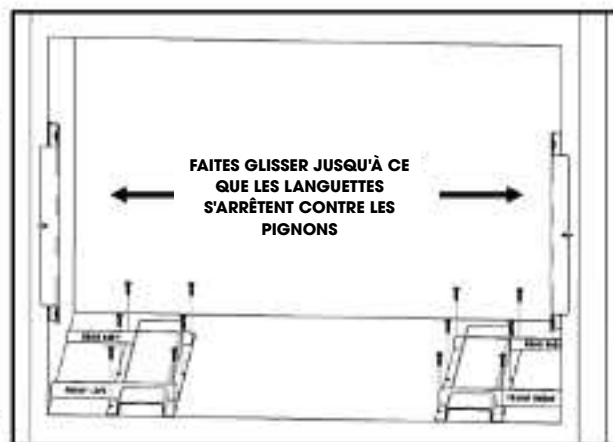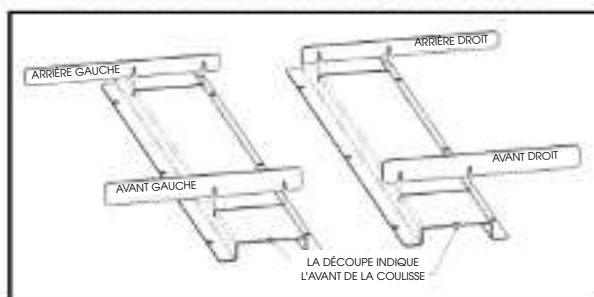

- 2b. Placez les **coulisses** sur l'étagère et faites-les glisser de façon à ce que les **languettes** s'arrêtent contre les pignons.


- 2c. Fixez les **coulisses** à l'aide des **vis à bois n° 6** fournies.

ÉTAPE 3 : Installation du micro-ondes

- 3a. Placez le **micro-ondes** sur les **coulisses**.


- 3b. Soulevez et faites glisser le micro-ondes de manière à ce que les pattes avant se trouvent derrière le rebord des **languettes d'alignement** avant.

Cette étape permet de garantir qu'il y a suffisamment d'espace pour installer les vis de montage du **cadre**.

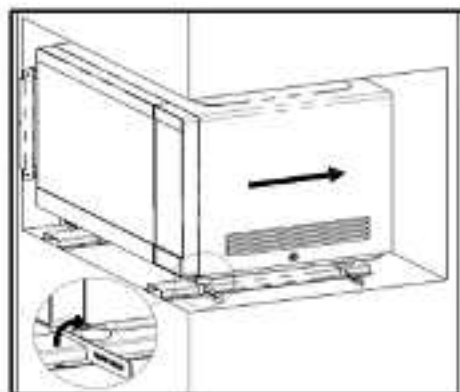

ÉTAPE 4 : Installation du cadre

- 4a. Retirez la pellicule protectrice du **cadre**.
- 4b. Placez le **cadre** sur la face de l'armoire et fixez-le sur les **supports de montage** à l'aide des vis **B-32** fournies.

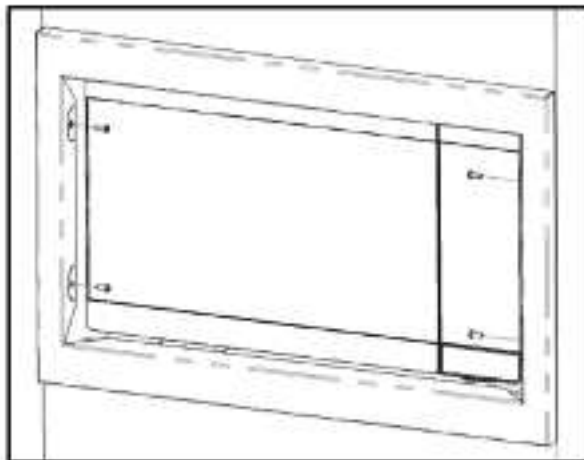

ÉTAPE 5 : Achèvement de l'installation

- 5a. Ouvrez la **porte du micro-ondes** et soulevez le **micro-ondes** vers le haut et vers vous jusqu'à ce que les pattes avant dégagent le rebord des **languettes d'alignement** avant.
- 5b. Poussez le **micro-ondes** vers l'arrière jusqu'à ce que les pattes avant entrent en contact avec le rebord des **languettes d'alignement** avant. La face du four à **micro-ondes** est au ras du **cadre**.
- 5c. Ajustez le **micro-ondes** horizontalement au besoin pour le centrer dans l'ouverture du **cadre**.
- 5d. Votre installation est terminée. Reculez et admirez le bon travail accompli.

