


IN-DASH DIN RADIO INSTALLATION KIT FOR 2006-UP NISSAN 350Z

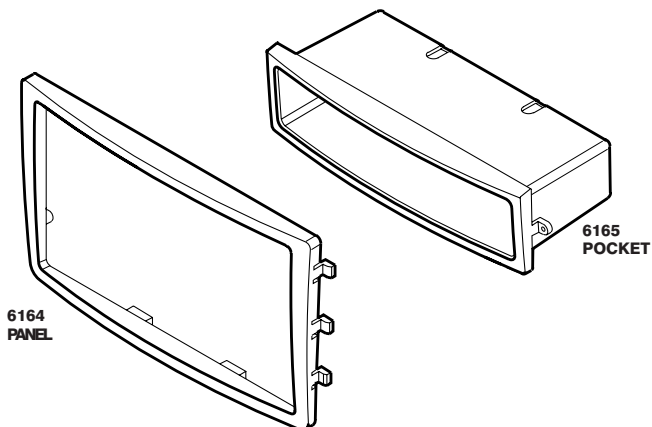

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2006-UP NISSAN 350Z vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

RADIO REMOVAL

2006-UP NISSAN 350Z


Radio Removal

1. Using panel removal tool unsnap silver bezel around shifter.
2. Shift shifter into drive
3. Using panel removal tool snap up bezel around shifter and AC controls starting from rear to front. Disconnect and remove
4. Remove (4) Philips head screws from underneath radio. Pull out AC control brain disconnect and remove.
5. Open storage compartment above radio, using panel removal tool. Snap front edge panel of storage compartment. Remove (2) Philips head screws from behind.
6. Using panel removal tool pop out middle section of dash that contains radio storage compartment and gauges disconnect and remove.
7. Remove (8) Philips head screws from side of radio and remove.

MOUNTING THE RADIO

ISO-DOUBLE DIN MOUNT

1. Align aftermarket Double DIN head unit w/factory metal right and Left brackets and used supplied hardware from aftermarket double DIN head unit
2. Place assembled aftermarket unit and factory metal brackets to factory dash opening. Be sure to connect the proper wiring before bolting assembled aftermarket unit/factory metal brackets to factory dash.
3. Place 6164 panel over assembled aftermarket unit/factory metal brackets. Mount with factory mounting bolts and reassemble factory dash to complete the installation.

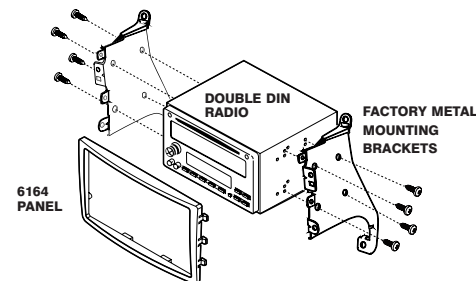

ISO-DIN MOUNT W/ POCKET

1. Align and position the 6165 pocket to the lower radio opening of the 6164 panel. The 6165 pocket face should rest flush with the 6164 panel face.
2. Use the (3) screws supplied with the installation kit to secure on the 6165 pocket to the 6164 panel. (See Illustration 1)
3. Align aftermarket single DIN head unit w/ factory metal Right and Left brackets and use supplied hardware from aftermarket single DIN head unit.
4. Place assembled aftermarket unit and factory metal brackets to factory dash opening. Be sure to connect the proper wiring before bolting assembled aftermarket unit/factory metal brackets to factory dash.
5. Place 6164 panel over assembled aftermarket unit/factory metals brackets. mount with factory mounting bolts and reassemble factory dash to complete the installation.

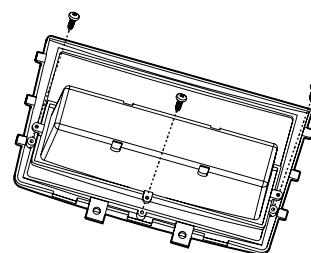


ILLUSTRATION 1

