

## Corner Shower Caddy

User manual Model: SCT-07





WhatsApp contact

ct Hamitor Group

Installation height dimension form			
Actual Usage Height			Parts
from 47.0 to	54.5	Inches	A+B+C
from 54.0 to	62.0	Inches	A+B+D+C
from 61.5 to	69.0	Inches	A+B*2+C
from 68.5 to	76.5	Inches	A+B*2+D+C
from 76.0 to	84.0	Inches	A+B*3+C
from 83.5 to	91.5	Inches	A+B*3+D+C
from 91.0 to	99.0	Inches	A+B*4+C
from 98.5 to	106.5	Inches	A+B*4+D+C
from 106.0 to	113.5	Inches	A+B*5+C
from 113.0 to	121.0	Inches	A+B*5+D+C

## CAUTION


- 1. Please place vertically, do not install on sloping floor or ceiling.
- 2. Please install the shower caddy on solid floor and ceiling.
- 3. If your bathroom ceiling is suspended, please check whether it's strong enough to bear the shower caddy before installation.
- 4. Please dry the stainless steel pole and fixing clips before adjusting the height of baskets.






## www.hamitor.com

Tel: +1(855) 772-1018 (8am-5pm Mon. - Fri. (EST)) E-mail: support@hamitor.com

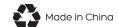



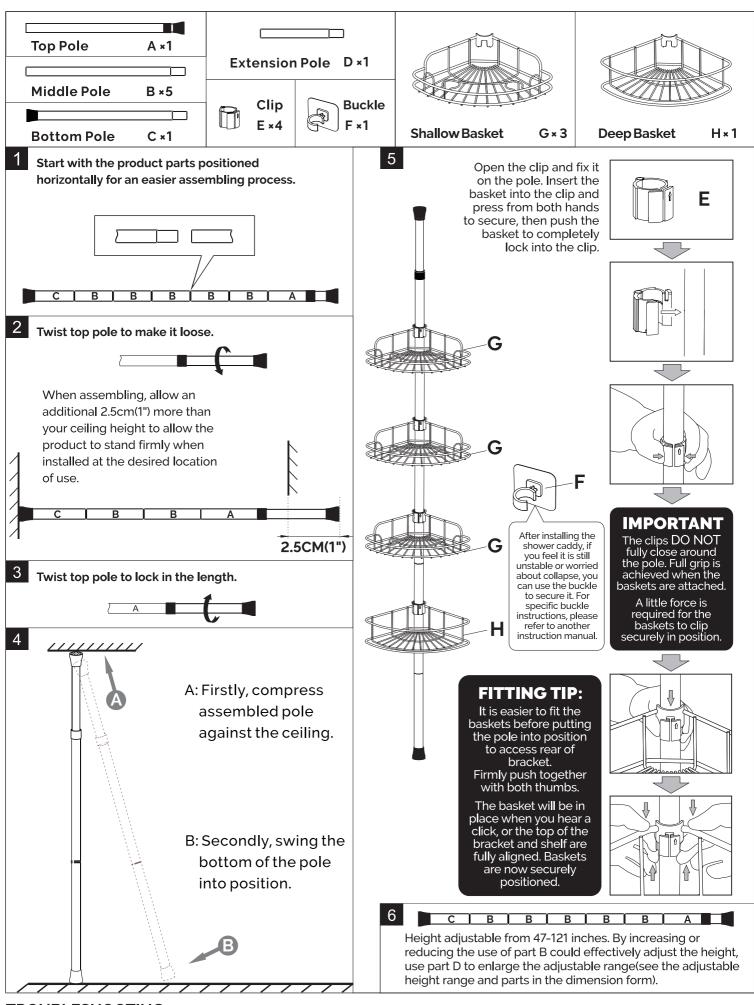

## **TROUBLESHOOTING**

- Q: Why aren't the clips wide enough for the pole?
- A: The clips are purposely short of closing on the poles to ensure a tight fit.
- Q: Why aren't the clips tight enough to stop the baskets from moving?
- A: It is likely that the baskets are not pushed down enough to lock into the clip.