



2515 Bypass Rd. Flemingsburg, KY 41041  
606-845-7439

**Instructions for Installation and Care of Bobcat 3400**  
**Aero-Vent Polycarbonate Windshield**  
BC-3400-WD05 / 50-40046

**NOTICE:** Please check contents of package for any damage and make sure all parts fit correctly and you are happy with the product before removing protective film. Once the film is removed you cannot return the product for a full refund.


Be sure to read these instructions thoroughly before opening and installing the Polycarbonate Windshield.

1. Start by pulling it out of the box and find a clean area to lay it down and install the hardware. Check over the parts included in the cartons with the parts list shown below:


1 ¾" Loom Clamps	8 each
1" Stainless Steels Bolts	14 each
Stainless Steel Washers	20 each
Slide fasteners	8 each
Lock Nuts	4 each
Plastic Thumb Nuts	10 each
Sliding Vent Panels	2 each
52" Rubber Gasket	1 each
55" Rubber Gasket	1 each
Bent Polycarbonate Braces	1 each
Polycarbonate Windshield	2 Pieces


**If any parts are damaged or missing please contact customer service at (606) 845-7439.**

2. Next take the rubber gasket and starting at one end firmly place along entire bottom and top edges of the lower Windshield Section. You will need to peel back the protective film from the edge to install the gasket. If you leave the bulk of the protective film on while installing you can keep from scratching the windshield. Please see photo below:

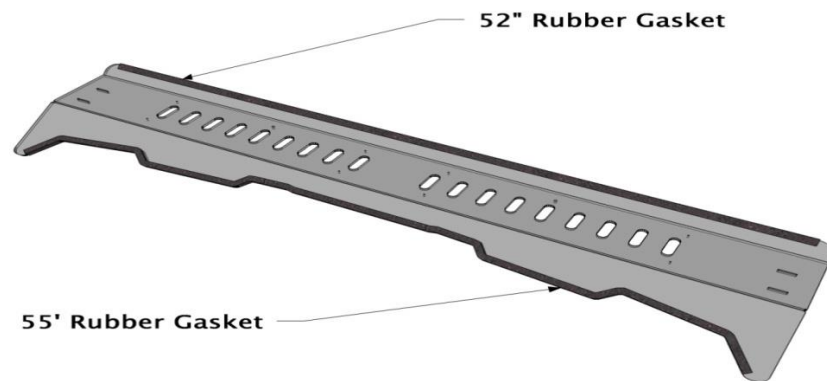


3. Next Install the Aero-Vent sliders as shown in the diagram on the following page.

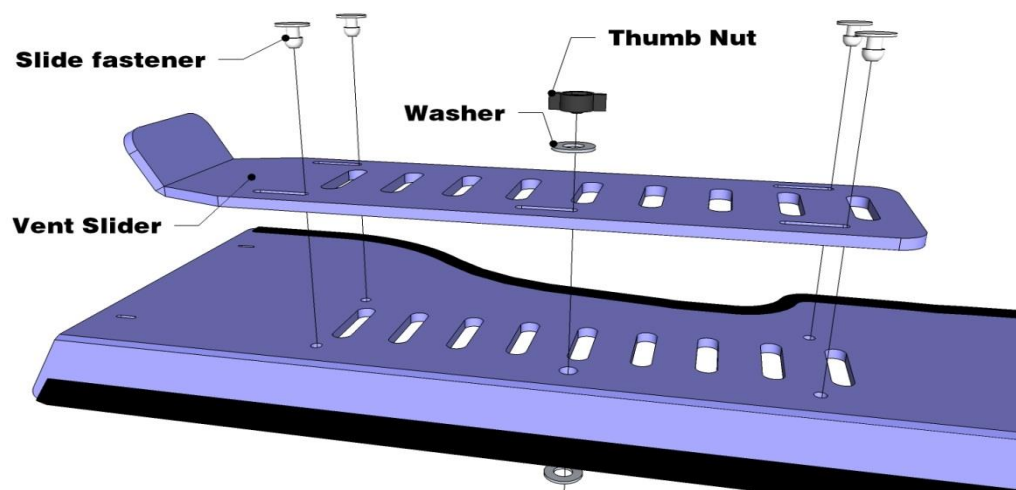

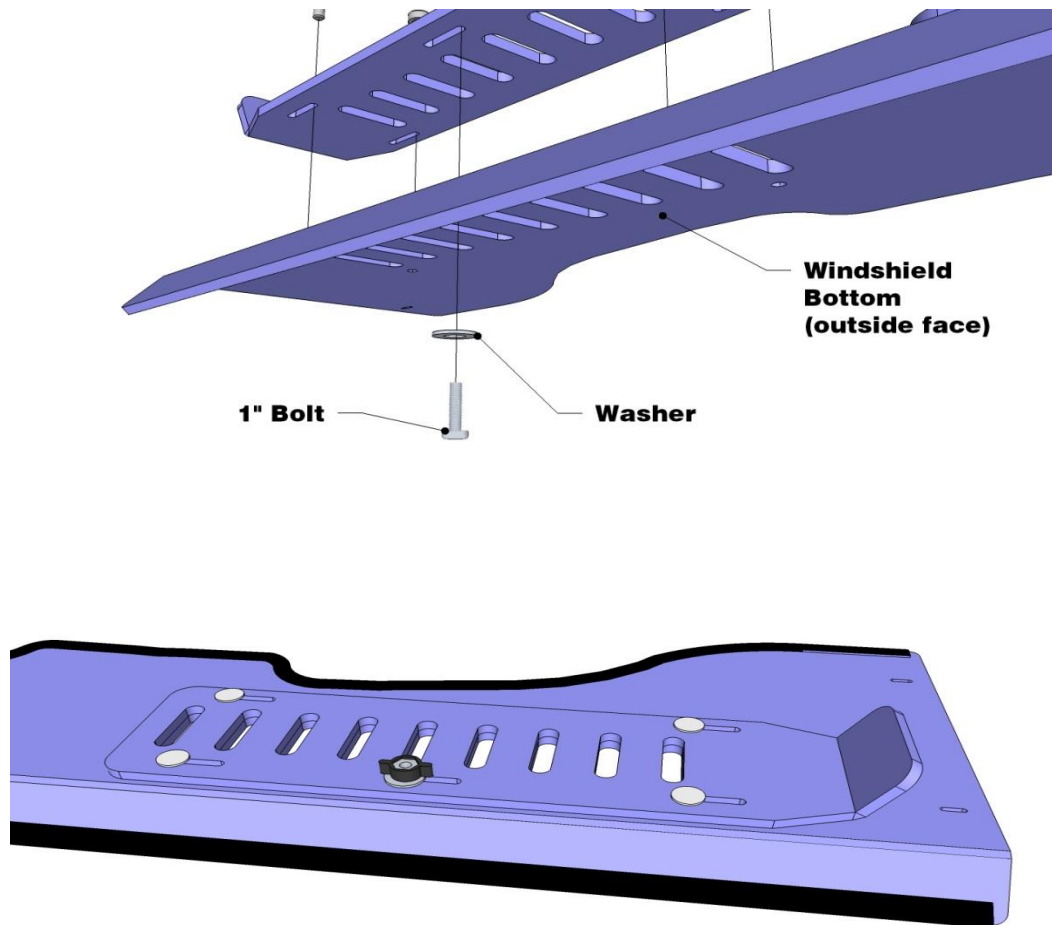


4. Next take the bent Polycarbonate brace and install it on the windshield. Please see diagram on the next page.

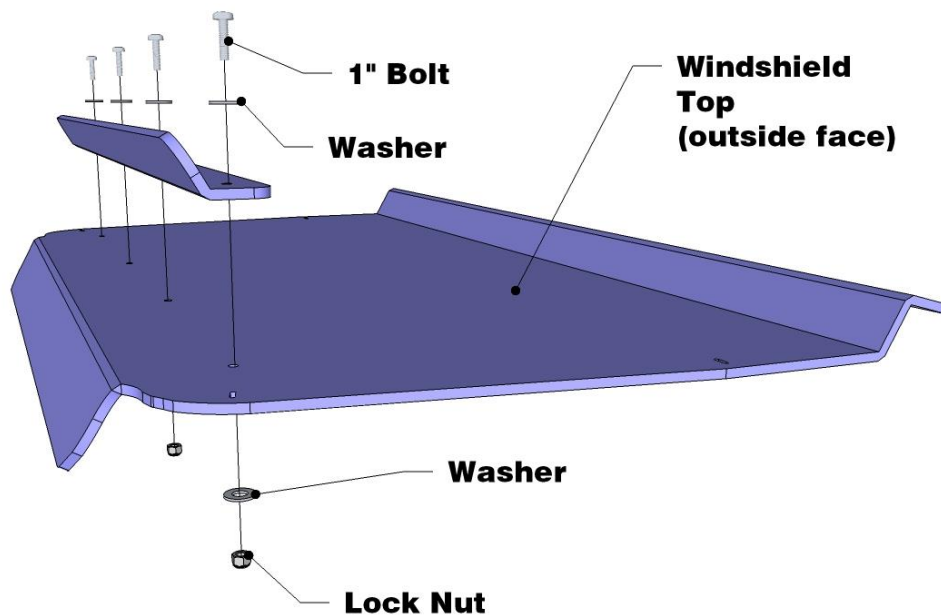


5. Now you are ready to place the windshield on the Bobcat and attach to the roll cage. NOTE: THE BEND AT THE TOP OF THE WINDSHIELD SHOULD GO BELOW THE TOP TUBE. The diagram

on the next page shows the proper placement for the hardware. Install the clamps as shown for the top two slots in the windshield only. Use the 1" bolts for this application.

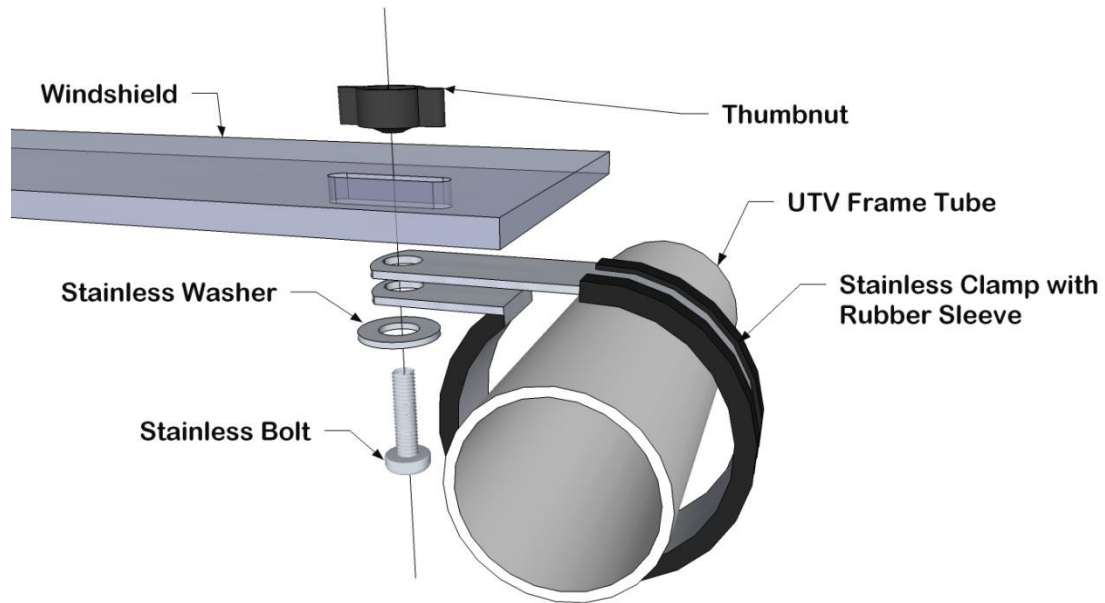

6. Now Place the two halves onto the frame as shown on the next page. (diagram not Bobcat)

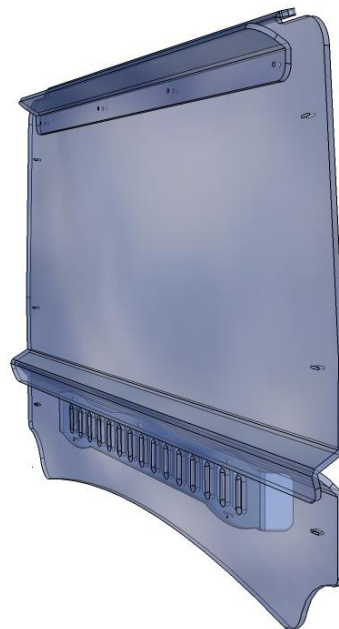

7. Now you are ready to take it out and enjoy. To clean the windshield, always clean using a liquid of some sort to decrease the chance of scratches. We recommend using micro fiber cloths that are readily available at any dollar store. Any window cleaner will work fine; just remember to use a soft clean rag or micro-fiber cloth to clean it.

**Thank you for your purchase!**

## **Warranty**

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.