




MAKE A DIFFERENCE





Front Fender Flares

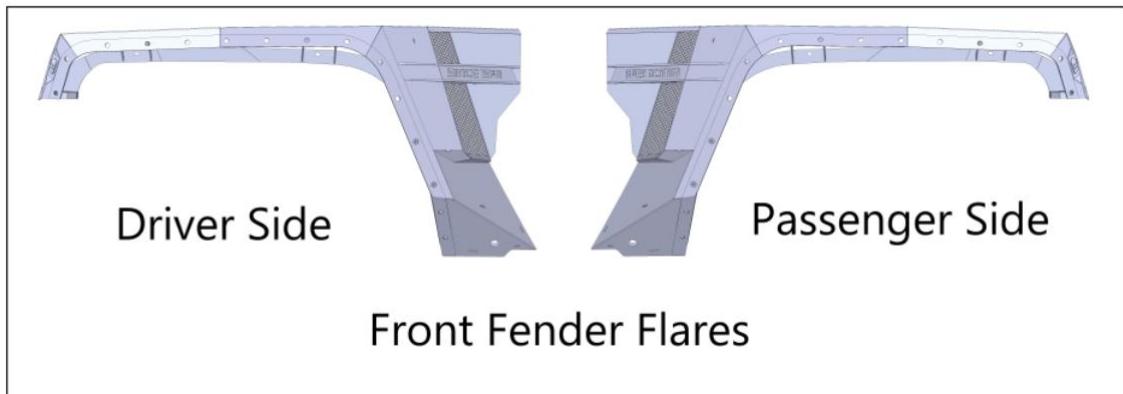BXG.3054

(1) Contents:



Qty	Part Name	Size(mm)	Picture
2	Button Head Socket Cap Bolts Screws	M8*20	
8	Button Head Socket Cap Bolts Screws	M6*20	
8	Split Lock Washer	D6	
2	Flat Washer	M8*16*1	
8	Flat Washer	M6*16*1	

6	Flange Hex Lock Nuts	M6	
2	Flange Hex Lock Nuts	M8	
2	Rivet Nut	M6	
2	Rubber Strip	25000	

(2) Tools required:

- a. Drive Socket Ratchet Wrench;
- b. 4mm & 5mm Hex Bit Socket;
- c. Rivet Nut Tool;
- d. 10mm & 13mm Wrench;

Hand Rivet Nut Tool
(Package Included)



(3) Installation time:

About 1 hour, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

To view the electronic version (BXG.3054), please scan the QR code.




(4) Installation instruction:

Driver Side Front Fender Flare Installation:

Step 1: Remove the factory front fender flare. Ready to install our product.




Step 2: Before installation, please apply rubber strips along the edges of the fender (green line) to prevent scratching the car surface.

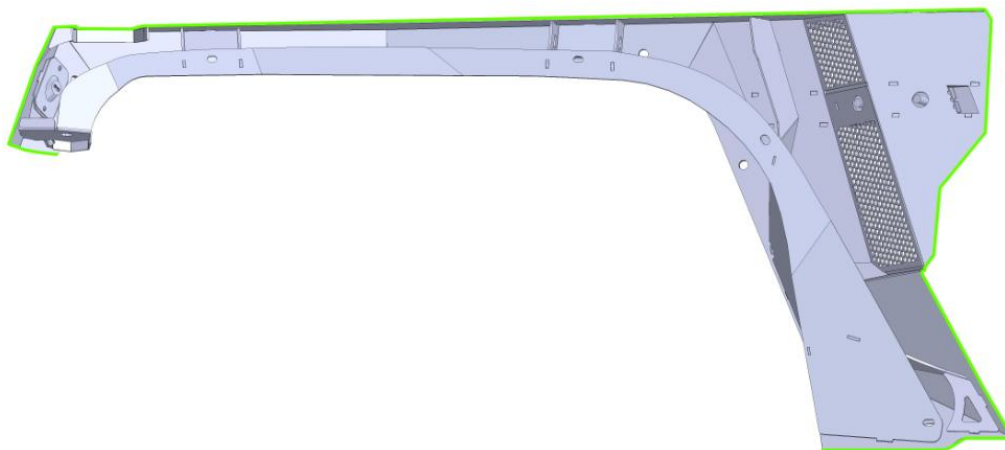



Step 3: Install the rivet nut in the most right hole with the rivet nut tool.

the rivet nut tool instruction: The 4mm Hex Bit Socket use in the top, 10mm wrench stuck on the middle nut. Put the rivet nut in the hole, screw the threaded end of the rivet nut tool into the rivet nut (**Notice: Must be screwed to the bottom**), finally unscrew the rivet nut tool out.

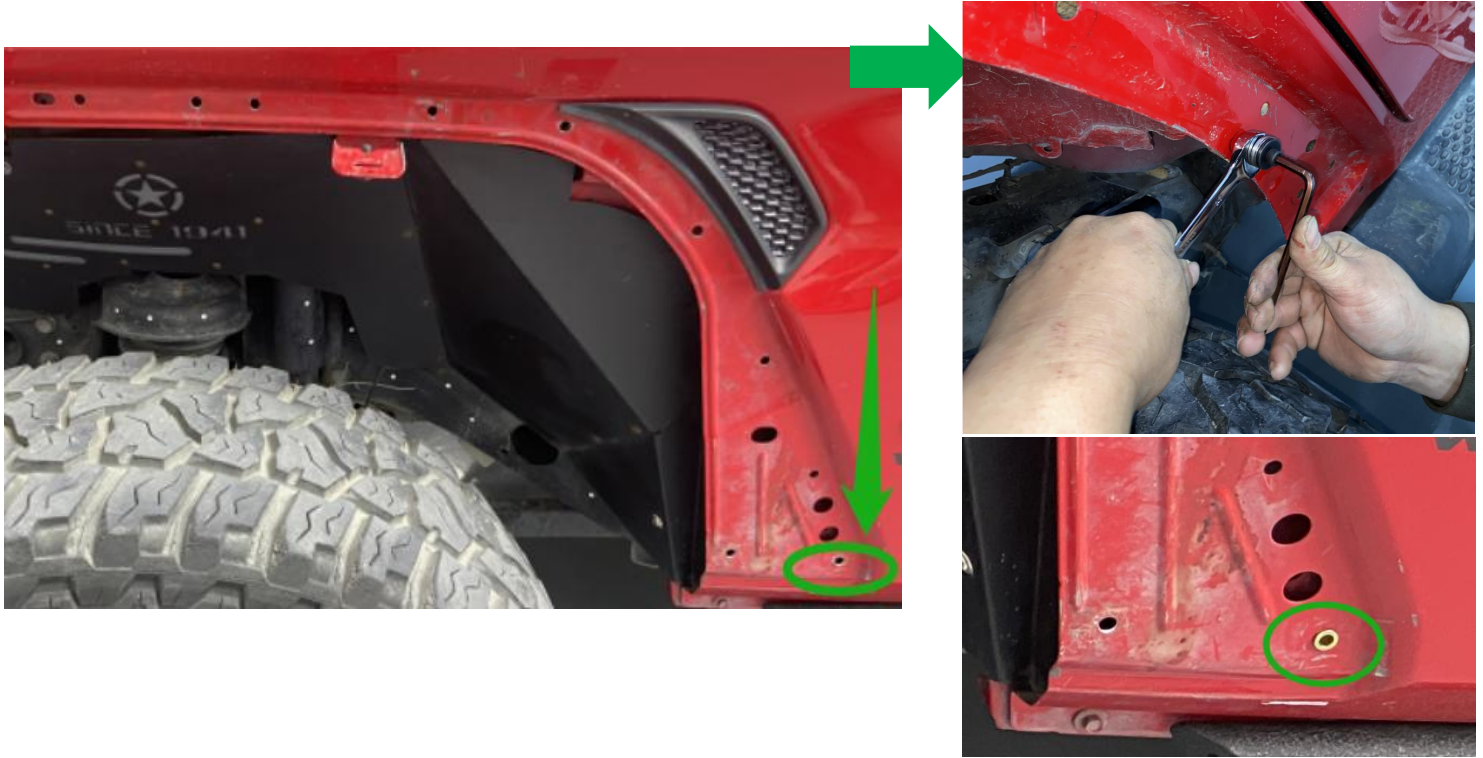


Step 4: Next, Lift up the front fender flare and install the left two holes. Use the Button Head Socket Cap Bolts Screws (M8*20) groups and Button Head Socket Cap Bolts Screws (M6*20) groups. **Don't tighten up those bolts.**


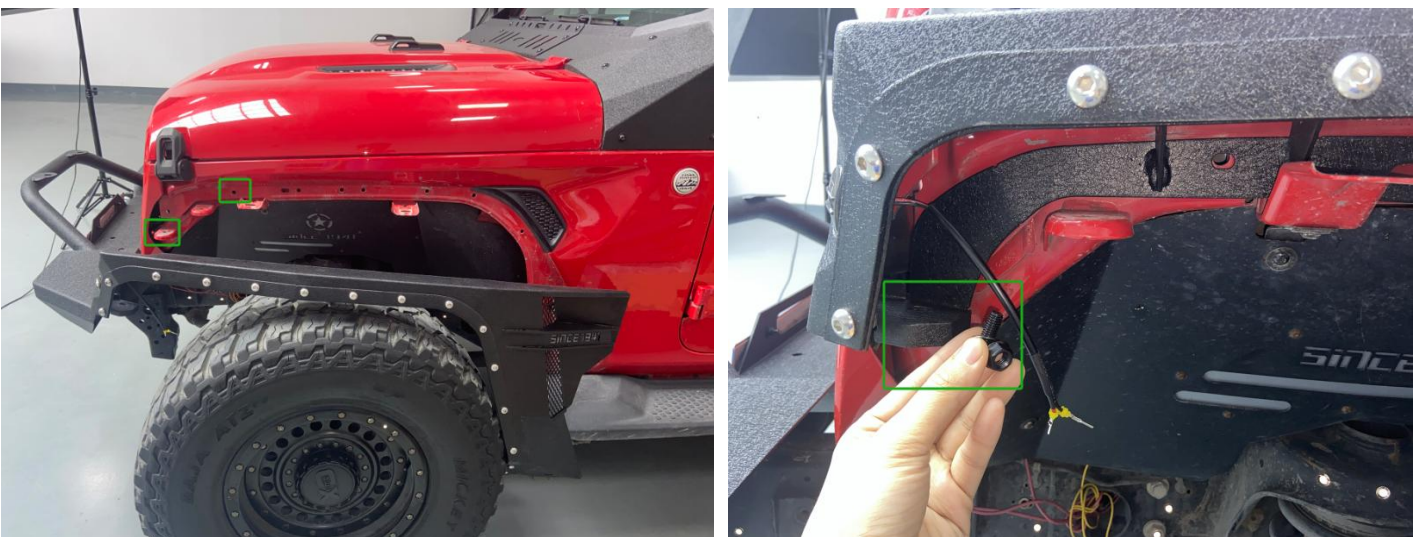


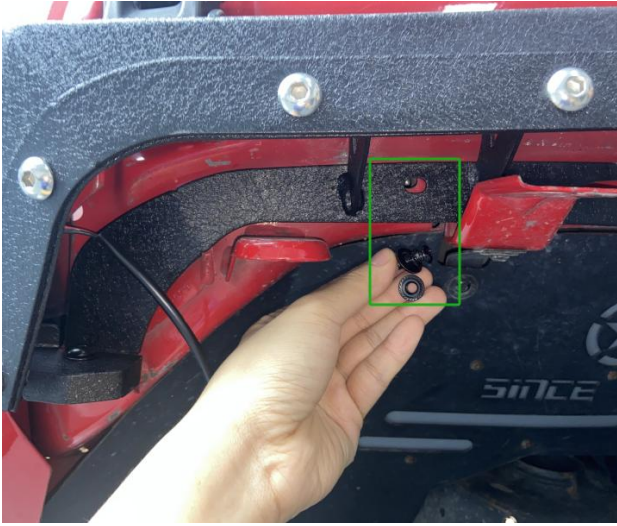

Step 5: And then install the middle two holes. Use the Button Head Socket Cap Bolts Screws (M6*20) groups. **Don't tighten up those bolts.**

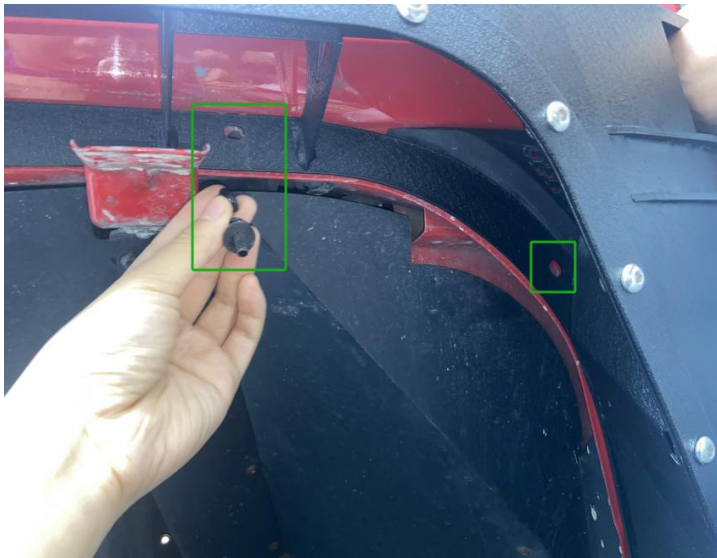


Step 6: Finally, when installing the rightmost hole, use the extended rod tool to screw in the screw, and then cover the plug back.

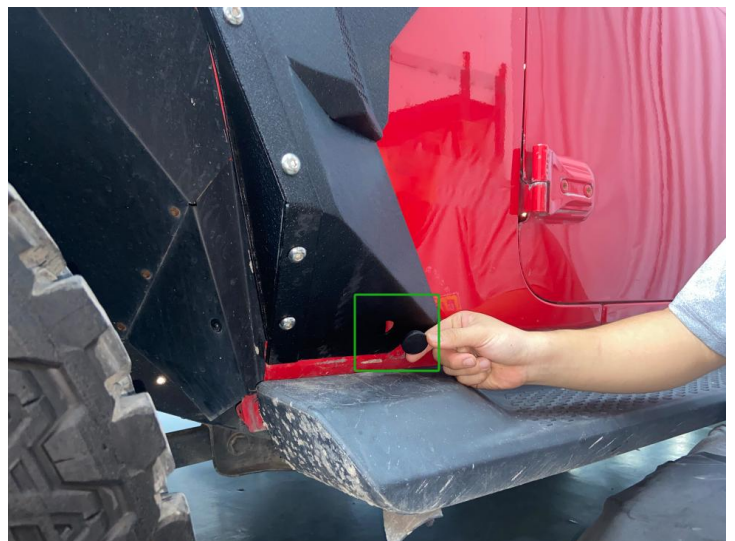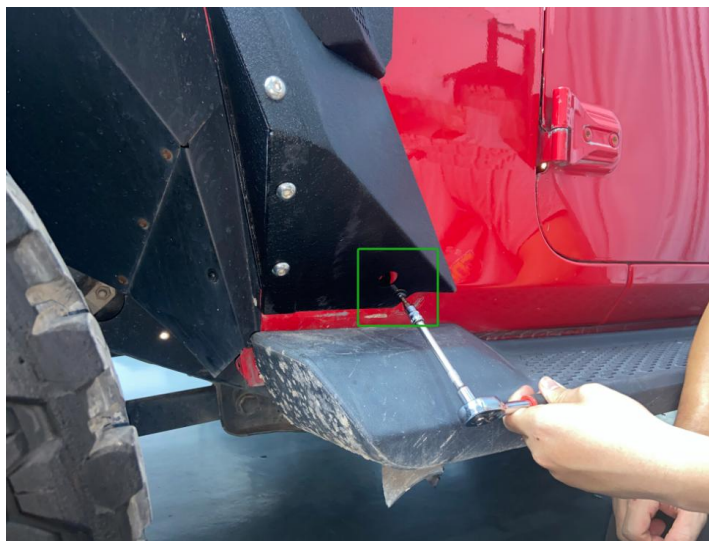


Step 7: After completing the driver side installation, follow the same installation method on the passenger side.

Lighting Wiring Installation:

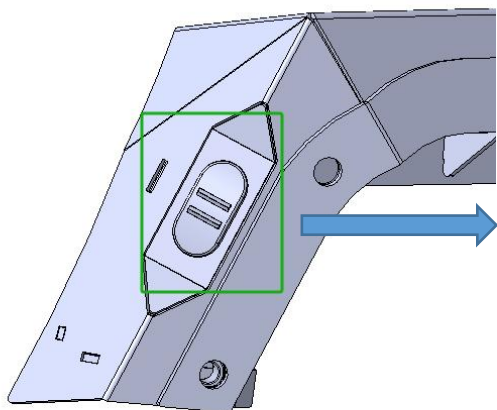


The fender flares light have the functions of the Turn lamp.

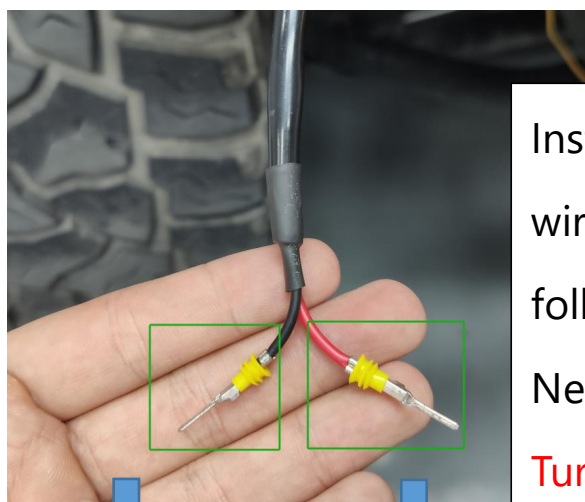

Installation: Find the factory fender flares light wiring harness. Connect the wiring harness as follows.

Negative Electrode (Black Wire) - Factory Black Wire
Turn Lamp (Red Wire)-Factory White Yellow Wire

Notes: Different models may have different wiring harness colors, but the above wiring methods are the same.

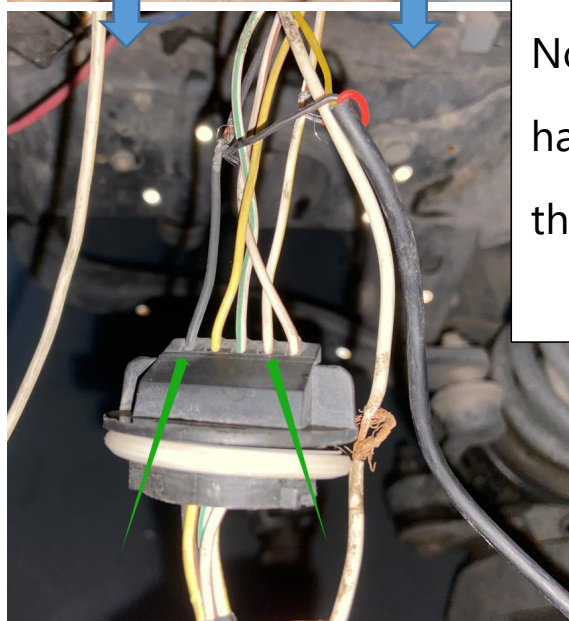

Step 8:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts.

Feel Free To Share Your Vehicle [@HookeRoad4x4](#)
With The Hashtag [#hookeroad](#) If You'd Like

