



INSTALLATION

MANUAL

F80 M3 F82 M4 YELLOW DRL CONVERSION KIT



COMPLIED 01/02/24

TABLE OF CONTENTS

| | |
|--|----|
| DISCLAIMER | 3 |
| REQUIRED TOOLS | 4 |
| INCLUDED PARTS | 4 |
| PRIOR INFORMATION | 4 |
| STEP 1 | 5 |
| STEP 2 | 5 |
| STEP 3 | 6 |
| STEP 4 | 7 |
| STEP 5 | 8 |
| STEP 6 | 9 |
| STEP 7 | 10 |
| STEP 8 | 11 |
| STEP 9 | 12 |
| ISSUES WITH INSTALLATION? | 13 |

DISCLAIMER

Please read the following carefully and only proceed once you have fully understood and agreed to the terms:

- The buyer takes complete responsibility for utilising these products on their vehicles, whether or not they adhere to relevant laws and regulations governing on-road or highway usage.
- The buyer recognizes that OPEN THROTTLE specifies that the products are designed exclusively for off-road or racetrack use.
- The buyer agrees that OPEN THROTTLE is not responsible for ensuring compliance of their vehicles with State, Federal, Provincial, or local ordinances and emissions authorities.
- The buyer that all installations are done entirely at the risk of the buyer, and OPEN THROTTLE cannot be implicated in any way.
- OPEN THROTTLE disclaims any responsibility for damages resulting from misuse, abuse, improper installation, improper operation, lack of responsible care, or issues related to part incompatibility.
- OPEN THROTTLE will not honour warranties due to improper installation, improper maintenance, any damage caused by external factors and wear & tear.

REQUIRED TOOLS

- TORX T20

INCLUDED PARTS

- OPEN THROTTLE Yellow DRL Modules (2)

PRIOR INFORMATION

- This guide assumes that your vehicle has an OEM LCI Headlights (2017-2020)
- This guide assumes that your vehicle has headlights in working order.




STEP 1

OPEN THE BONNET BY PULLING THE LATCH UNDER THE STEERING WHEEL TWICE.

STEP 2



TAKE OUT THE (3) T20 SCREWS FROM HEADLIGHT MODULE/HEATSINK. (REFER TO PICTURE BELOW)

DO NOT LOSE THESE AS THEY ARE REQUIRED TO REINSTALL NEW HEATSINK/MODULE

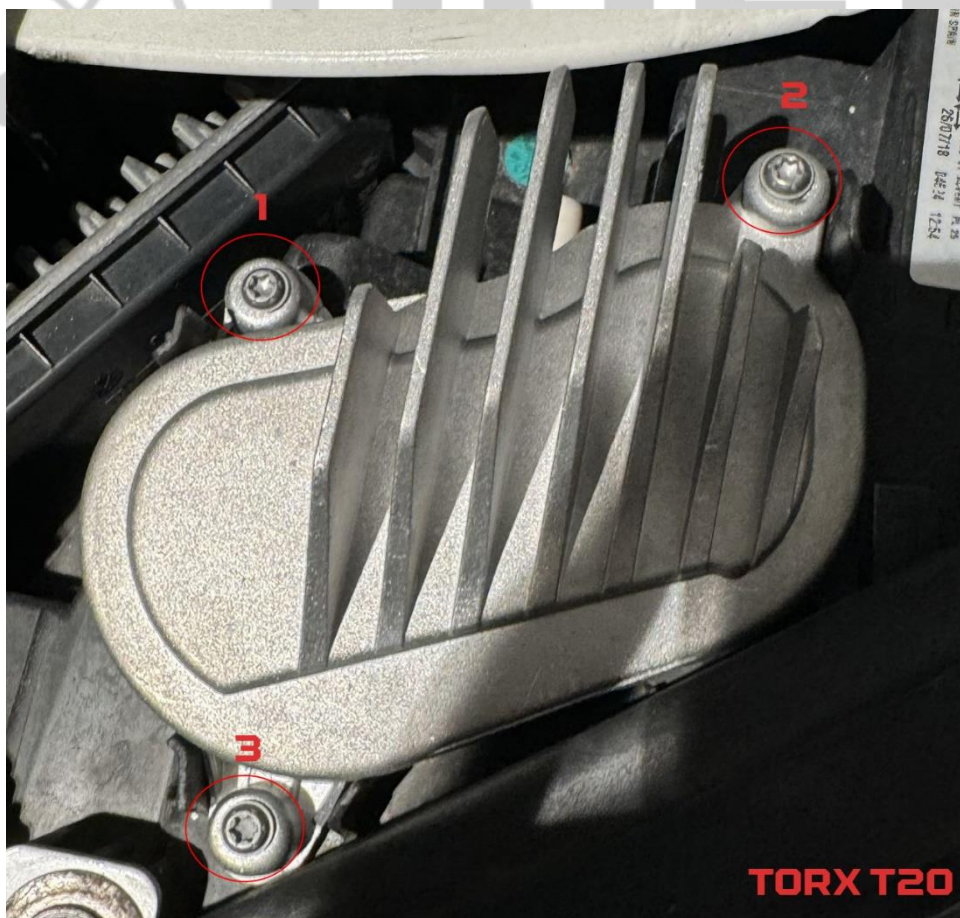


STEP 3

CAREFULLY LIFT THE MODULE/HEATSINK AND UNPLUG (2) CONNECTORS (PUSH DOWN ON TAB AND PULL)

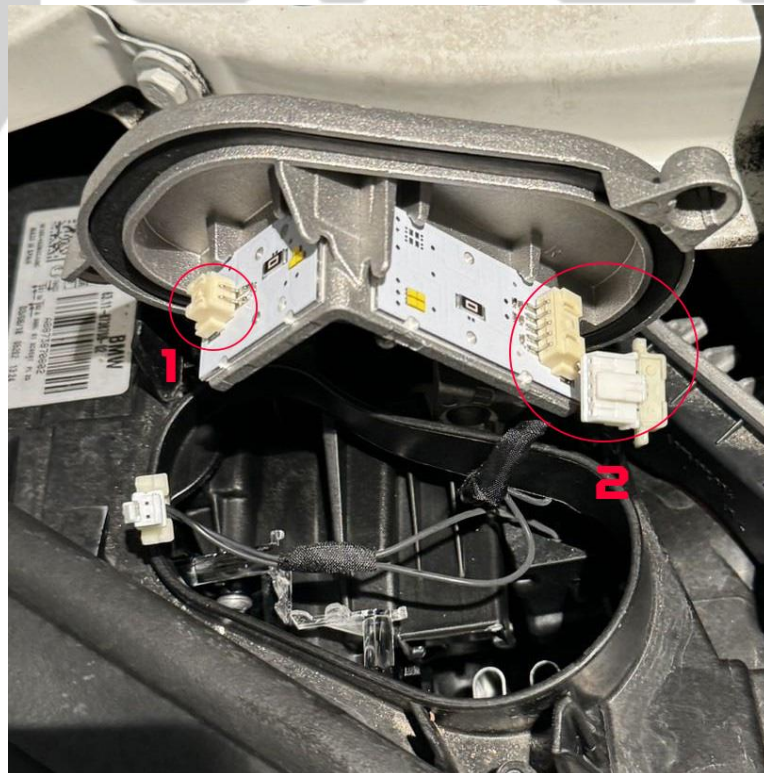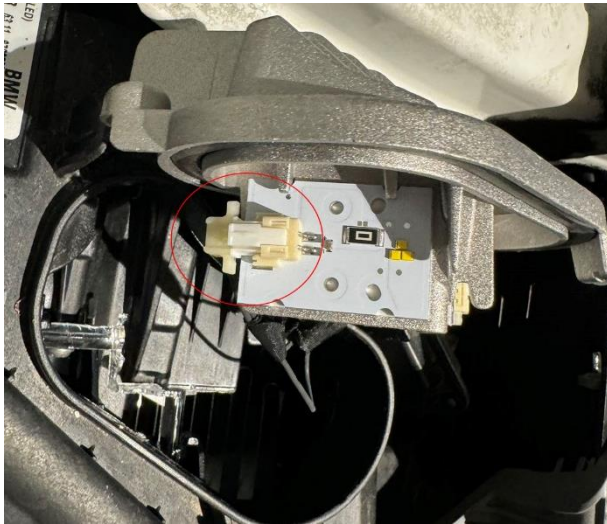


STEP 4

TAKEOUT OLD MODULE/HEATSINK – PUT ASIDE.

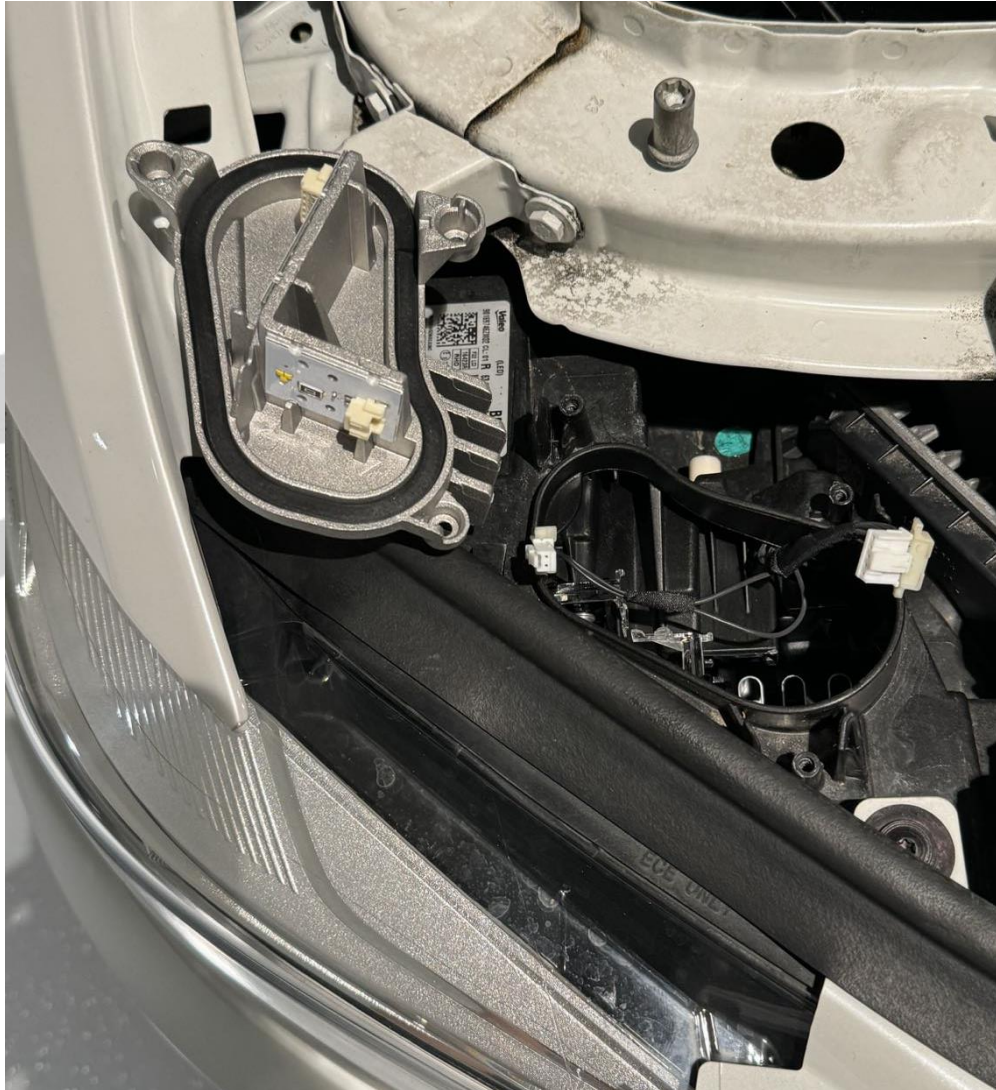


STEP 5

PLUG THE (2) CABLES BACK INTO THE NEW HEATSINK.

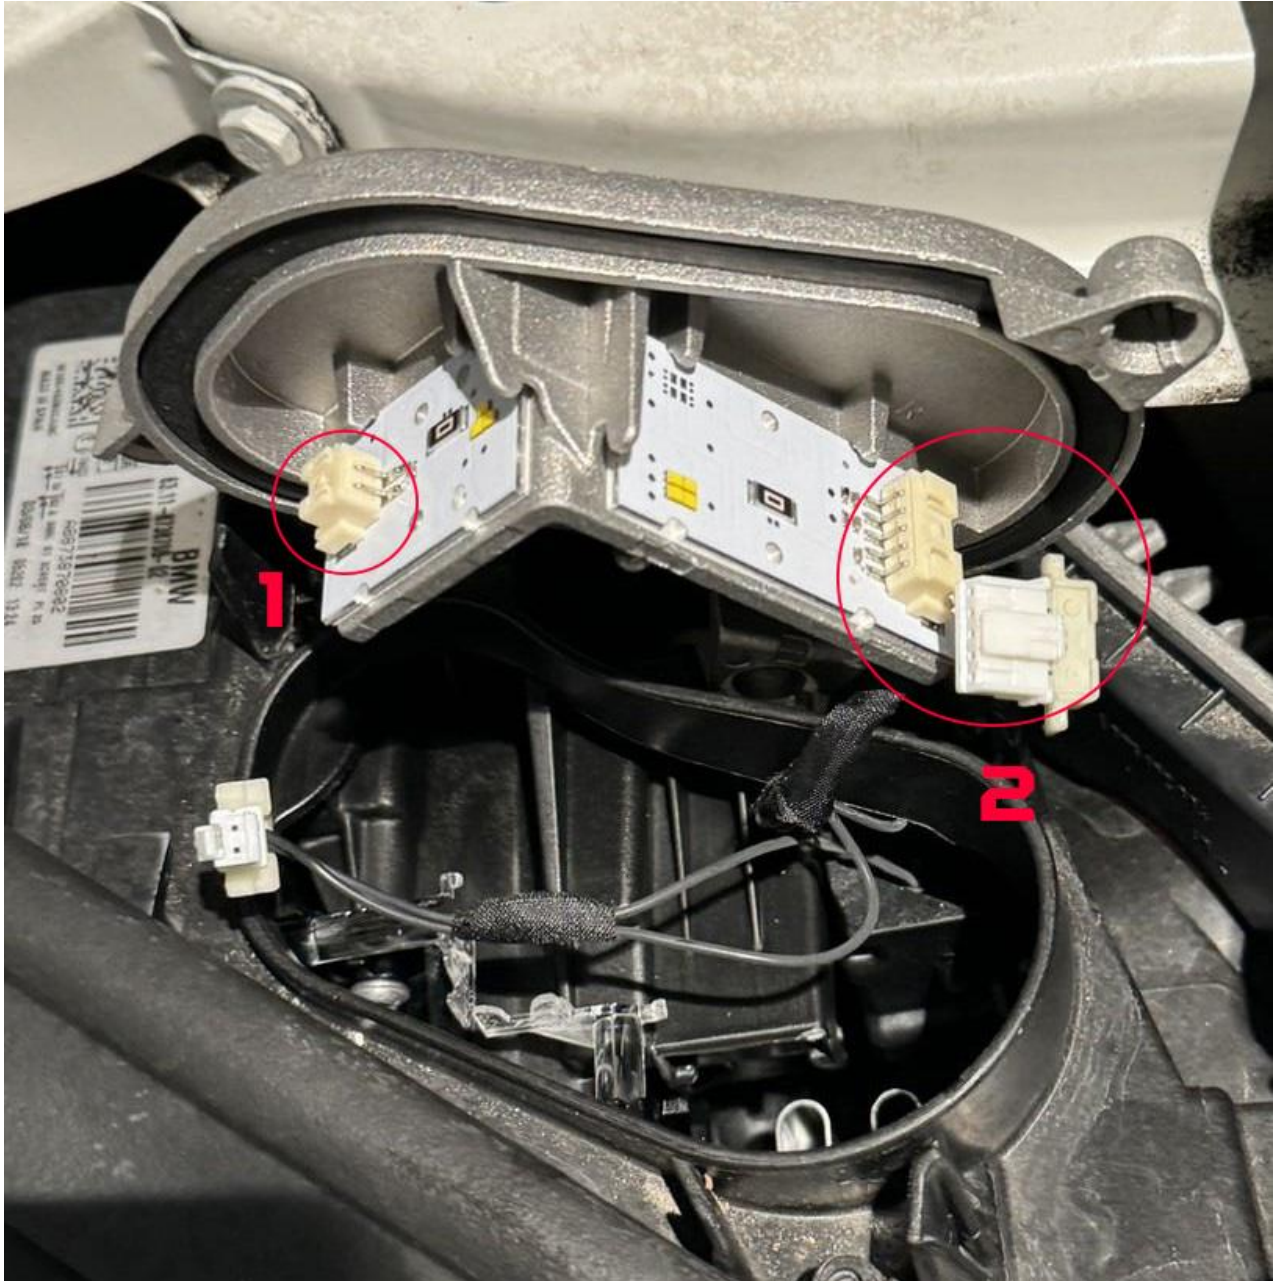

STEP 6

CAREFULLY PLACE NEW MODULE/HEATSINK INTO
HEADLIGHT CASING

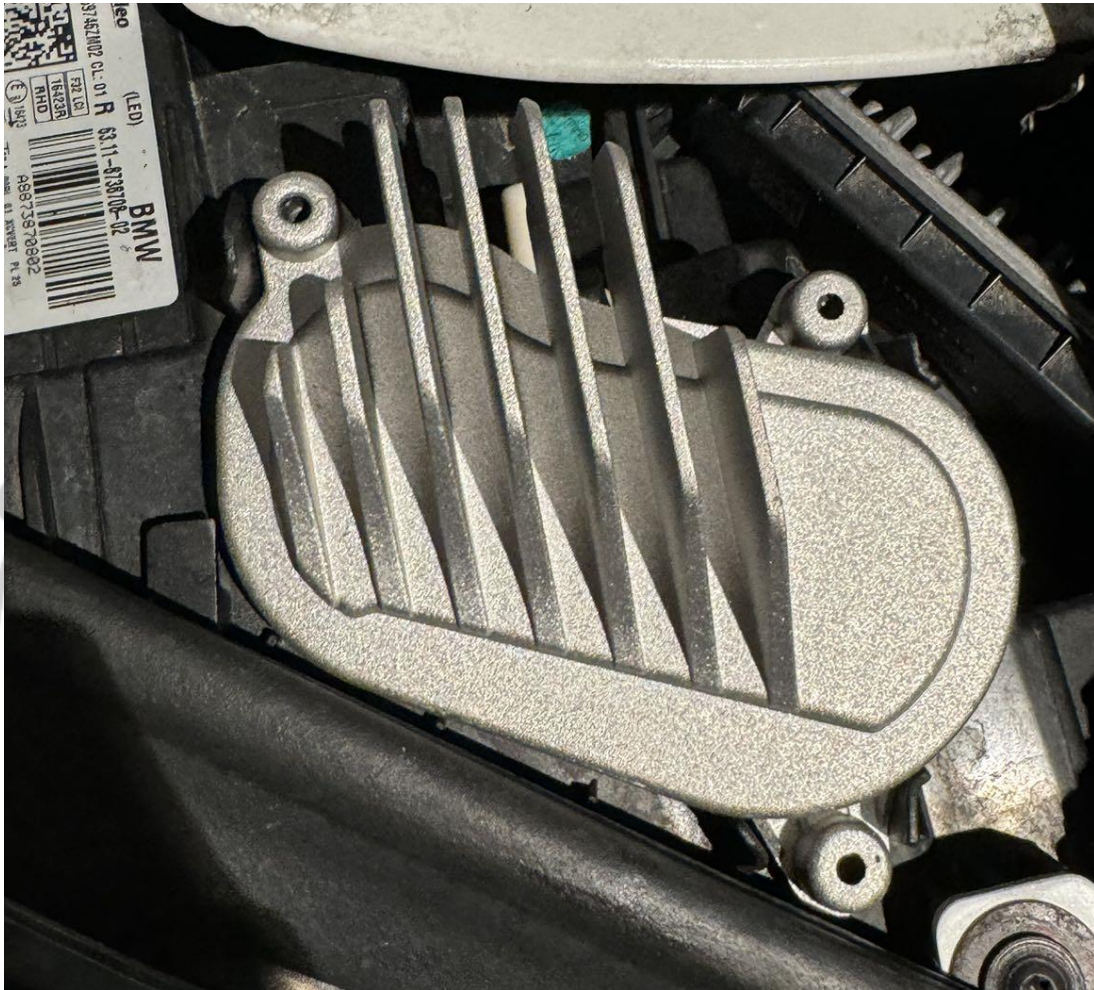

STEP 7

TURN ON IGNITION WITH HEADLIGHT SWITCH SET TO – (0)


CHECK IF DRL IS WORKING PROPERLY BEFORE PROCEEDING TO NEXT STEP. IF NOT WORKING PROPERLY – PLEASE DOUBLE CHECK IF THE PLUGS ARE CORRECTLY SEATED.



STEP 8

SCREW IN (3) T20 SCREWS

DO NOT OVERTIGHTEN

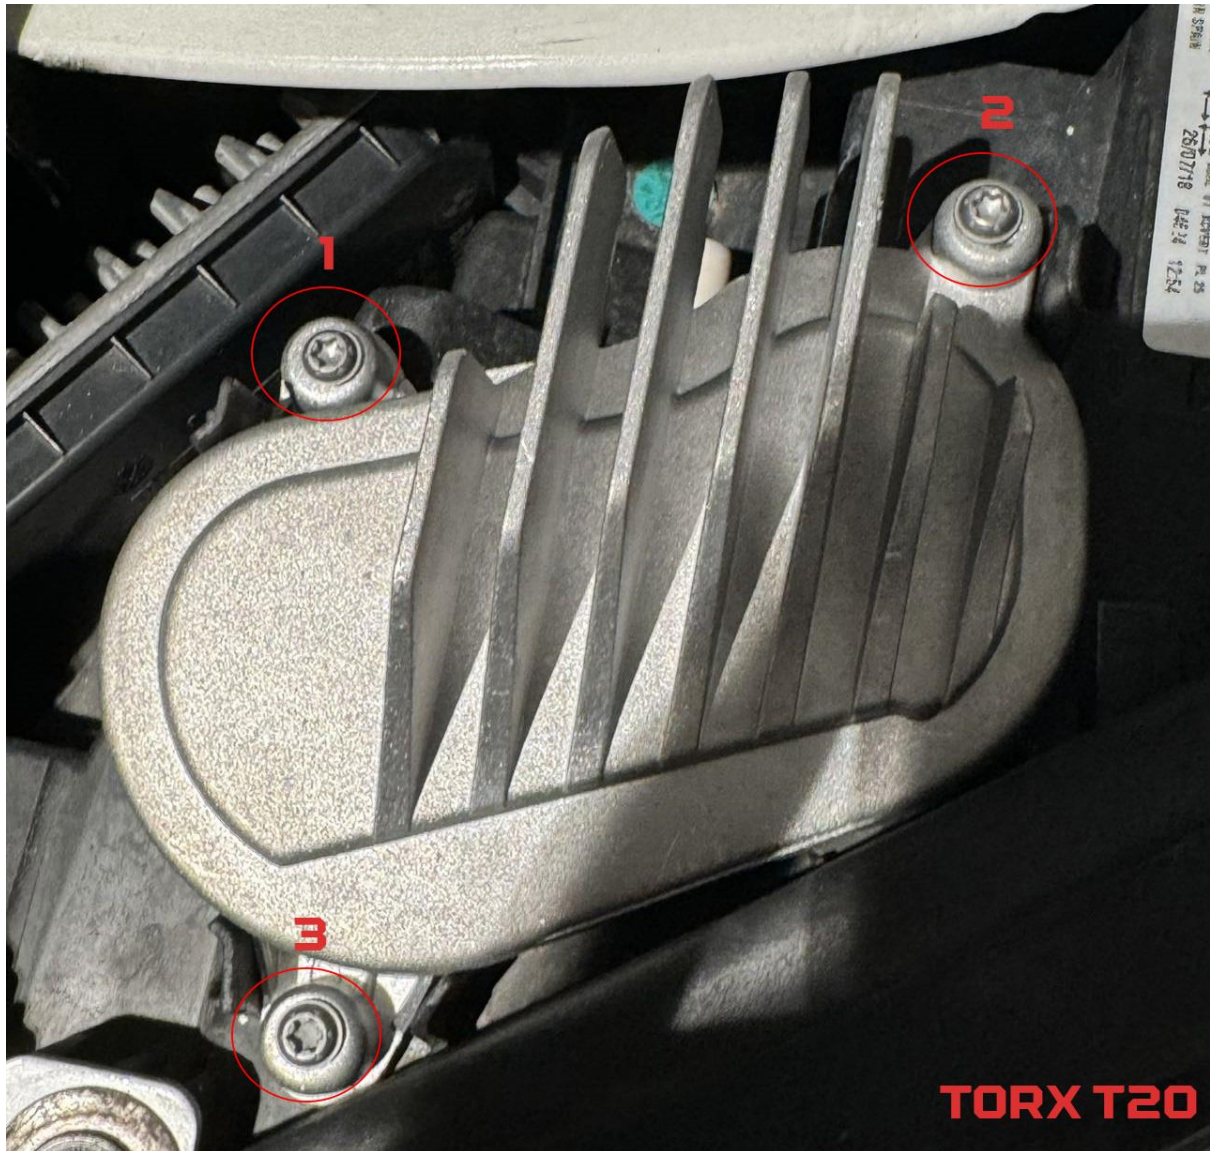

STEP 9

REPEAT STEPS 1-8 FOR OTHER HEADLIGHT.



ISSUES WITH INSTALLATION?

PLEASE EMAIL US AT: SUPPORT@OPENTHROTTLE.SHOP

YOUTUBE VIDEO: WWW.YOUTUBE.COM/WATCH?V=0IIBFVS2WZO

