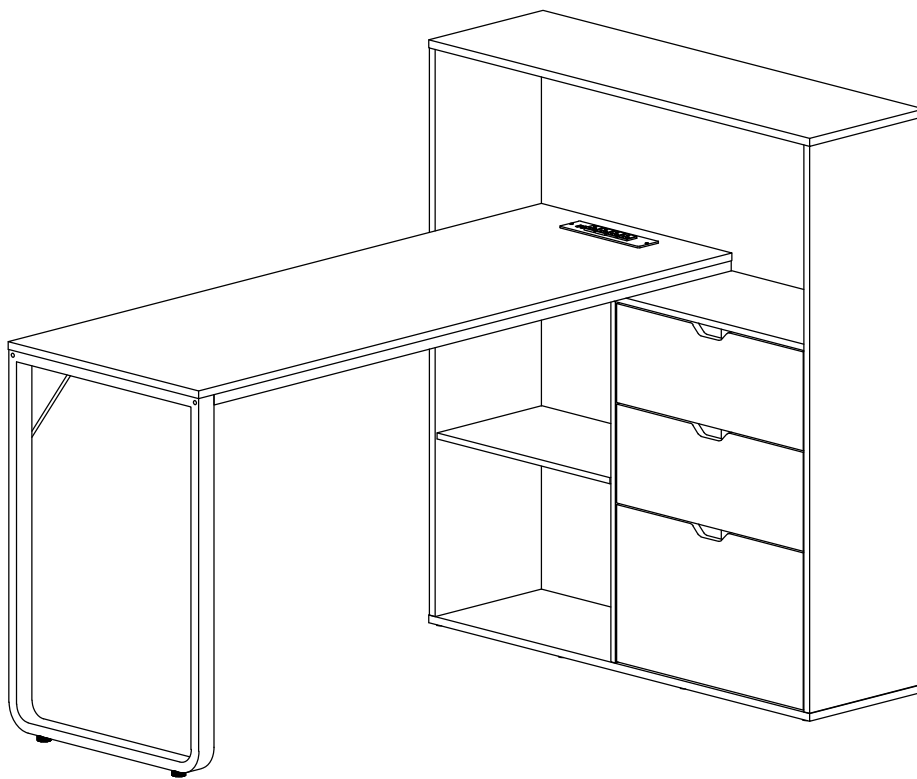


HZQD-V2

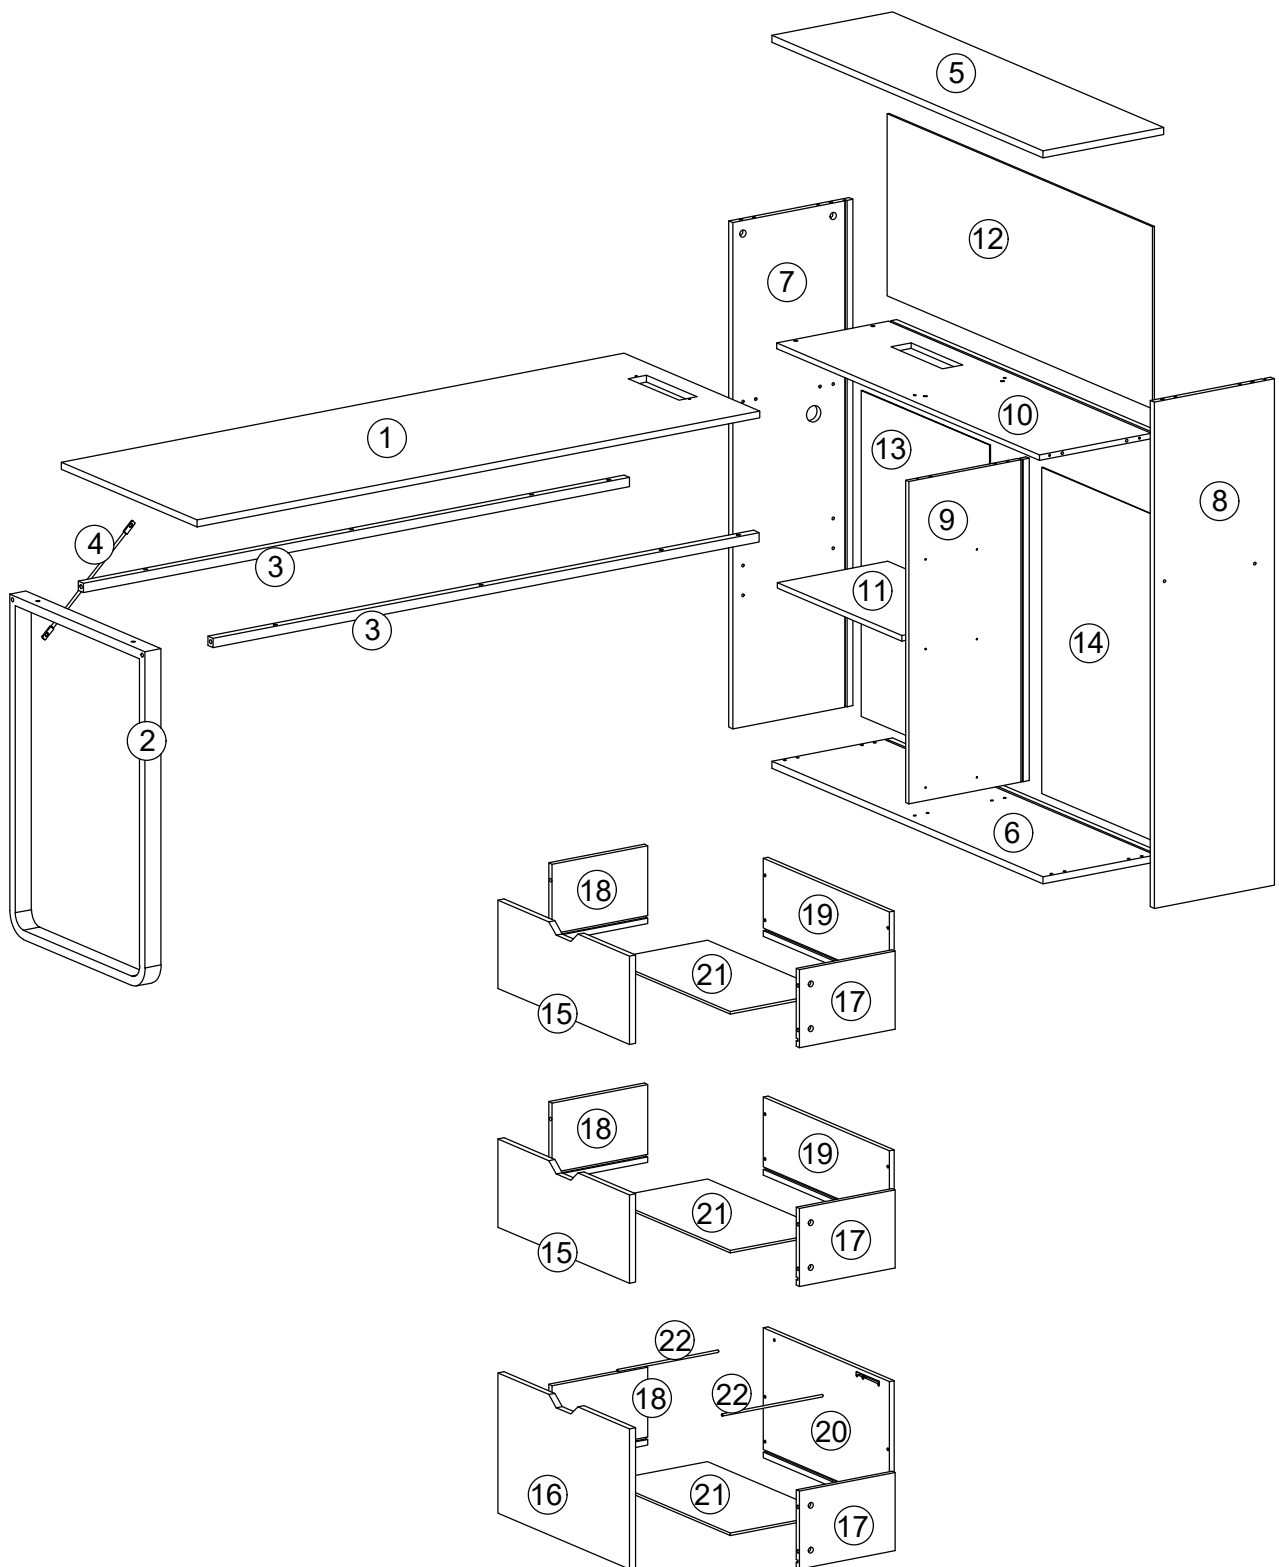
FTOFOD-6005

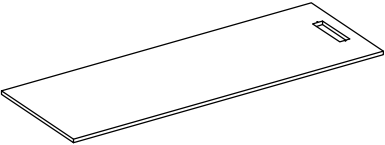
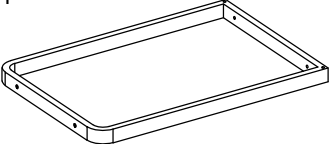
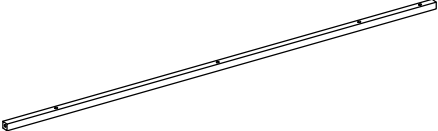

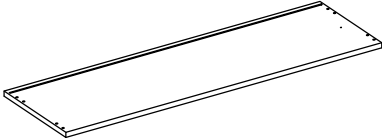
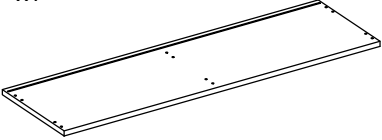
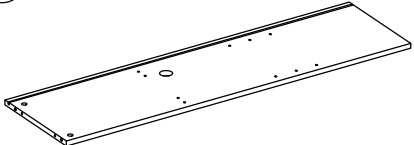
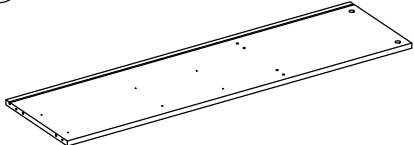
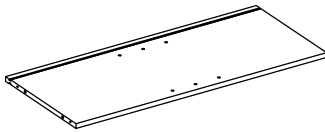
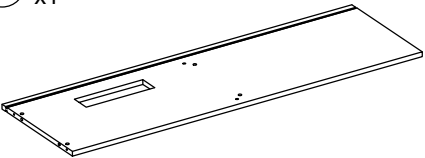
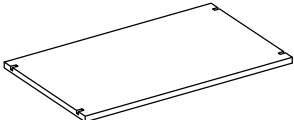
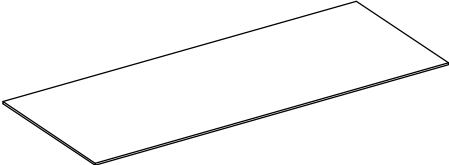
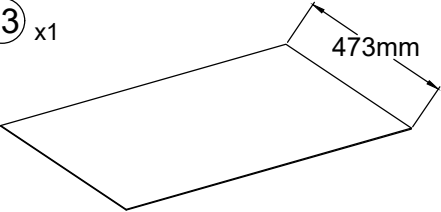
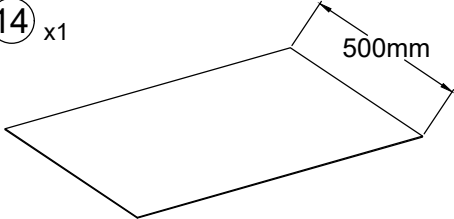
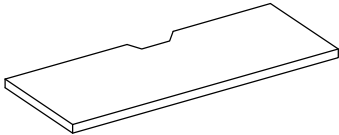
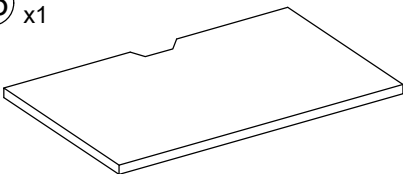
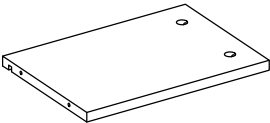
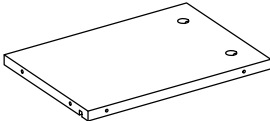
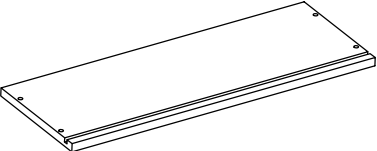
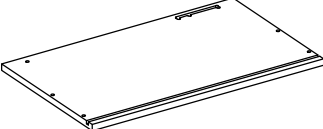













OFFICE DECK

Notice:


1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only after all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.




① x1 	② x1 	③ x2 
④ x1 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x2 
⑯ x1 	⑰ x3 	⑱ x3 
⑲ x2 	⑳ x1 	㉑ x3 
㉒ x2 		

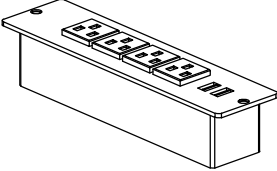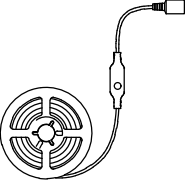A x 24+1  Ø5x40	B x 2+1  M6x60	C x 4+1  M6x40	D x 6+1  M6x28
E x 2+1  M6x12	F x 16+1  Ø6x35	G x 16+1   Ø12 Ø6x35	H x 2  M4x10
I x 3  250mm	J x 25+2  3.0x12	K x 1 	L x 4+1 
M x 1 	N x 2  M6x15	O x 1  6.4MM	


TOOL




Attention

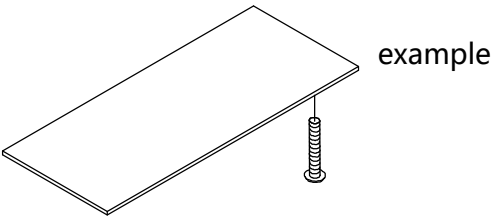

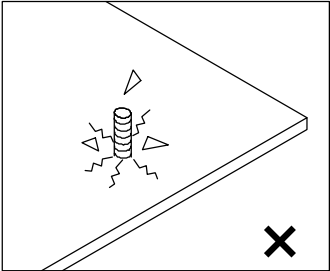Be sure to use the proper screws to avoid damaging the parts




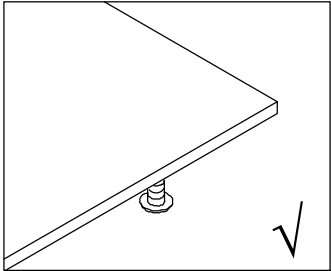Wrong screws can cause the plank to crack




The right screw is the right size

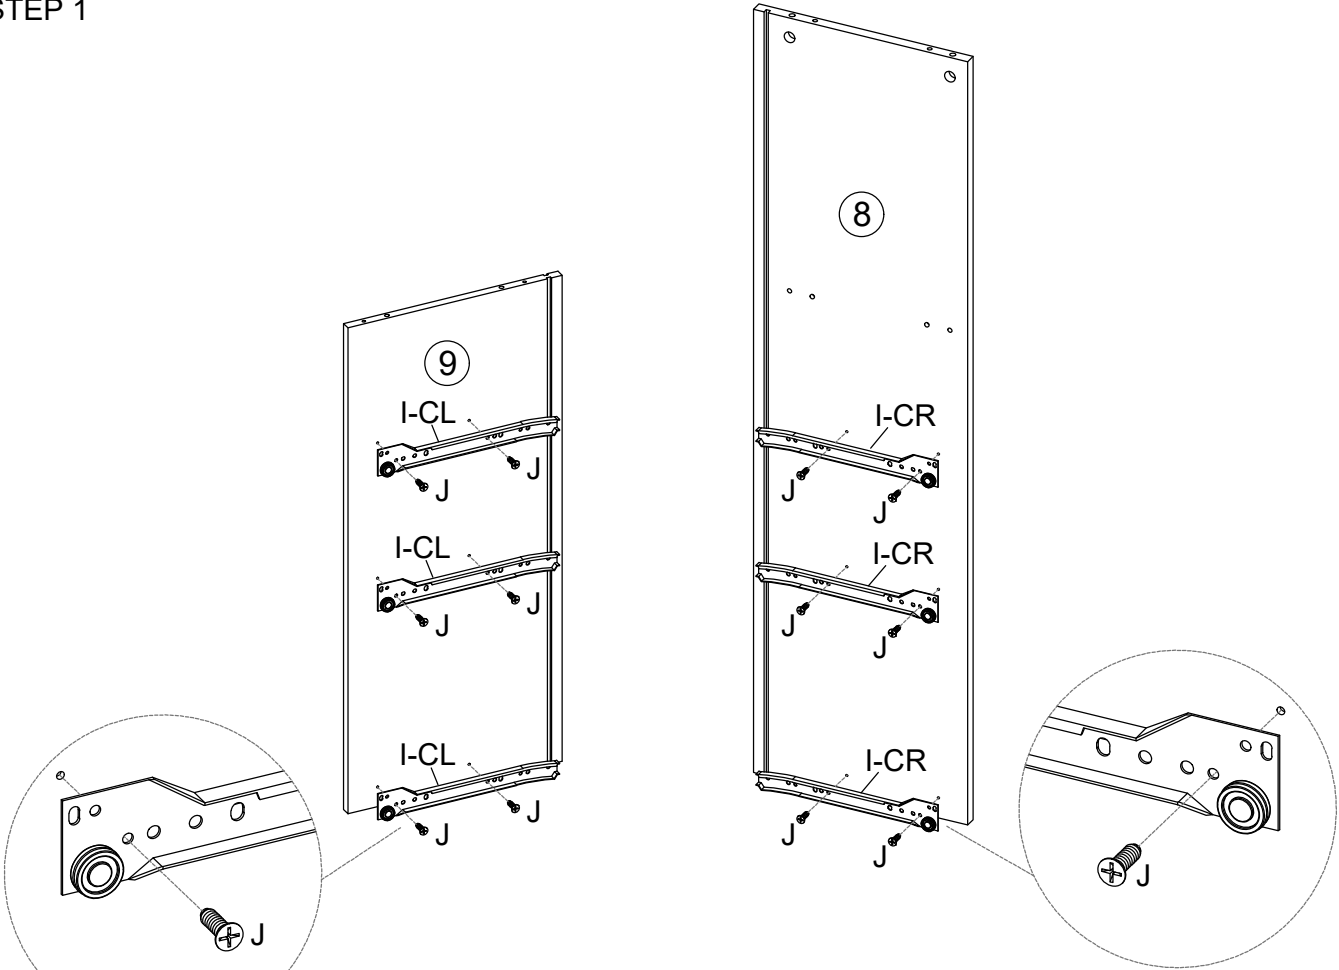STEP 1




	J		x12	I		x3
--	---	--	-----	---	--	----

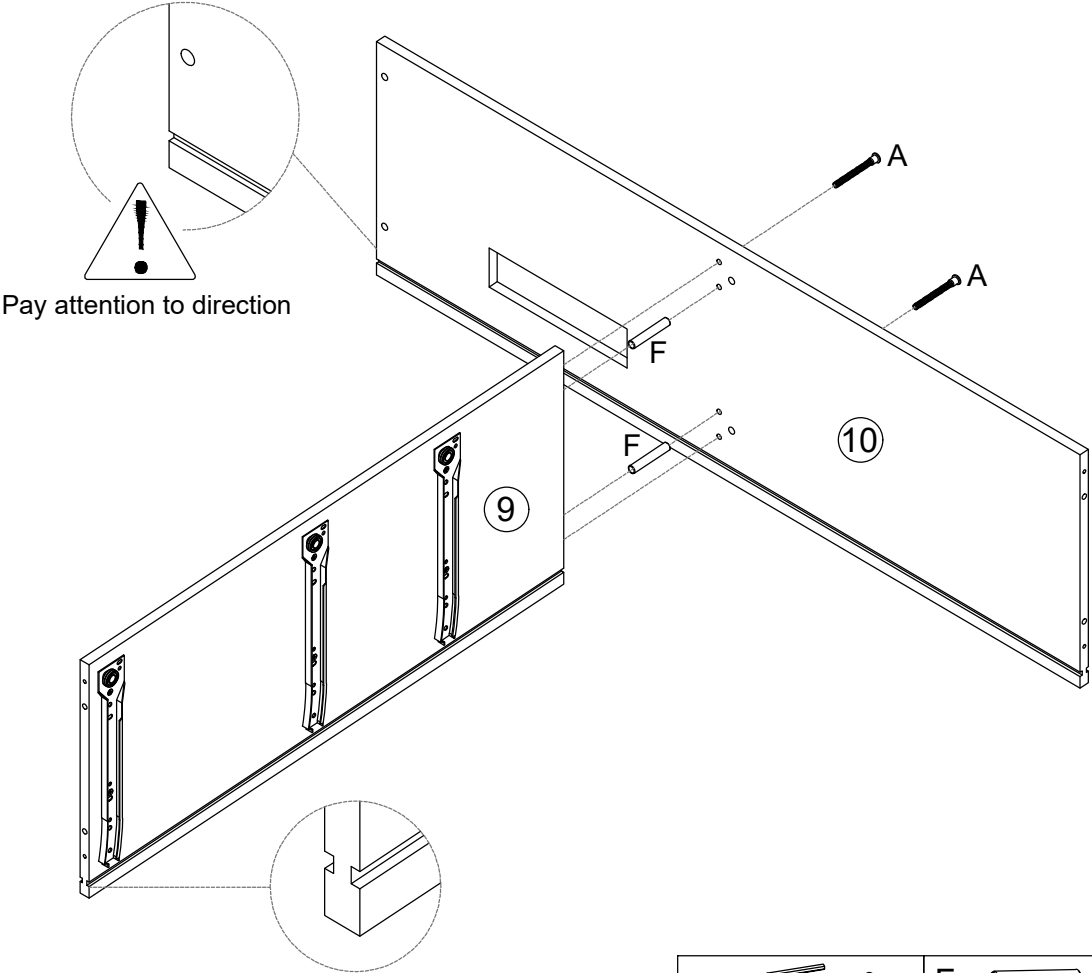STEP 2




	3mm	F		x2	A		x2
--	-----	---	--	----	---	--	----

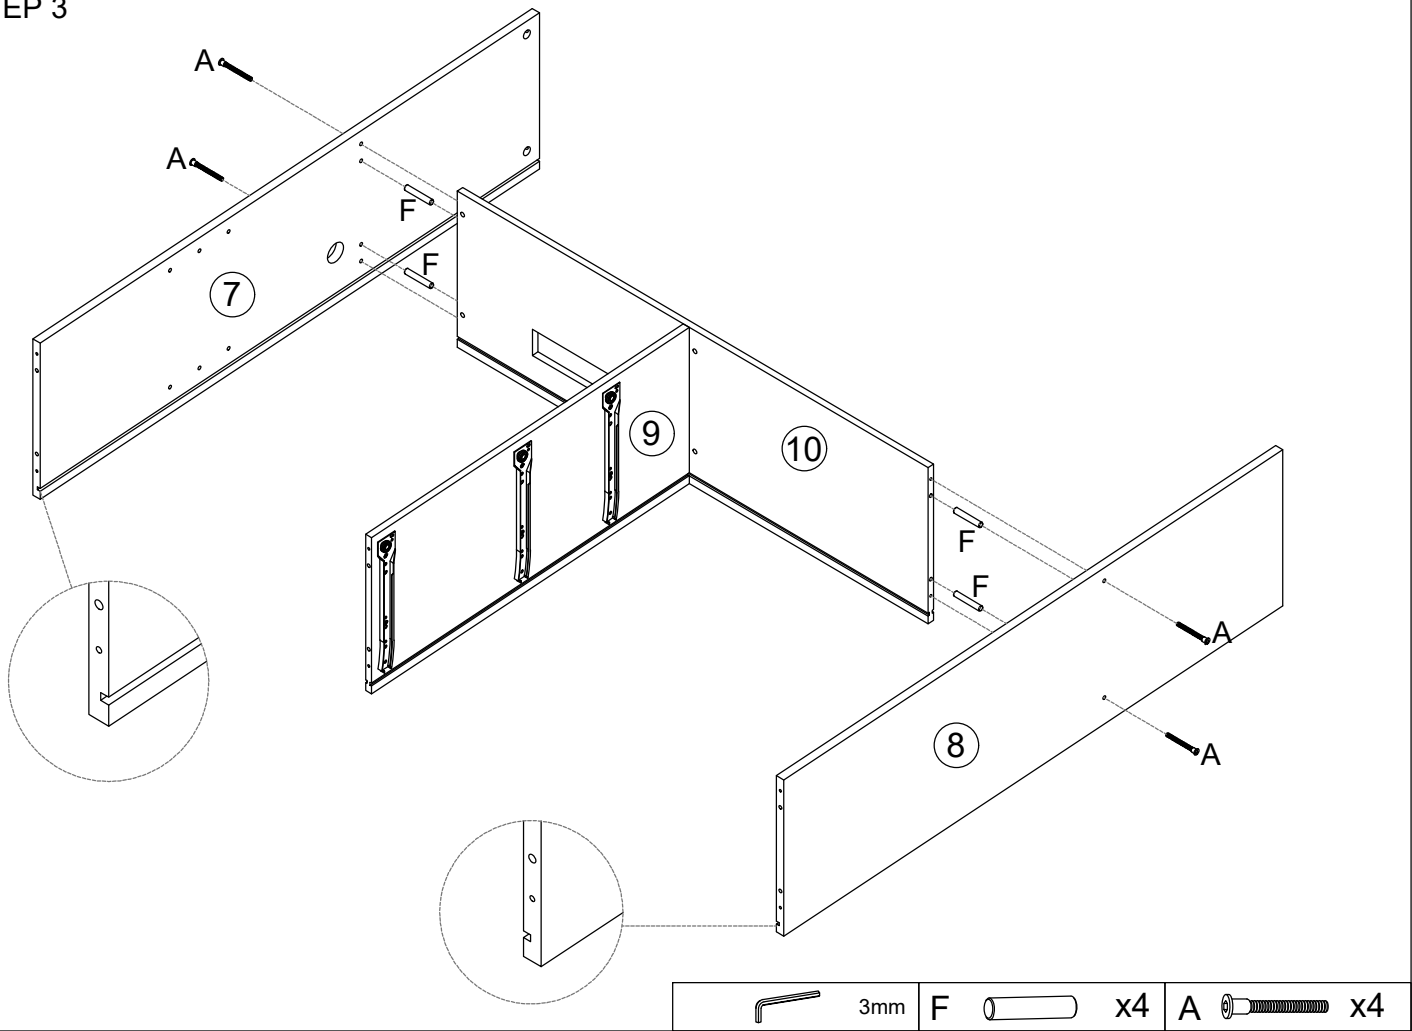
STEP 3



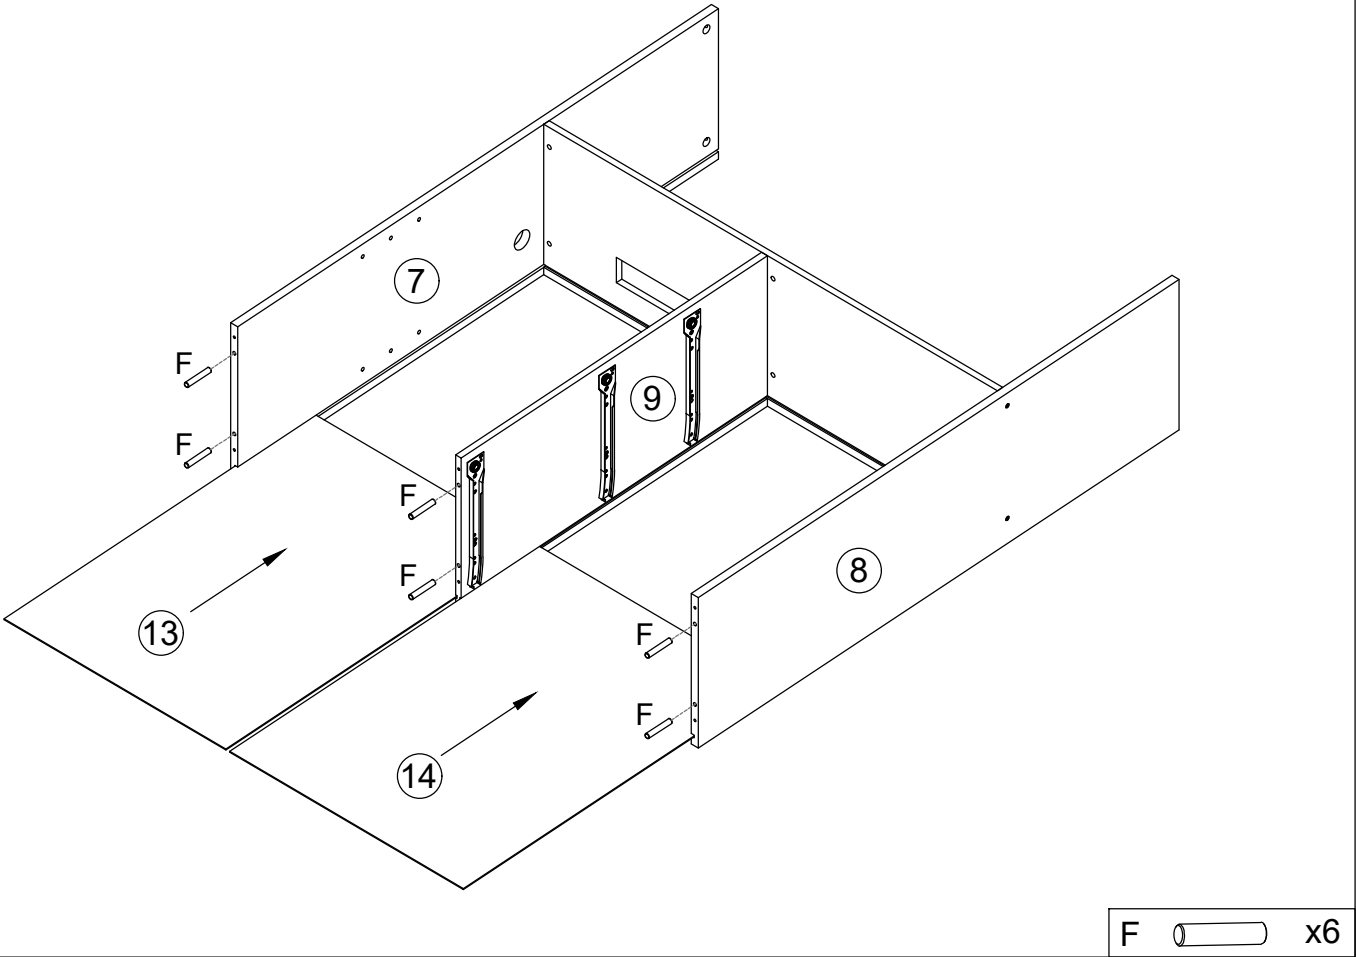STEP 4




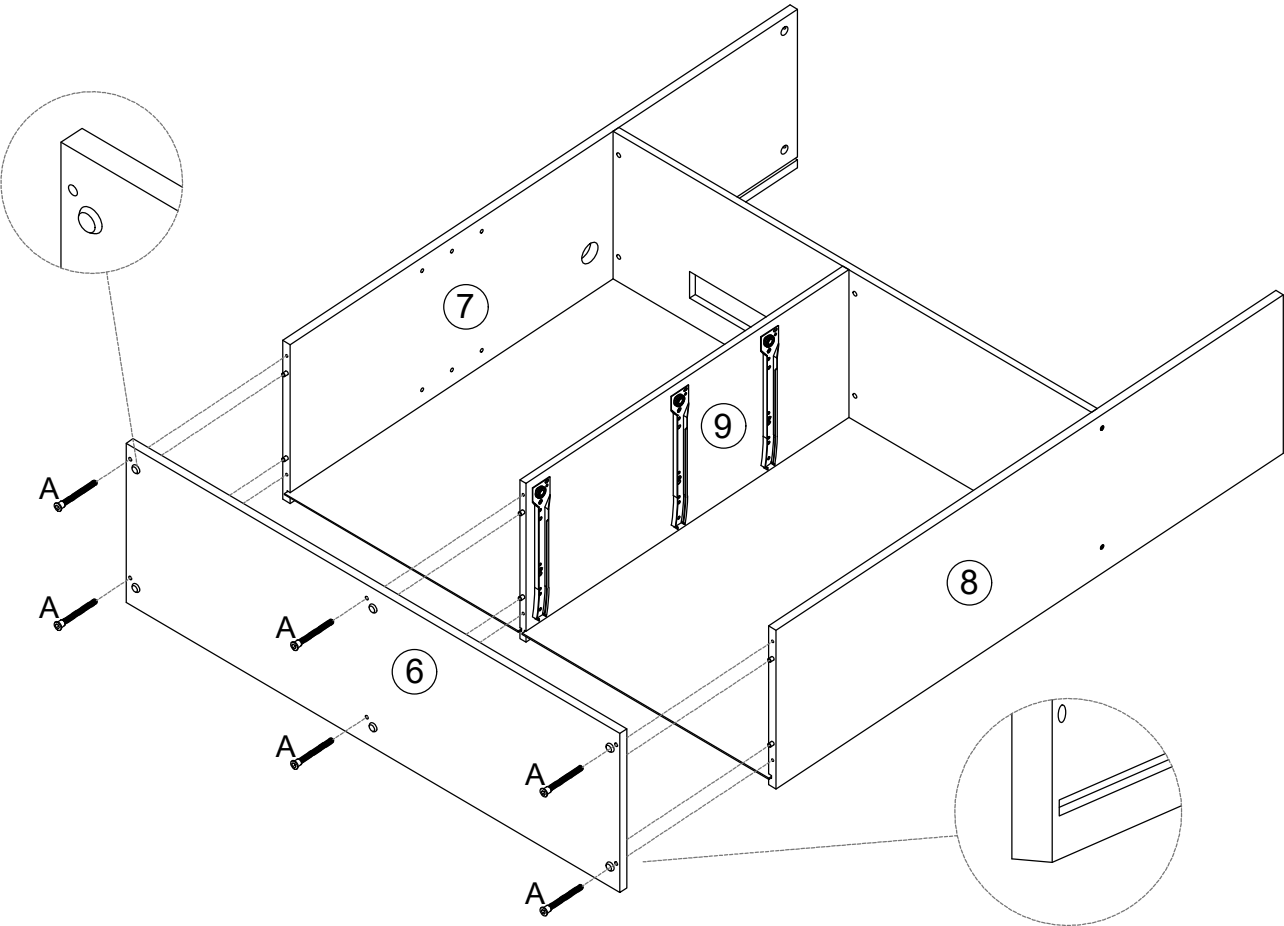STEP 5




	3mm	A 	x6
---	-----	---	----

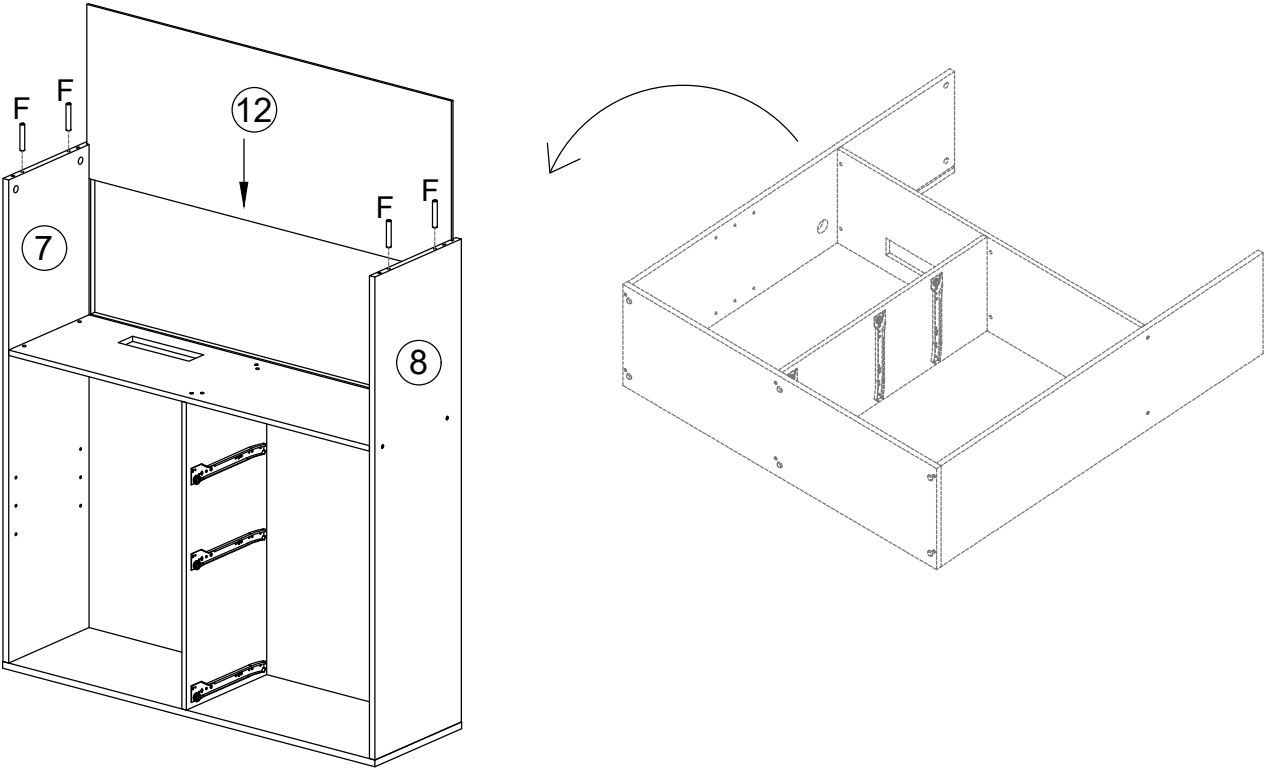STEP 6




F 	x4
---	----

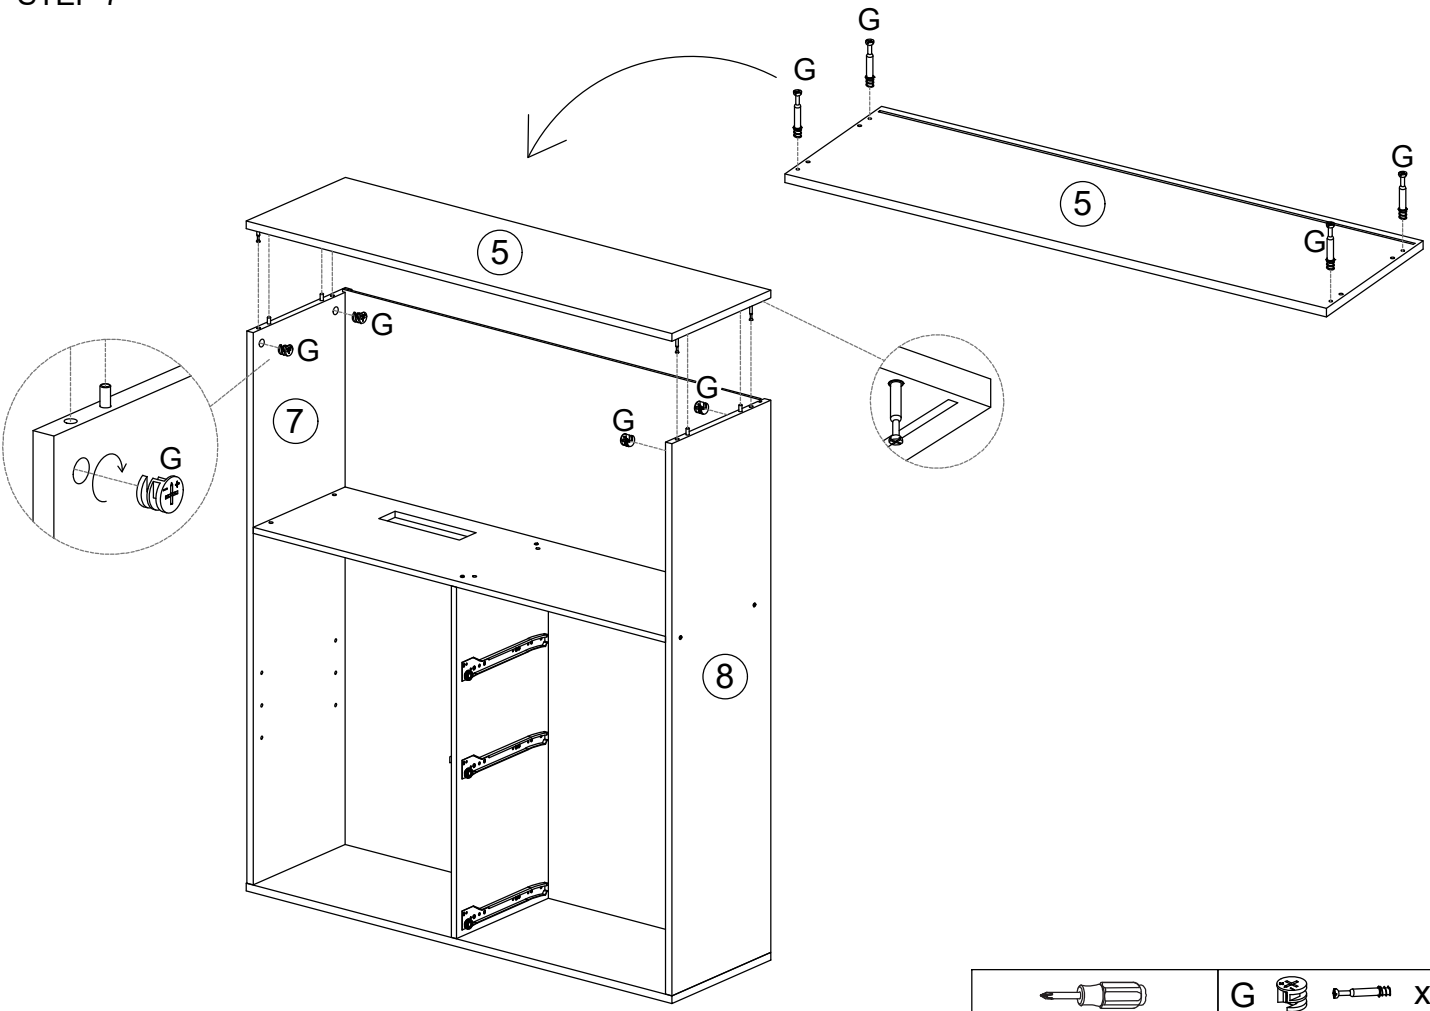
STEP 7



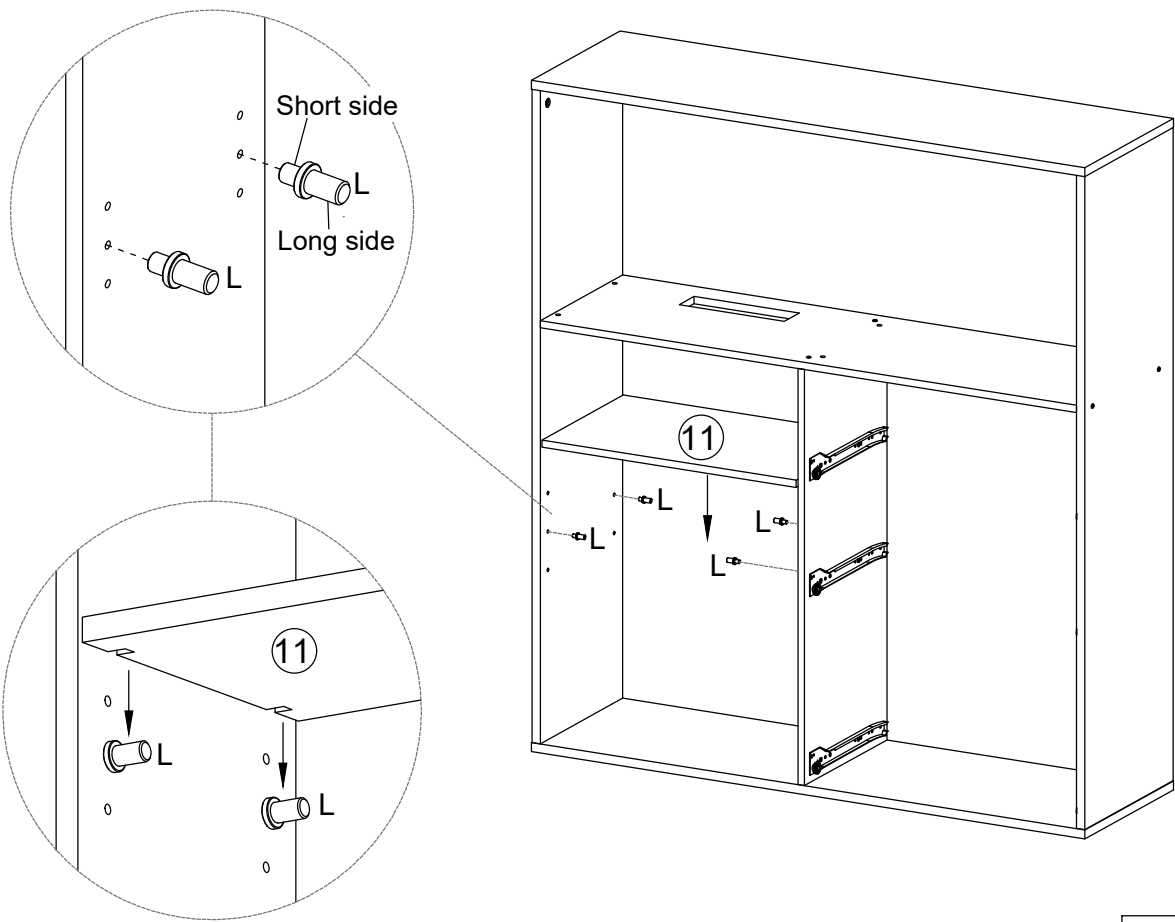
STEP 8



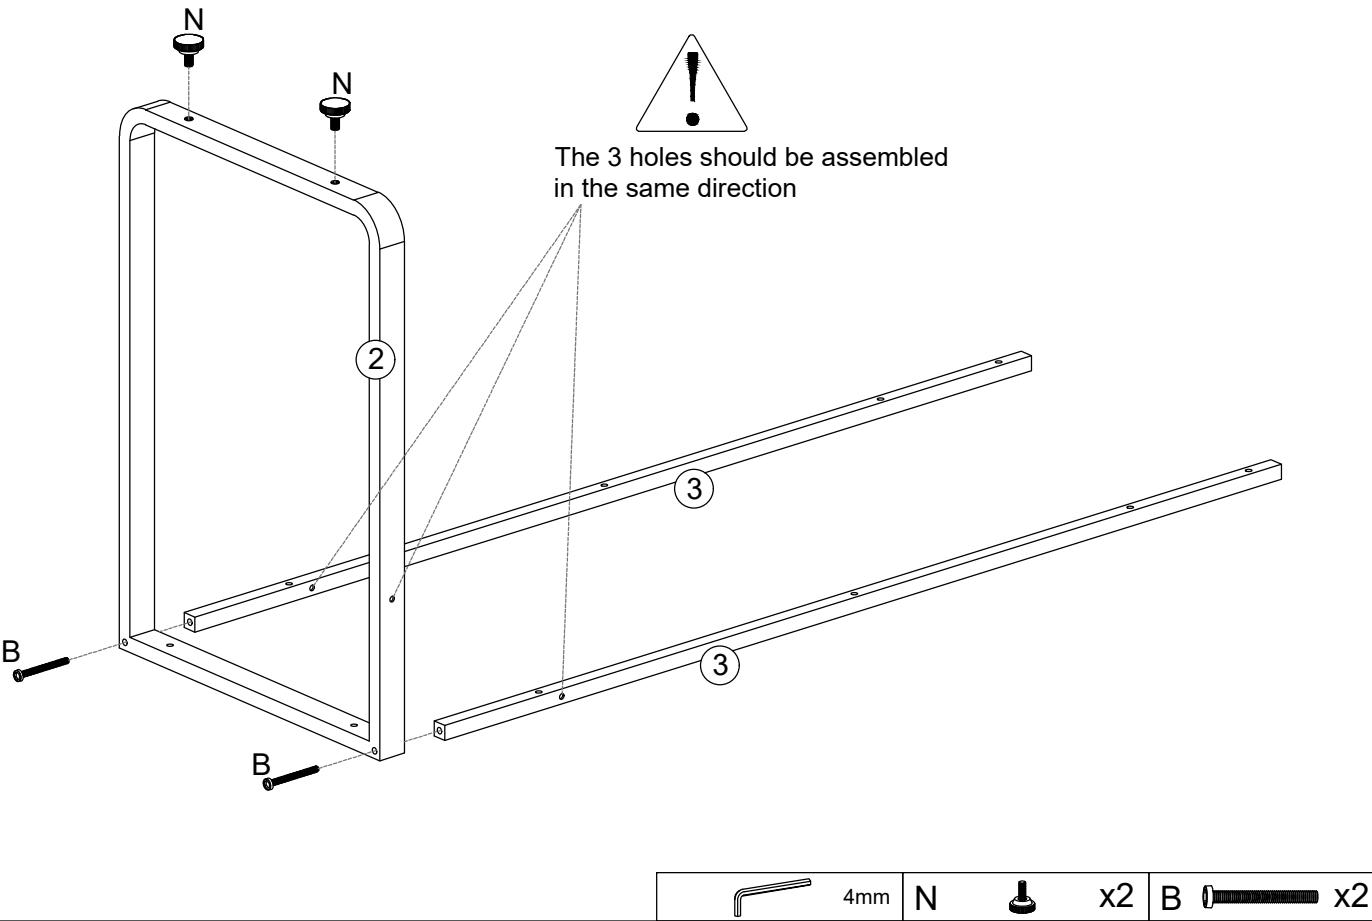
STEP 9



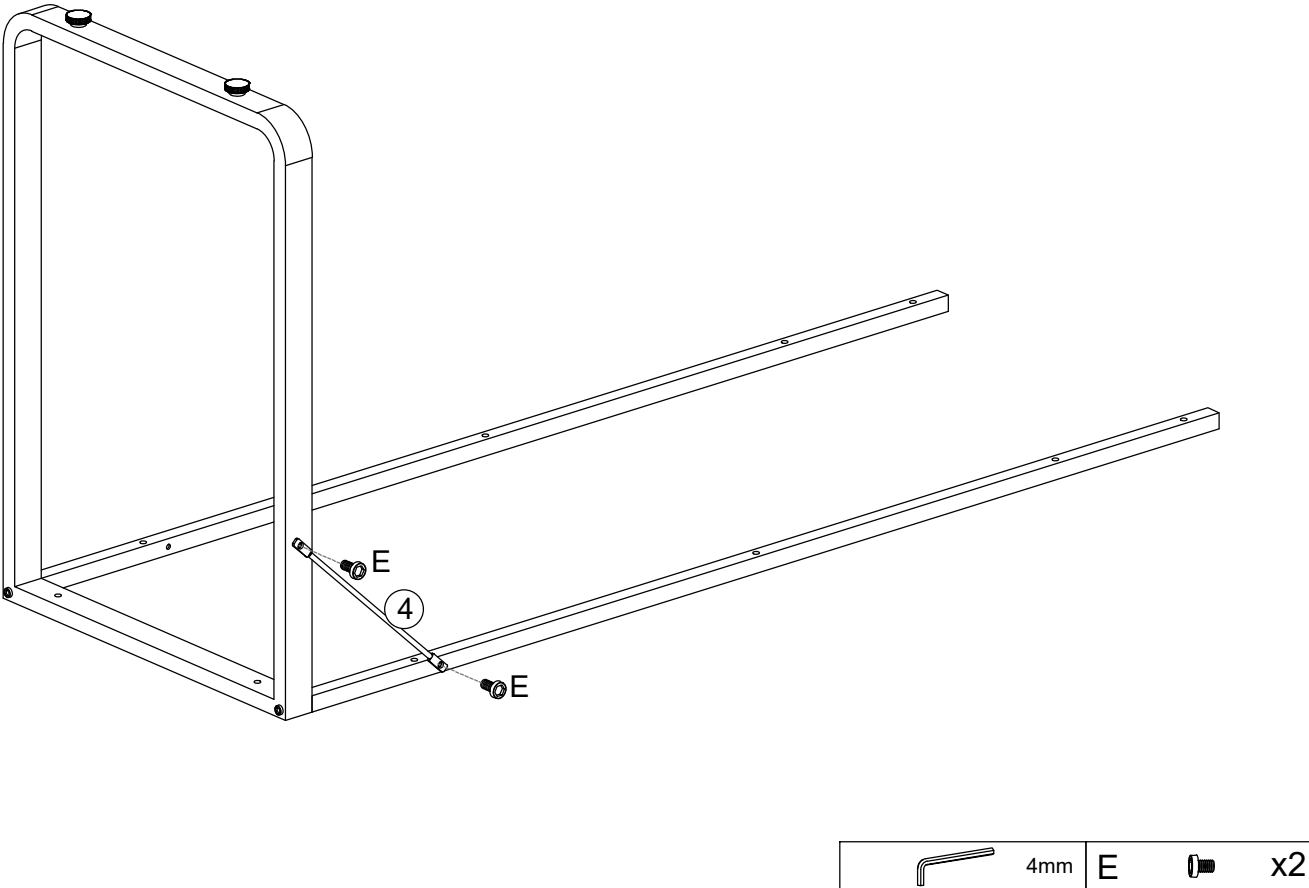STEP 10




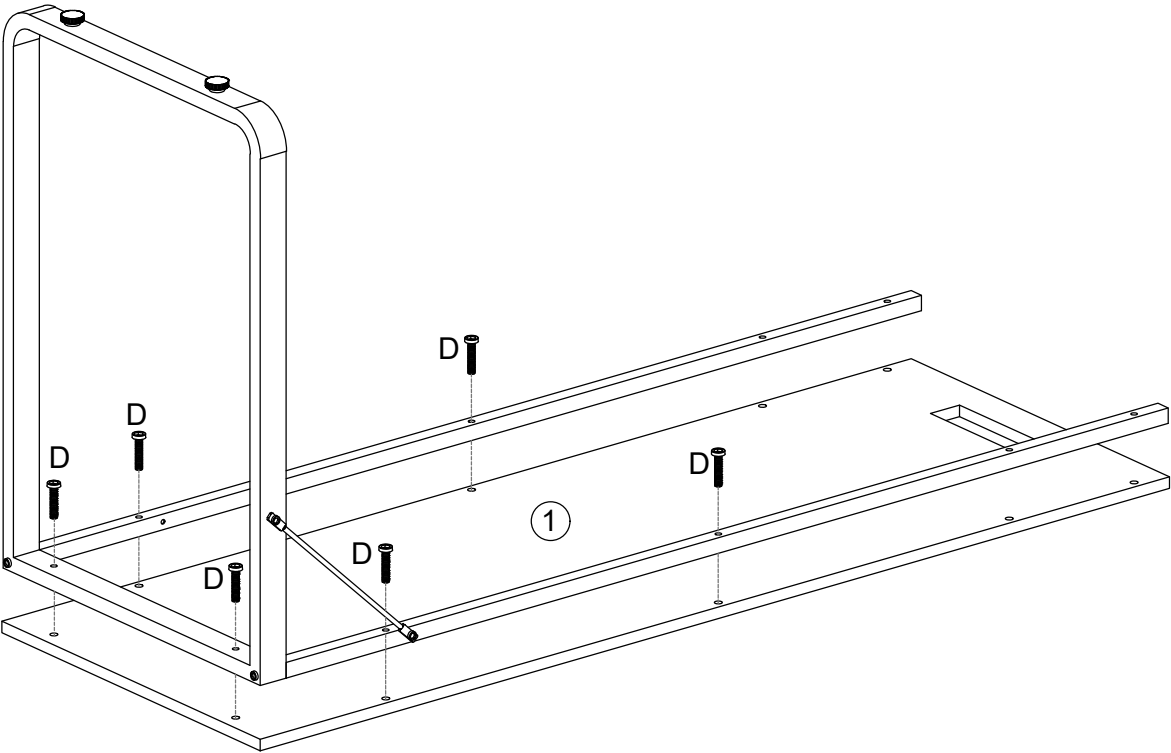STEP 11



	4mm	D		x6
---	-----	---	---	----

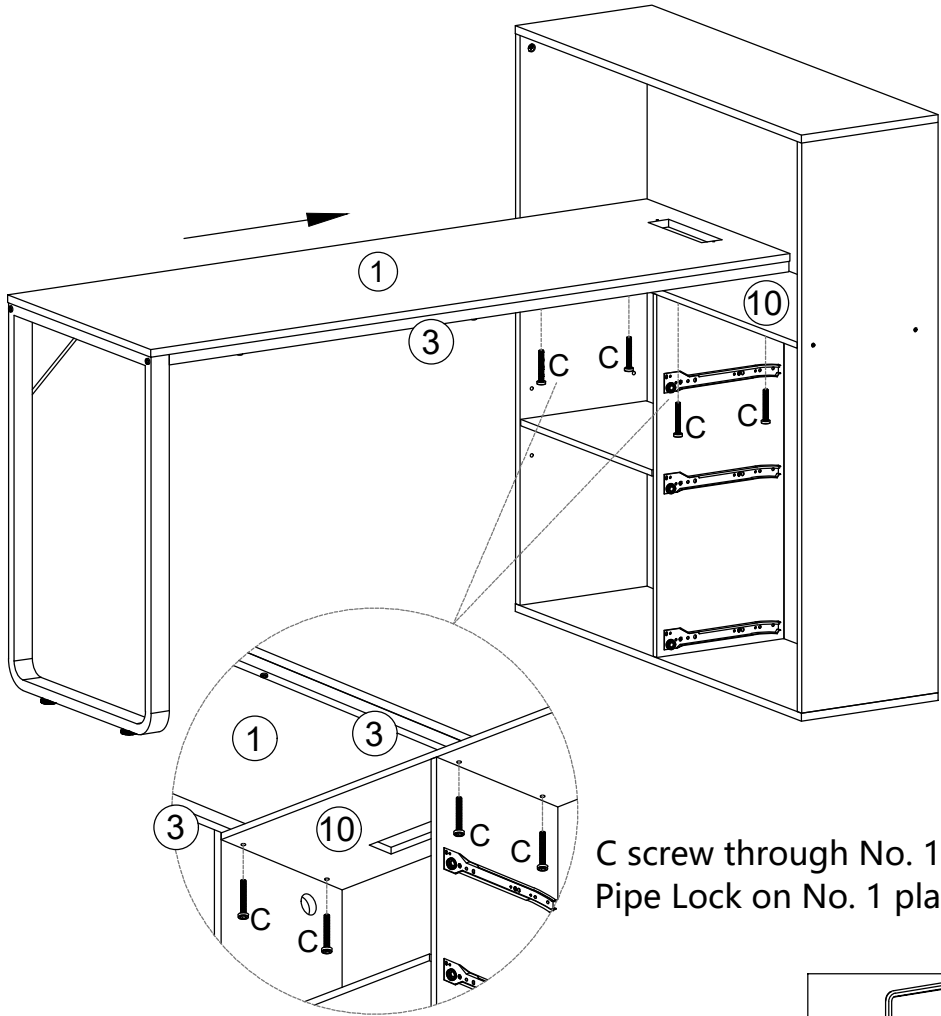
STEP 12



C screw through No. 10 plate and No. 3 Iron Pipe Lock on No. 1 plate


	4mm	C		x4
---	-----	---	---	----

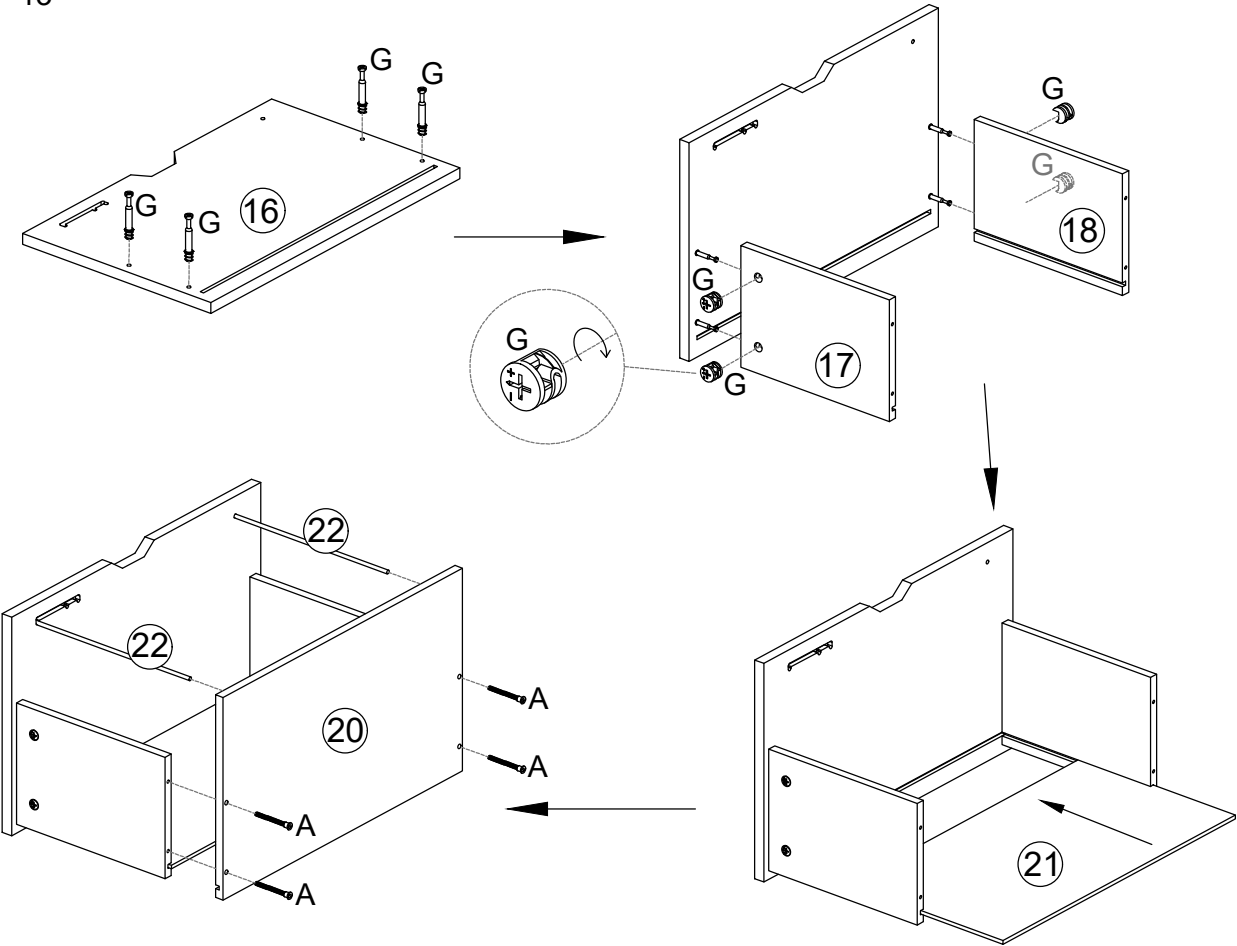
STEP 13




	3mm		G 	x4	A 	x4
---	-----	---	---	----	---	----

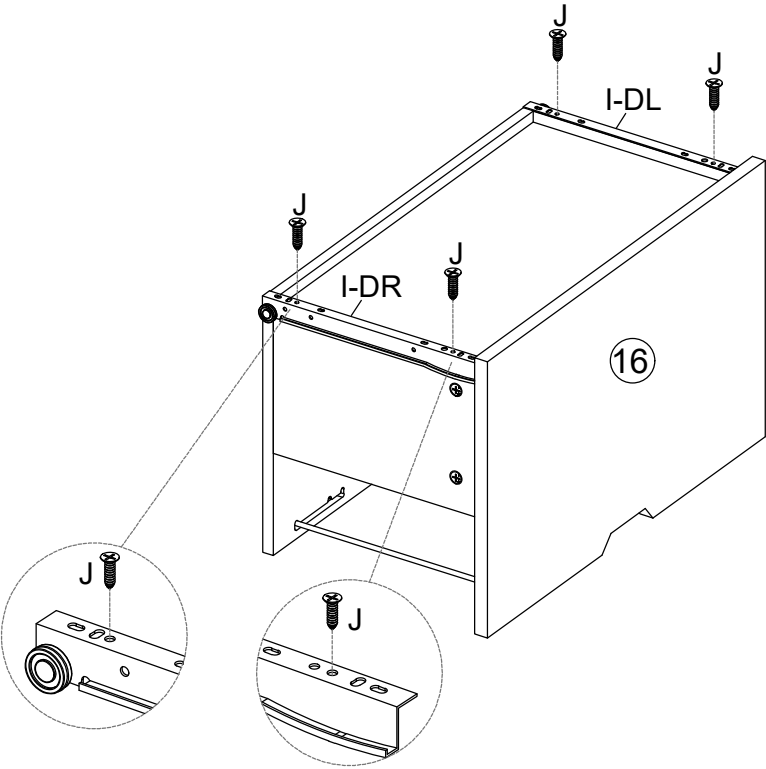STEP 14




	J 	x4	I 	x1
---	---	----	---	----

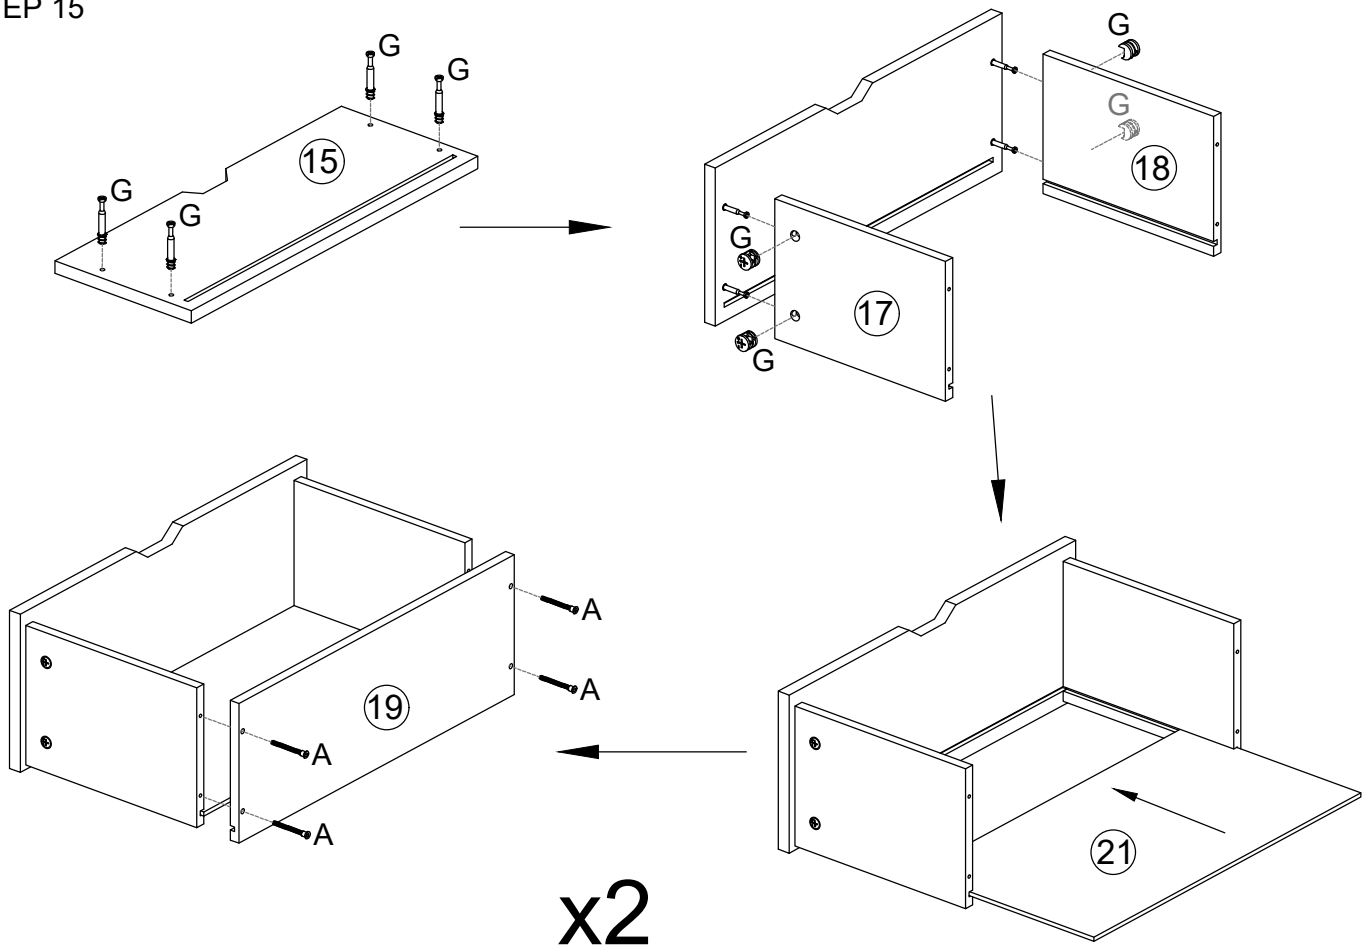STEP 15




	3mm		G	x8	A	x8
--	-----	--	---	----	---	----

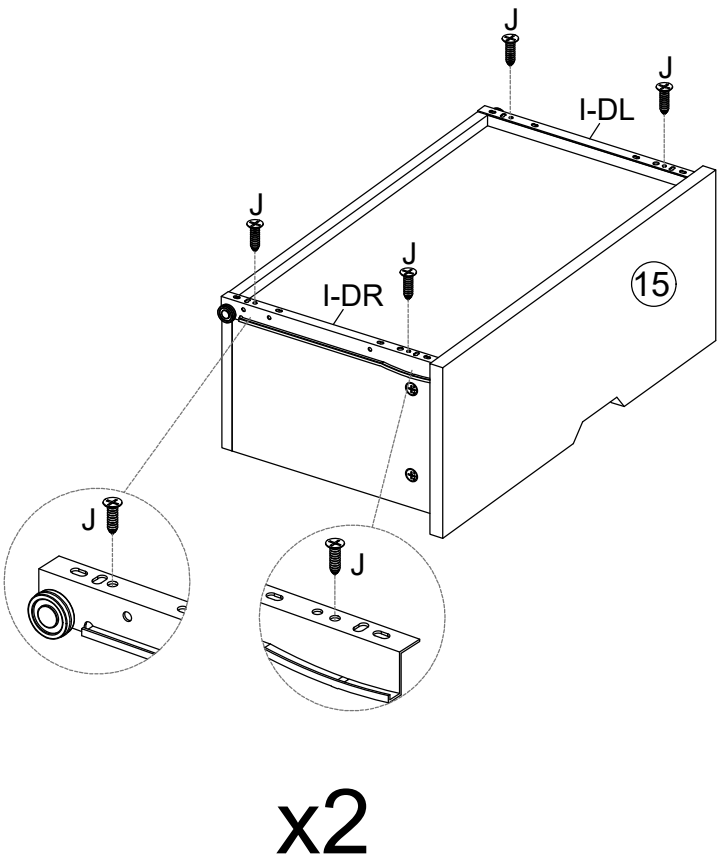STEP 16




	J	x8	I	x2
--	---	----	---	----

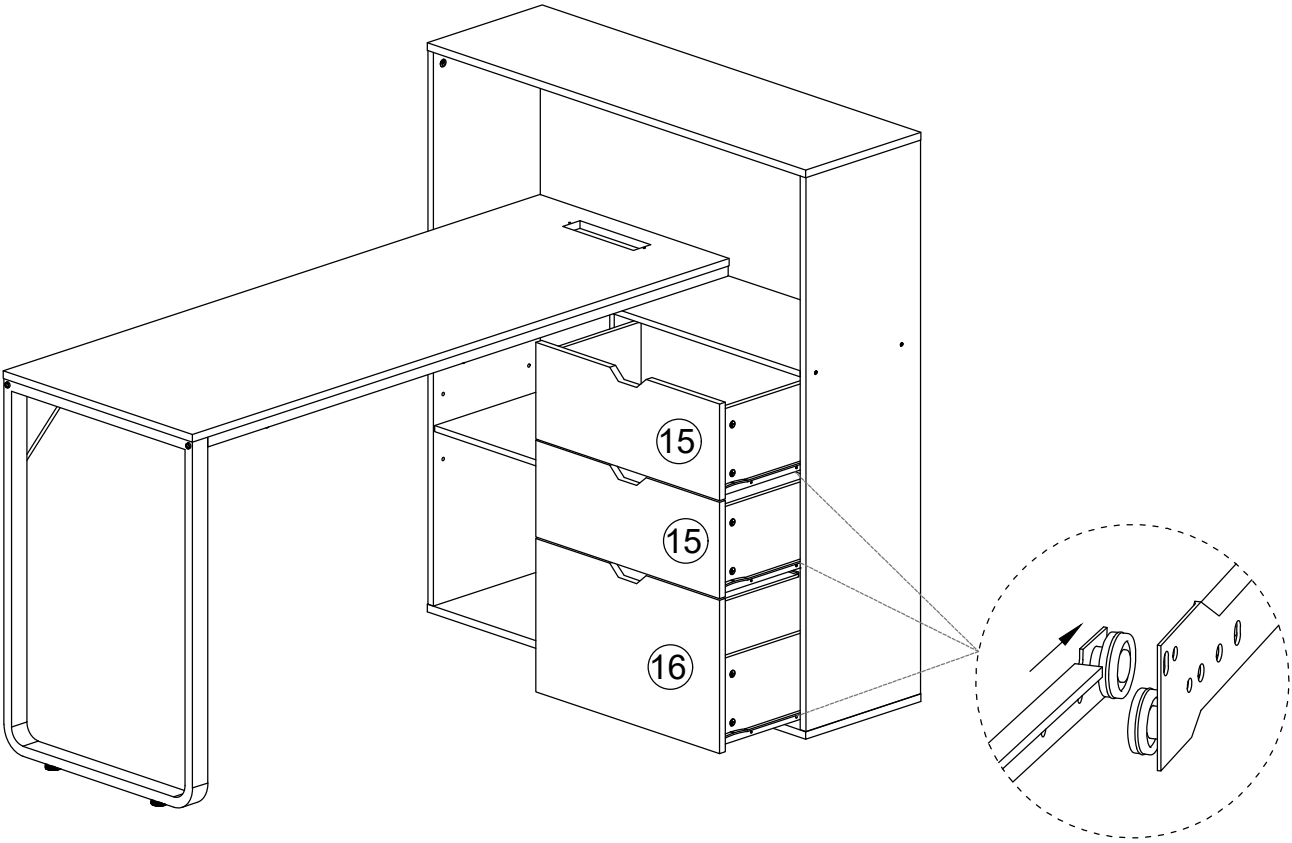STEP 17



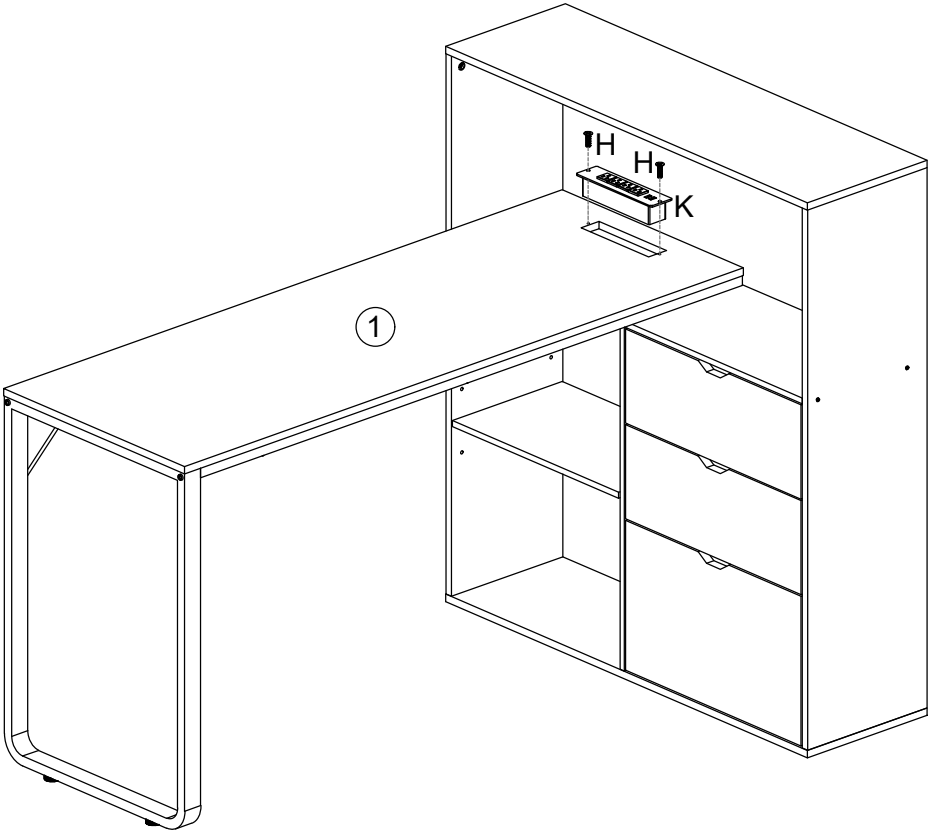
STEP 18



	K		x1	H		x2
---	---	---	----	---	---	----

STEP 19

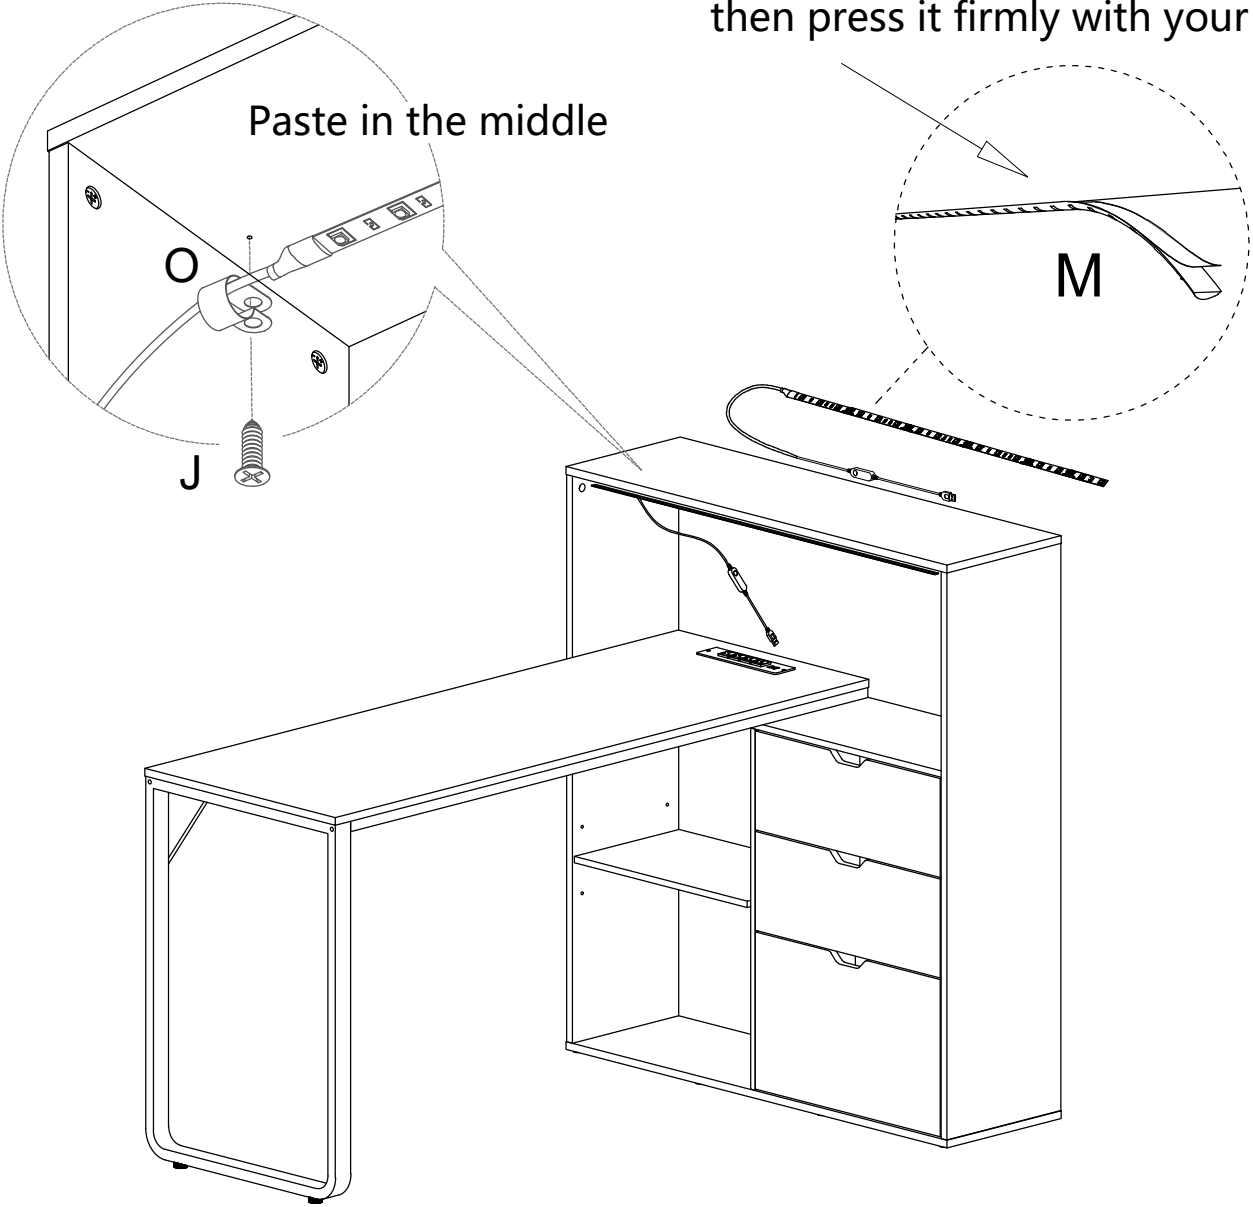Tear off the tape and apply it to the bottom plate,
then press it firmly with your hand



Installation Completed

O		x1
J		x1
M		x1

