



# Tahoe / Suburban / Yukon / Denali & XL

Floor Liner trim patterns vary per vehicle make and model.



## SMART-TRIM TECHNOLOGY

Our liners feature a unique technology, allowing you to achieve a perfect fit seamlessly. Embrace Smart Trim for a quick, user-friendly, and hassle-free trimming experience.




## STEP ONE

Remove Floor Liner from box and allow it to lay out in a warm area. This allows the liner to regain its custom shape after being rolled up for shipping.



## STEP TWO

Trim as shown by using sharp scissors or a carpenter's knife to cut along crevice in liner to remove area at top for vehicles with front bench seat.

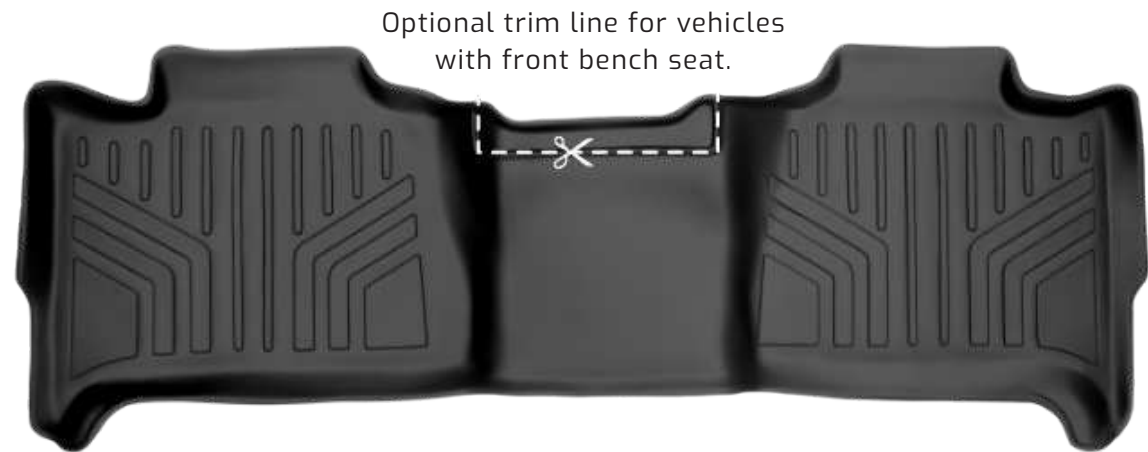

Optional trim line for vehicles with front bench seat.