

# BED


## FULL/QUEEN/E-KING SIZE

### ASSEMBLY INSTRUCTIONS

#### PARTS AND FITTING PACKAGING DETAIL


##### BOX #1

- A. HEADBOARD 1 PC
- B. HEADBOARD LEG - LEFT 1 PC
- C. HEADBOARD LEG - RIGHT 1 PC
- D. FOOTBOARD 1 PC
- HARDWARE BOX\*

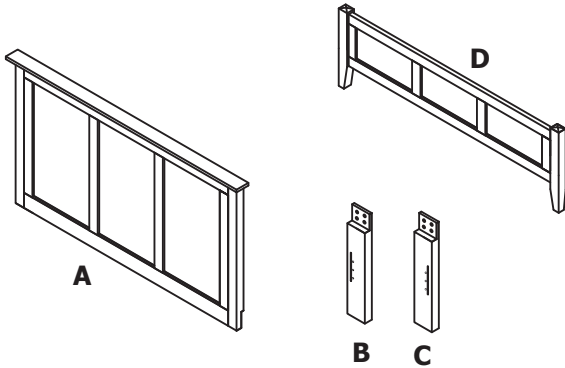


##### BOX #2

- E. LEFT SIDERAIL 1 PC
- F. RIGHT SIDERAIL 1 PC
- G. CENTER SLAT 1 PC
- H. LONG LEG SUPPORTS 4 PCS
- HARDWARE BOX\*

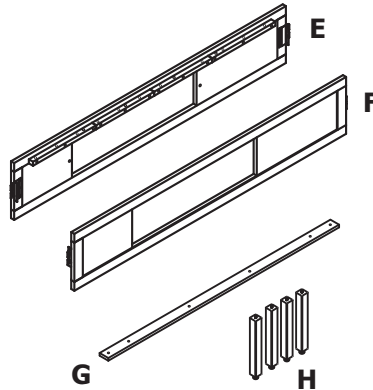


##### BOX #3

- I. STORAGES 2 PCS
- J. STORAGE FEET 12 PCS

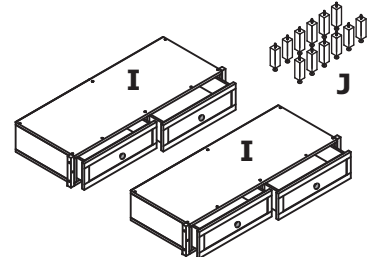


##### BOX #4





- K. BED SLATS 12 PCS

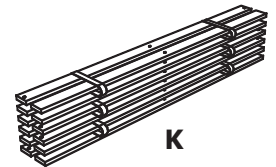

#### PARAGON STORAGE BED ASSEMBLED

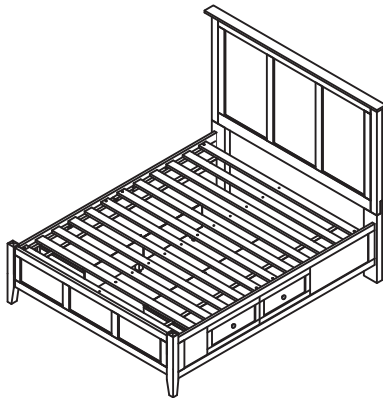





#### HARDWARE\* PACKED IN BOX #2


|   |                          |           |   |                       |           |
|---|--------------------------|-----------|---|-----------------------|-----------|
| 1   | ROUND HEAD<br>SCREW 15MM | 12<br>PCS | 2   | WOOD SCREW<br>Ø8X30MM | 8<br>PCS  |
|  |                          |           |  |                       |           |
| 3   | ALLEN KEY                | 1<br>PC   | 4   | ALLEN BOLT<br>40MM    | 18<br>PCS |
|  |                          |           |  |                       |           |

**YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE**

#### HARDWARE\* PACKED IN BOX #1

|   |                     |          |   |                  |          |   |        |          |   |           |         |
|---|---------------------|----------|---|------------------|----------|---|--------|----------|---|-----------|---------|
| 1   | ALLEN BOLTS<br>35MM | 8<br>PCS | 2   | SPRING<br>WASHER | 8<br>PCS | 3   | WASHER | 8<br>PCS | 4   | ALLEN KEY | 1<br>PC |
|  |                     |          |  |                  |          |  |        |          |  |           |         |



**TOOL REQUIRED :**  
PHILLIPS HEAD SCREW  
DRIVER (NOT PROVIDED)

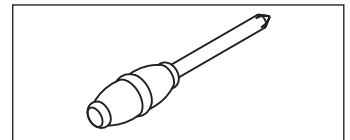

#### STEP 1 :


FOLLOW THE ILLUSTRATION, PUT THE ALLEN BOLT IN THE PREDILLED HOLE ARE TURNING TO UNIFY THE HEADBOARD LEG (B/C) TO THE HEADBOARD PANEL (A)

**\*FOR STEP 1 USE HARDWARE PACKED IN BOX #1**

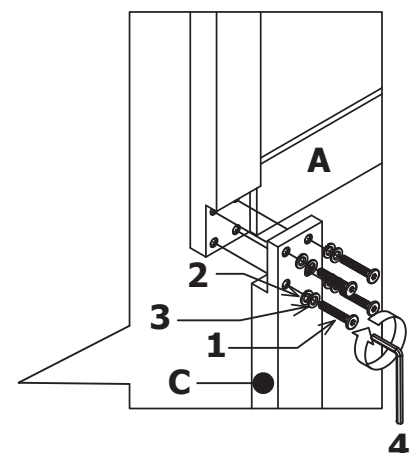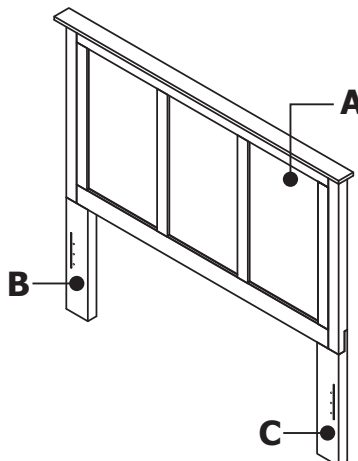


**STEP 2 :**


FIX LEFT SIDERAIL (E) TO THE HEADBOARD ASSY (A/B/C) BY SLIDING IN THE HOOK INSTALLED AT THE END OF LEFT SIDERAIL (E) TO THE HEADBOARD ASSY (A/B/C), AND PUSH DOWN THE LEFT SIDERAIL (E) TO SECURE THE CONNECTION.

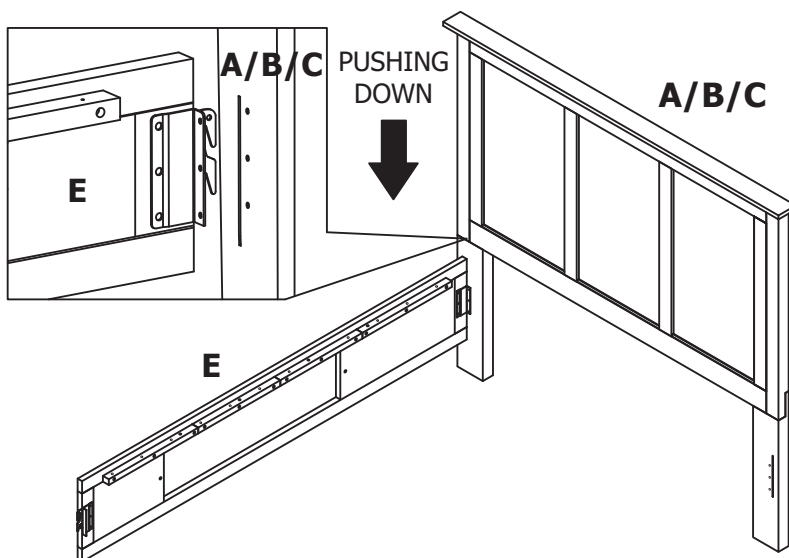**STEP 3 :**


FIX THE OTHER END OF LEFT SIDERAIL (E) TO THE FOOTBOARD (D).

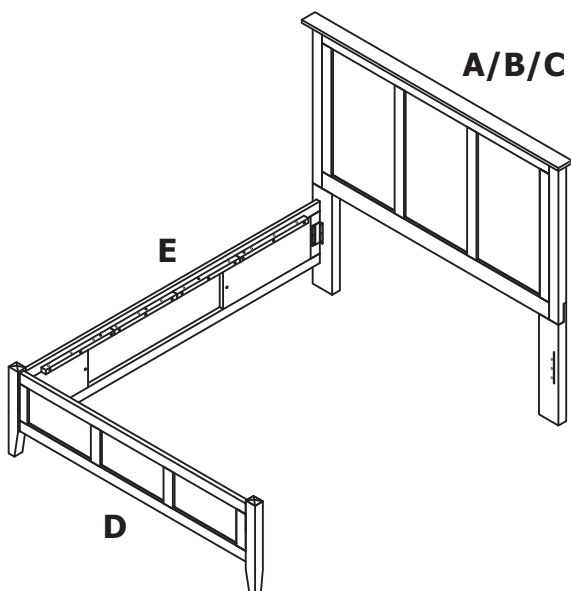**STEP 4 :**


FIX RIGHT SIDERAIL (F) TO THE HEADBOARD ASSY (A/B/C) AND FOOTBOARD (D).

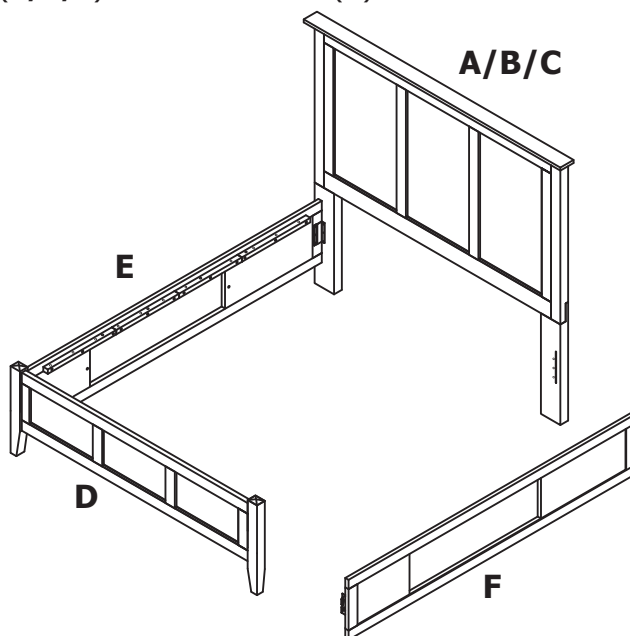**STEP 5 :**

SECURE BOTH SIDERAILS (E,F) TO THE HEADBOARD ASSY (A/B/C) AND FOOTBOARD (D) USING ROUND HEAD SCREWS (1) AS SHOWN IN THE ILLUSTRATION.

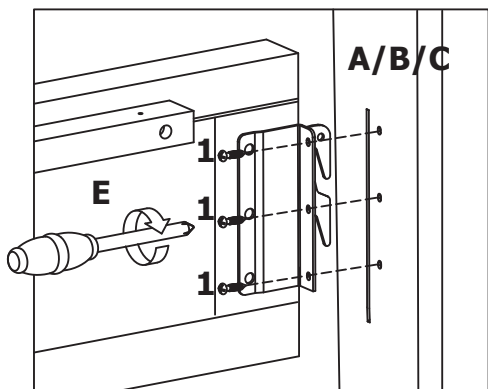
**STEP 6 :**

REMOVE PLASTIC COVER FROM STORAGE FEET (J) BOLT. FOLLOW THE ILLUSTRATION TO FIX STORAGE FEET (J) TO STORAGE (I).

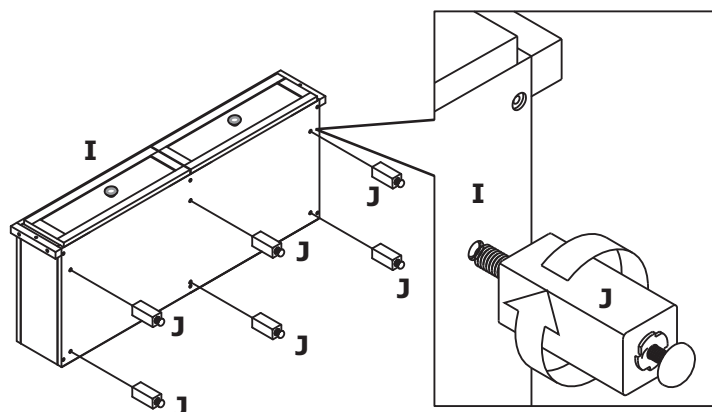

### STEP 7 :


FOLLOW THE ILLUSTRATION TO FIX STORAGE (I) TO LEFT SIDERAIL (E) USING ALLEN BOLTS (4). USE ALLEN KEY (3) TO TIGHTEN THE BOLTS.

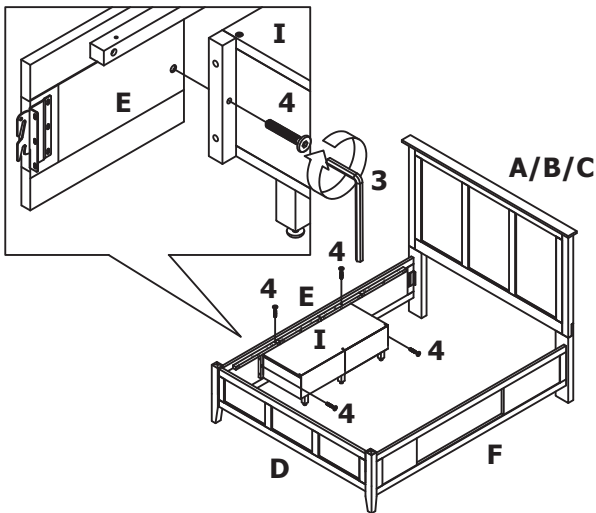

### STEP 8 :


FIX STORAGE (I) TO RIGHT SIDERAIL (F) USING ALLEN BOLTS (4).

TURN LEVELER UNDERNEATH STORAGE FEET (J) TO ADJUST THE STORAGE (I) LEVEL AS SHOWN ON ILLUSTRATION.

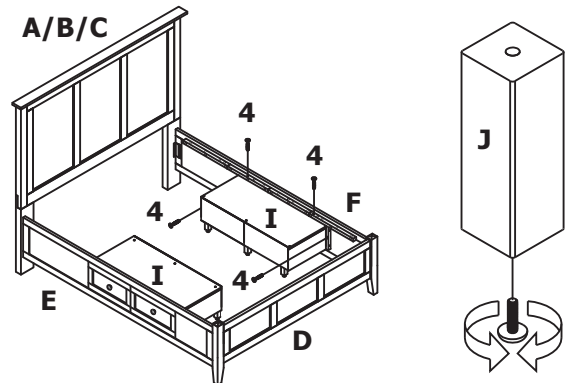


### STEP 9 :

ARRANGE CENTER SLAT (G) SO THAT T-NUTS ARE FACING THE FLOOR. SLIDE ALLEN BOLTS (4) FROM TOP OF CENTER SLAT (G) INTO THE 2ND, 5TH, 6TH, AND 9TH PREDRILLED HOLES. FIX LONG LEG SUPPORT (H) TO CENTER SLAT (G) USING ALLEN BOLTS (4) AND ALLEN KEY (3).

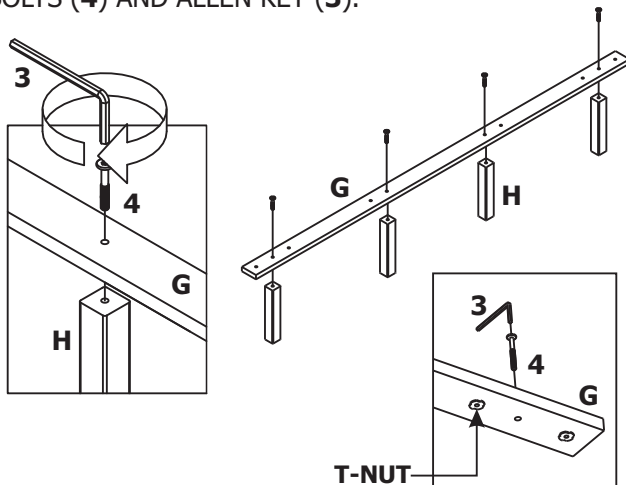


### STEP 10 :

FOLLOW THE ILLUSTRATION TO SPREAD OUT ALL THE BED SLATS (K). SLIDE CENTER SLAT (G) UNDER BED SLATS (K). SLIDE ALLEN BOLTS (4) FROM TOP OF BED SLATS (K) THROUGH PRE-DRILLED HOLES ON 1ST, 2ND, 5TH, 8TH, 11TH AND 12TH BED SLATS. TIGHTEN ALLEN BOLTS (4) WITH ALLEN KEY (3) TO SECURE BED SLATS (K) TO CENTER SLAT (G).

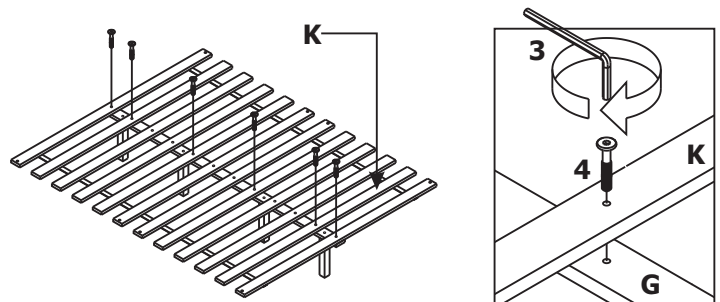

### STEP 11 :

FOLLOW THE ILLUSTRATION TO PLACE THE BED SLATS (K) ON THE BED FRAME. SPREAD BED SLATS (K) ON BED FRAME. FIX 1ST, 6TH, 7TH, AND 12TH BED SLATS TO BED FRAME USING WOOD SCREWS (2). USE PILOT HOLES ON SIDERAILS (E,F) AS REFERENCE FOR CORRECT PLACEMENT.

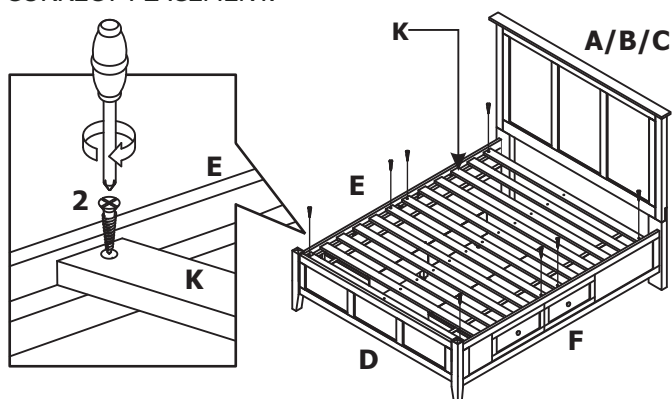


### INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM  
LOCATE LEVELERS UNDER EACH  
CENTER LEG (H).

TURN COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG  
IS APPLYING EQUAL UPWARD  
PRESSURE ON THE CENTER SLAT.

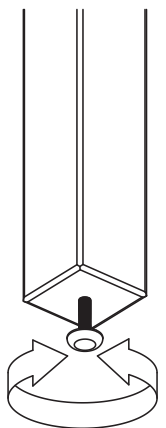

### MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.