







MAKE A DIFFERENCE










Tubular Doors

BXG.8916-1S
(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS

	Front Doors	Rear Doors
Driver Side		
Passenger Side		

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
4	Button Bolt	M8×45		12	Flat Washer	M8×20×1	
16	Button Bolt	M8×20		16	Flange Lock Nut	M8	
4	Button Bolt	M8×20		4	Nylon Lock Nut	M8	
16	Split Lock Washer	D8		4	Nylon Round Spacer	27×13.5×14	
8	Split Lock Washer	D8		4	Nylon Round Spacer	27×13.5×8	
16	Flat Washer	M8×20×1.5					

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 5mm Hex Bit Socket

◆ 13mm Wrench

To view online instruction, please scan the QR code.



3 INSTALLATION INSTRUCTION

Step 1

Lower the door window completely and fold side mirrors fully forward until securely locked to ensure safe removal.




Step 2

Fully open the door, find the wire connector, and pull it straight out while keeping the connector cover open.



Step 3

Remove the upper and lower hinge bolts. Lift the door straight up to detach it from the vehicle. Repeat this step for the other doors.

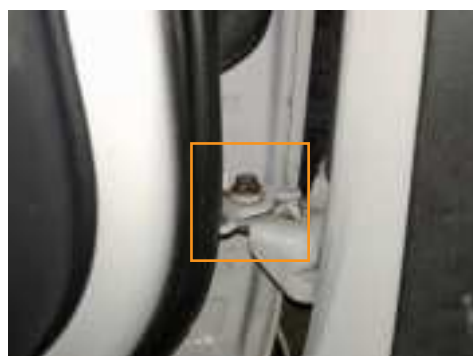

Step 4


Distinguish the installation position of the hinge according to the figure below.



Step 5

(Driver Side Front Door) Secure the door hinges to the door. **Do not fully tighten to allow adjustability.** Repeat this step for the other doors.

- (4) M8×20 Bottom Bolts
- (4) D8 Split Lock Washers
- (4) M8×20×1.5 Flat Washers(Black)
- (4) M8 Flange Hex Lock Nuts

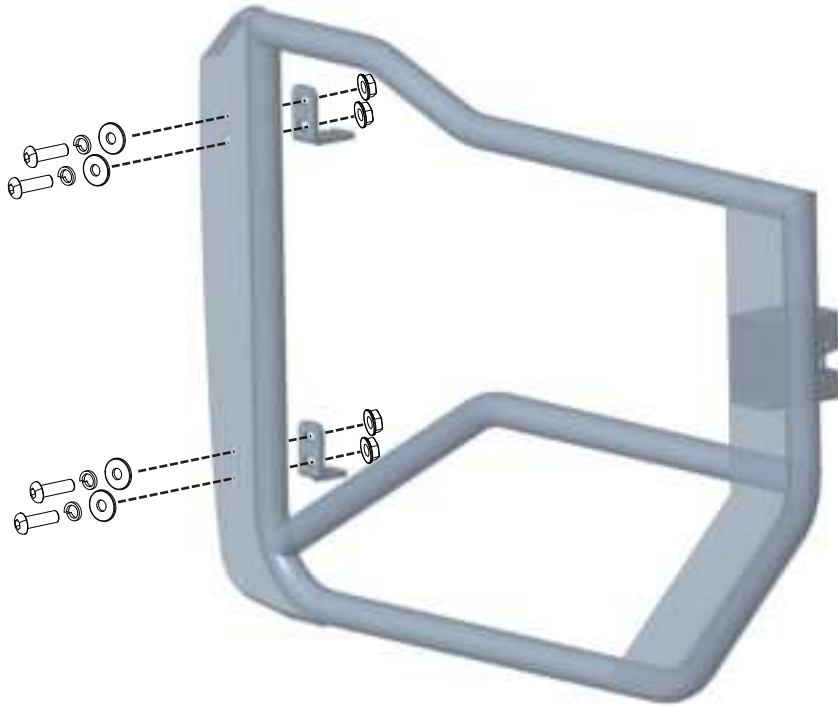**Step 6**

Secure the tubular door to the vehicle by aligning and putting into the hinges. Close the door and adjust the door to the desired location. **Tighten all bolts.**

•Upper Position

- (1) 27*13.5*14 nylon round spacer
- (1) M8×45 Bottom Bolts
- (2) M8×20×1 Flat Washers
- (1) D8 Split Lock Washers
- (1) M8 Nylon Lock Nuts


•Lower Position

- (1) 27*13.5*8 nylon round spacer
- (1) M8×20 Bottom Bolts
- (1) M8×20×1 Flat Washers
- (1) D8 Split Lock Washers

Upper



Lower

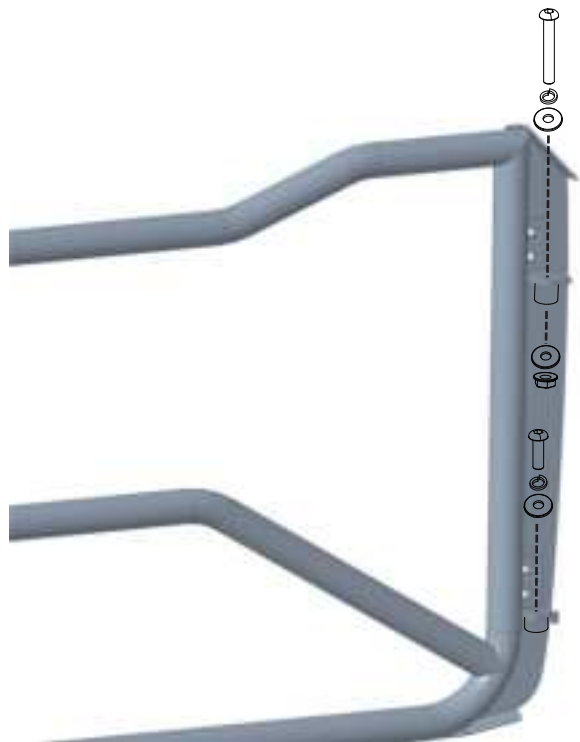

Step 7

If you hear abnormal noises from the door lock while driving, loosen the M6 screws and adjust the latch position.

**Step 8**

Repeat all steps on the other doors of the vehicle.

Step 9

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

