




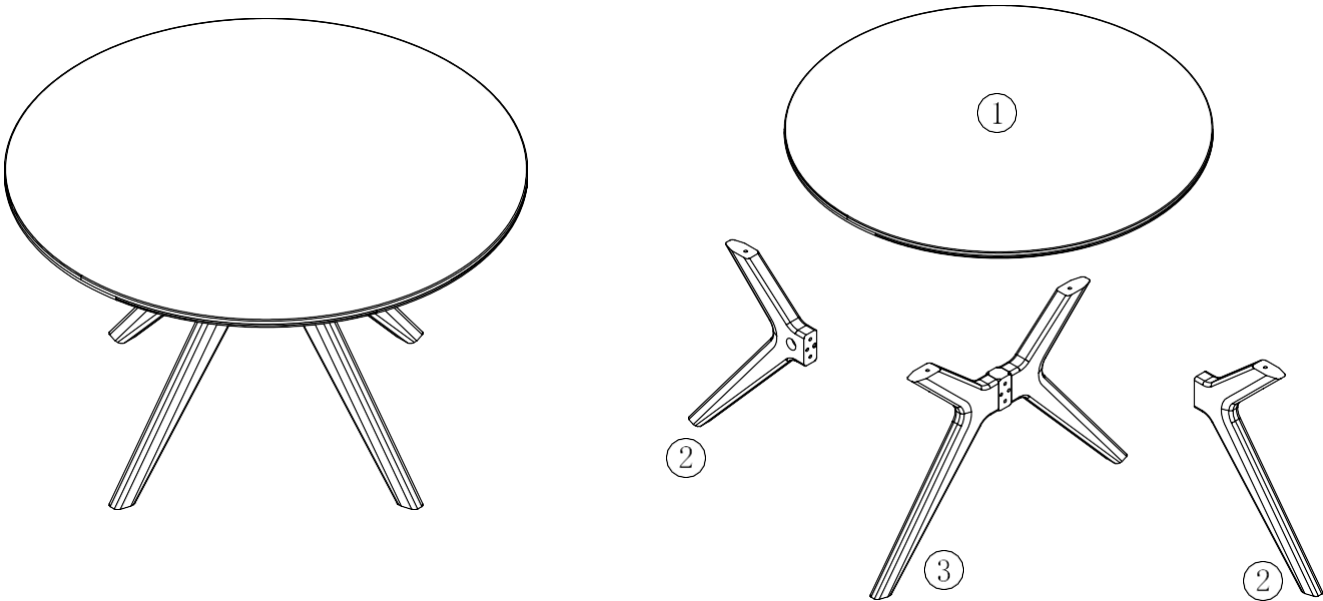

				
I. Allen Key =1	B.M8*70=4	C. Ø8=6	D. Ø8=6	E. Spanner=1
				
F. M8*140=2	G. M8 =2	H. M8 =2	I. M10*40 =4	



Step 1: Attach the legs first without fully tightening the bolts.

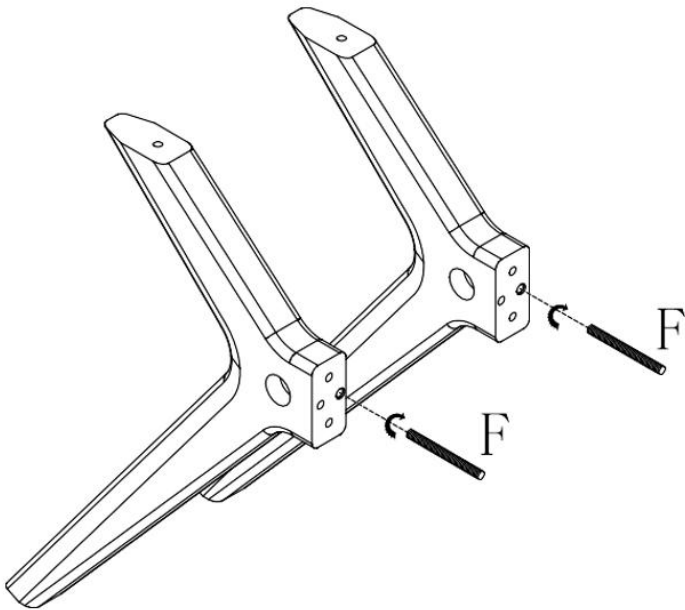