


WF42H5000AW


Samsung Front-Load Washer

SAMSUNG


Installing Options




Stacked



Side by Side

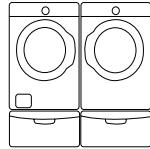

On Pedestals




Stacked Depth




Installing Your Washer

Alcove or closet installation

A. Recessed Area

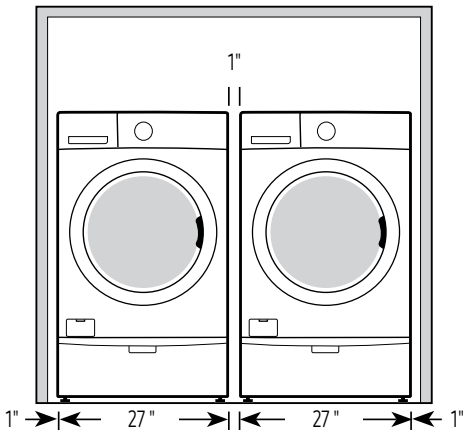

B. Side View – Closet or Confined Area

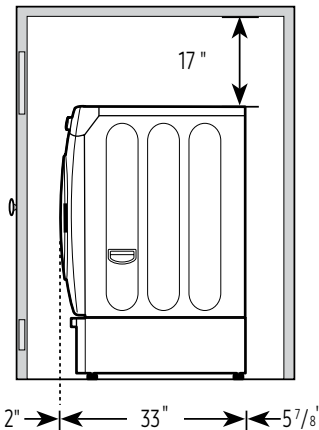

MINIMUM CLEARANCE FOR CLOSET AND ALCOVE INSTALLATIONS:

Sides – 1"

Rear – 5 7/8"




Top – 17"

Closet Front – 2"


If the washer and dryer are installed together, the closet front must have at least a 72 in. unobstructed air opening. Your washer alone does not require a specific air opening.

Dimensions


With optional pedestal base or stacking kit

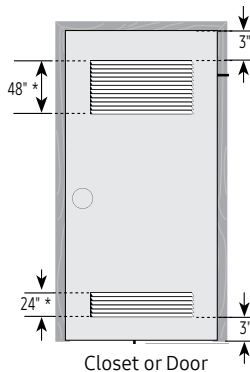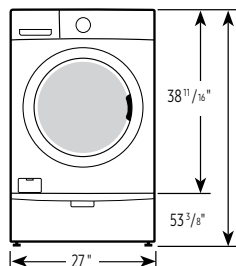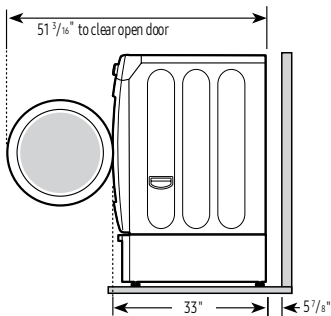

Closet or Door

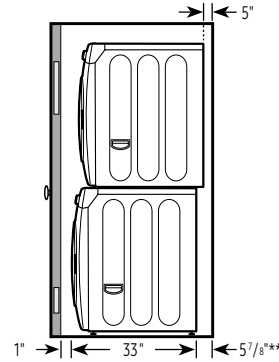

Required Dimensions for Installation with Stacking Kit

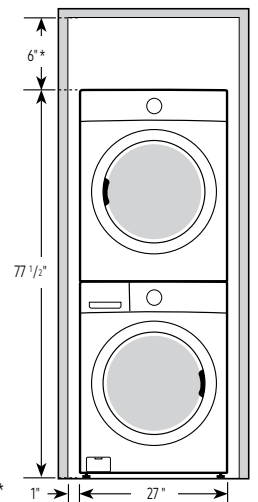

*Required Spacing.

**External exhaust elbow requires additional space.