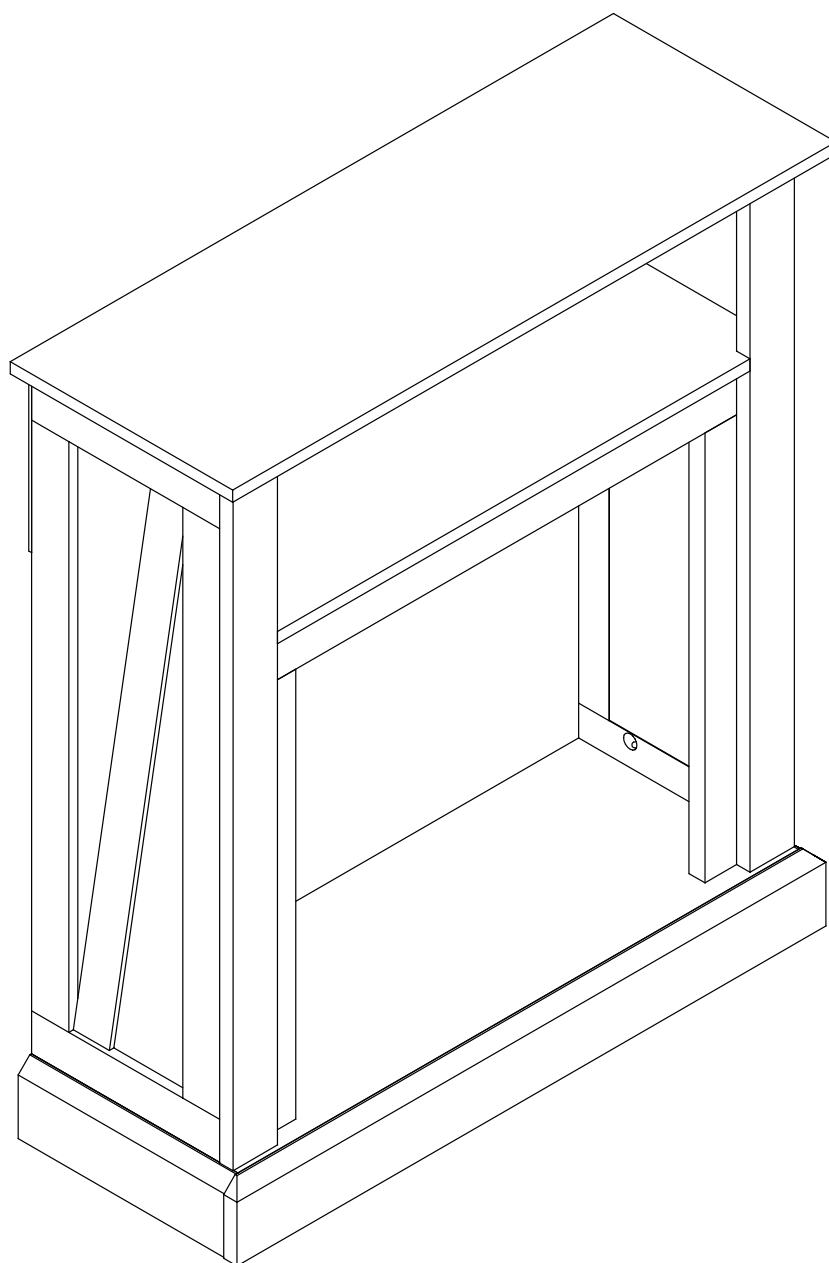



***ROVSUN***

**HA231-30**


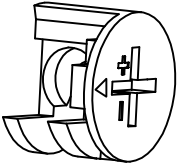
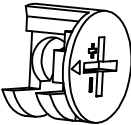




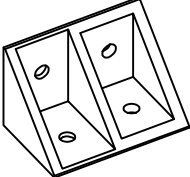






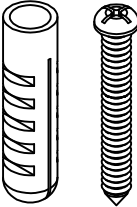

# **INSTRUCTION MANUAL**

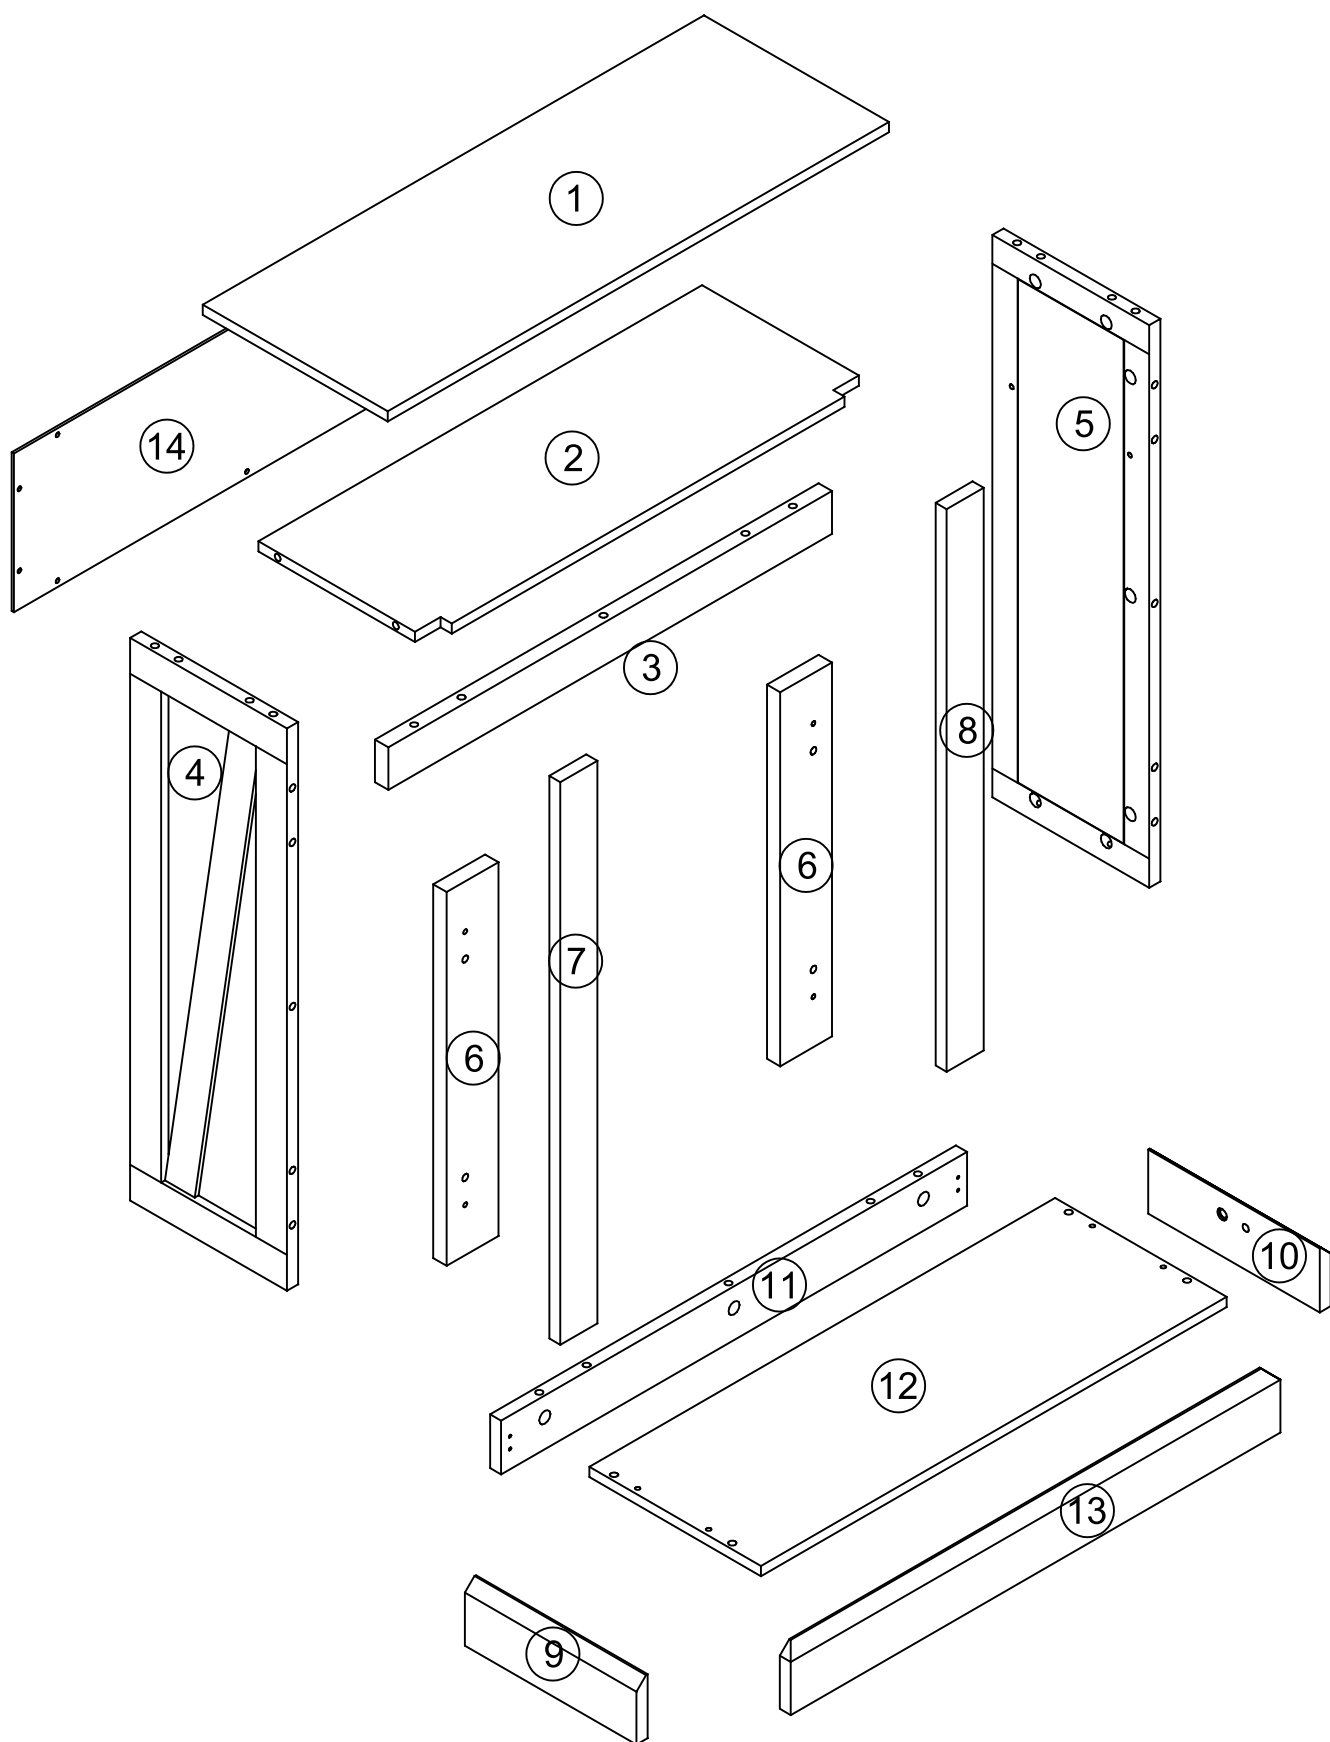


MADE IN CHINA



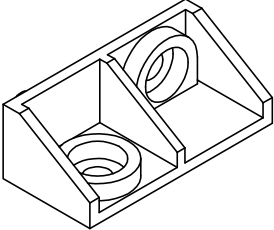

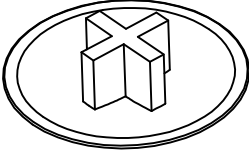

PACKAGE CONTENT (A)		
CODR	DESCRIPTION	QTY
1	Panel assembly	1
2	Fixed laminate	1
3	Middle cross bar	1
4	Left side panel	1
5	Right side panel	1
6	Middle vertical bar	2
7	Left side bar	1
8	Right side bar	1
9	Left standing water	1
10	Right standing water	1
11	Rear standing water	1
12	floor	1
13	Front standing water	1
14	Back plate	1

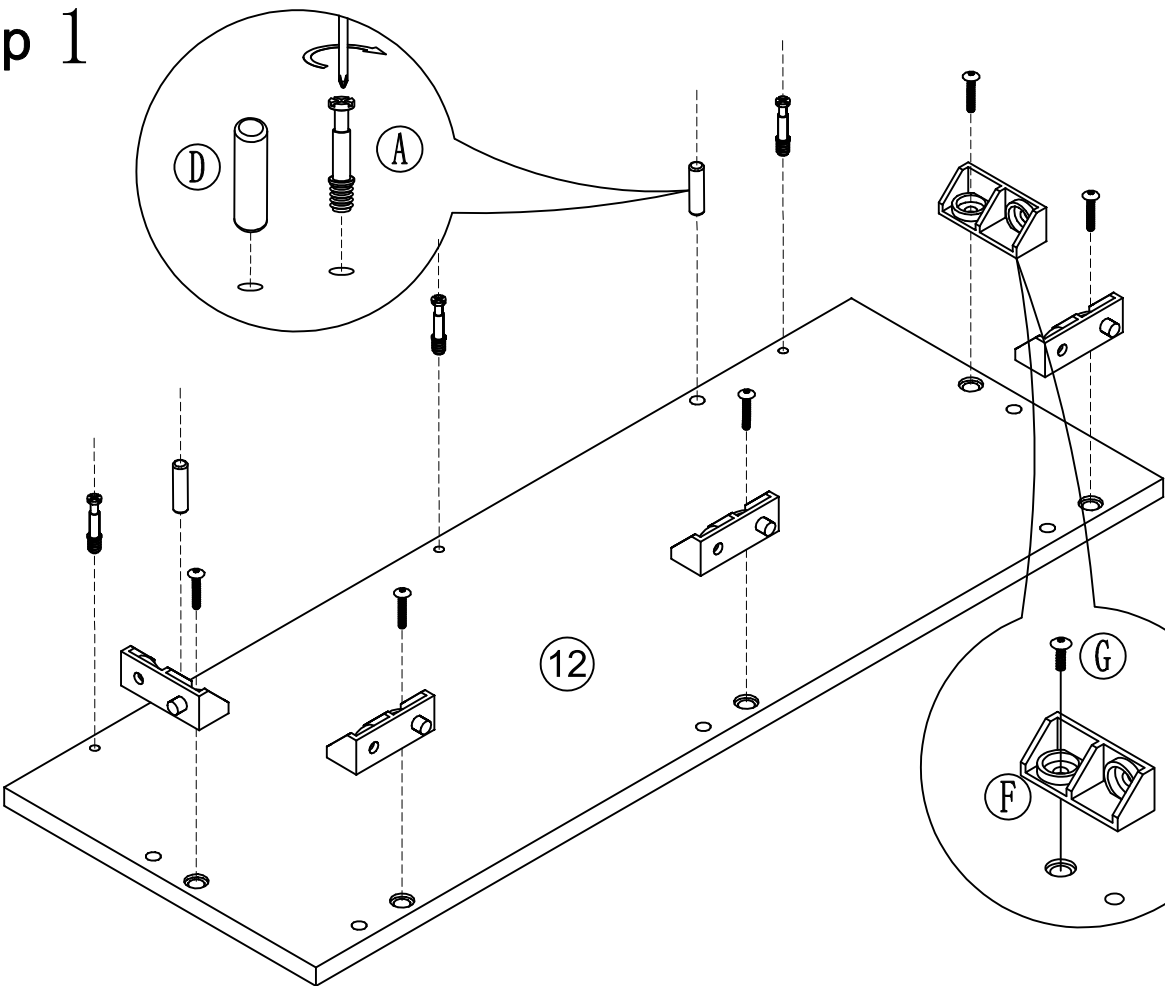
<div data-bbox="370 123 427 179">(A)</div>  <div data-bbox="196 450 391 500">24X+1X</div>	<div data-bbox="740 123 797 179">(B)</div> <div data-bbox="737 192 810 229">Ø15</div>  <div data-bbox="570 450 764 500">20X+1X</div>	<div data-bbox="1109 123 1166 179">(C)</div> <div data-bbox="1105 192 1179 229">Ø12</div>  <div data-bbox="976 450 1040 500">4X</div>	<div data-bbox="1474 123 1531 179">(D)</div> <div data-bbox="1292 192 1463 229">Ø8x30mm</div>  <div data-bbox="1292 450 1479 500">16X+1X</div>
<div data-bbox="370 539 427 594">(E)</div> <div data-bbox="185 608 358 645">Ø8x20mm</div>  <div data-bbox="220 867 285 918">4X</div>	<div data-bbox="751 539 808 594">(F)</div>  <div data-bbox="605 867 670 918">5X</div>	<div data-bbox="1109 539 1166 594">(G)</div>  <div data-bbox="979 851 1073 902">10X</div>	<div data-bbox="1466 539 1523 594">(H)</div>  <div data-bbox="1333 867 1398 918">4X</div>
<div data-bbox="370 955 427 1010">(I)</div>  <div data-bbox="237 1281 302 1331">2X</div>	<div data-bbox="751 955 808 1010">(J)</div>  <div data-bbox="553 1281 748 1331">20X+1X</div>	<div data-bbox="1109 955 1166 1010">(K)</div>  <div data-bbox="914 1281 1105 1331">11X+1X</div>	<div data-bbox="1466 955 1523 1010">(L)</div>  <div data-bbox="1333 1281 1398 1331">4X</div>
<div data-bbox="370 1370 427 1425">(M)</div>  <div data-bbox="237 1694 302 1744">6X</div>	<div data-bbox="751 1370 808 1425">(N)</div>  <div data-bbox="553 1694 716 1744">1X+2X</div>	<div data-bbox="1109 1370 1166 1425">(O)</div>  <div data-bbox="927 1694 1089 1744">1X+1X</div>	



Step 1



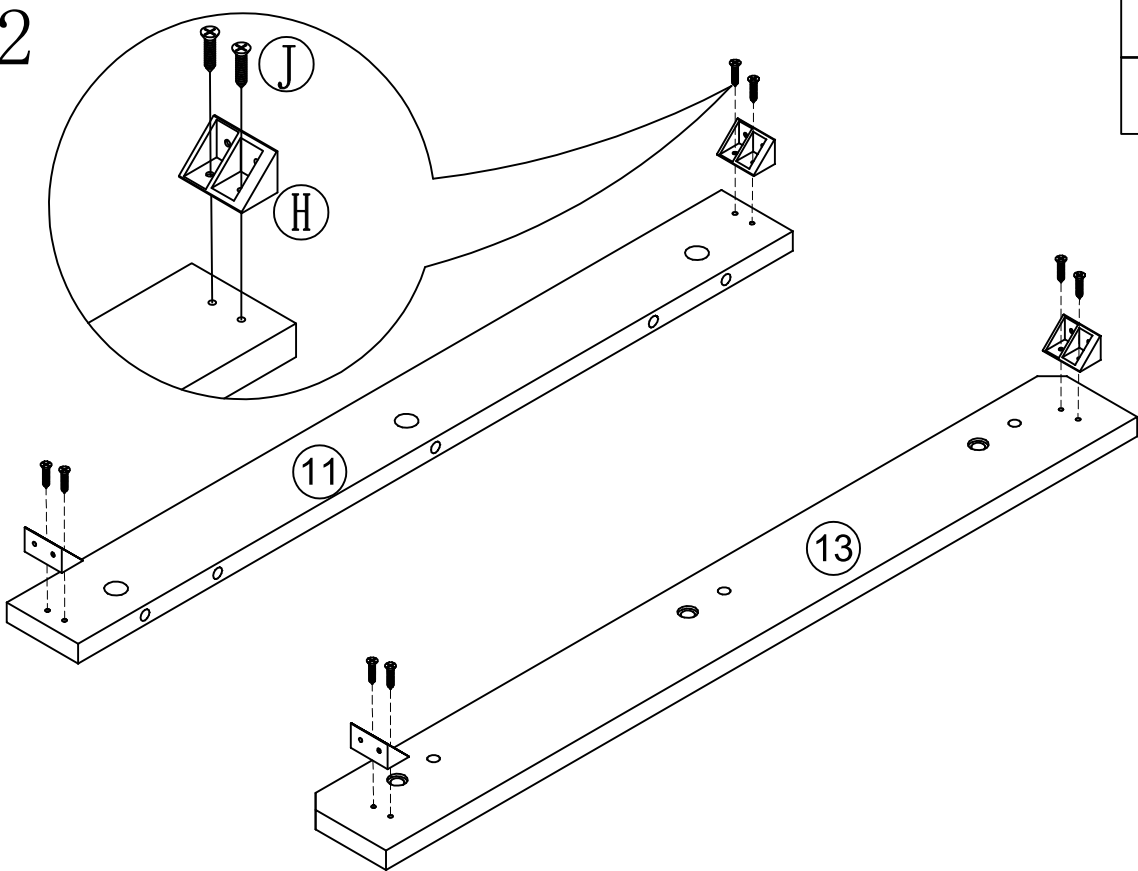

A		3
D		2
F		5
G		5


Step 2



H		4
J		8


Step 3

B		3
G		5

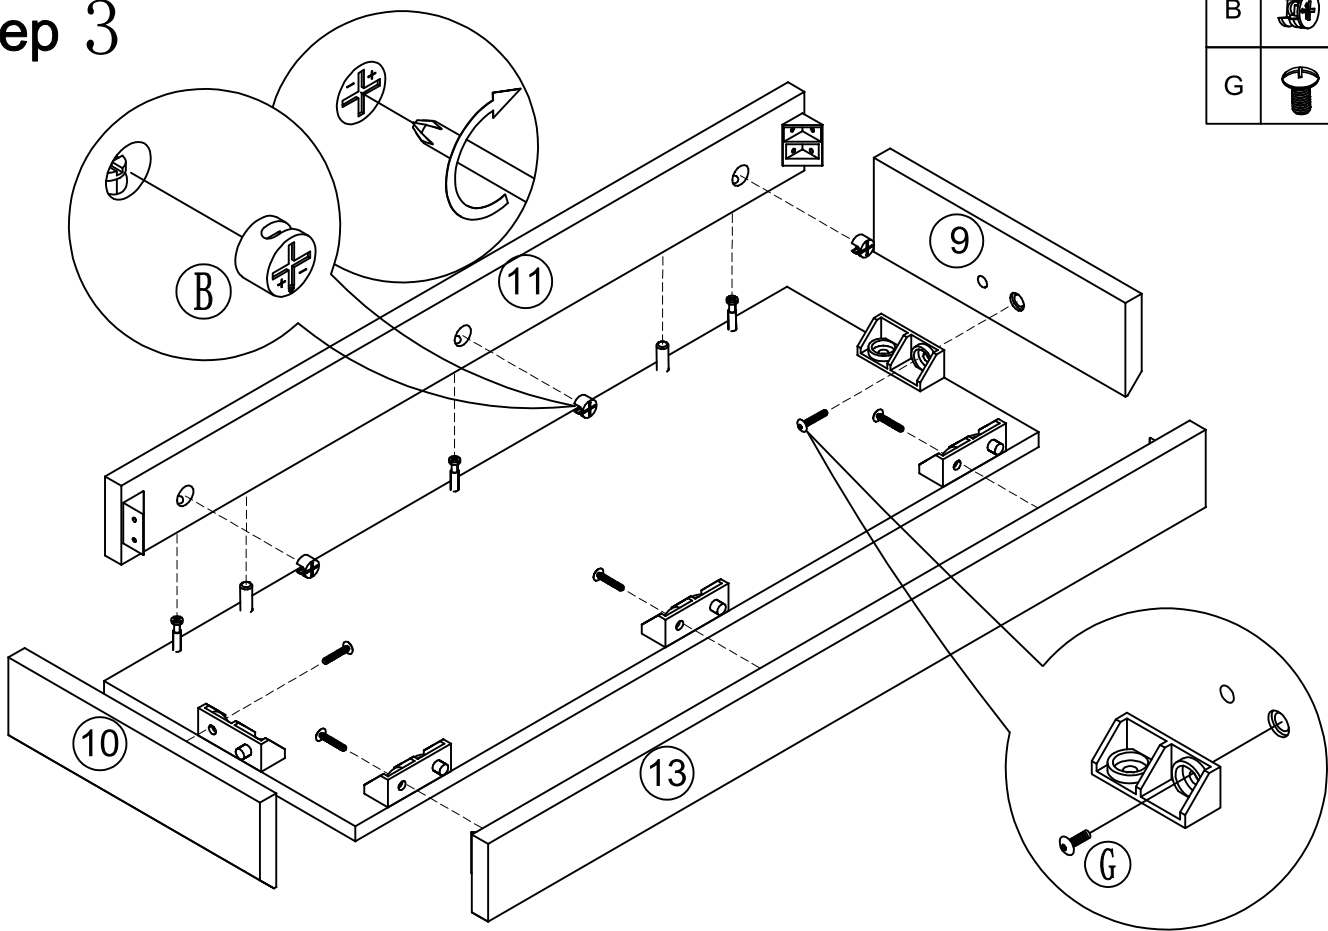




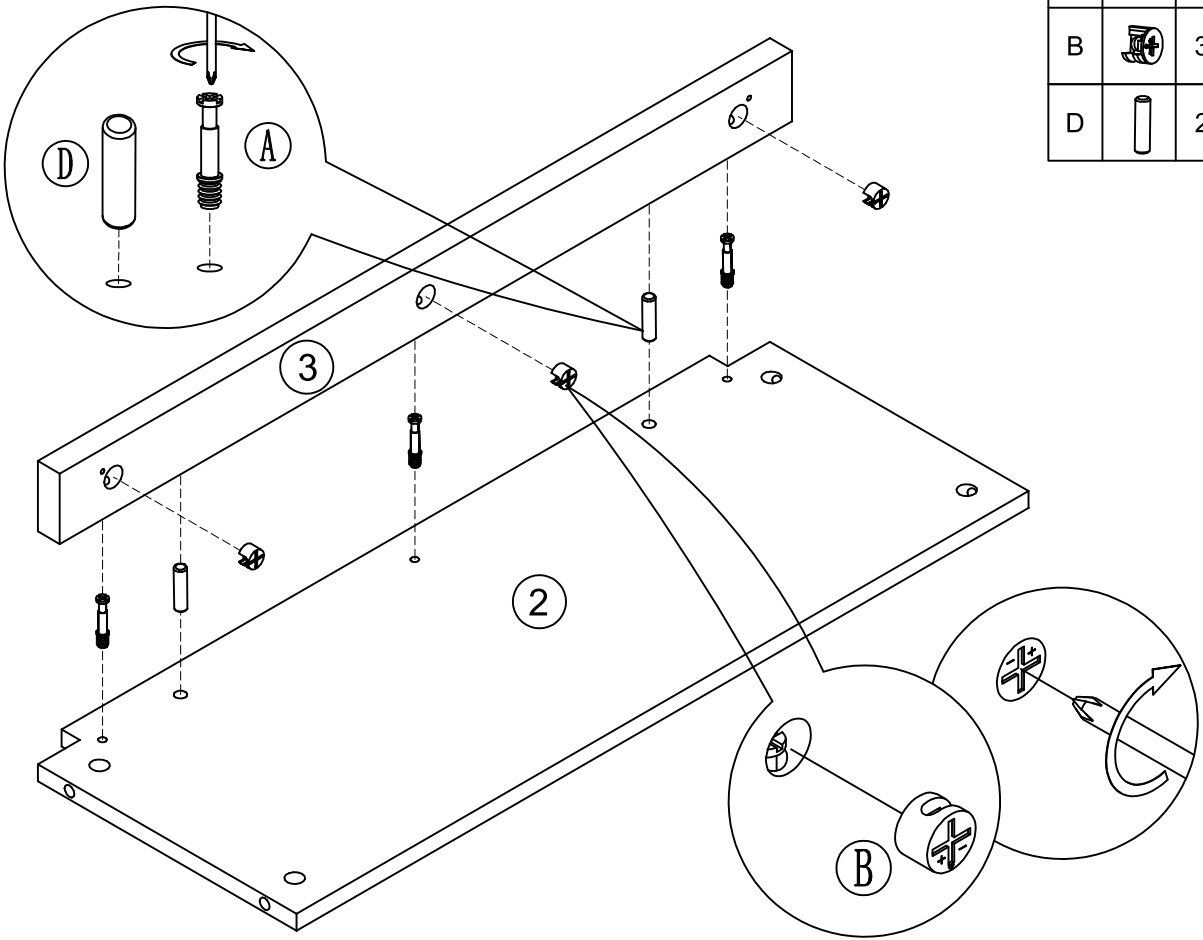
Step 4

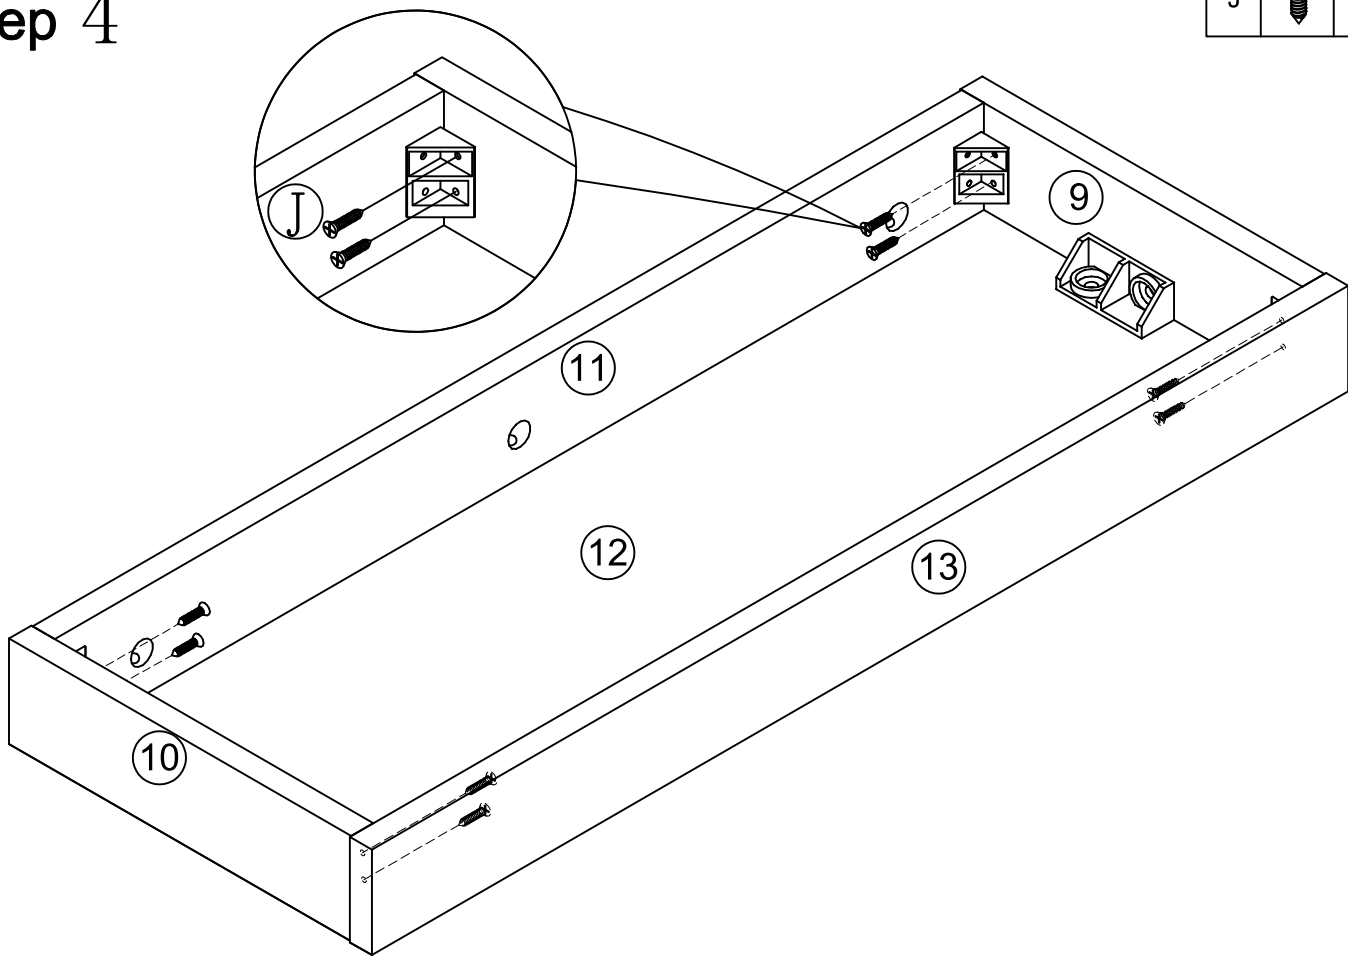J		8
---	---	---






# Step 5

A		3
B		3
D		2




# Step 6


A		6
D		4

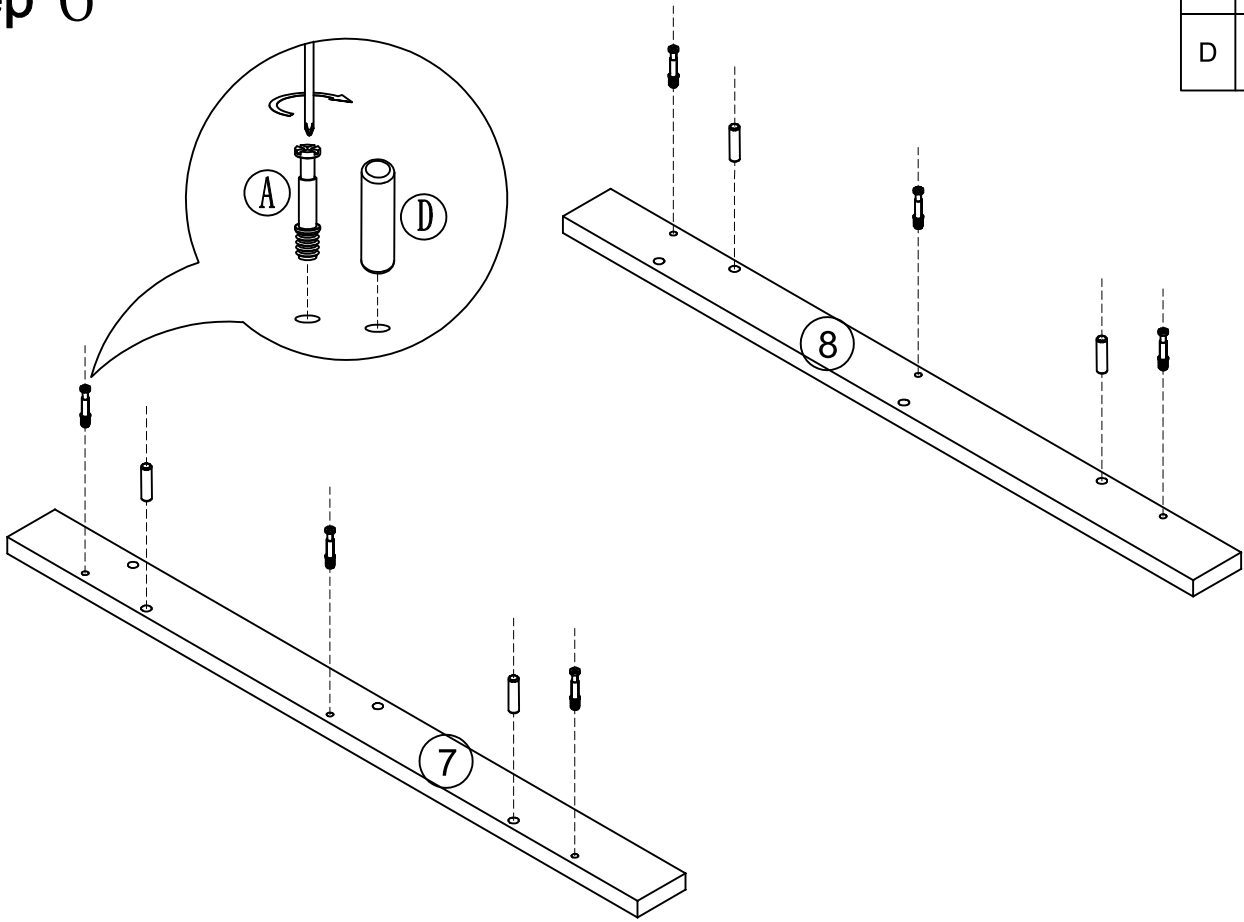

## Step 7

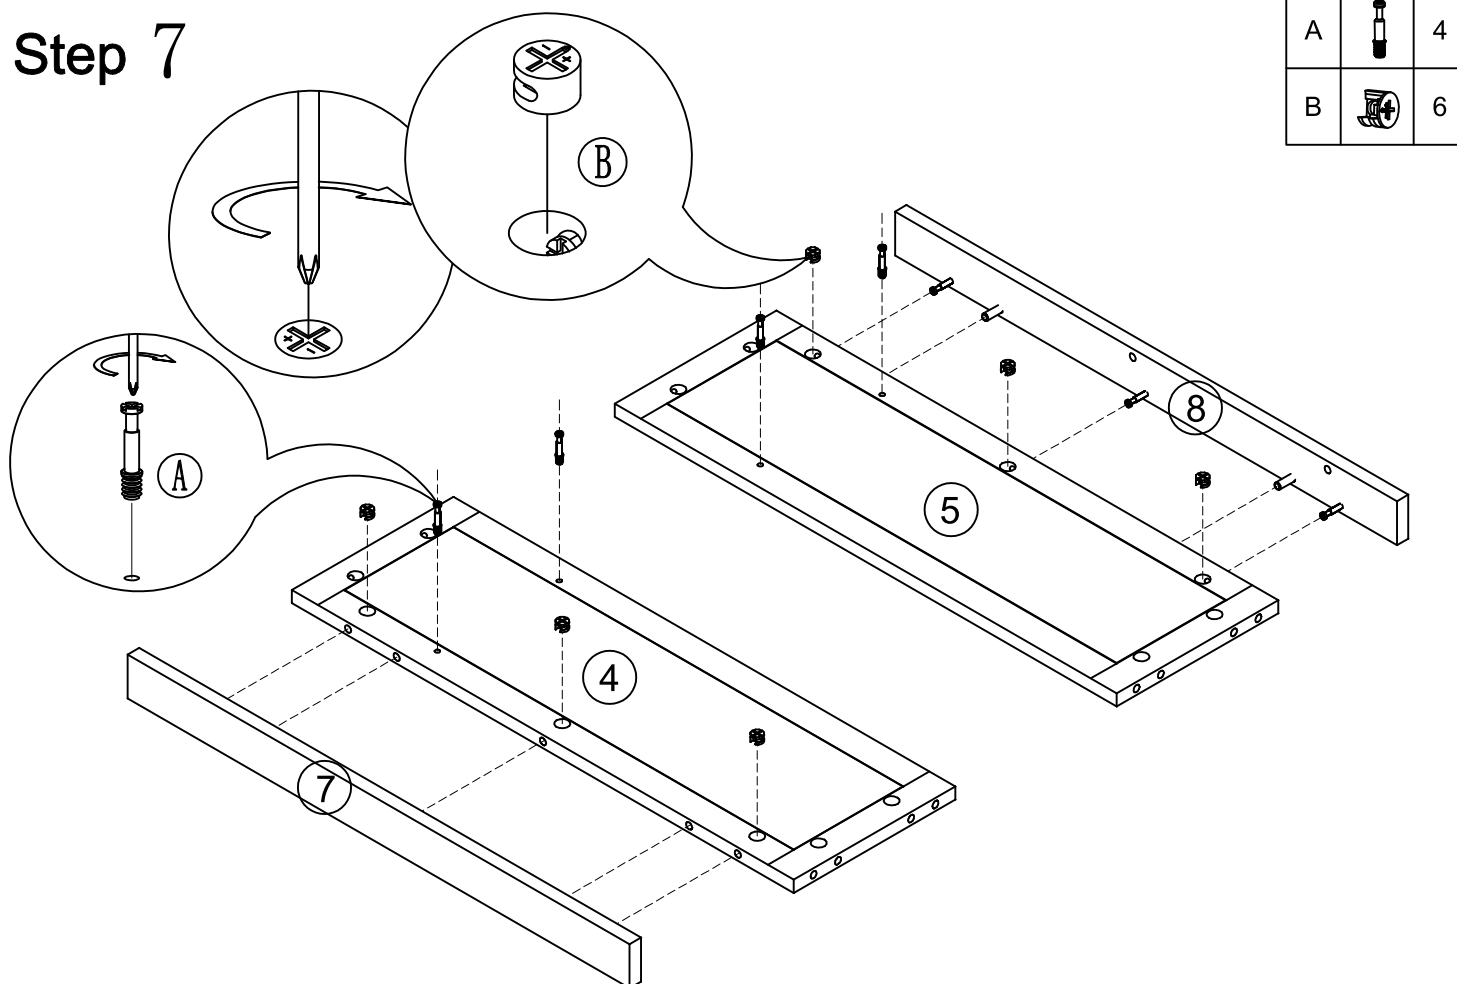

## Step 8

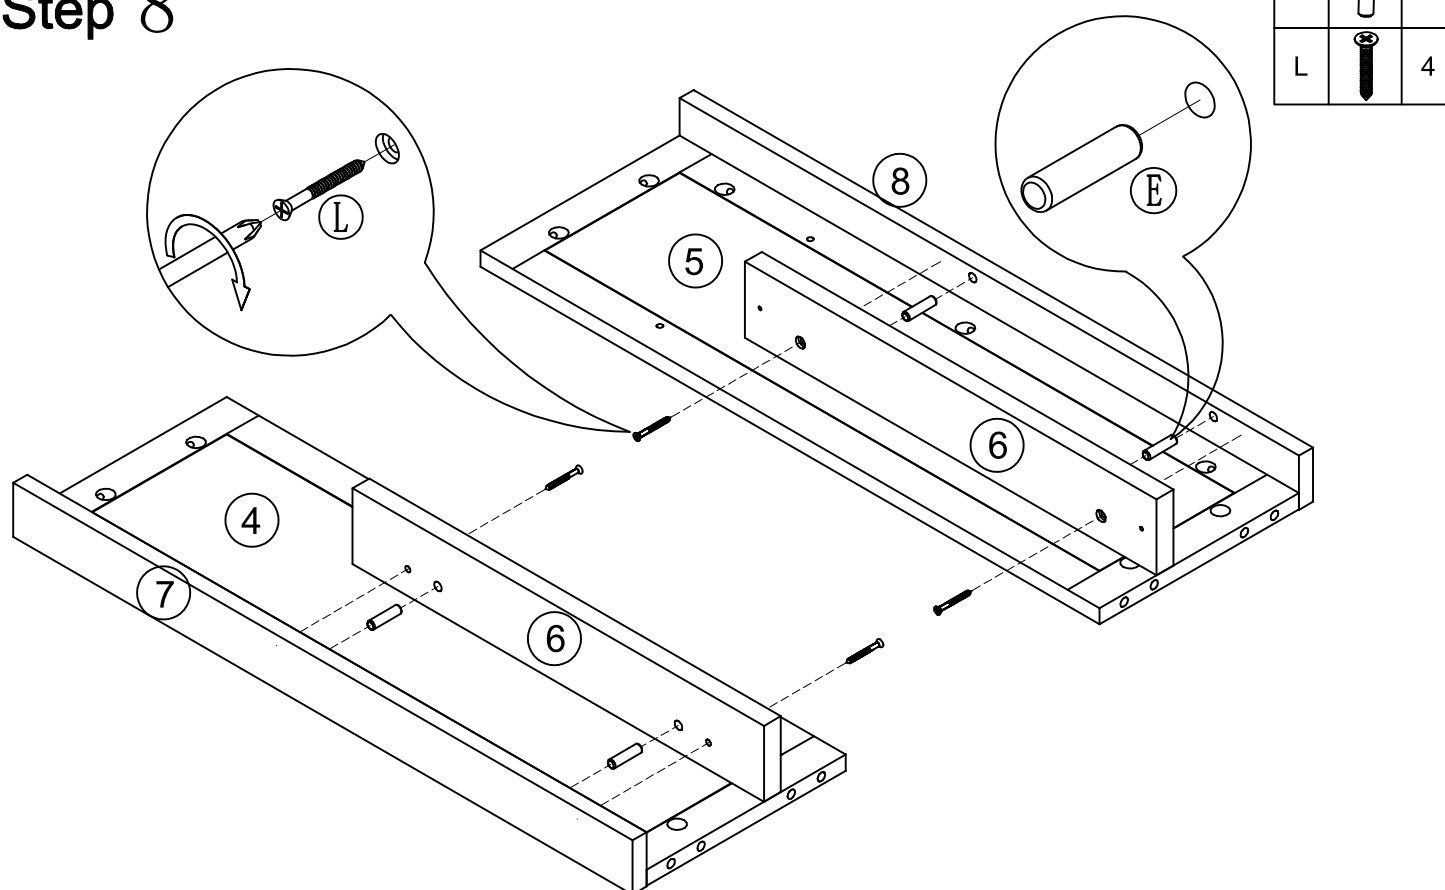




## Step 9

C



4

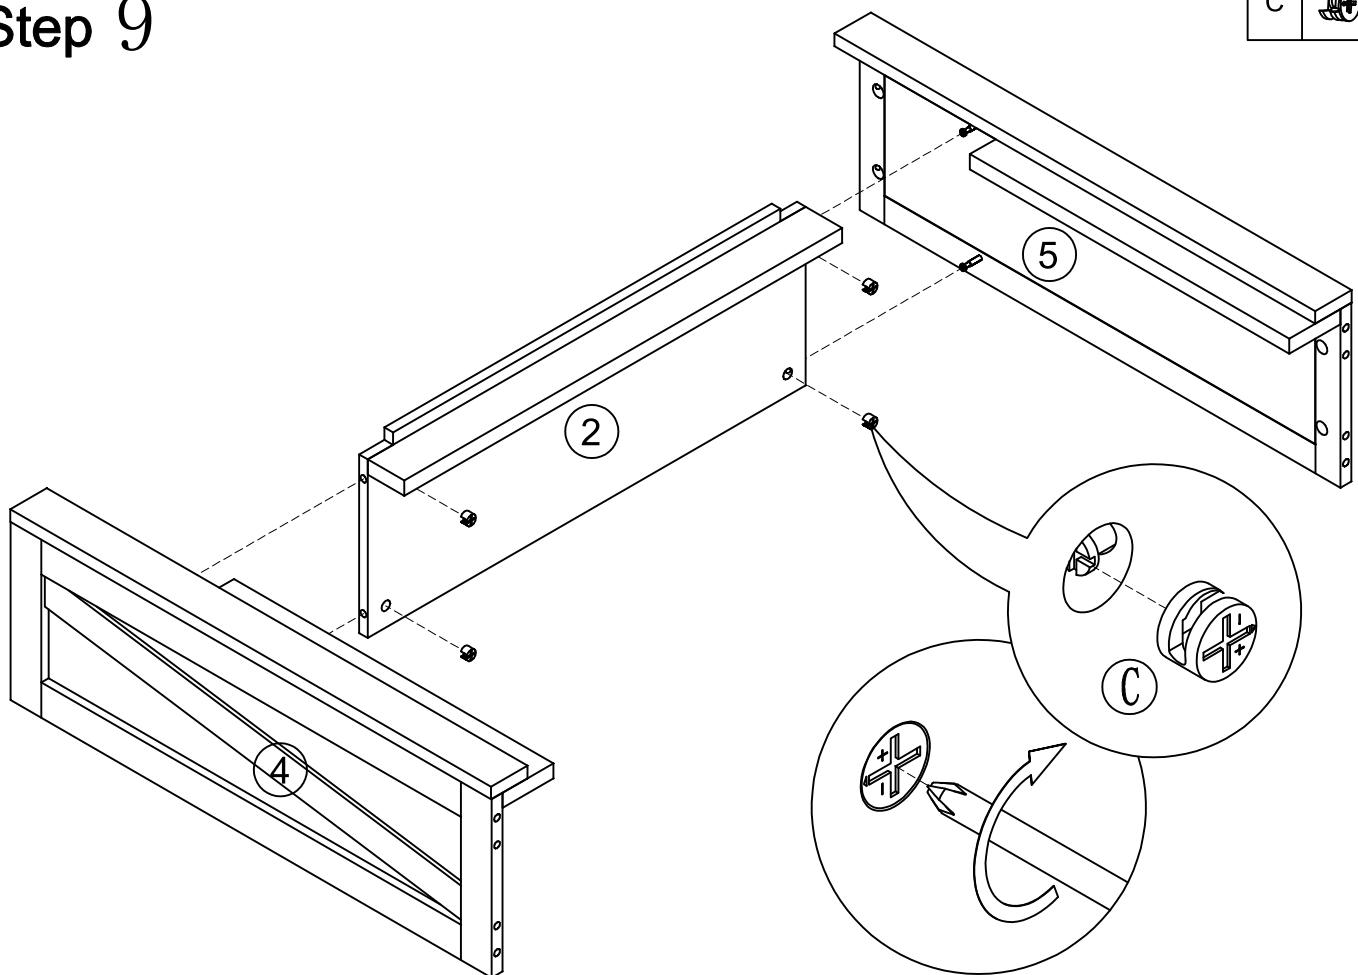

## Step 10

A




8

D




8

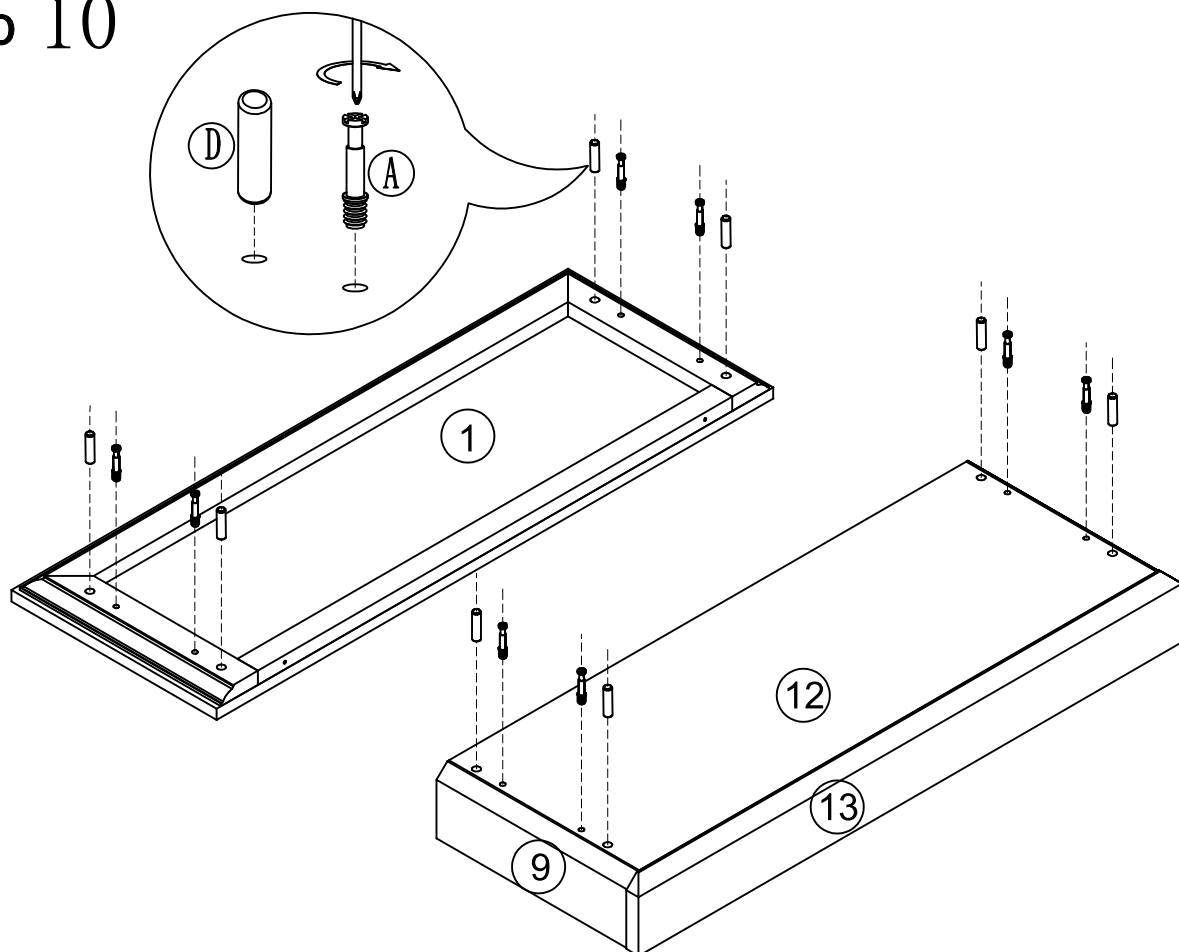




# Step 11

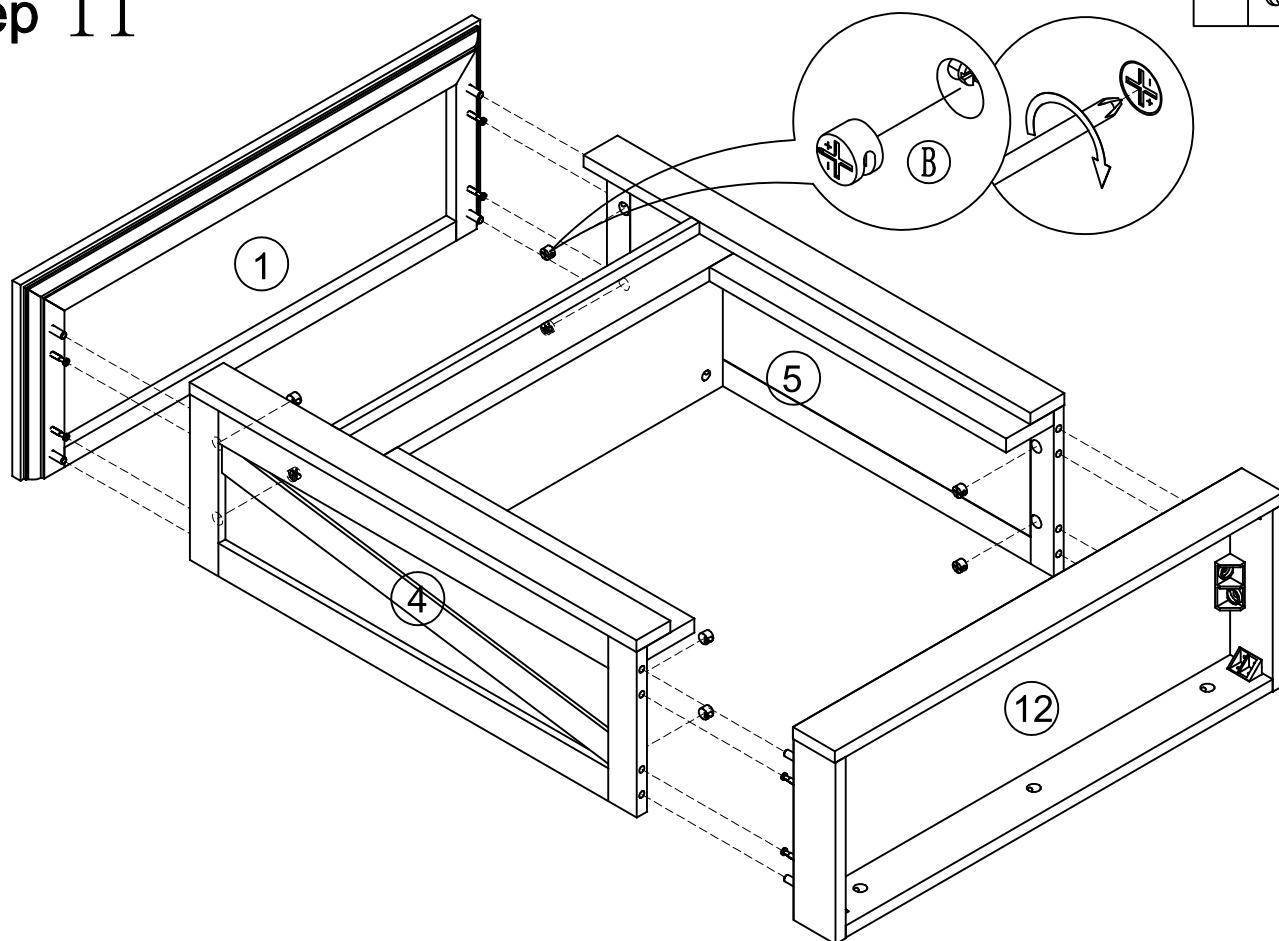B		8
---	---	---



# Step 12

I		2
J		4

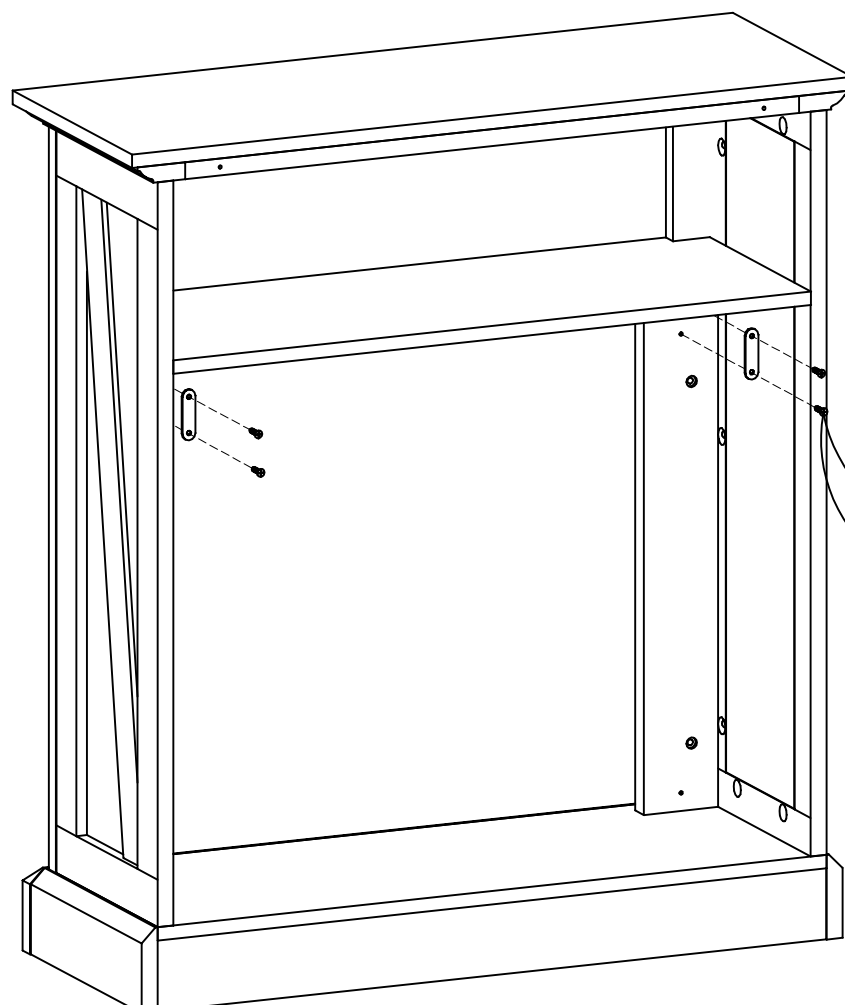


## Step 13

M



6

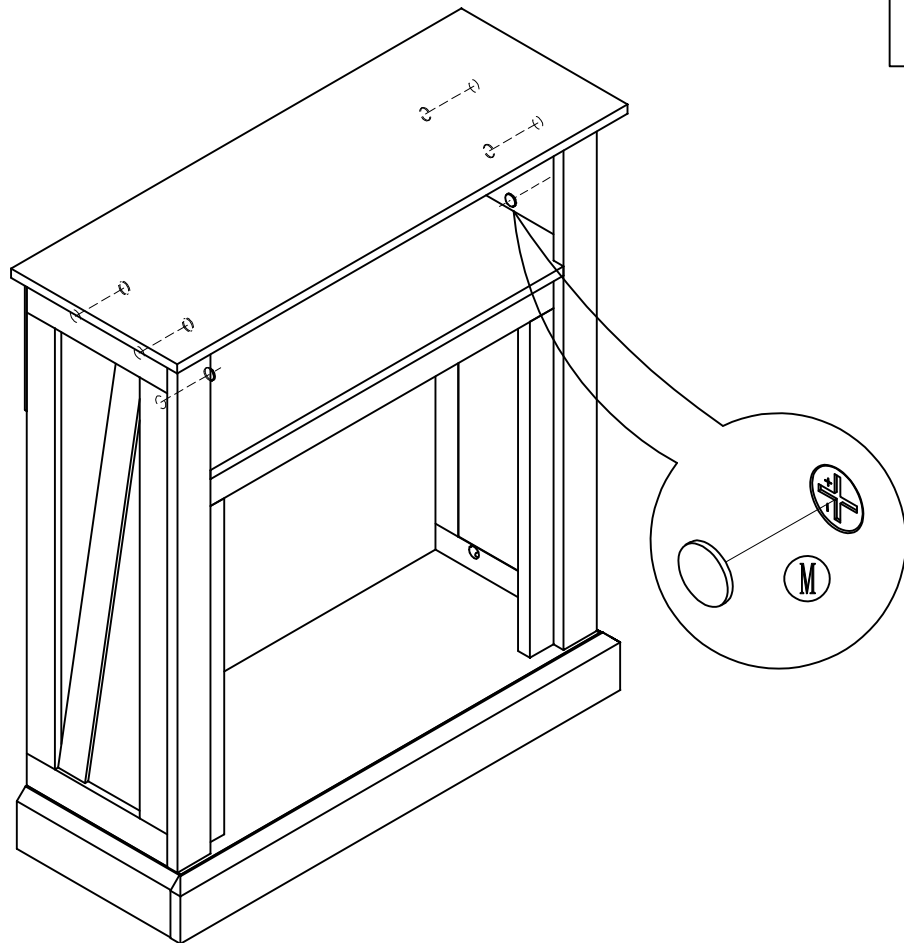


## Step 14


K



10

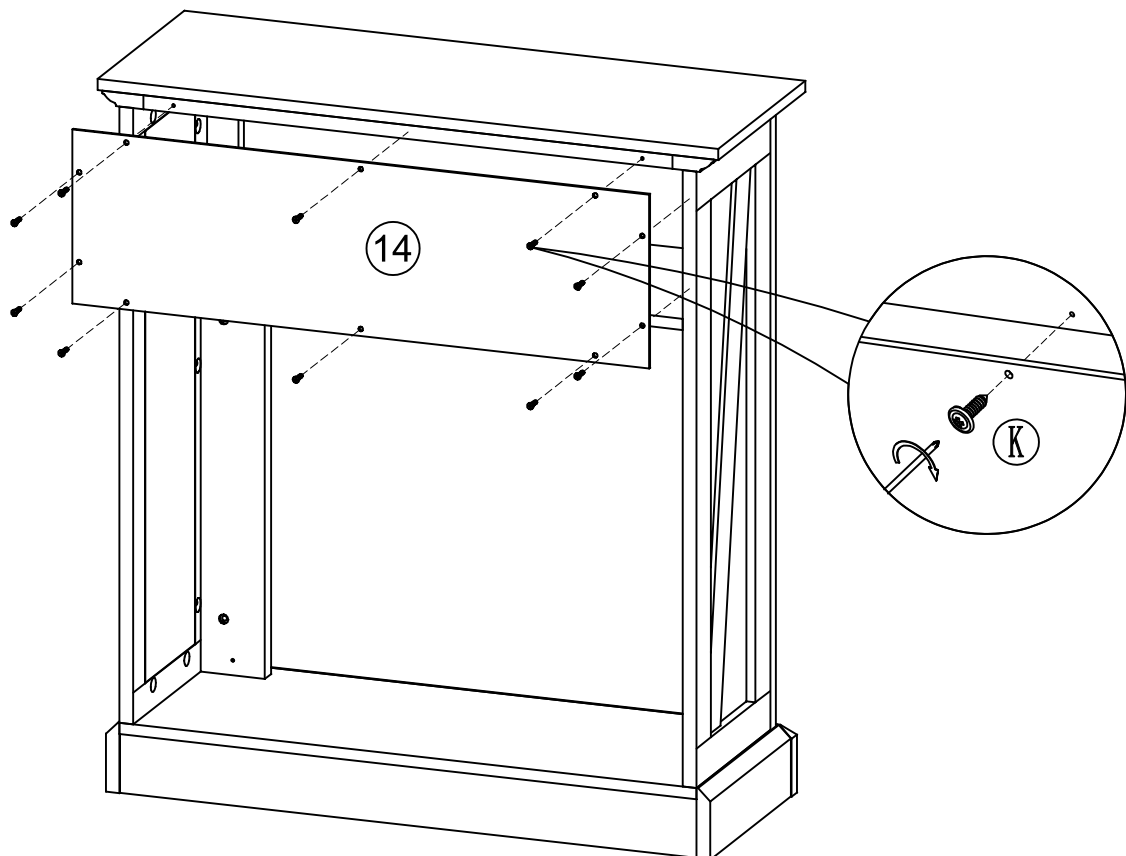

## Step 15

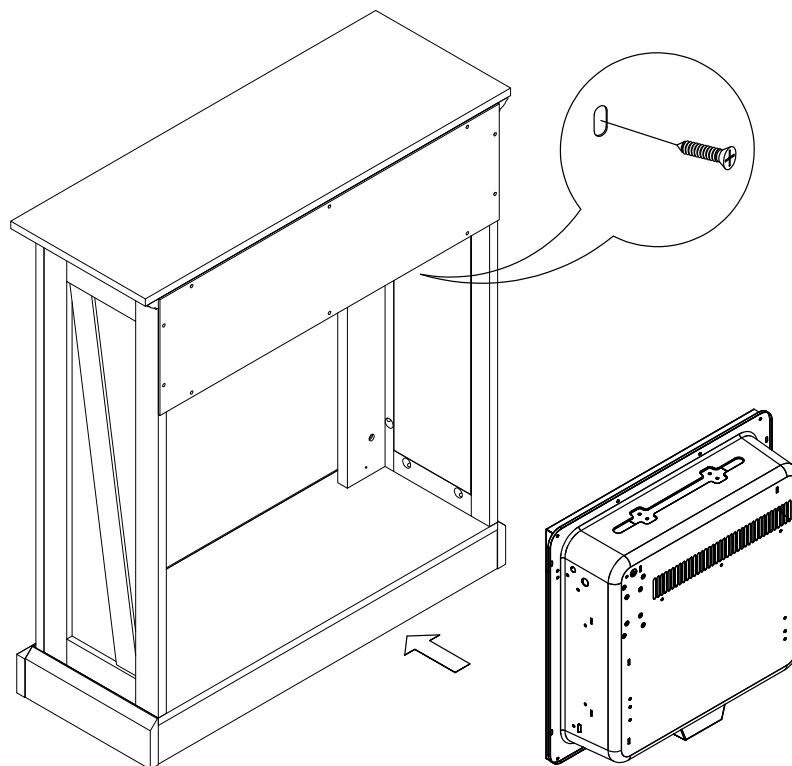


### FIREPLACE INSTALLATION




If you decide to install the fireplace into the mantel, carefully set the unit from the back of the mantel and center it in the opening.


Check the alignment and attach the unit to the mantel by inserting screws through the drilled holes on the trim to the mantel.

NOTE: Do not attempt to install the unit from the front of the mantel. It will not fit.

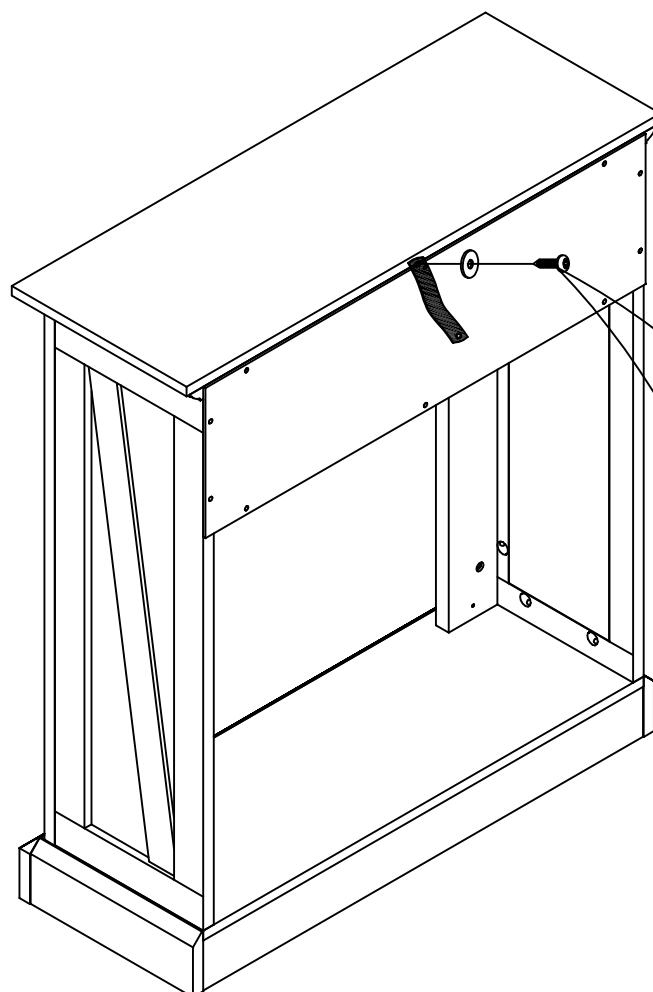
## Step 16



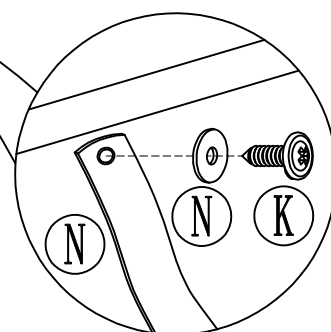

N		1
K		1
N		1

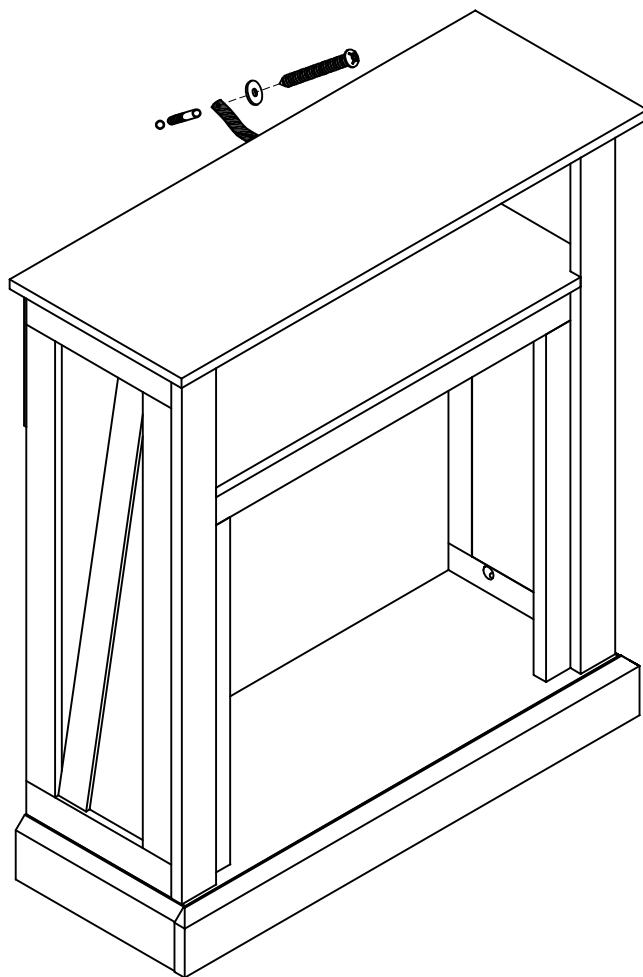

# Step 17



O		1
N		1

