



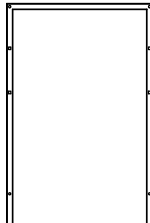
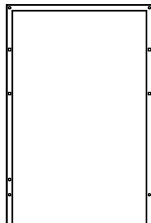

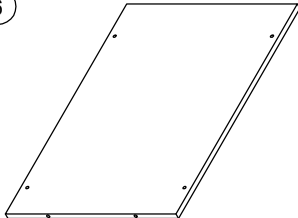
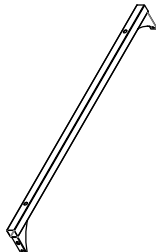
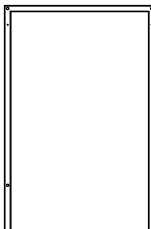


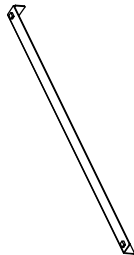
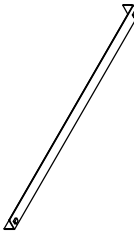













ASSEMBLY INSTRUCTION


Attention: Do not tighten the screws until all of them are in right positions.

1. It's recommended to have two people for the installation, this will significantly improve your efficiency.


2. Before you begin: lay out all of the parts on a non-abrasive surface to identify the number tags in the manual and count before assembly. Please use the screws correctly to avoid popping the desk panel.

3. For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole desk is assembled, firmly tighten all the screws.

| | | | | |
|--|---|---|---|--|
| <div>1</div> <div></div> <div>1 PC</div> | <div>2</div> <div></div> <div>2 PCS</div> | <div>3</div> <div></div> <div>1 PC</div> | <div>4</div> <div></div> <div>1 PC</div> | |
| <div>5</div> <div></div> <div>1 PC</div> | <div>6</div> <div></div> <div>1 PC</div> | <div>7</div> <div></div> <div>2 PCS</div> | <div>8</div> <div></div> <div>1 PC</div> | |
| <div>9</div> <div></div> <div>1 PC</div> | <div>10</div> <div></div> <div>1 PC</div> | <div>11</div> <div>L</div> <div>2 PCS</div> | <div>12</div> <div>R</div> <div>2 PCS</div> | |
| <div>13</div> <div></div> <div>2 PCS</div> | <div>14</div> <div></div> <div>2 PCS</div> | <div>15</div> <div></div> <div>1 PC</div> | <div>16</div> <div></div> <div>1 PC</div> | |
| <div>A</div> <div></div> <div>M6 x 35mm</div> <div>10 PCS</div> | <div>B</div> <div></div> <div>M6 x 30mm</div> <div>Silver screws for desktop fixation</div> <div>8 PCS</div> | <div>C</div> <div></div> <div>M6 x 10mm</div> <div>6 PCS</div> | <div>D</div> <div></div> <div>M6 x 30mm</div> <div>4 PCS</div> | <div>E</div> <div></div> <div></div> <div>6 PCS</div> |
| <div>F</div> <div></div> <div>1 PC</div> | <div>G</div> <div></div> <div>2 PCS</div> | <div>H</div> <div></div> <div>M4 x 10mm</div> <div>2 PCS</div> | <div>L</div> <div></div> <div>2 PCS</div> | |

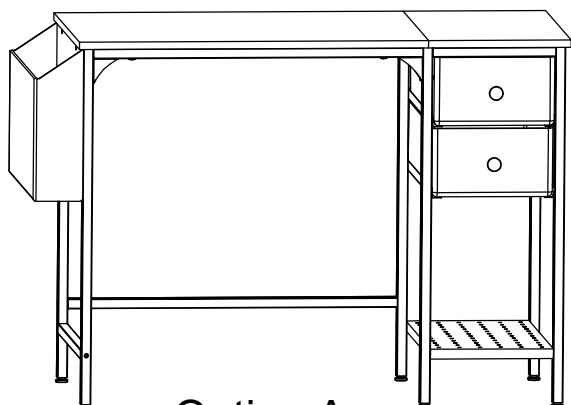


Option A

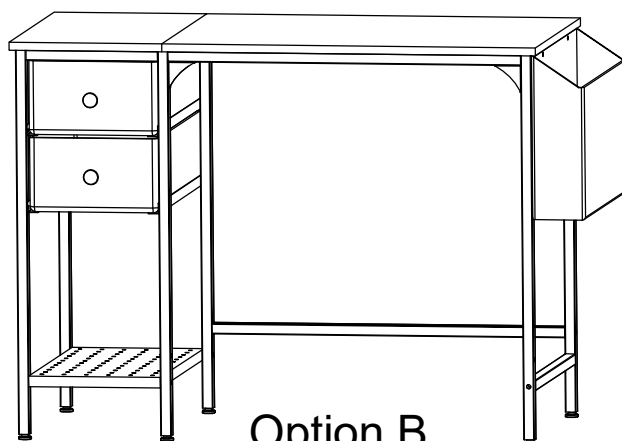



Option B

step 1

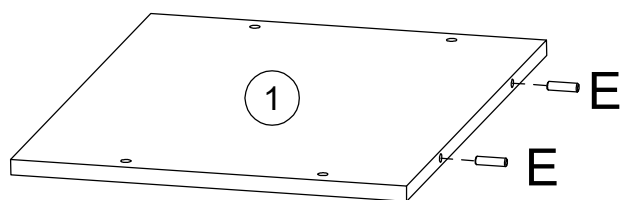


| | | |
|---|---|---|
| ① | X | 1 |
| E | X | 2 |

step 2

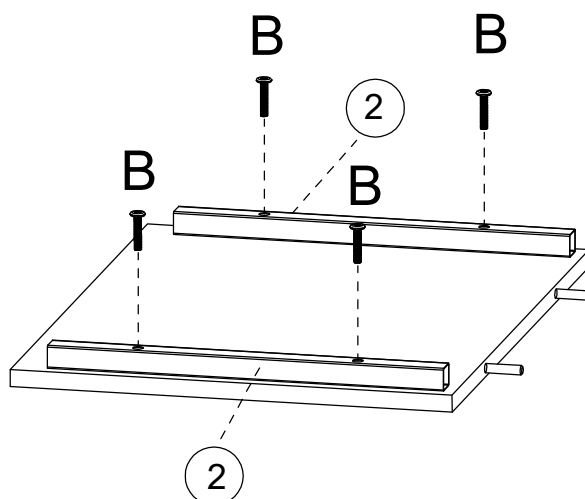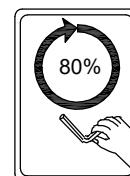


| | | |
|---|---|---|
| ② | X | 2 |
| B | X | 4 |

step 3

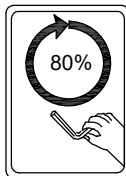


Square hole face inward

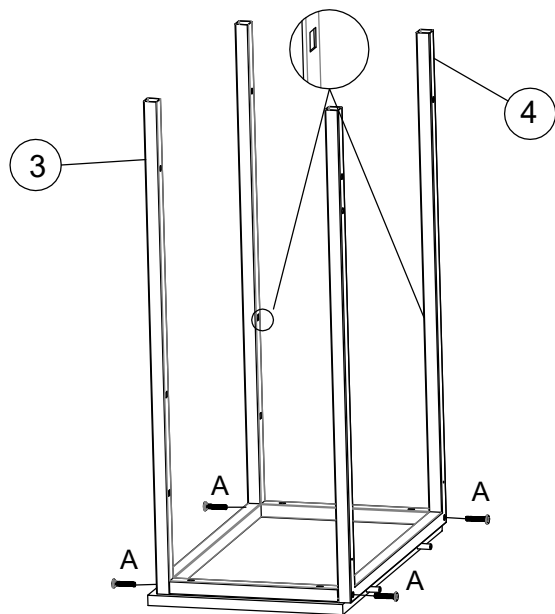


| | | |
|---|---|---|
| ③ | X | 1 |
| ④ | X | 1 |
| A | X | 4 |

step 4

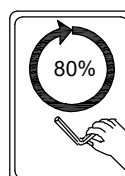


Concave face upward

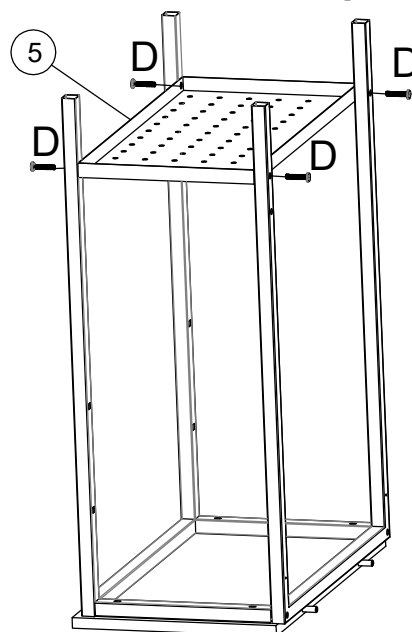


| | | |
|---|---|---|
| ⑤ | X | 1 |
| D | X | 4 |

step 5

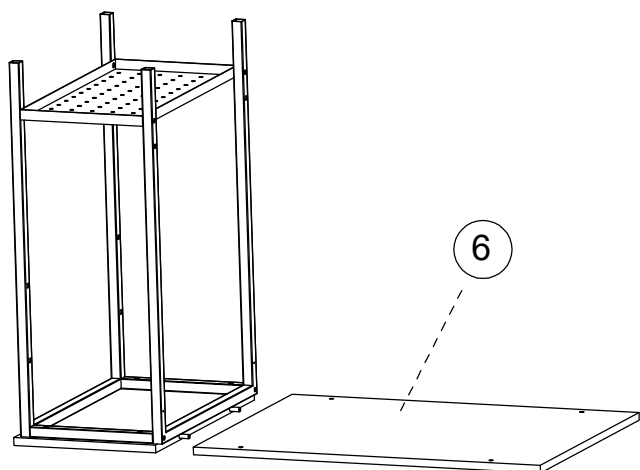


| | | |
|---|---|---|
| ⑥ | X | 1 |
|---|---|---|

step 6

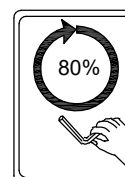



Flat side face outward

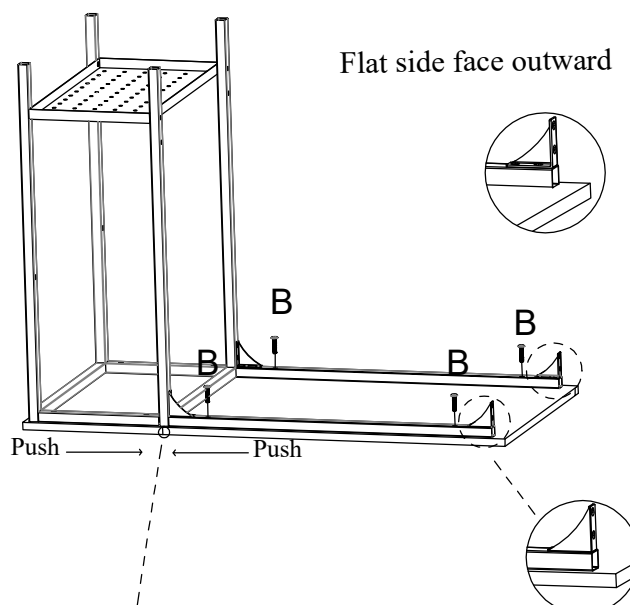

Notice: Keep all the screws 80% tightness first, then push the ① & ⑥ desktop, make sure no gap, tighten the screws finally.



| | | |
|---|---|---|
| B | X | 4 |
|---|---|---|

step 7

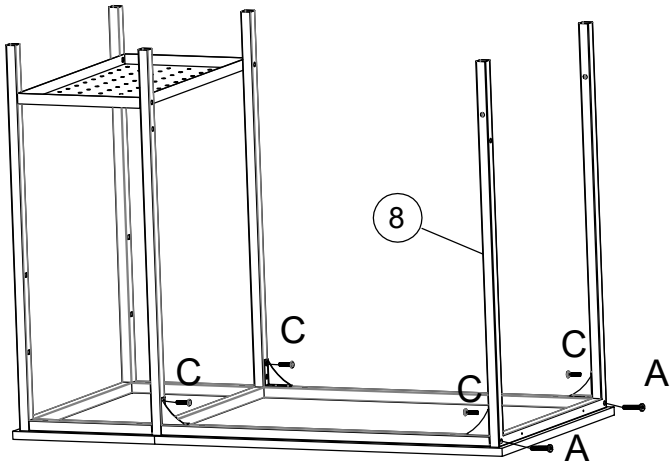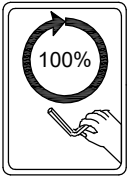


| | | |
|---|---|---|
| 8 | X | 1 |
| C | X | 4 |
| A | X | 2 |

step 8

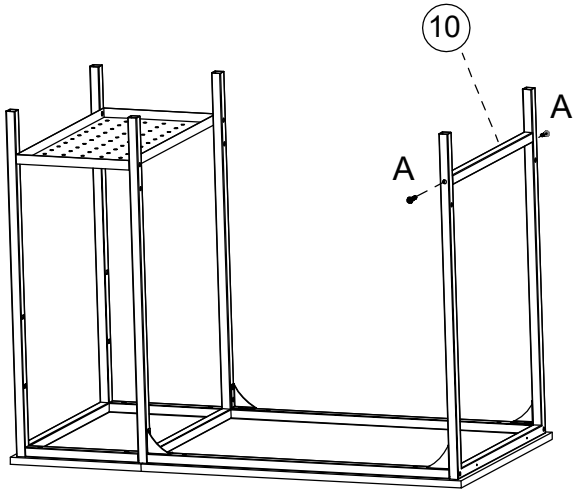
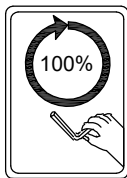


| | | |
|----|---|---|
| 10 | X | 1 |
| A | X | 2 |

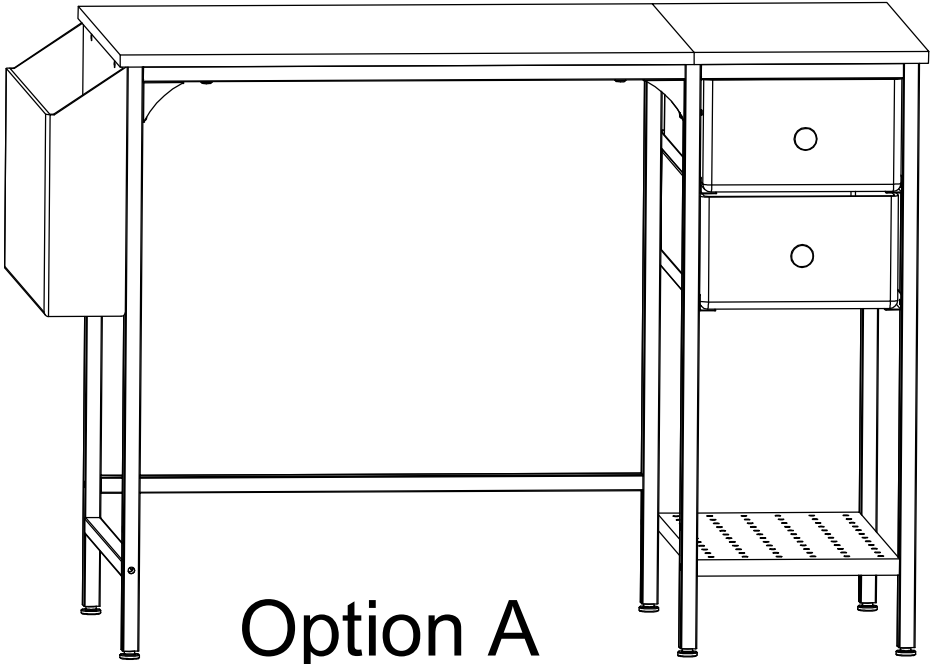



Option A

step 9

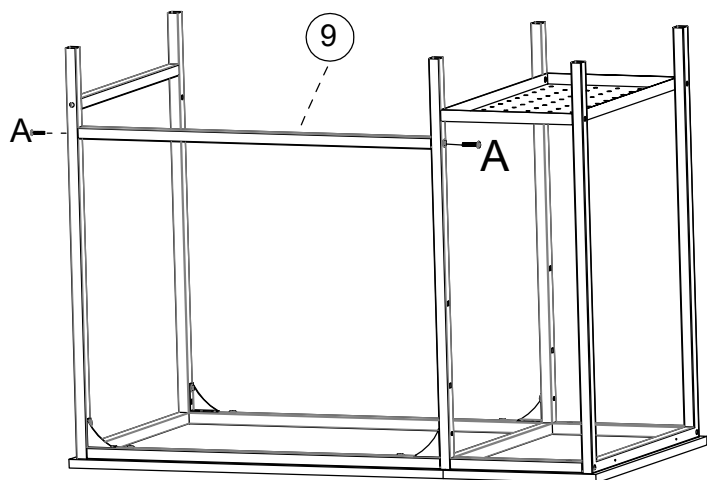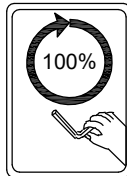


| | | |
|---|---|---|
| 9 | X | 1 |
| A | X | 2 |

step 10

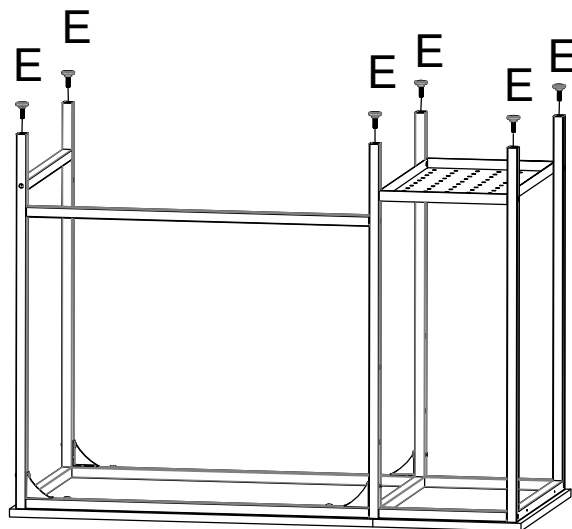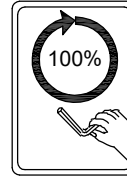


| | | |
|---|---|---|
| E | X | 6 |
|---|---|---|

step 11

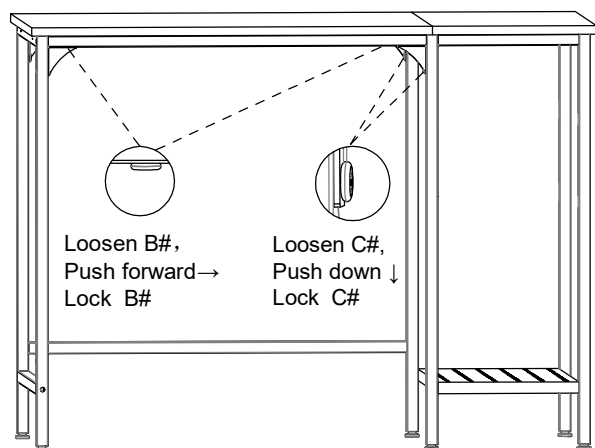


Notice: If the desktop is uneven, please adjust as described above.

step 12

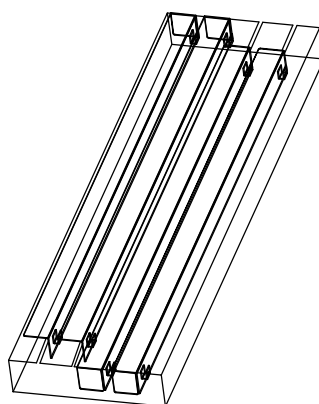


| | | |
|----|---|---|
| 11 | X | 3 |
| 12 | X | 3 |

L

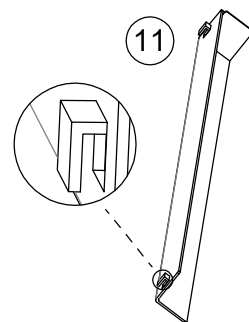


If the metal tab is no protruding, pry it open slightly.

R

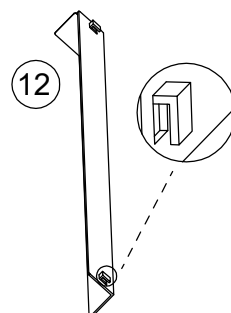


step 13

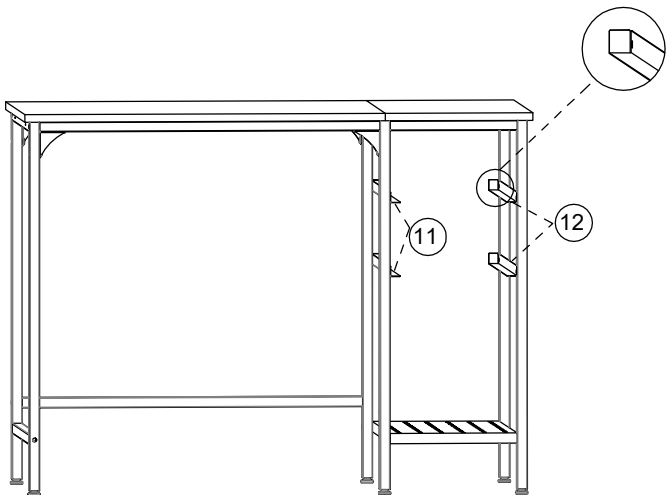

Notice: Insert 11 and 12 into the hole, press down.


| | | |
|----|---|---|
| 11 | X | 3 |
| 12 | X | 3 |

step 14

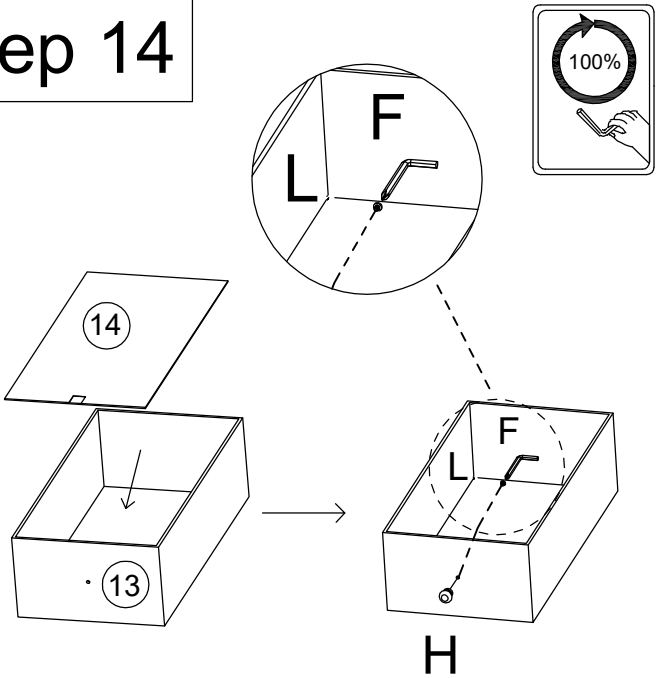


| | | |
|----|---|---|
| 13 | X | 2 |
| 14 | X | 2 |
| L | X | 2 |
| H | X | 2 |

step 15

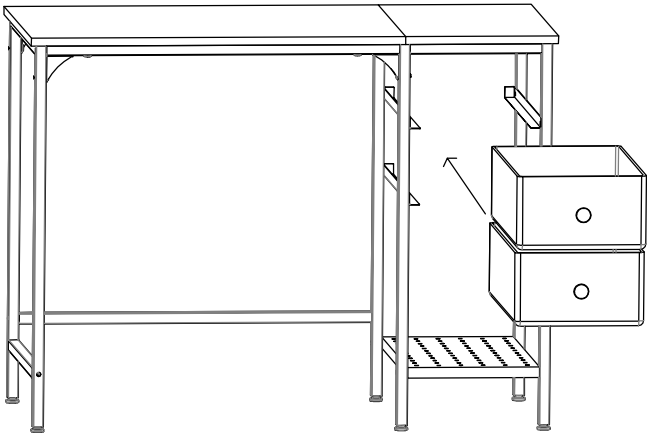


step 16

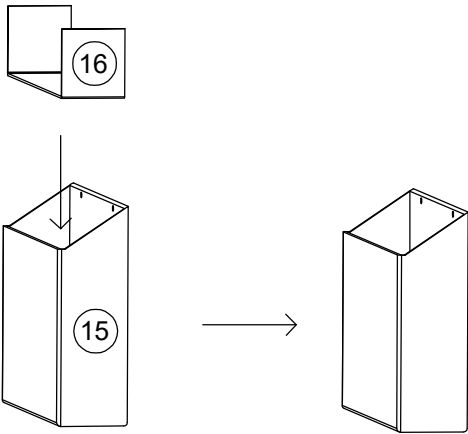


| | | |
|----|---|---|
| 15 | X | 1 |
| 16 | X | 1 |

step 17

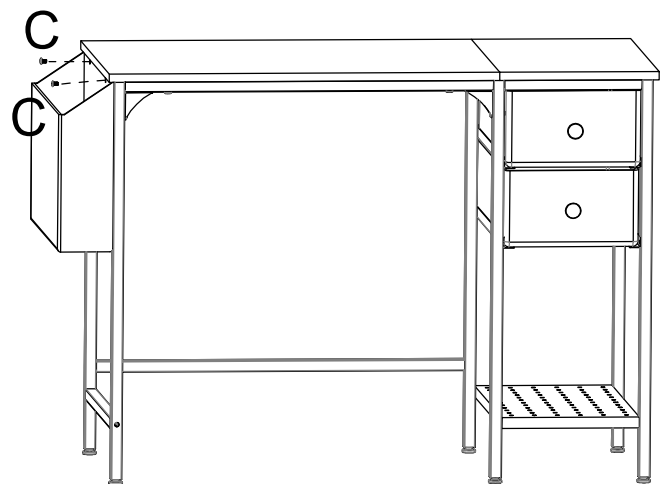


step 18

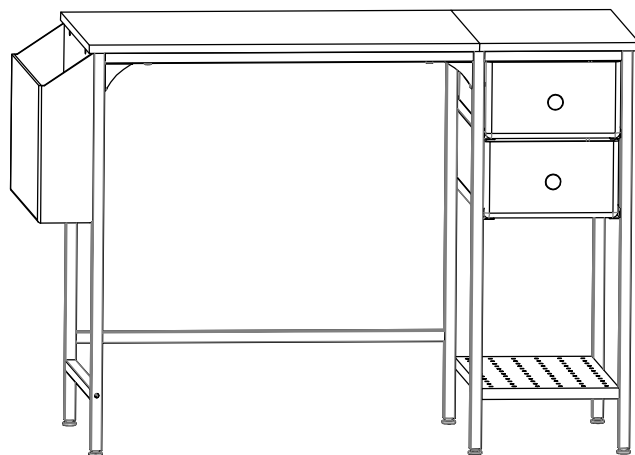



Tighten all the screws from step 1 to
step 18

C X 2

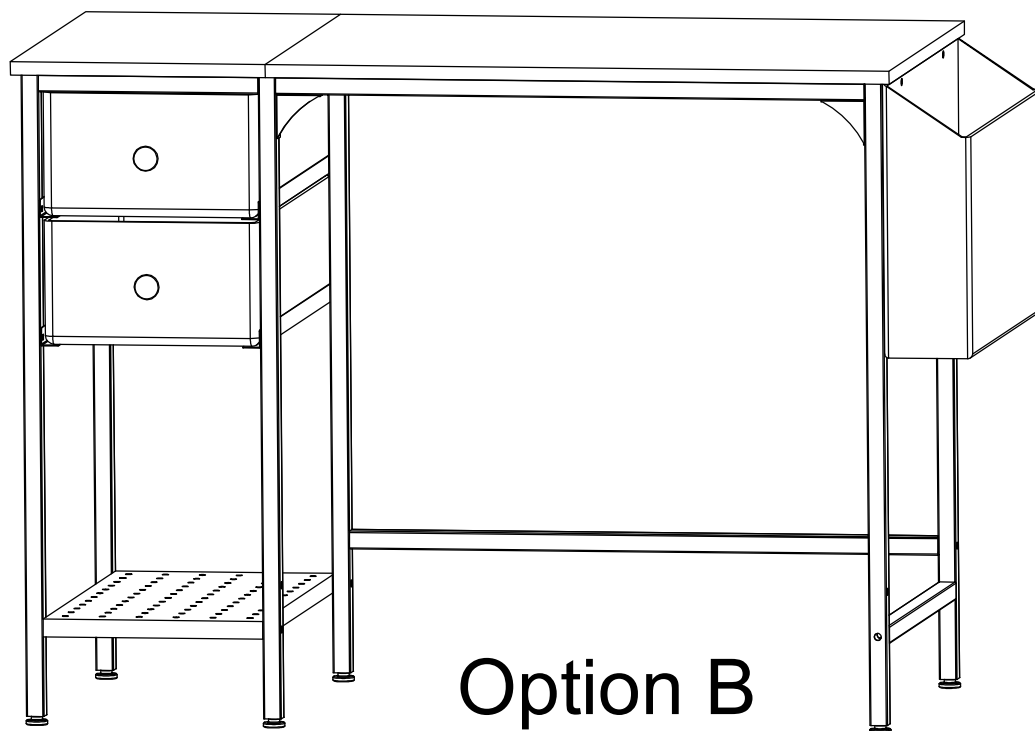


Option B

step 9

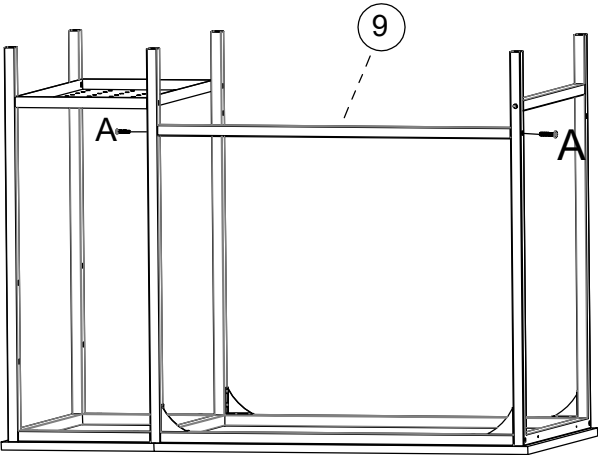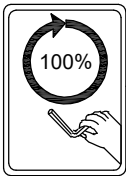



| | | |
|---|---|---|
| 9 | X | 1 |
| A | X | 2 |

step 11

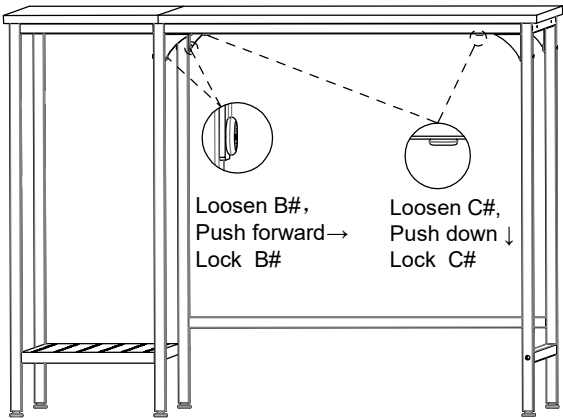


Notice: If the desktop is uneven , please adjust as described above.

step 10

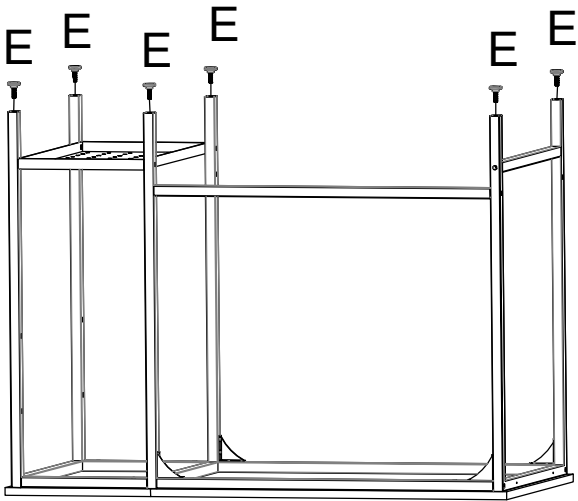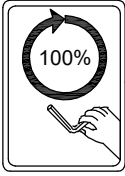


| | | |
|---|---|---|
| E | X | 6 |
|---|---|---|

step 12

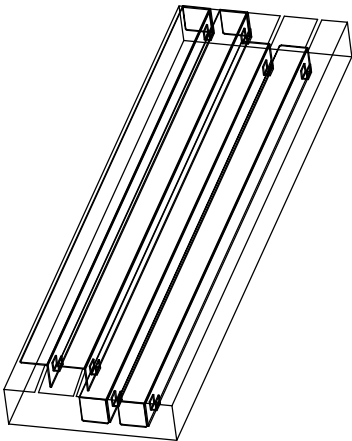


Packing box

| | | |
|----|---|---|
| 11 | X | 2 |
| 12 | X | 2 |

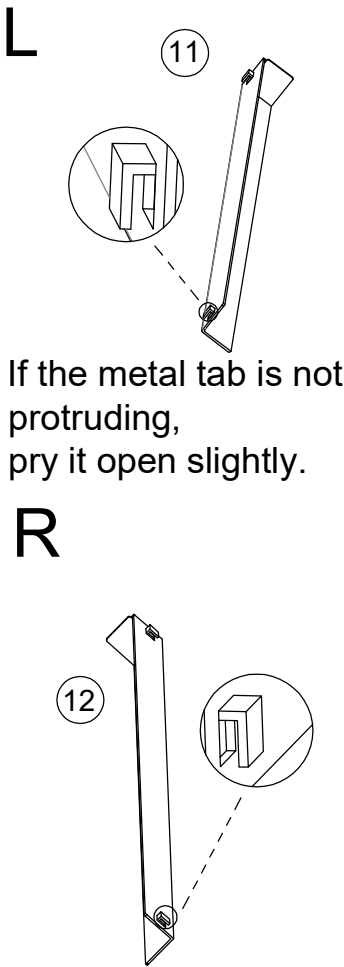



step 13

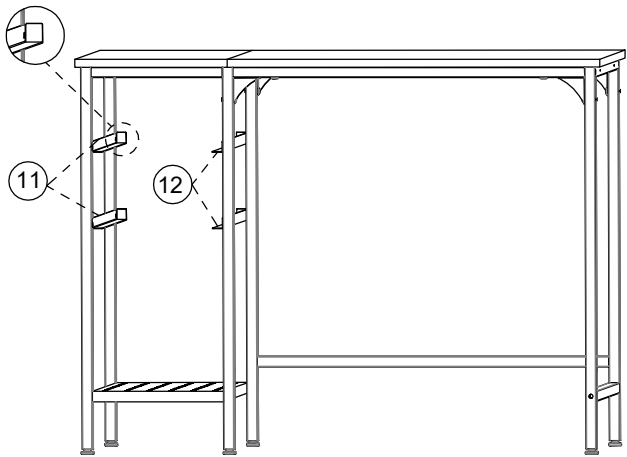

Notice: Insert 11 and 12 into the hole, press down.


| | | |
|----|---|---|
| 11 | X | 2 |
| 12 | X | 2 |

step 14

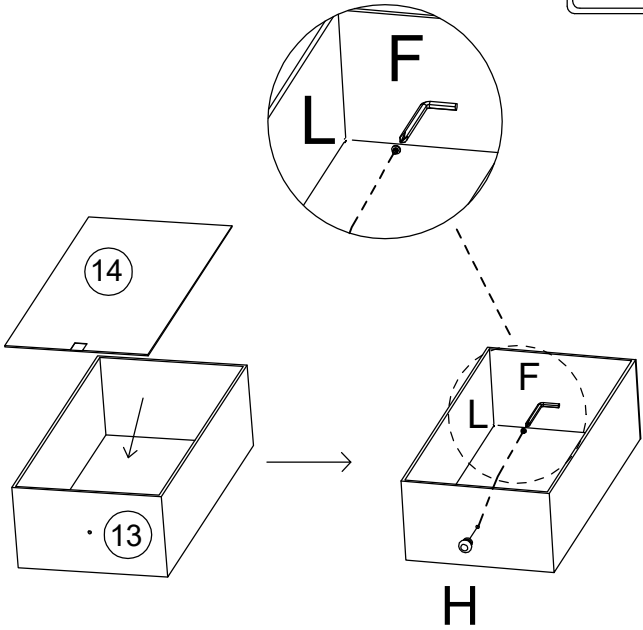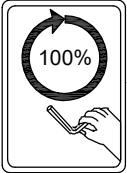


| | | |
|----|---|---|
| 13 | X | 2 |
| 14 | X | 2 |
| L | X | 2 |
| H | X | 2 |

step 15


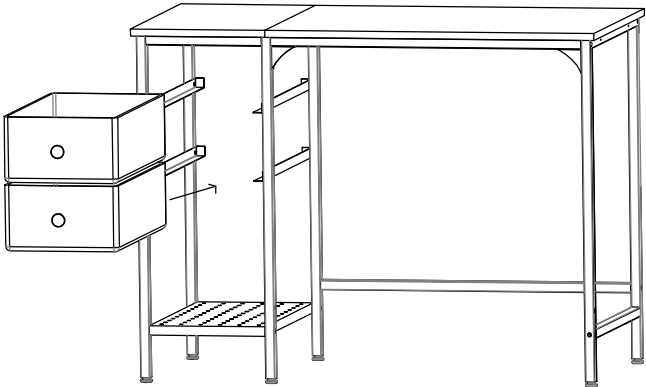


step 16

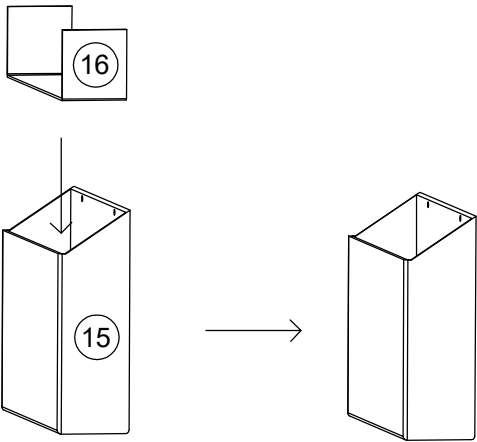


| | | |
|----|---|---|
| 15 | X | 1 |
| 16 | X | 1 |

step 17

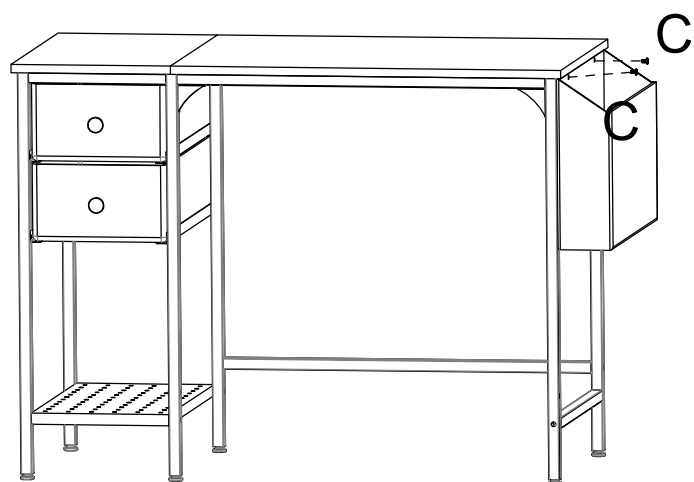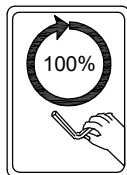

step 18

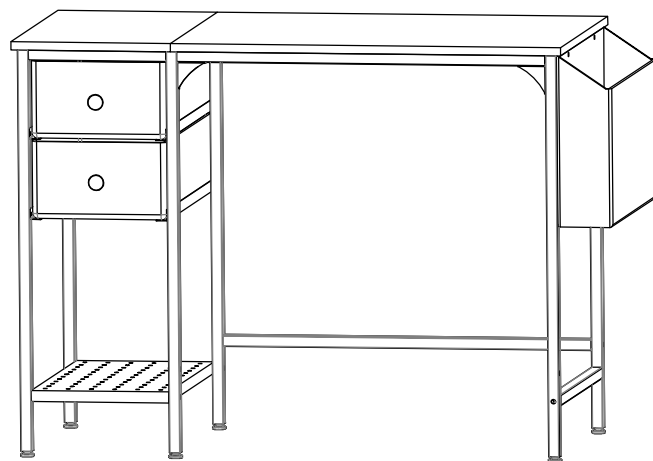

Tighten all the screws from step 1 to
step 18

| | | |
|---|---|---|
| C | X | 2 |
|---|---|---|