




DESIGNED FOR LIFE

# Assembly Instructions

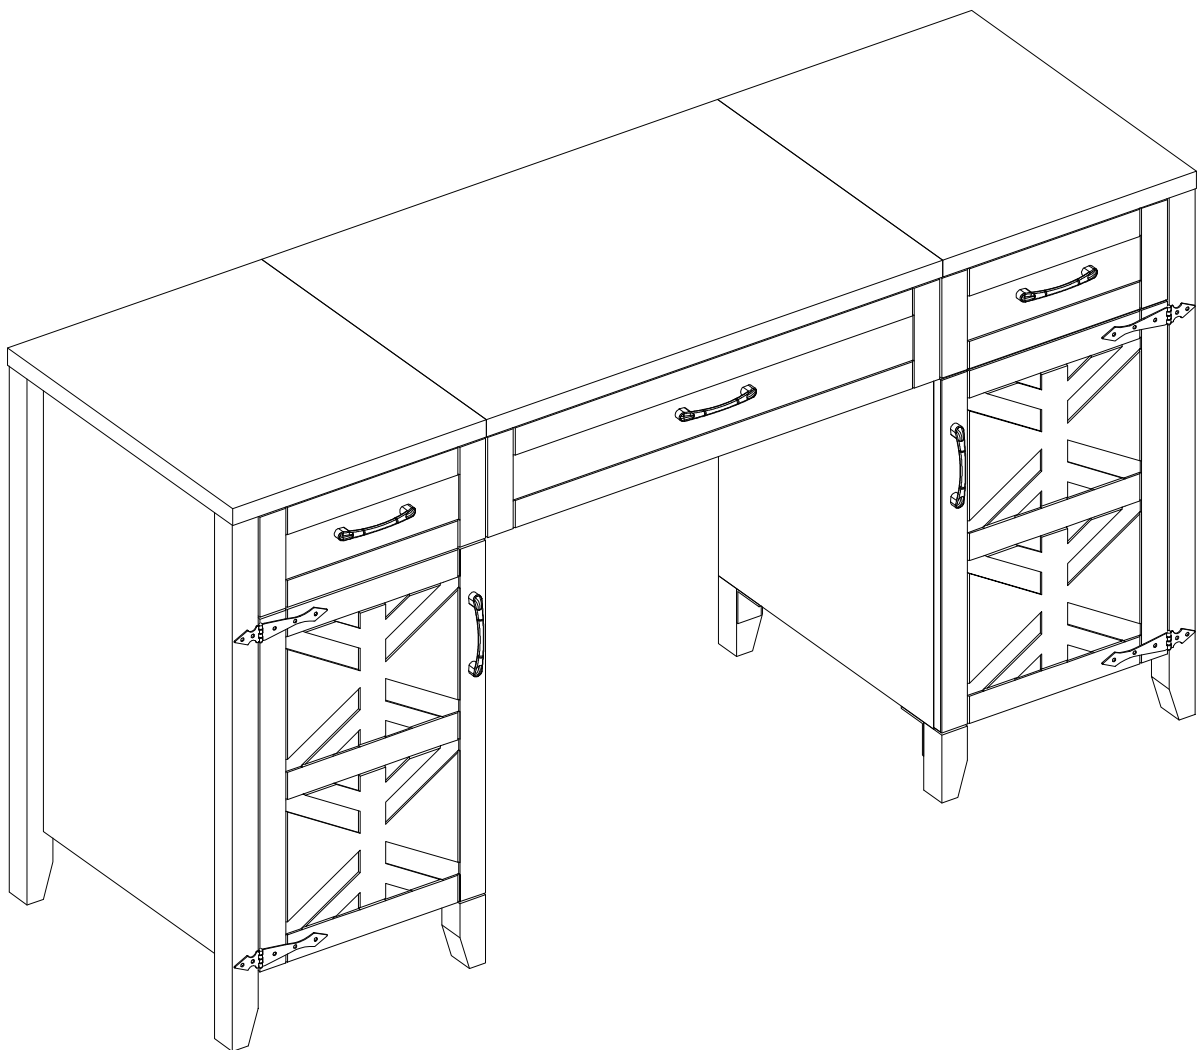

**Computer Table**

Model No.  
**HOGA-SL0041**



[www.tribesigns.com](http://www.tribesigns.com)



# Contact Us

## We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


## Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

## How to Get the Assembly Video

**Step 1**

Scan the QR code.




  
Installation Video

**Step2**

Search with the Model No.  
(on the bottom left corner of the title page)


  
HOGA-SL0041

Note: If you can't find the assembly video, please contact us.

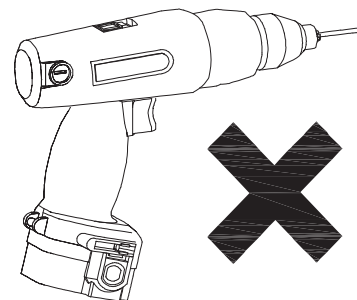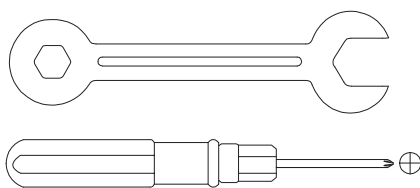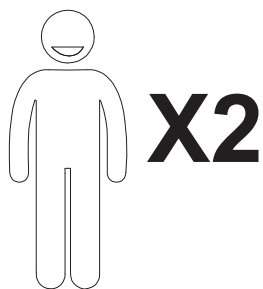



**We recommend using hand tools for assembly.**


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

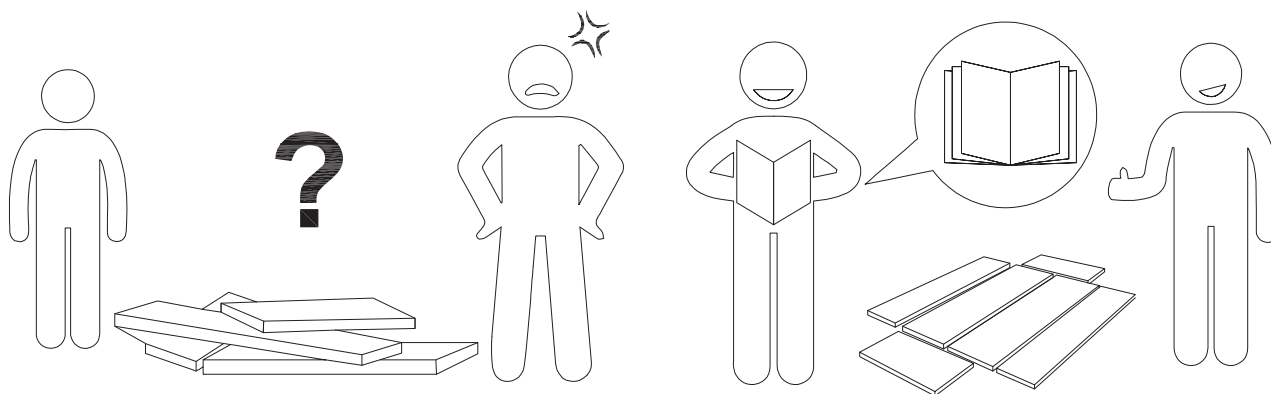

## AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.



















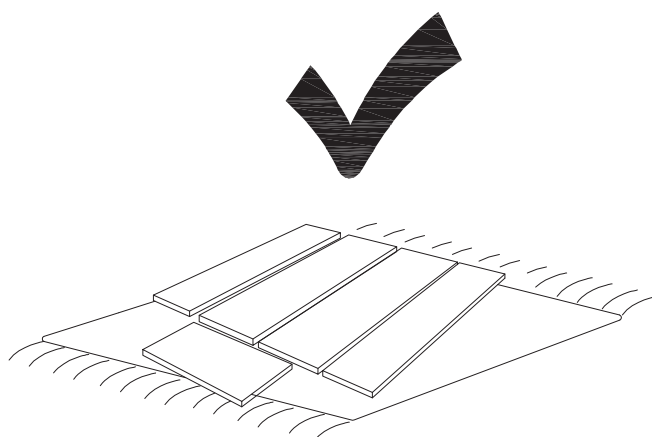
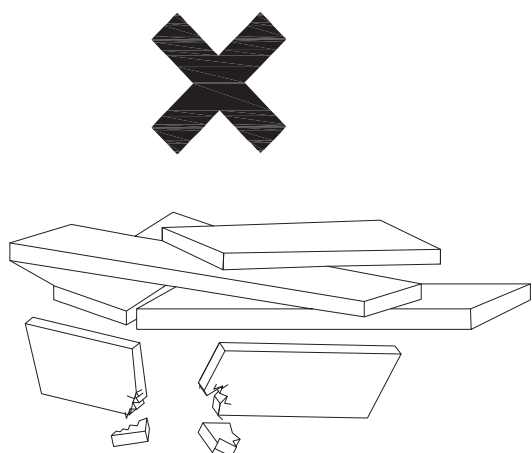


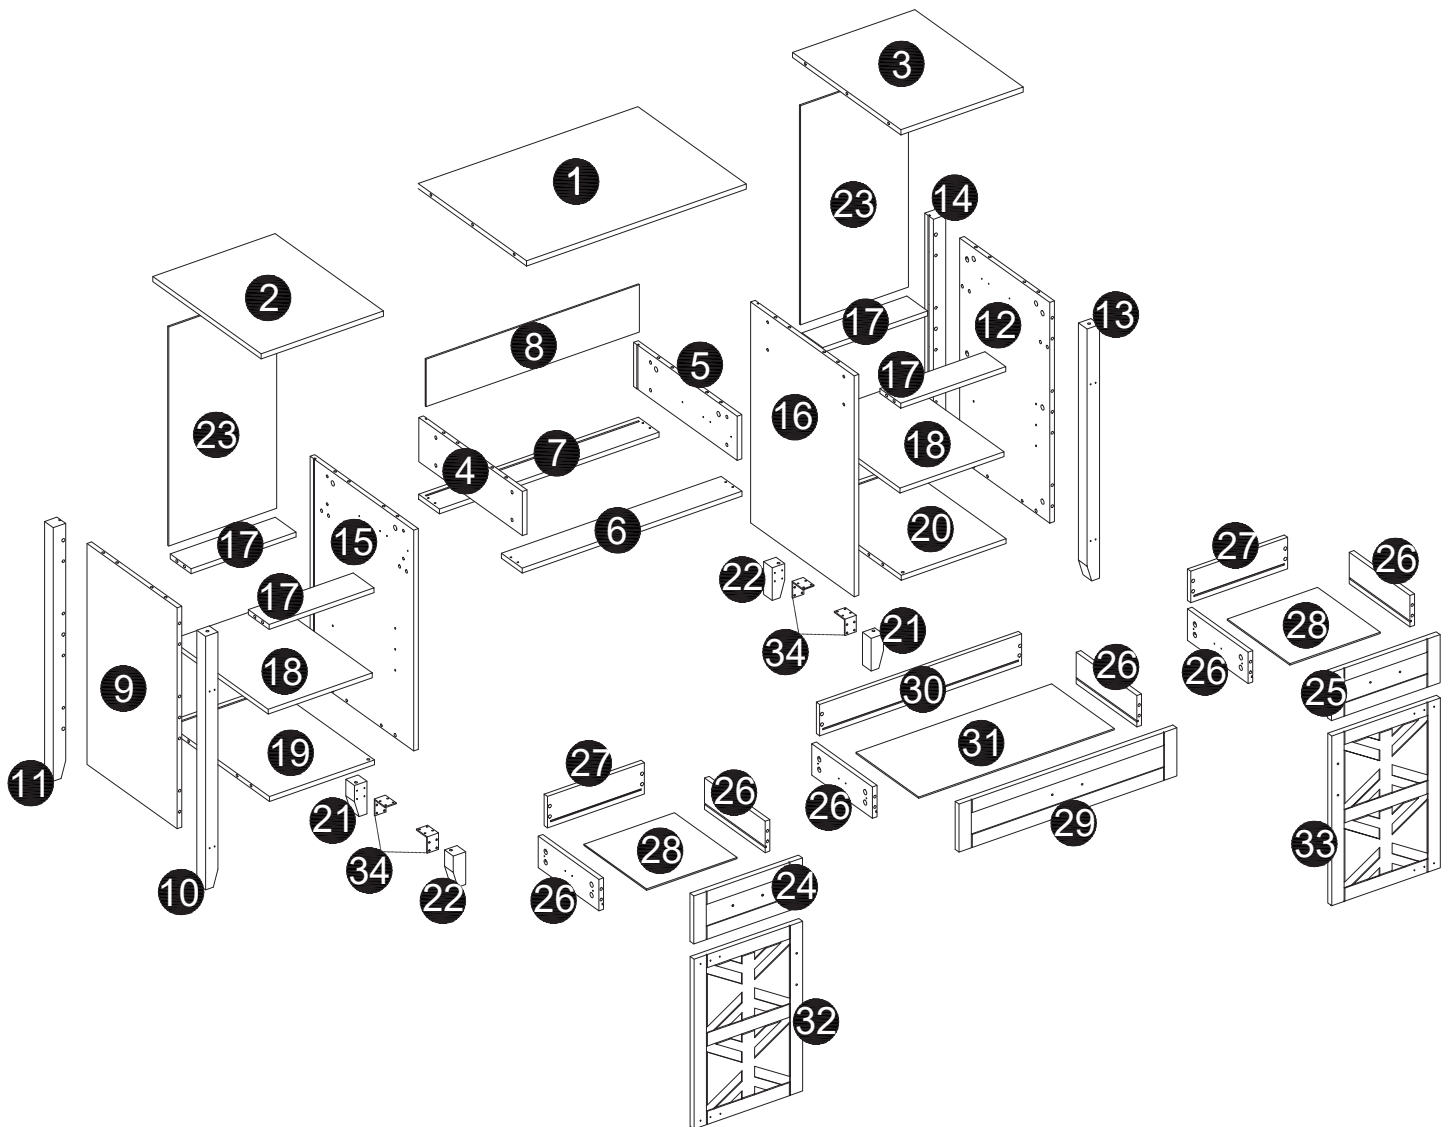**⚠ Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.  
Contact us for a free replacement if you encounter any damaged or missing parts.

















Parts List
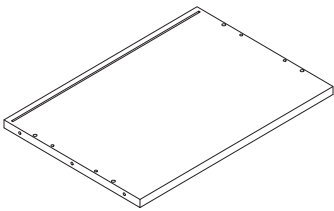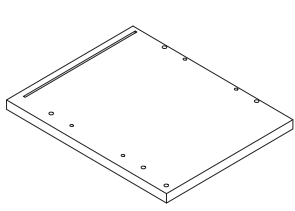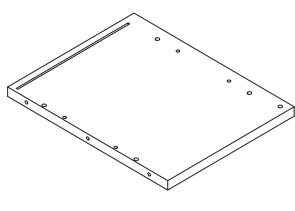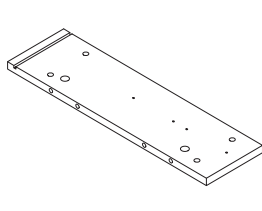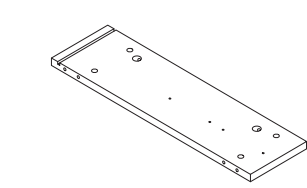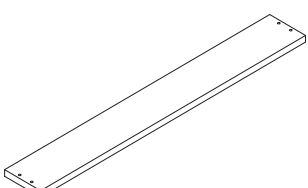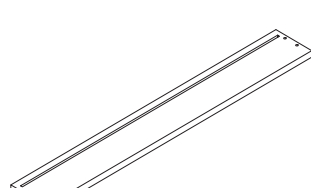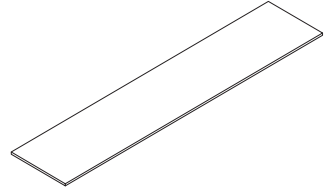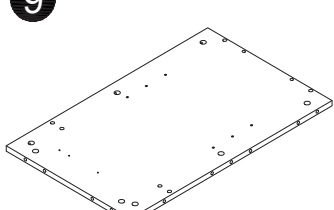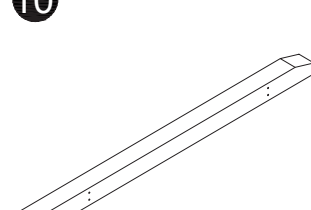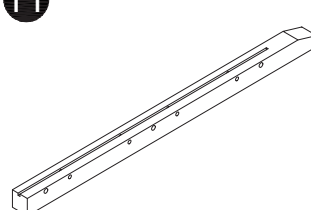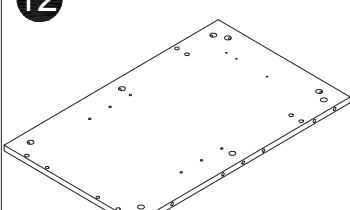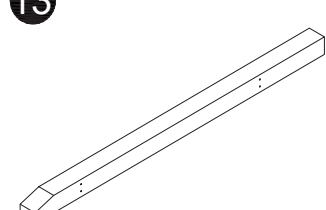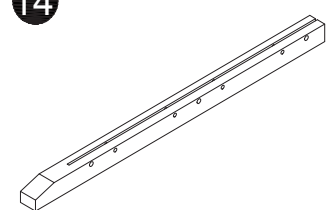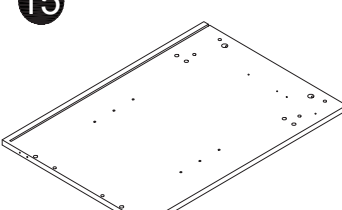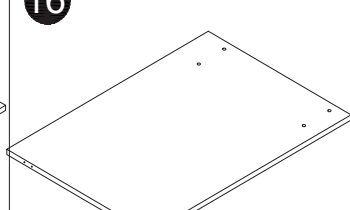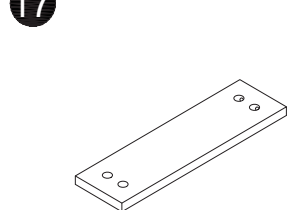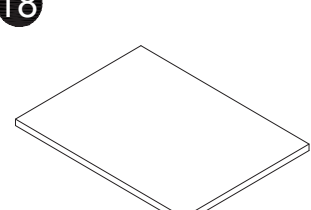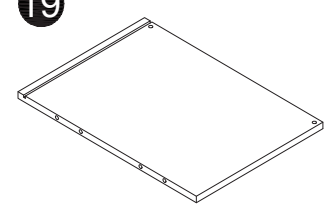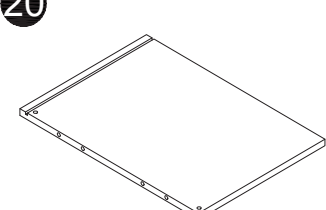
<div>1</div>  <div>1 pc</div>	<div>2</div>  <div>1 pc</div>	<div>3</div>  <div>1 pc</div>	<div>4</div>  <div>1 pc</div>
<div>5</div>  <div>1 pc</div>	<div>6</div>  <div>1 pc</div>	<div>7</div>  <div>1 pc</div>	<div>8</div>  <div>1 pc</div>
<div>9</div>  <div>1 pc</div>	<div>10</div>  <div>1 pc</div>	<div>11</div>  <div>1 pc</div>	<div>12</div>  <div>1 pc</div>
<div>13</div>  <div>1 pc</div>	<div>14</div>  <div>1 pc</div>	<div>15</div>  <div>1 pc</div>	<div>16</div>  <div>1 pc</div>
<div>17</div>  <div>4 pcs</div>	<div>18</div>  <div>2 pcs</div>	<div>19</div>  <div>1 pc</div>	<div>20</div>  <div>1 pc</div>












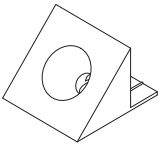


Parts List

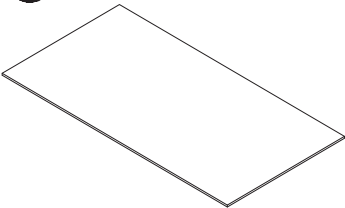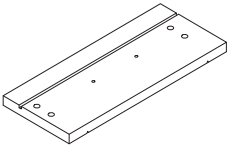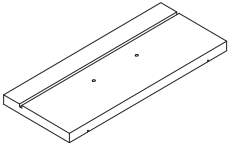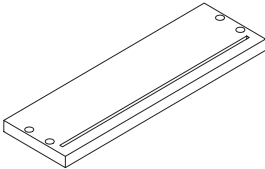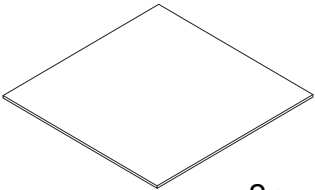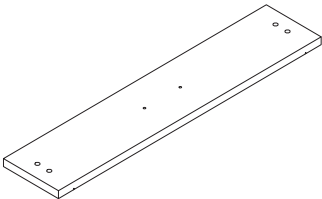
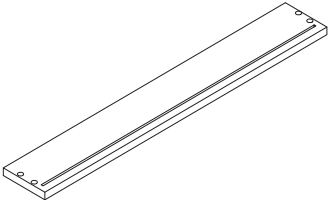
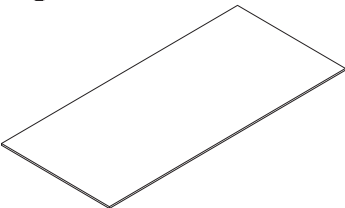
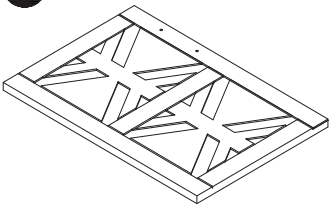
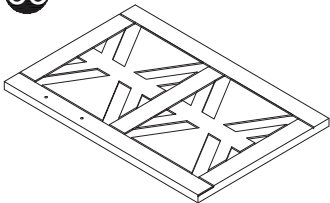
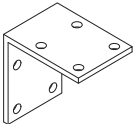
<div>21</div> <div></div> <div>2 pcs</div>	<div>22</div> <div></div> <div>2 pcs</div>	<div>23</div> <div></div> <div>2 pcs</div>	<div>24</div> <div></div> <div>1 pc</div>
<div>25</div> <div></div> <div>1 pc</div>	<div>26</div> <div></div> <div>6 pc</div>	<div>27</div> <div></div> <div>2 pcs</div>	<div>28</div> <div></div> <div>2 pcs</div>
<div>29</div> <div></div> <div>1 pc</div>	<div>30</div> <div></div> <div>1 pc</div>	<div>31</div> <div></div> <div>1 pc</div>	<div>32</div> <div></div> <div>1 pc</div>
<div>33</div> <div></div> <div>1 pc</div>	<div>34</div> <div></div> <div>4 pcs</div>		



## Hardware List

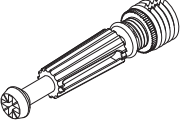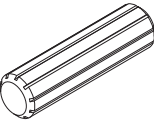A	B	C	D	E	F
					
M6x40mm	Ø15x12mm	Ø8x30mm	M6x25mm	Ø5x40mm	M4
75 pcs	75 pcs	43 pcs	13 pcs	9 pcs	1 pc

G	H	I	J	K	L
					
M3x65x30mm		M4x15	15x13x10mm	Ø3.5x14mm	Ø3x18mm
1 pc	5 pcs	11 pcs	23 pcs	93 pcs	23 pcs

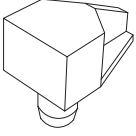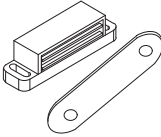
M	N	O	P	Q	R
					
	Ø14x4mm		46x16x13mm	Ø3.5x12mm	290mm
9 pcs	9 pcs	4 pcs	2 pcs	4 pcs	6 pcs




## Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.

Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

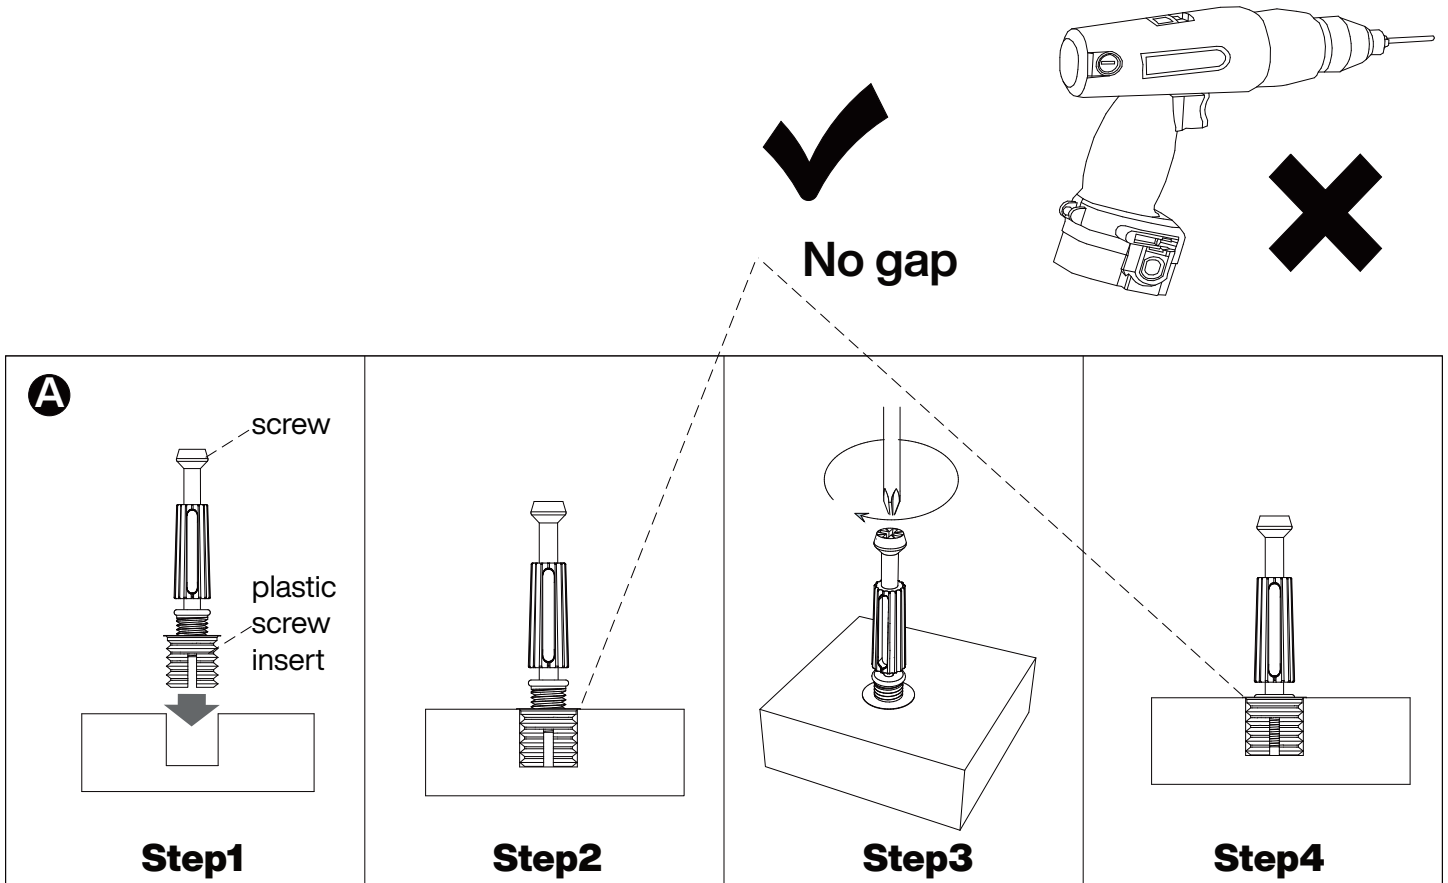

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

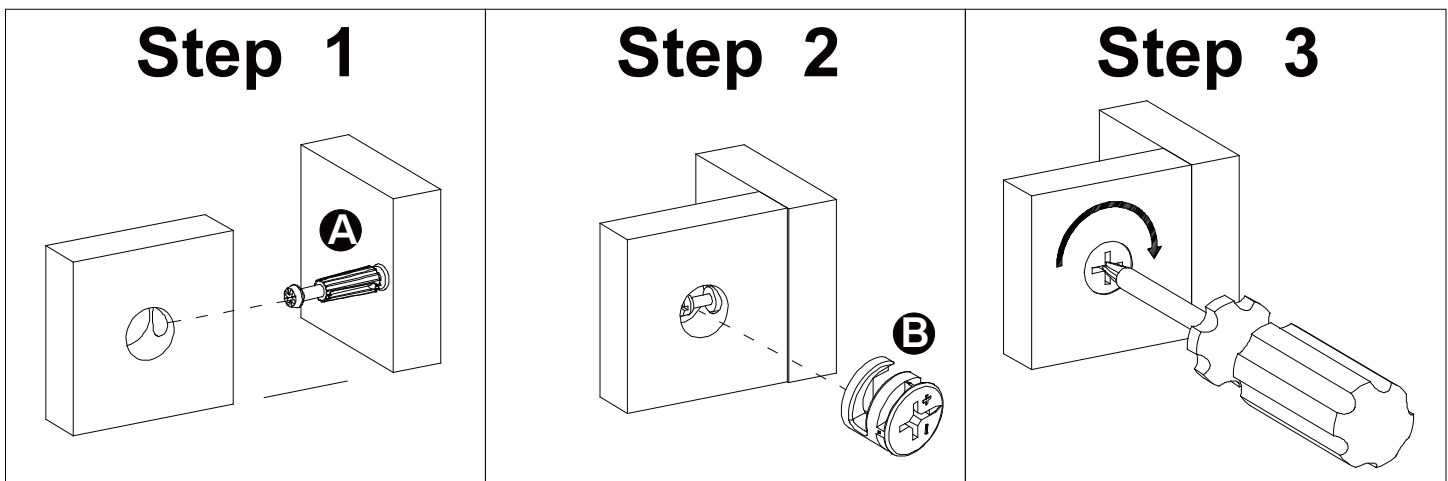





Please split component "R" into "R-1" and "R-2" before assembling the slide and then proceed to the next step of assembly

## Step 1

Pull apart component "R" to each side, and then gently push up the lever of component "R-2"







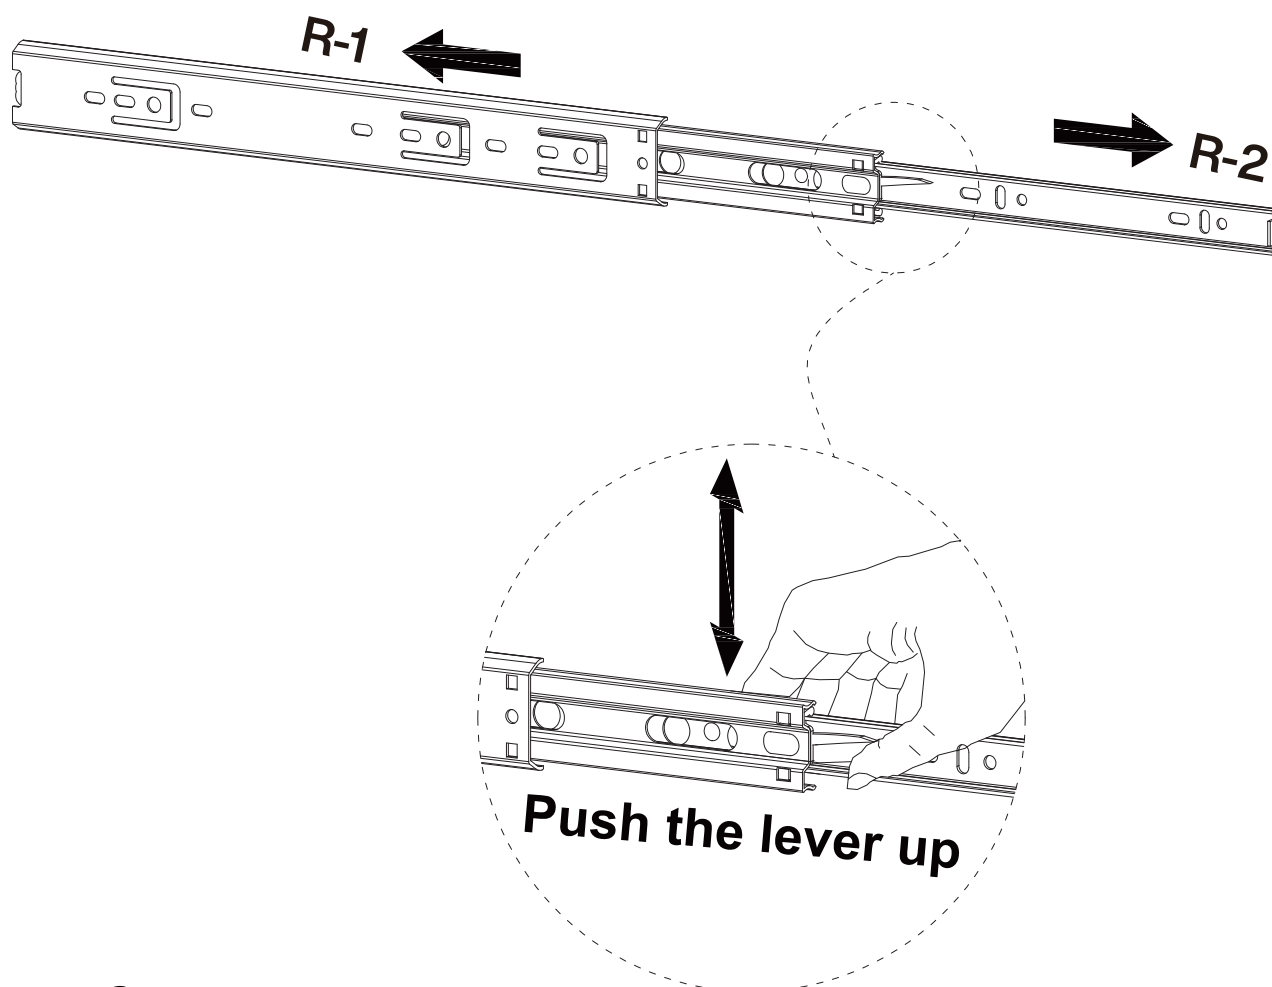


## Step 2 Split component "R-1" and "R-2"

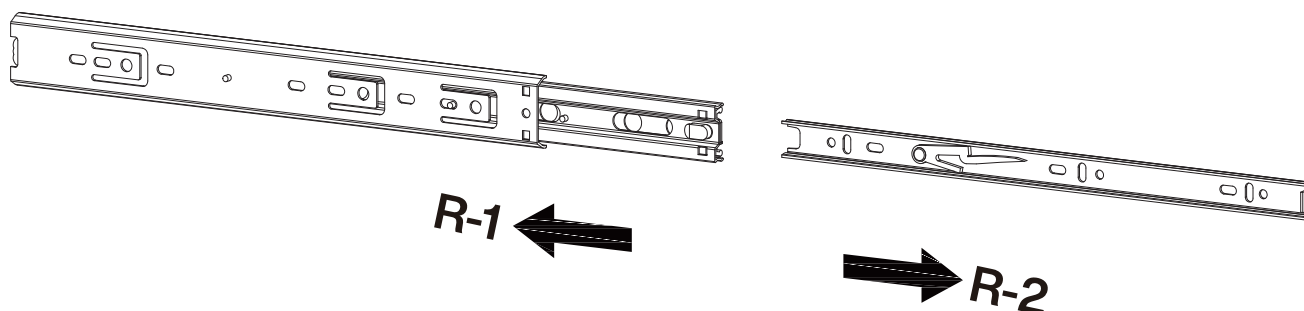





1

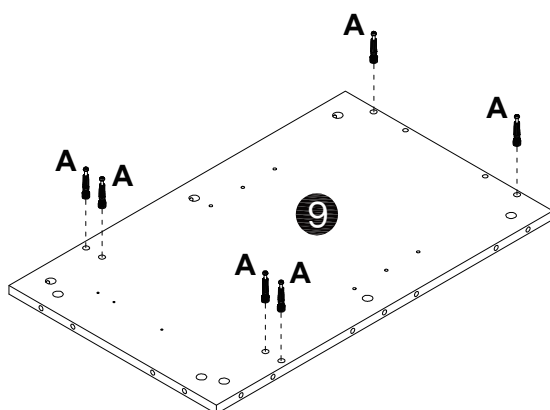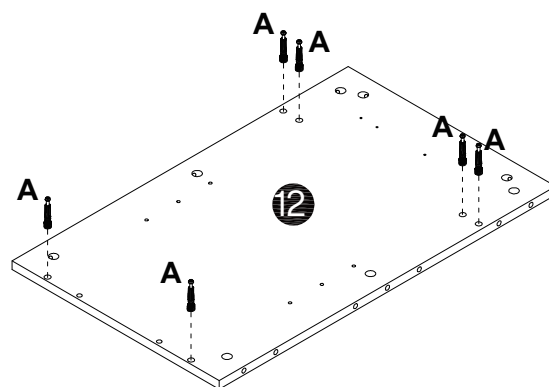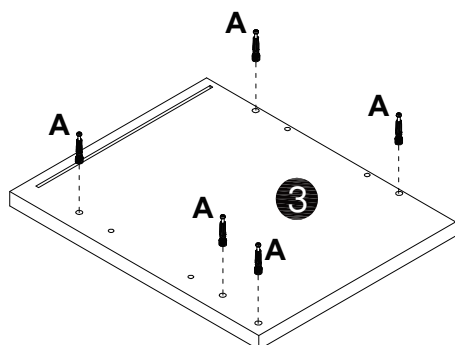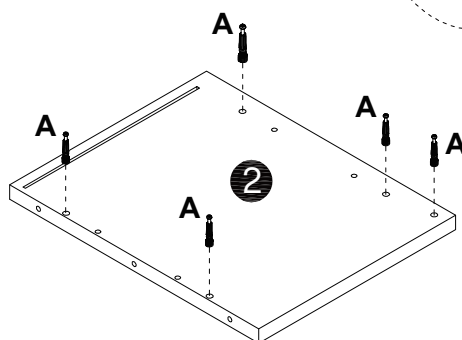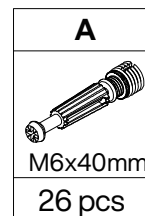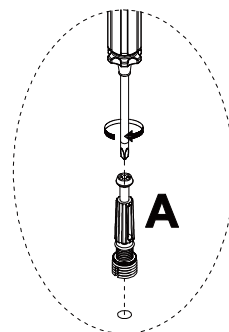
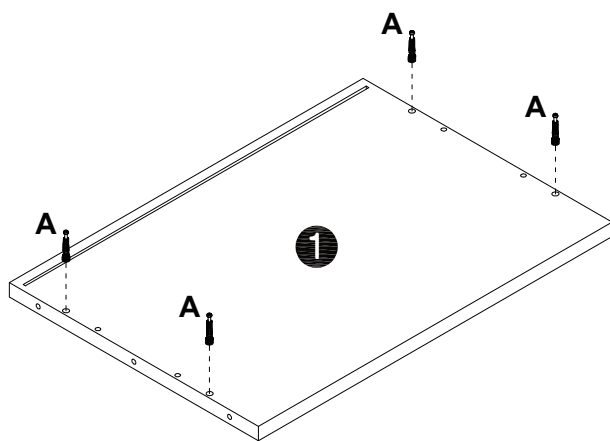








2


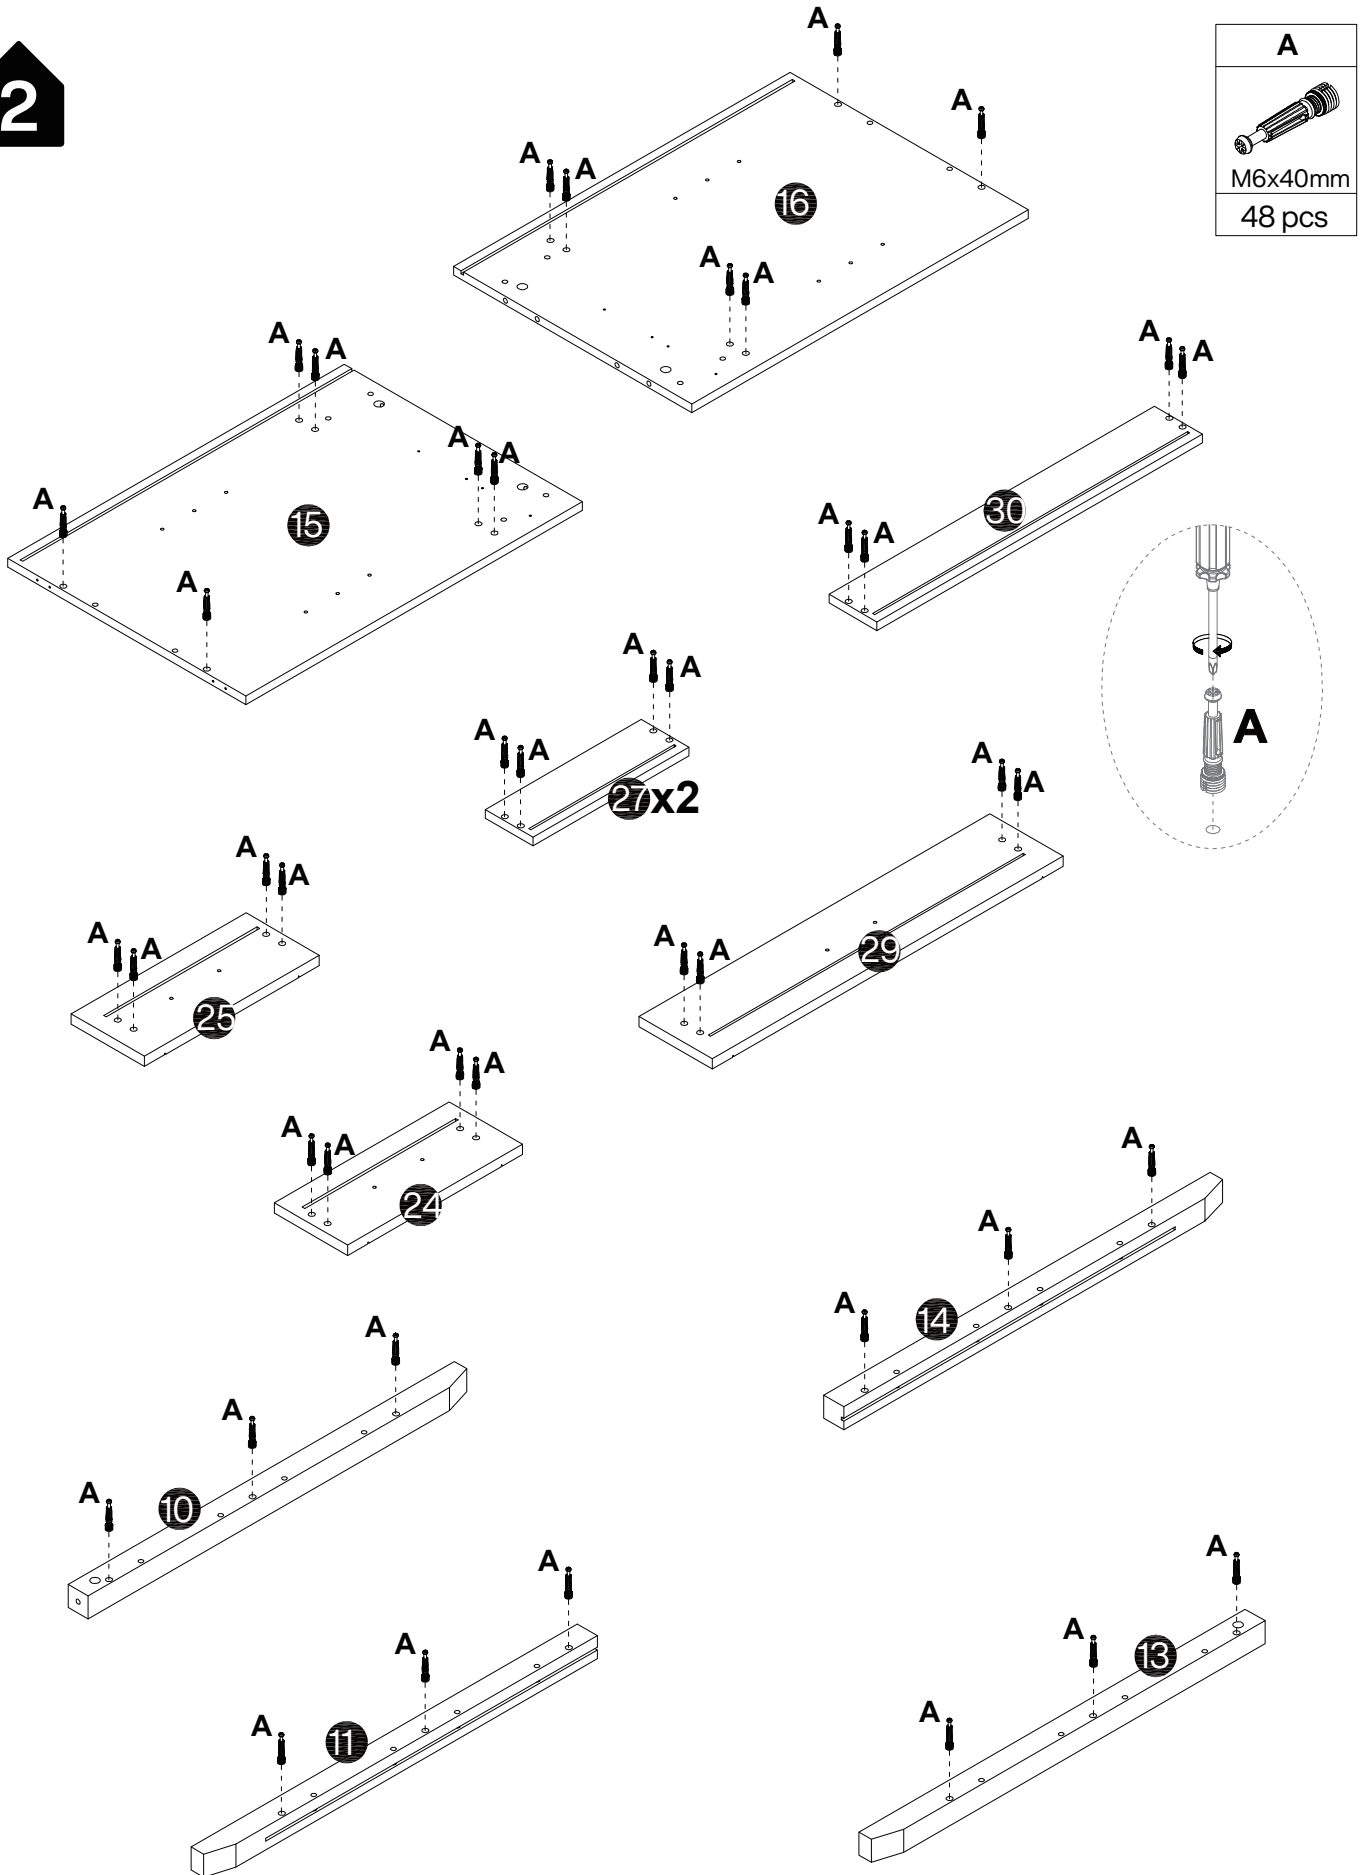


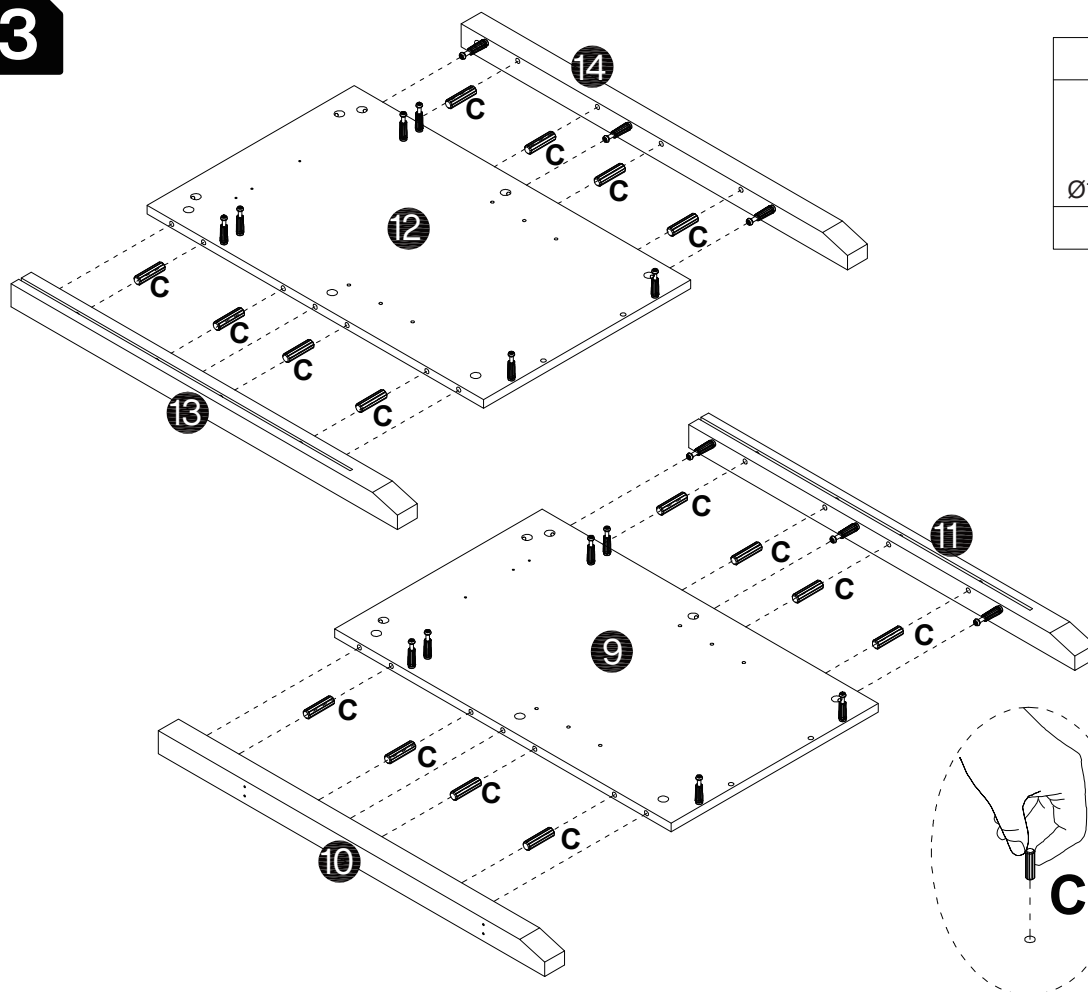**3**


B	C
	
Ø15x12mm	Ø8x30mm
12 pcs	16 pcs

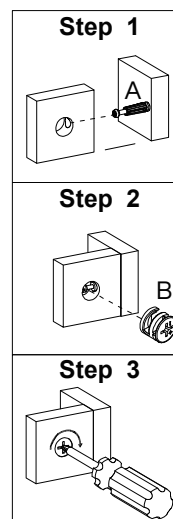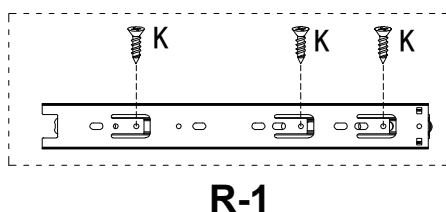

**4**


K	R-1
	
Ø3.5x14mm	290mm
6 pcs	2 pcs

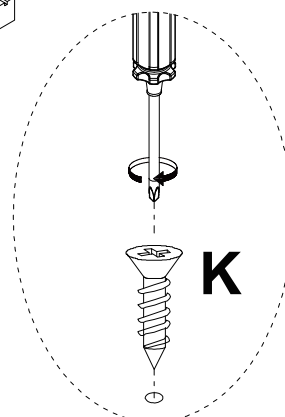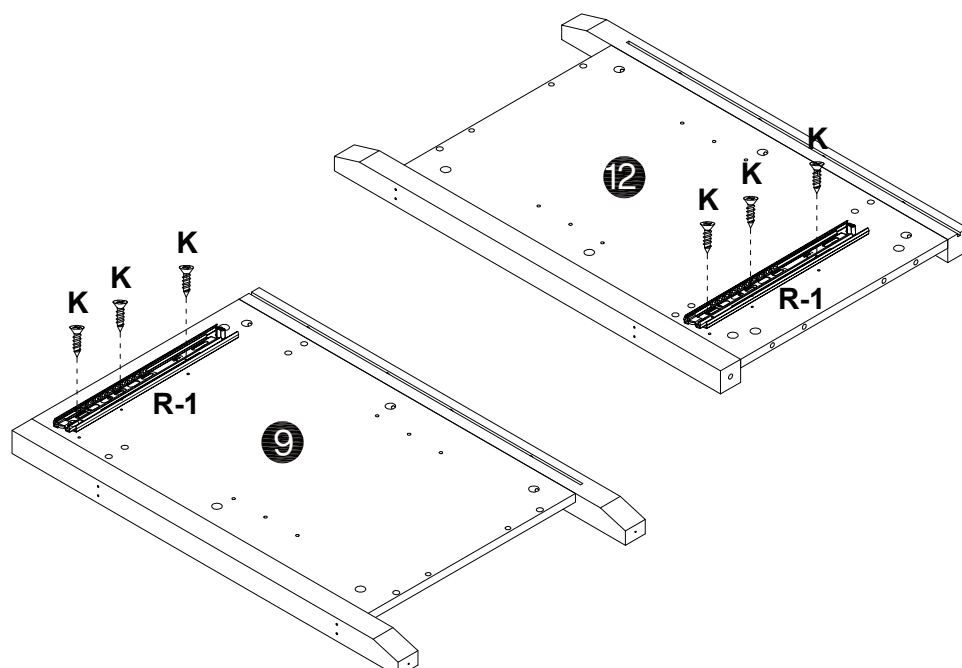




5

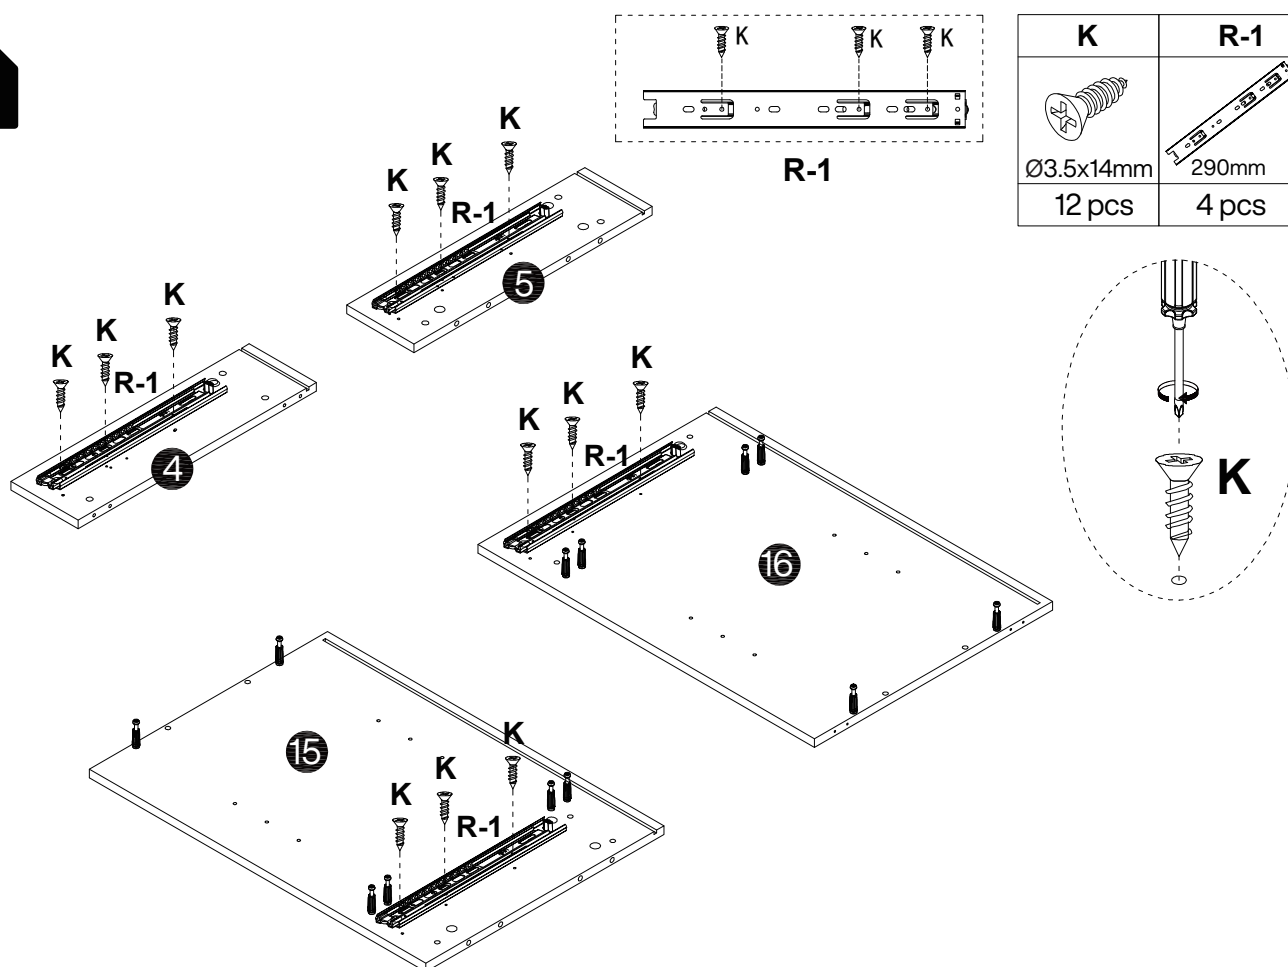



6

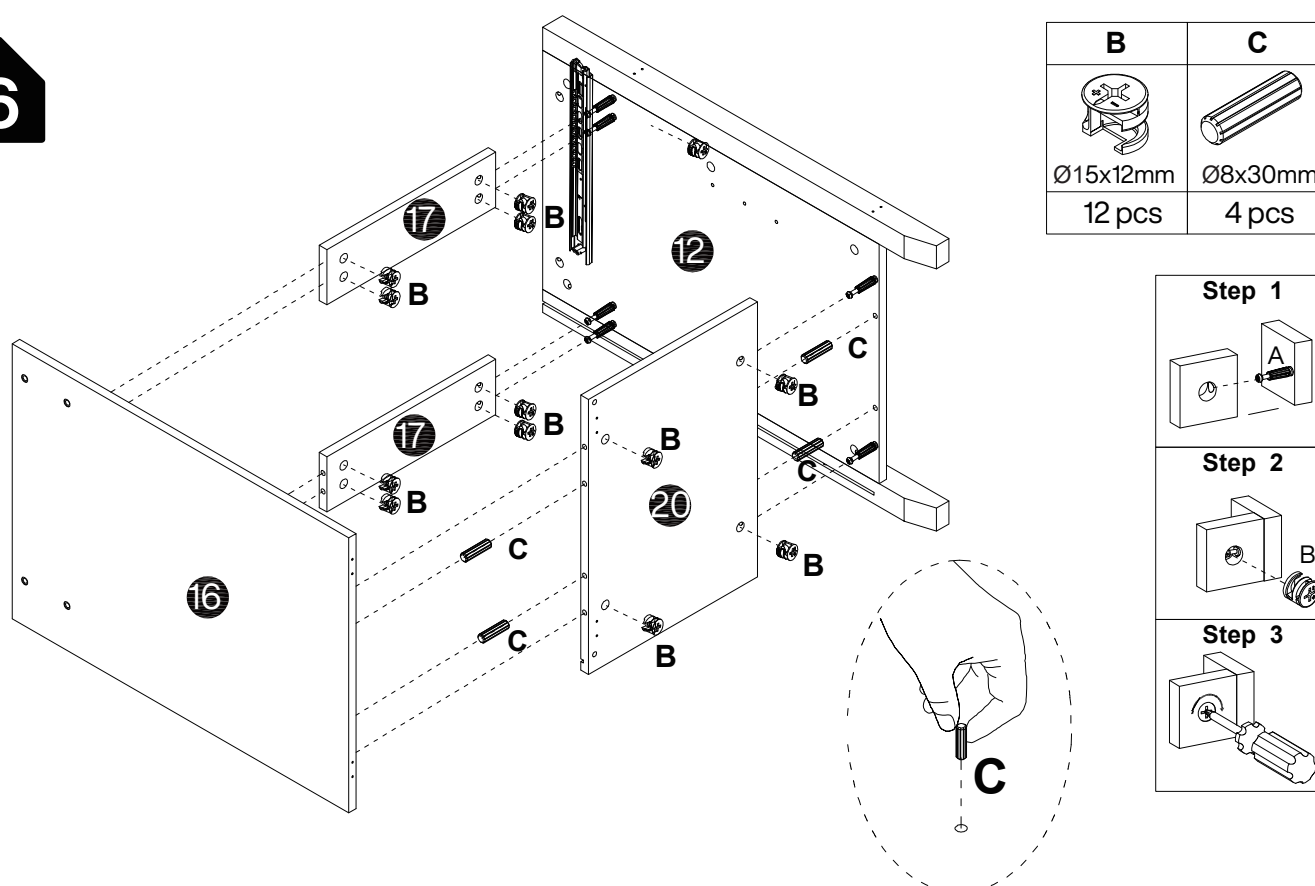





7

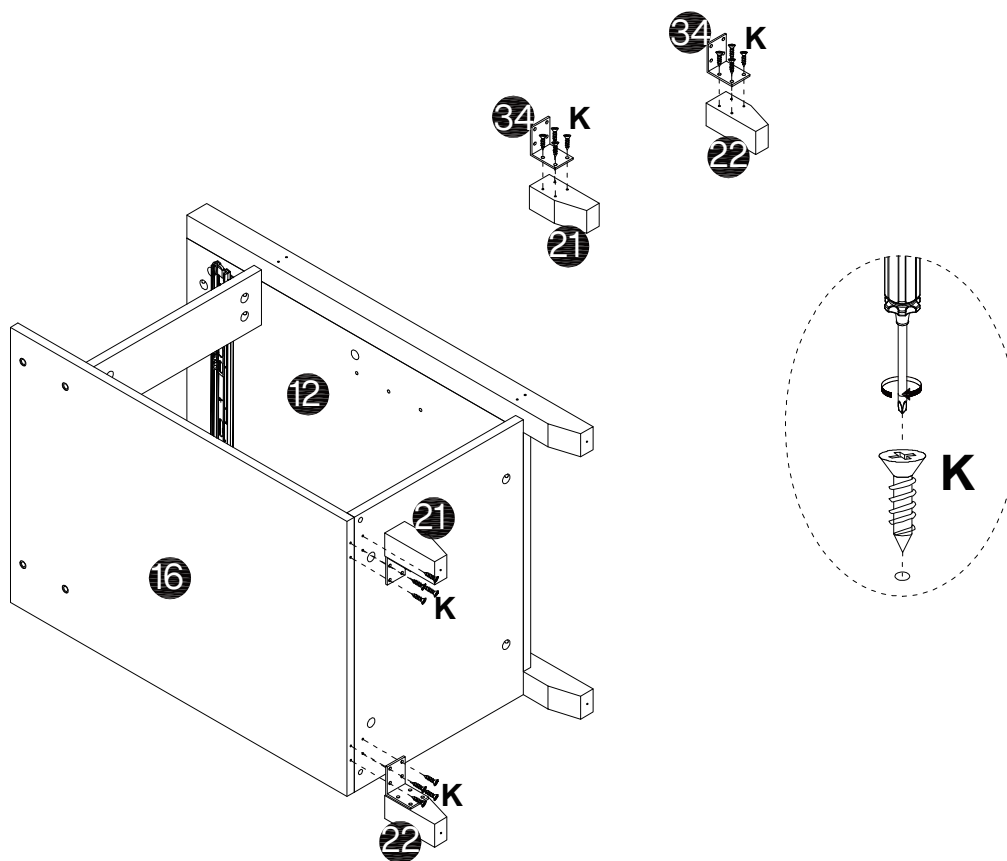


K

Ø3.5x14mm
16 pcs

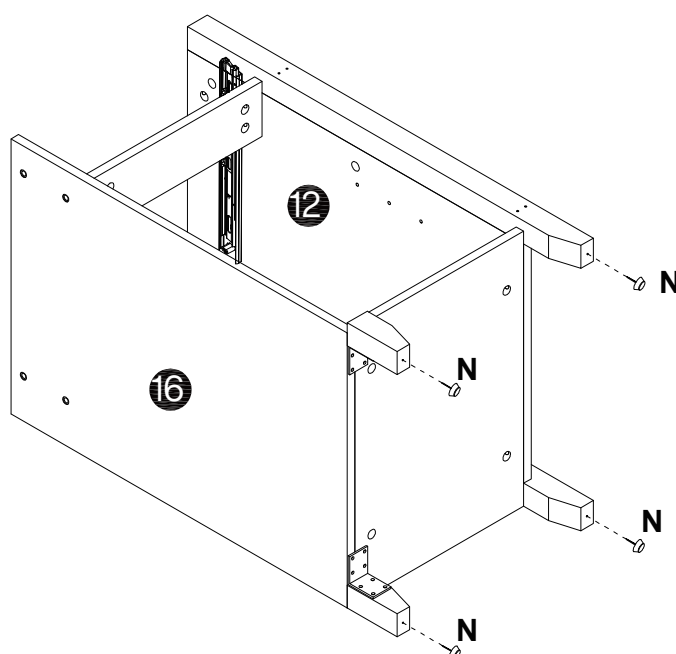8

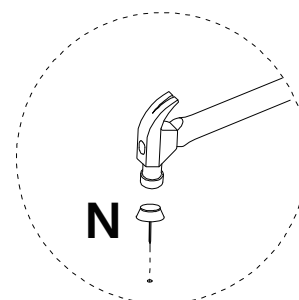


N

Ø14x4mm
4 pcs






**⚠ Caution! Tap lightly**

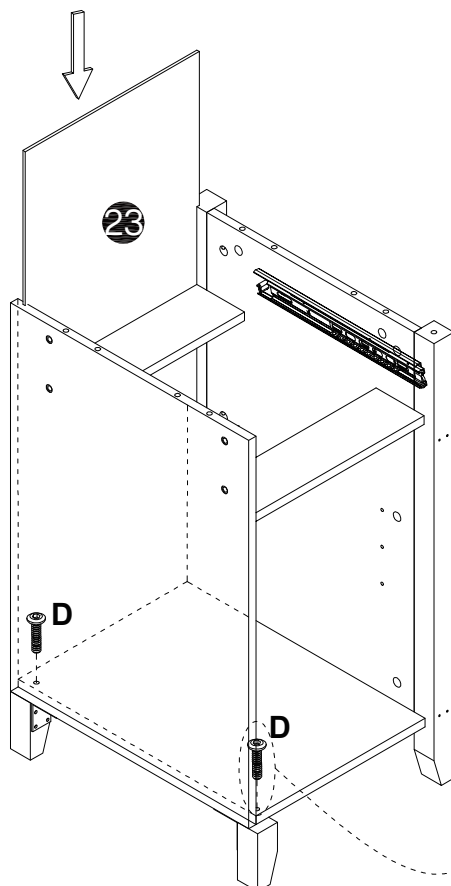


9







D	F
	
M6x25mm	M4
2 pcs	1 pc

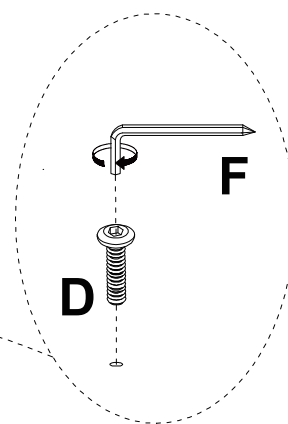

10

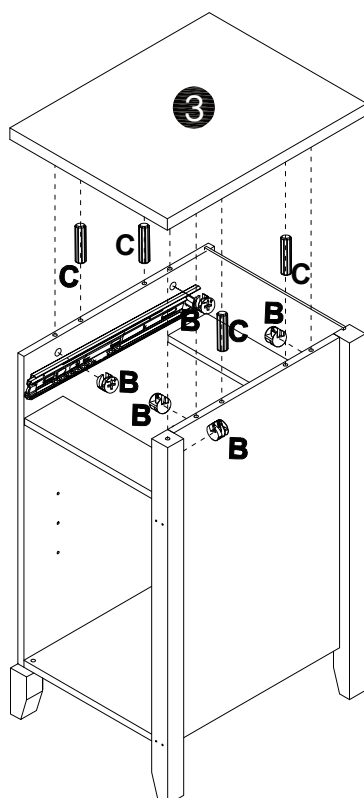




B	C
	
Ø15x12mm	Ø8x30mm
5 pcs	4 pcs

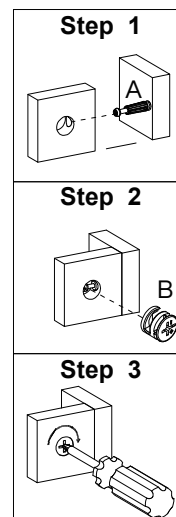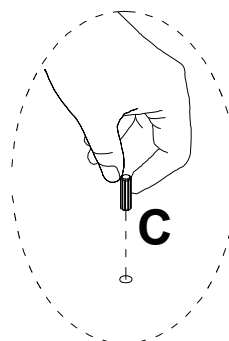




11

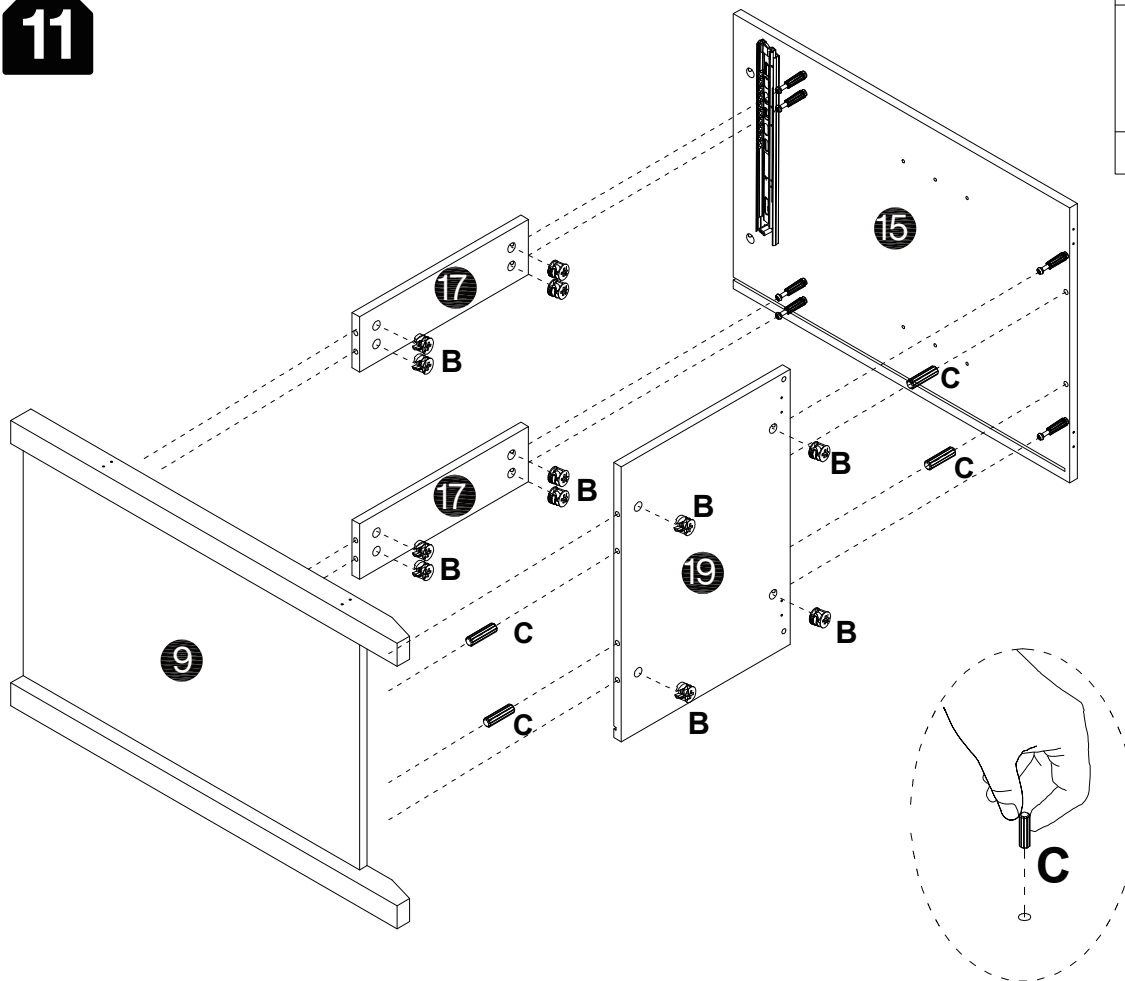


B	C
	
Ø15x12mm	Ø8x30mm
12 pcs	4 pcs


Step 1

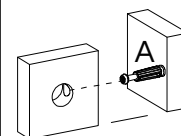


Step 2

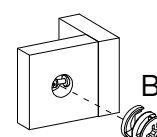


Step 3

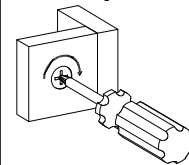

12

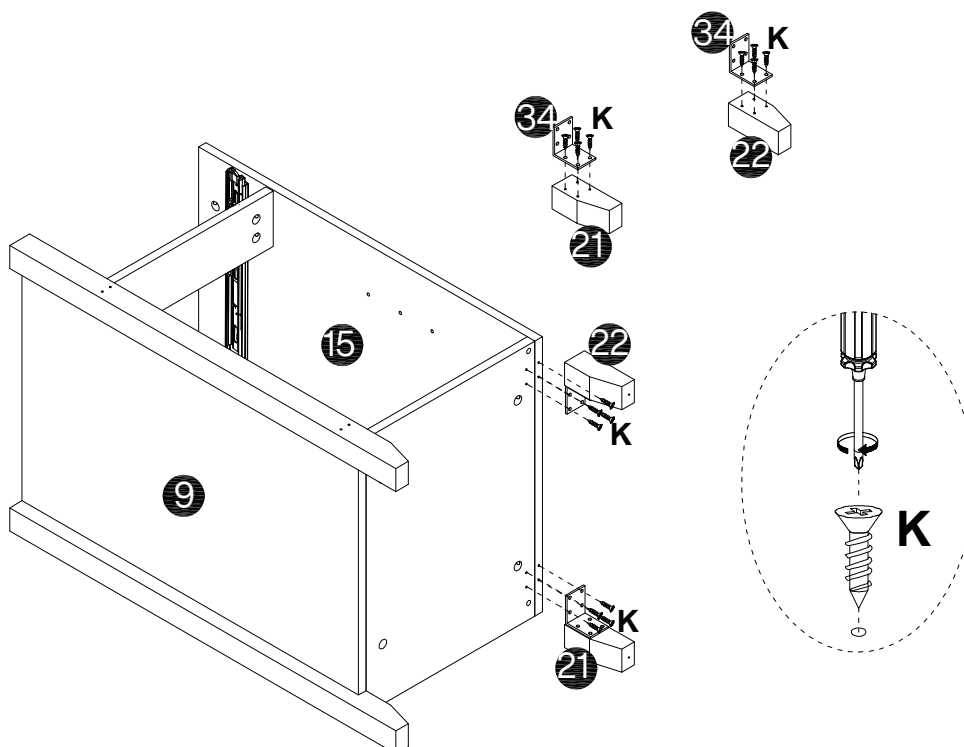




K

Ø3.5x14mm
16 pcs




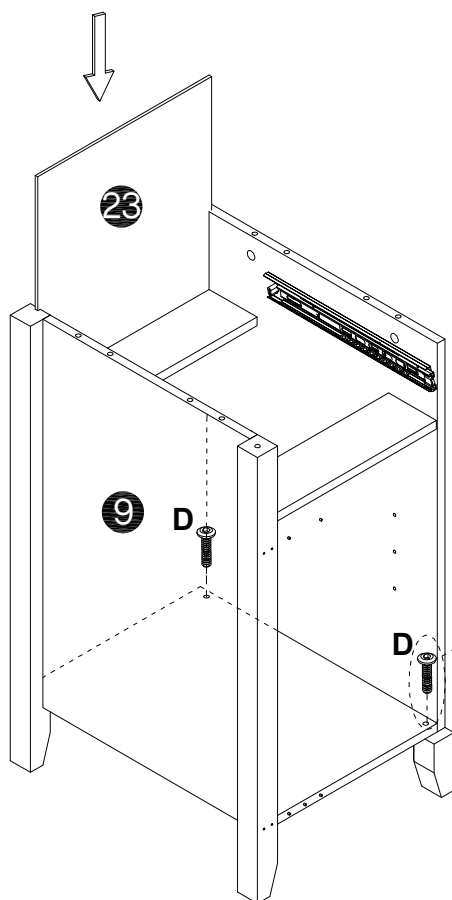



13






D	F
	
M6x25mm	M4
2 pcs	1 pc

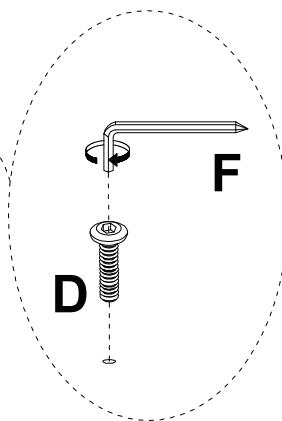

14

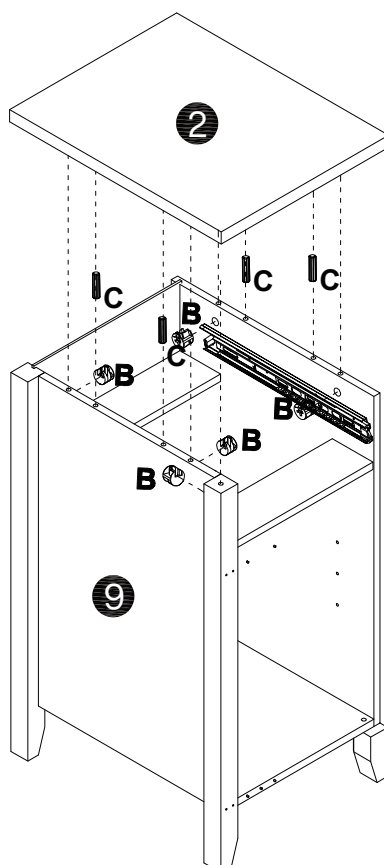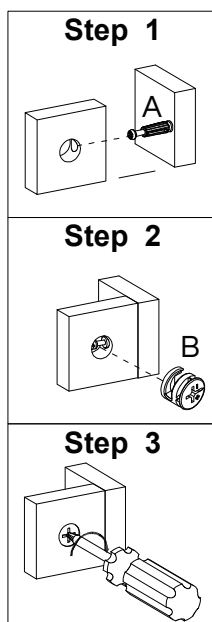




B	C
	
Ø15x12mm	Ø8x30mm
5 pcs	4 pcs

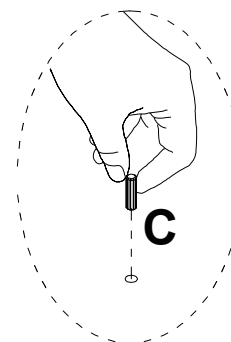





**15**

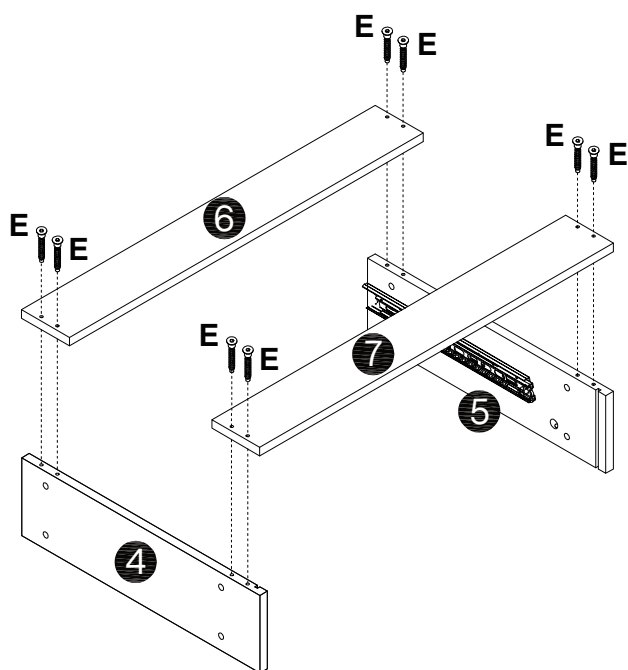

E	F
	
Ø5x40mm	M4
8 pcs	1 pc

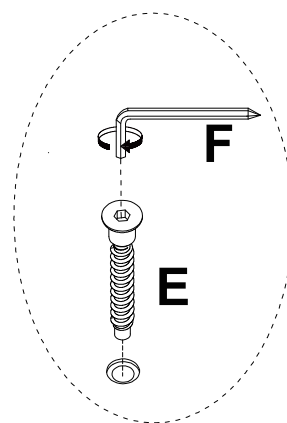




**16**


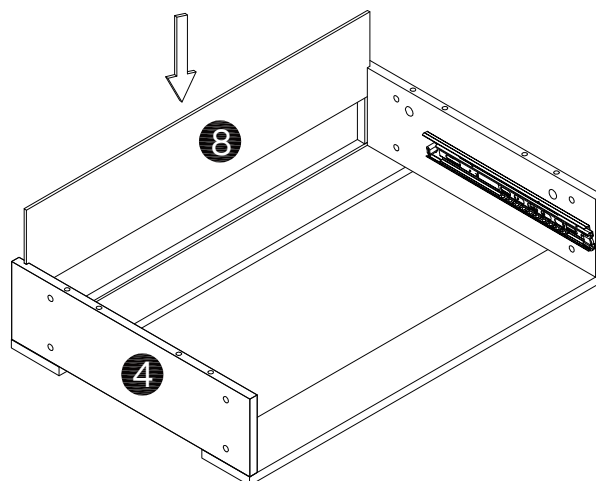





**17**

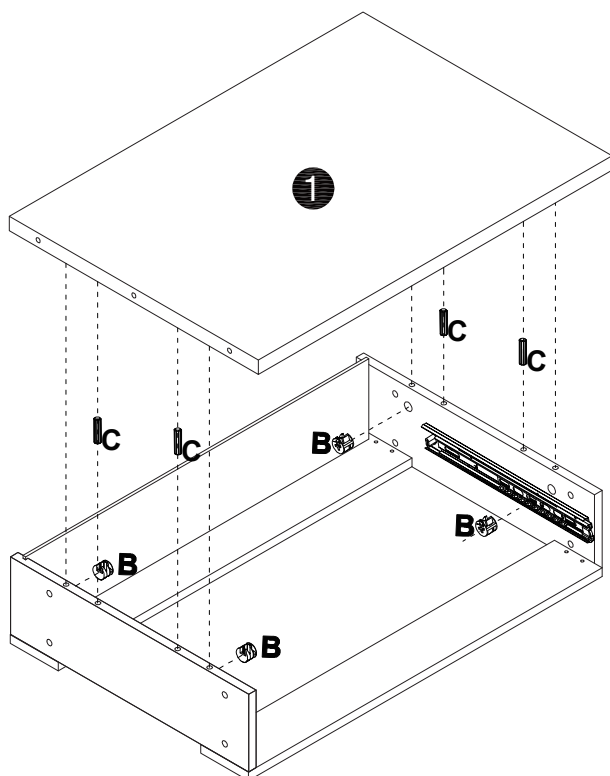




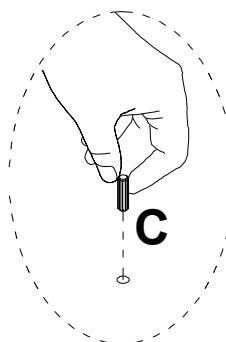
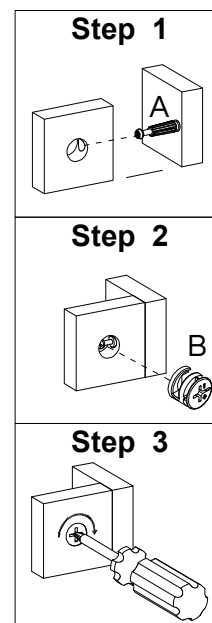
B	C
	
Ø15x12mm	Ø8x30mm
4 pcs	4 pcs

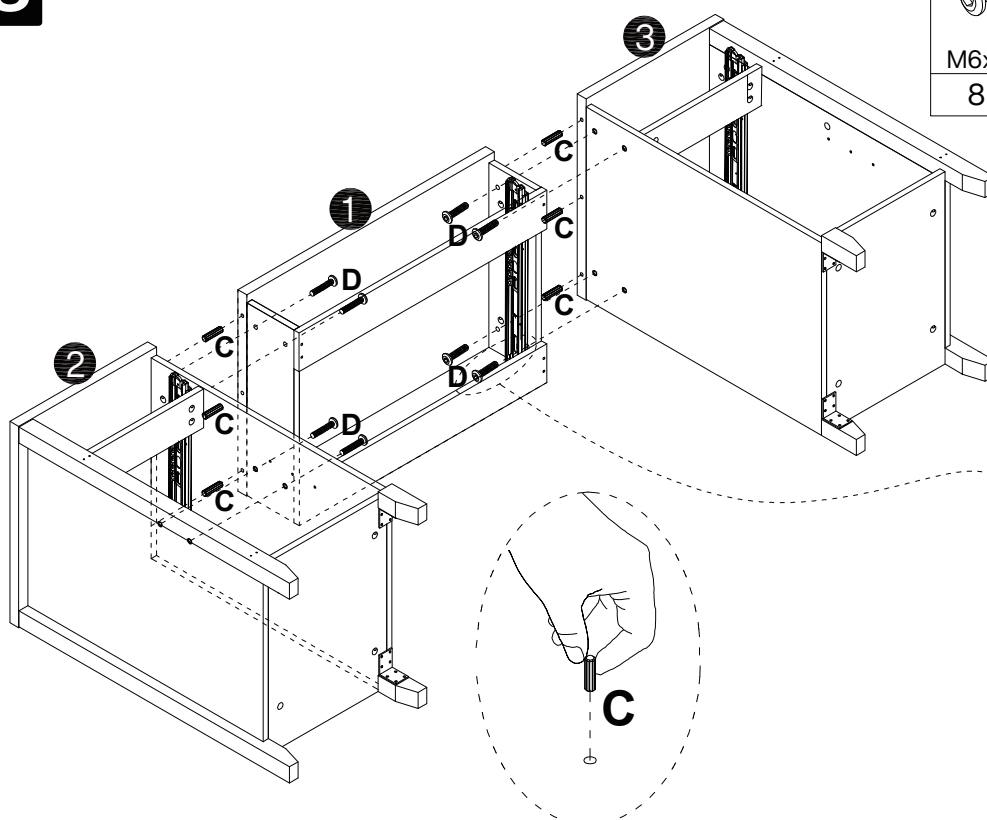

**18**






D	F	C
		
M6x25mm	M4	Ø8x30mm
8 pcs	1 pc	6 pcs

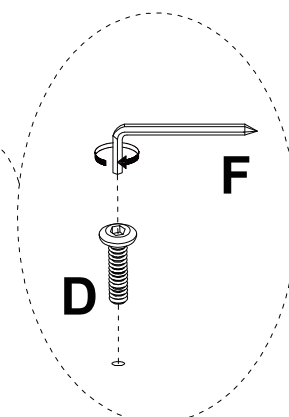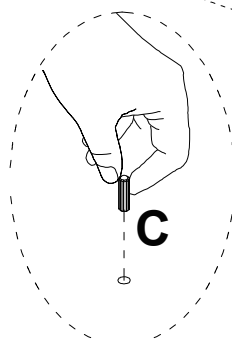






19

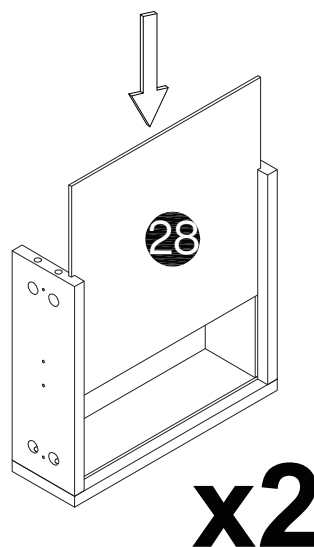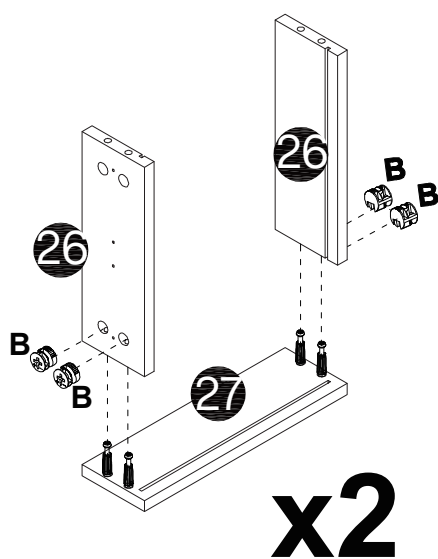


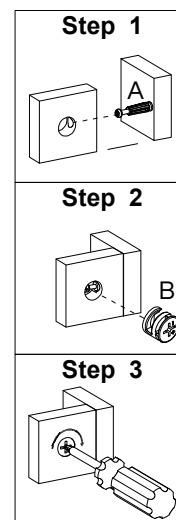





B

Ø15x12mm
8 pcs

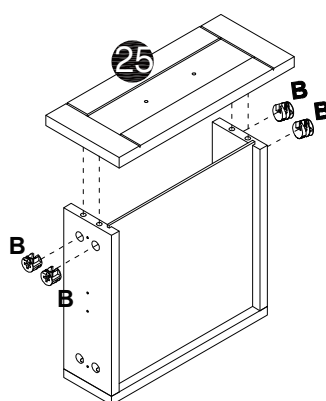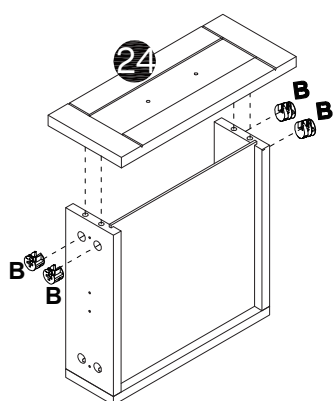

20

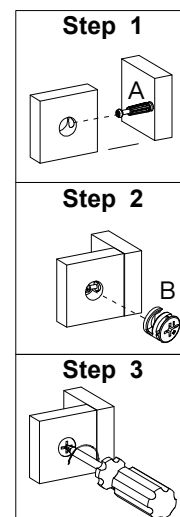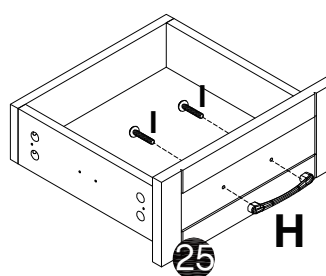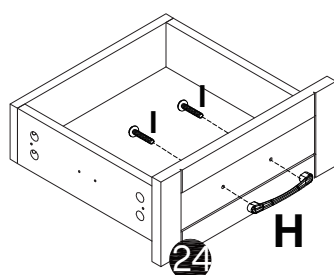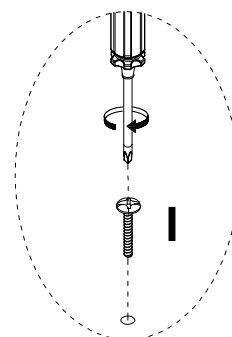




H	I	B
		
2 pcs	M4x15	Ø15x12mm
2 pcs	4 pcs	8 pcs









21

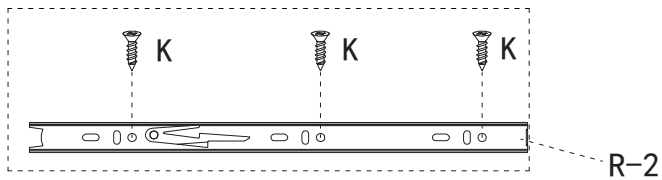



K	R-2
	
Ø3.5x14mm	290mm
12 pcs	4 pcs

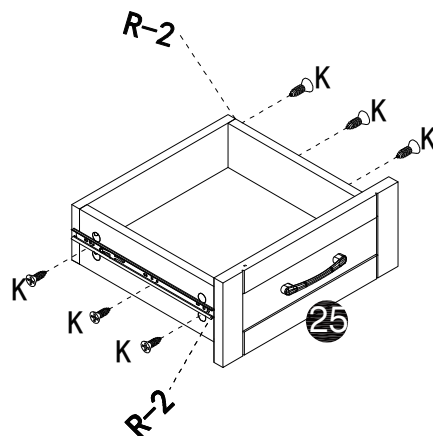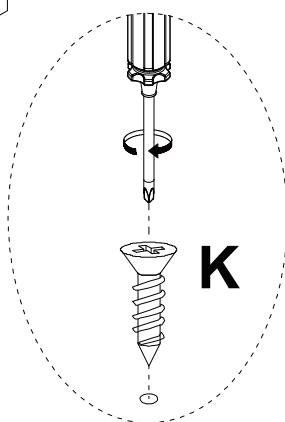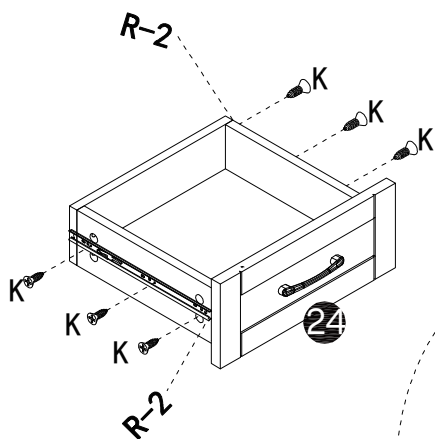

22

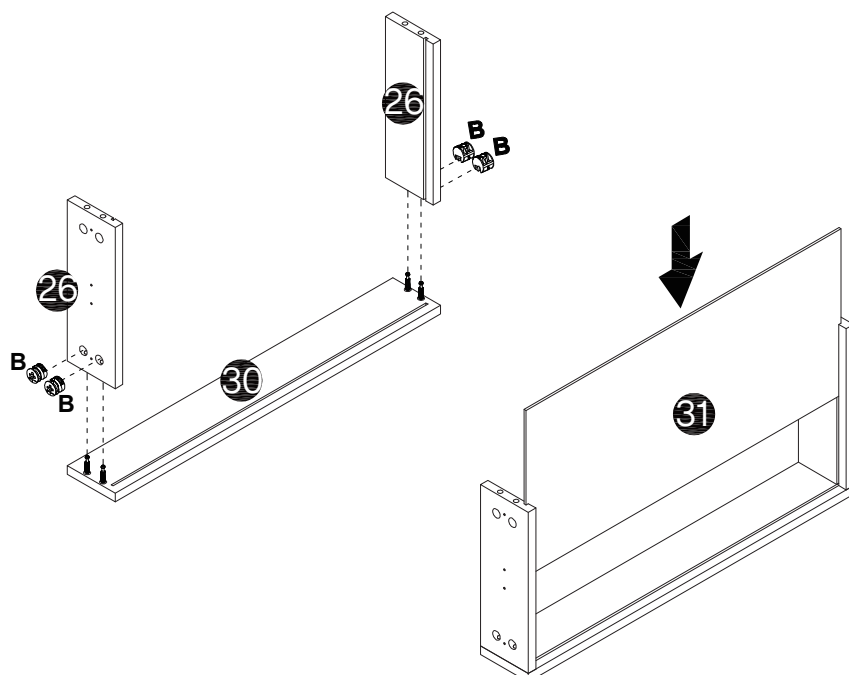


B

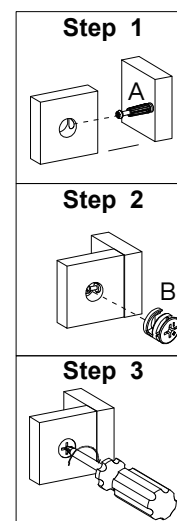Ø15x12mm
4 pcs




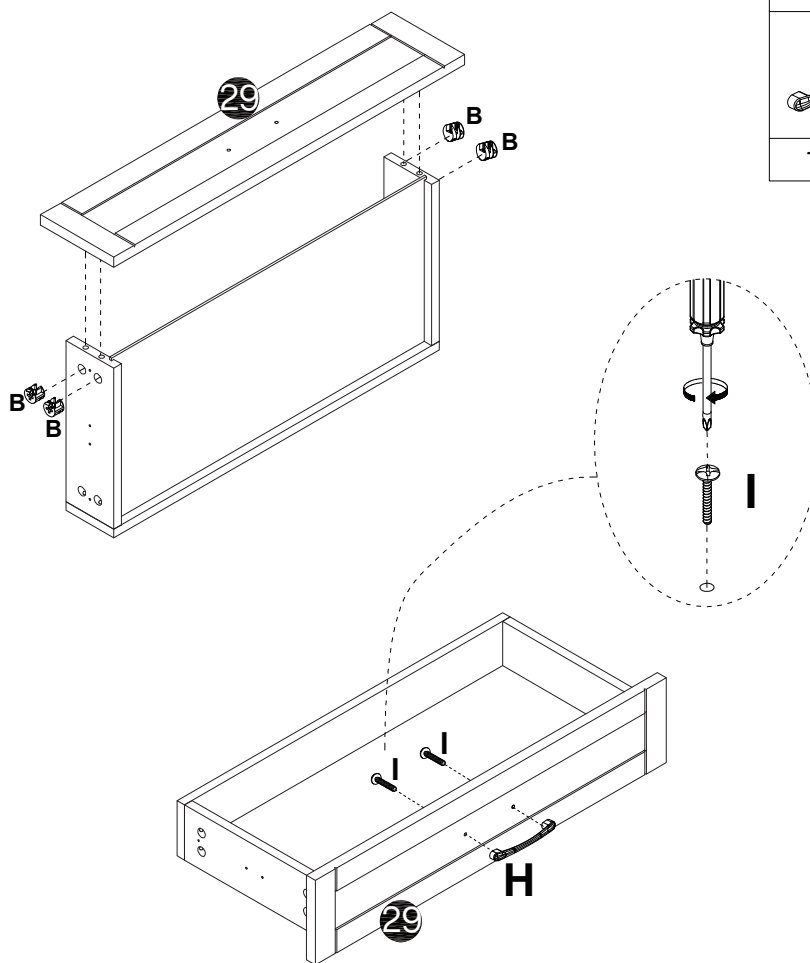


23




H	I	B
1pc	M4x15 2pc	Ø15x12mm 4pcs

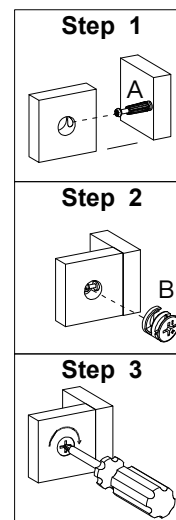

24

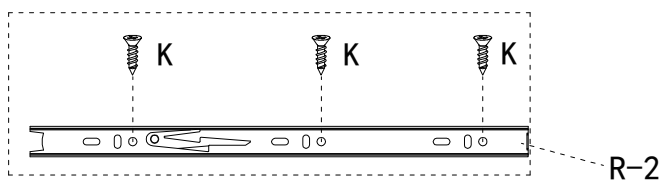




K	R-2
Ø3.5x14mm 6 pcs	290mm 2 pcs

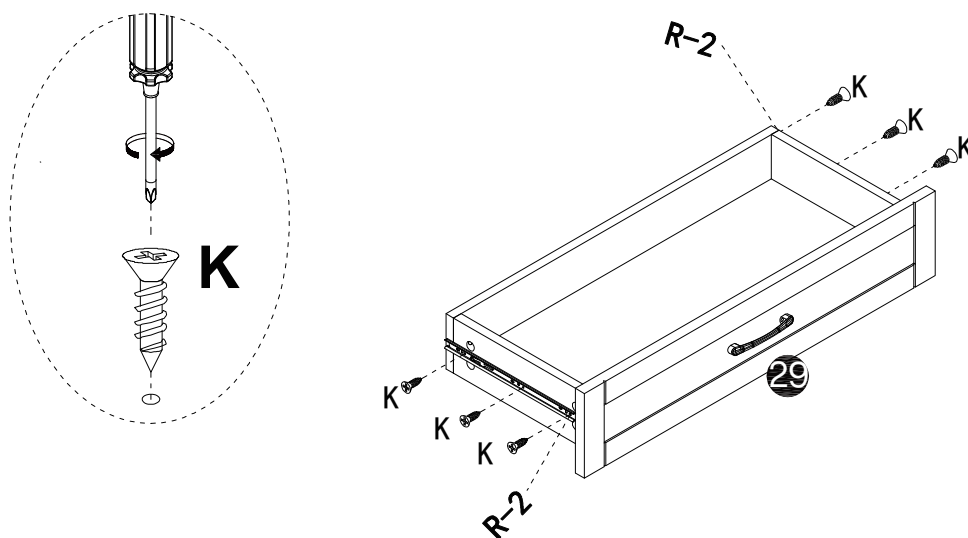






**25**

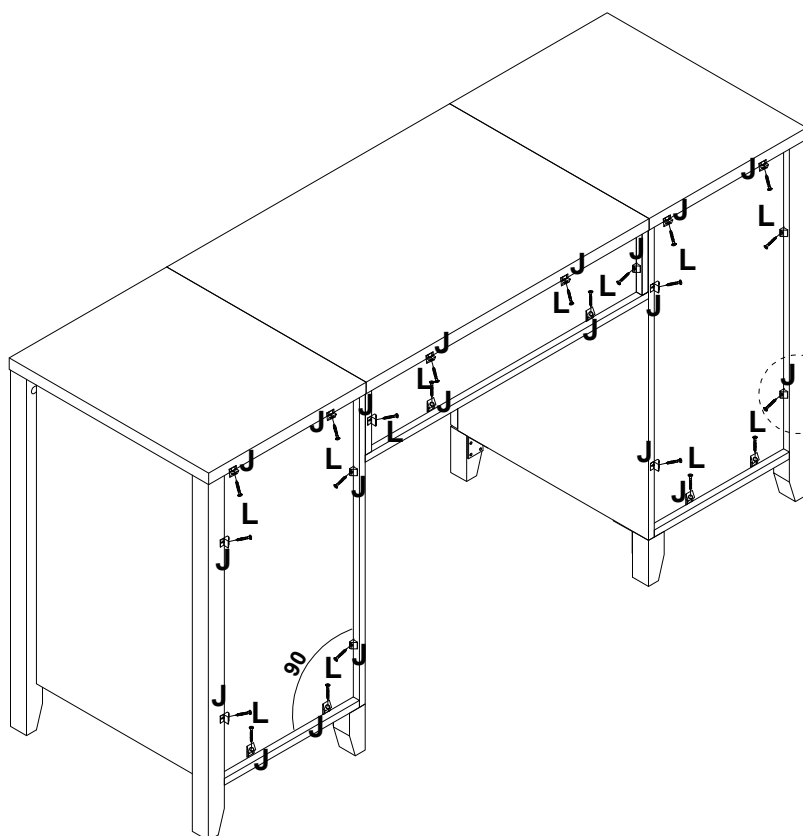

J	L
	
15x13x10mm	Ø3x18mm
22 pcs	22 pcs


**26**

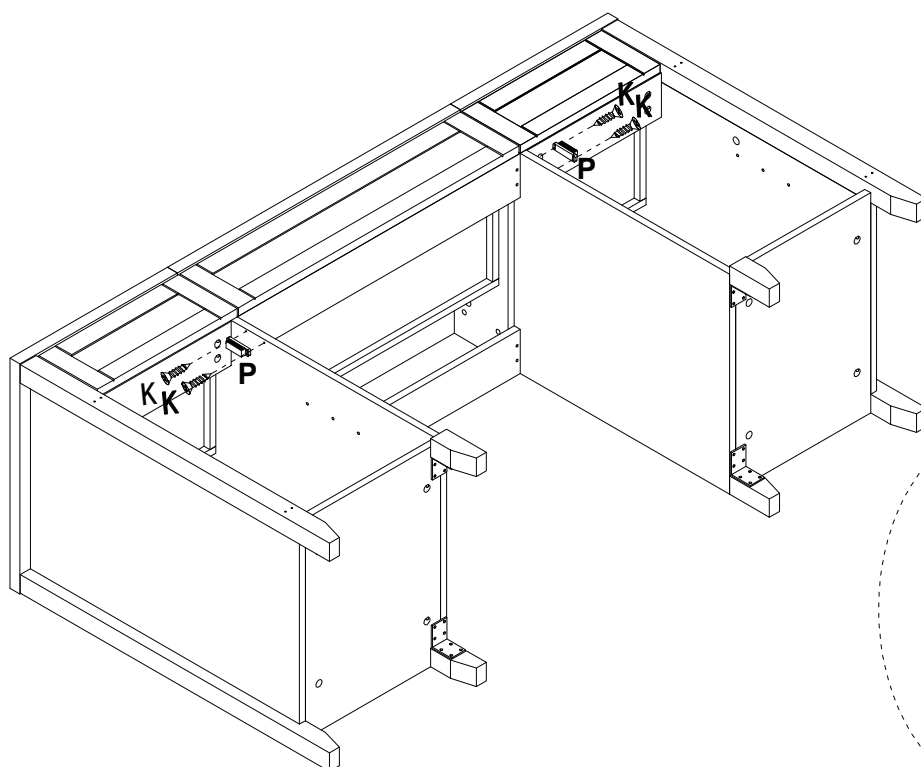


K	P
	
Ø3.5x14mm	46x16x13mm
4 pcs	2 pcs




27

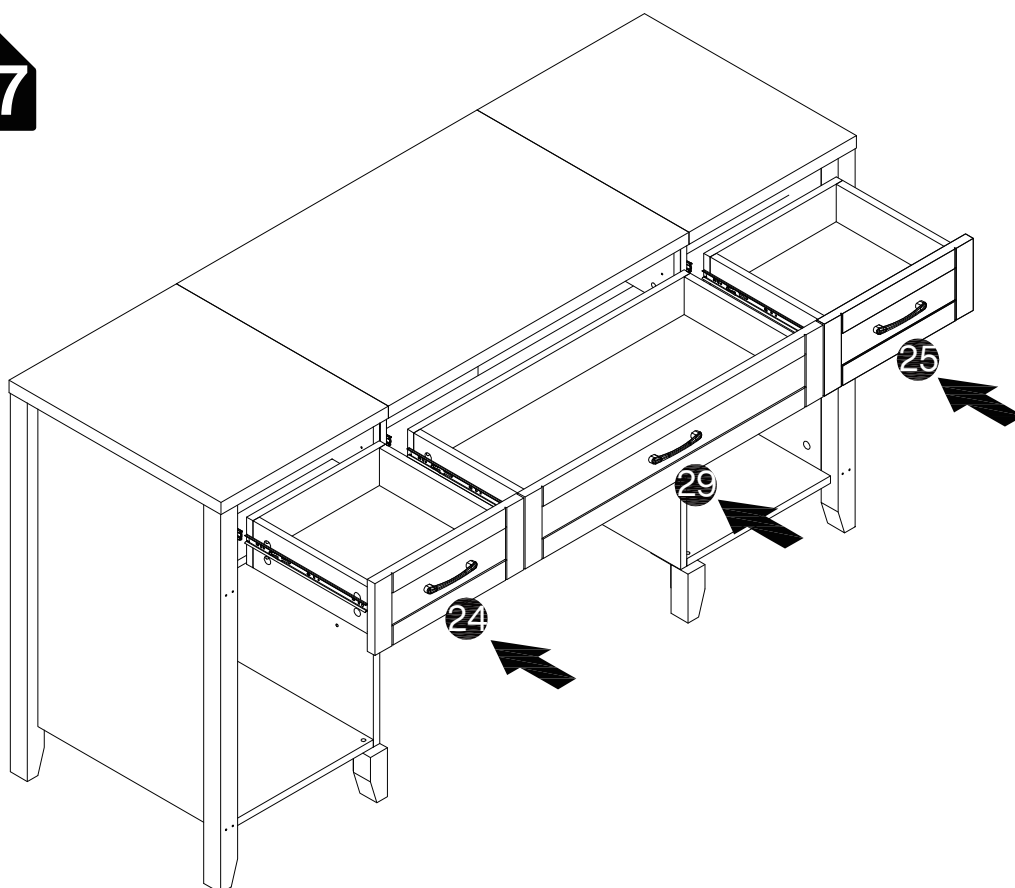


Step 1

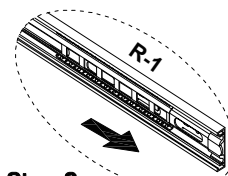

Step 2

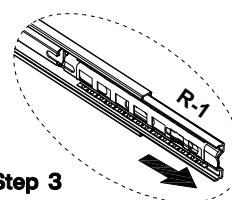


Step 3

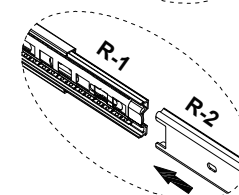

Before installation, slide the inner iron pieces of #R-1 to the outermost side. Then align it with #R-2 and gently push it inward to complete the slide installation.

28


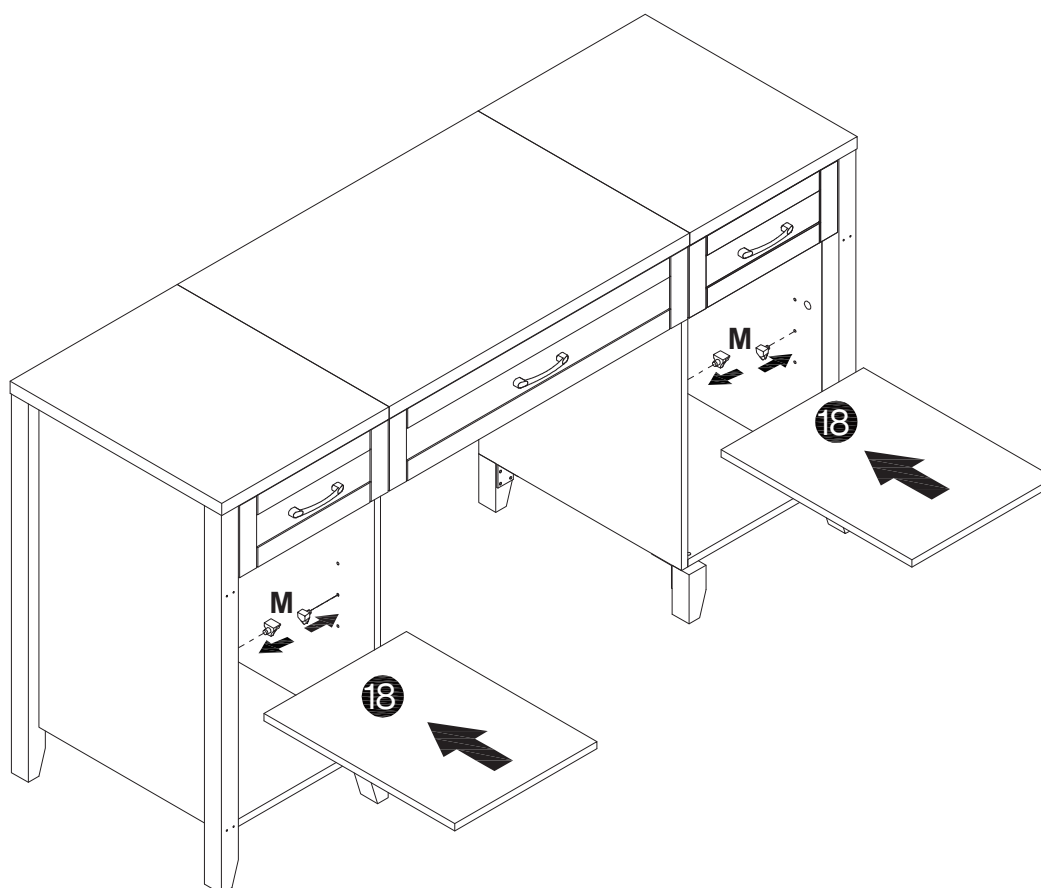


M




8 pcs

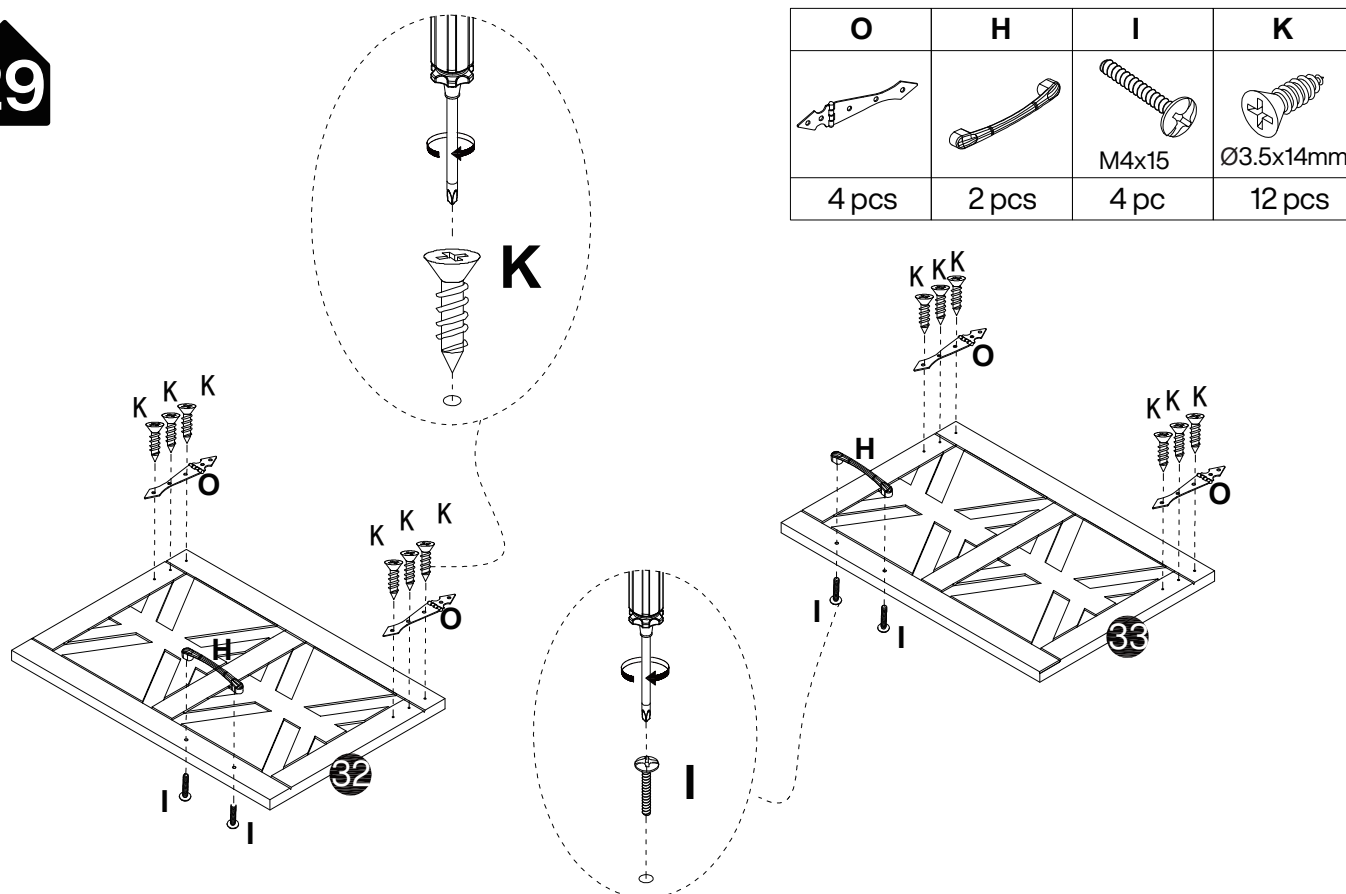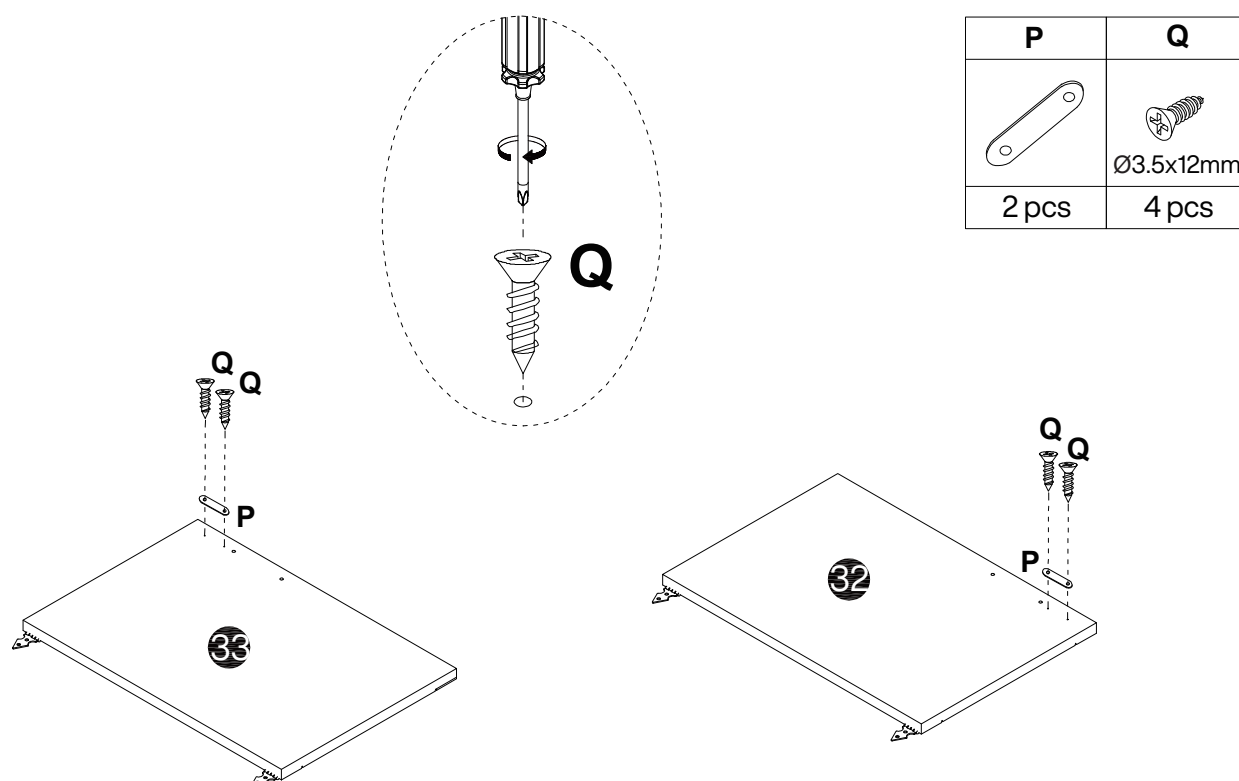



**29**

**30**

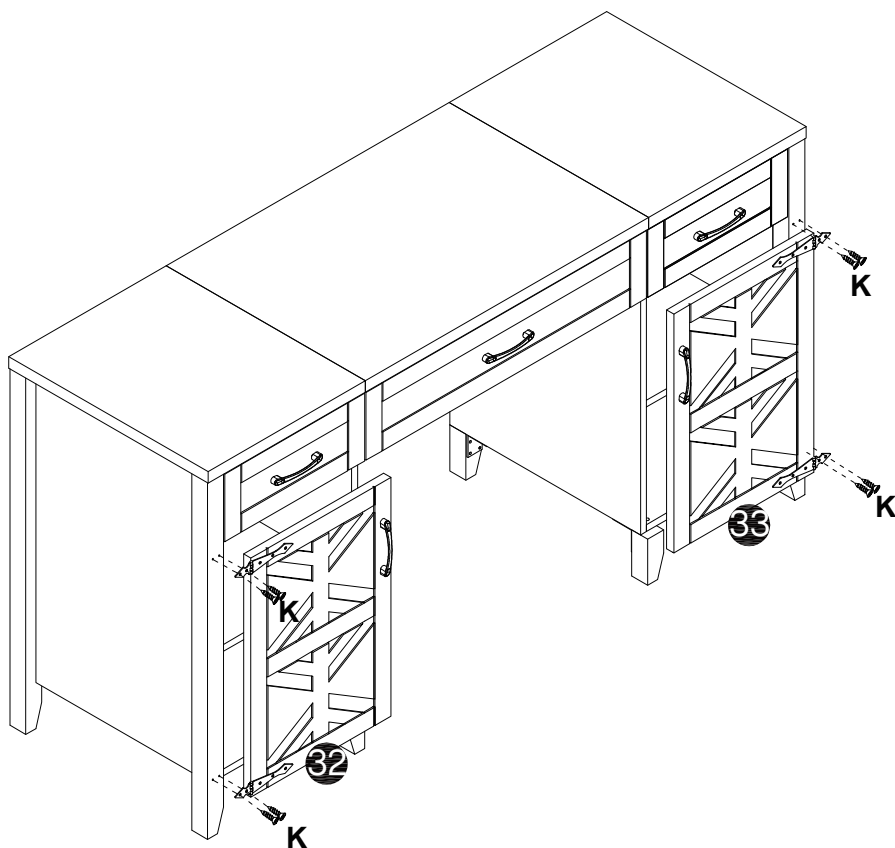


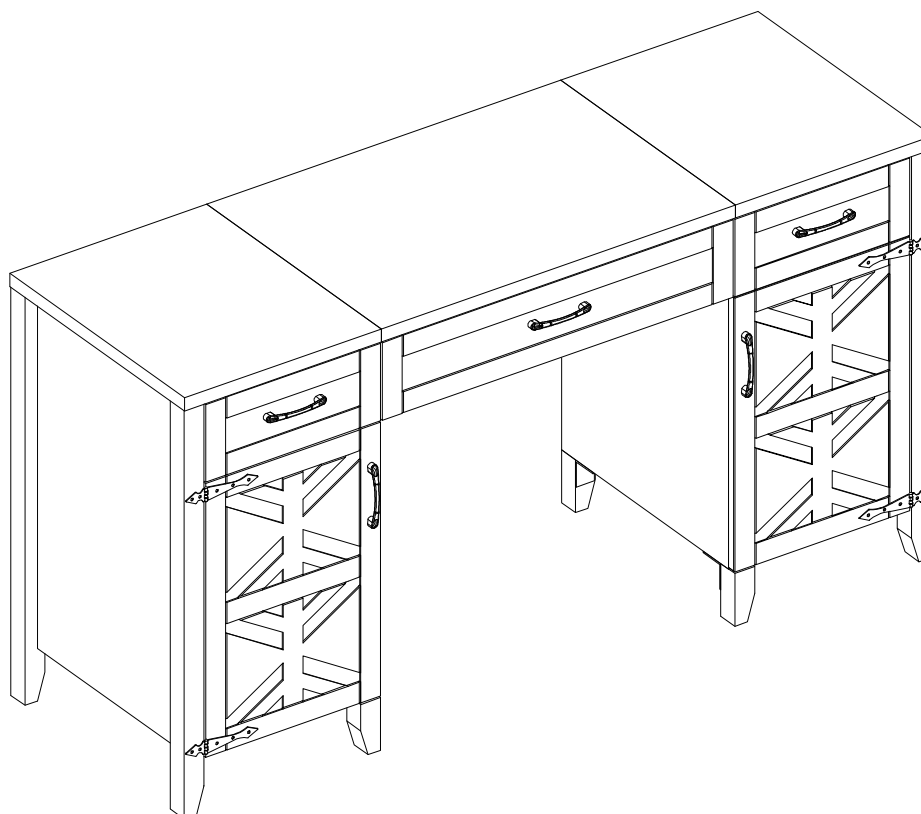
31



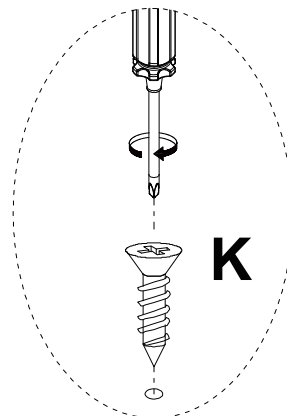K

Ø3.5x14mm
8 pcs




32





DESIGNED FOR LIFE

Thank you for your support!

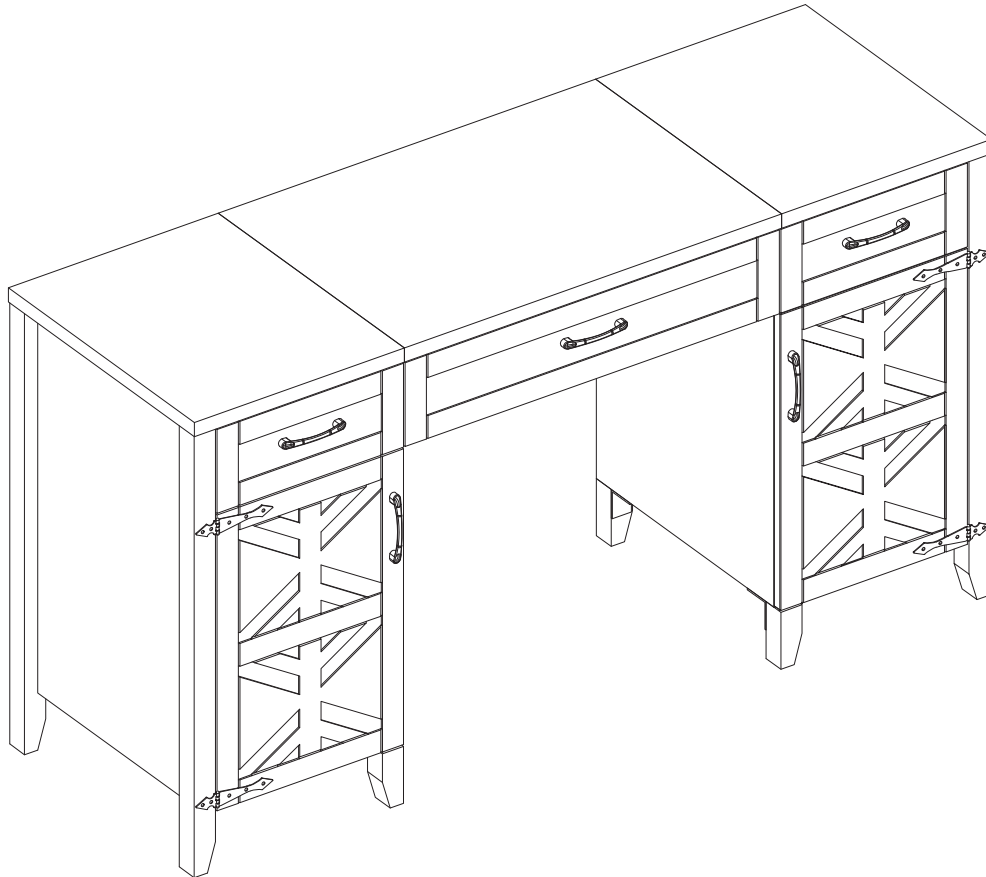

### Contact our customer service team



support@tribesigns.com  
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,  
Monday to Friday

### Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp