











| | | | |
|---|---|--|---|
|  |  |  |  |
| A. 4# = 2 | B. M6*30= 50 | C. Ø6*14=50 | D. Ø6*12=50 |
|  |  |  |  |
| E. M3.5×30=19 | F. Adjustable Levelling Foot=4 | G. M6×25=4 | H. Felt Pads =6 |




Step 1: Attach the side panels, internal dividers, and clothes rails.

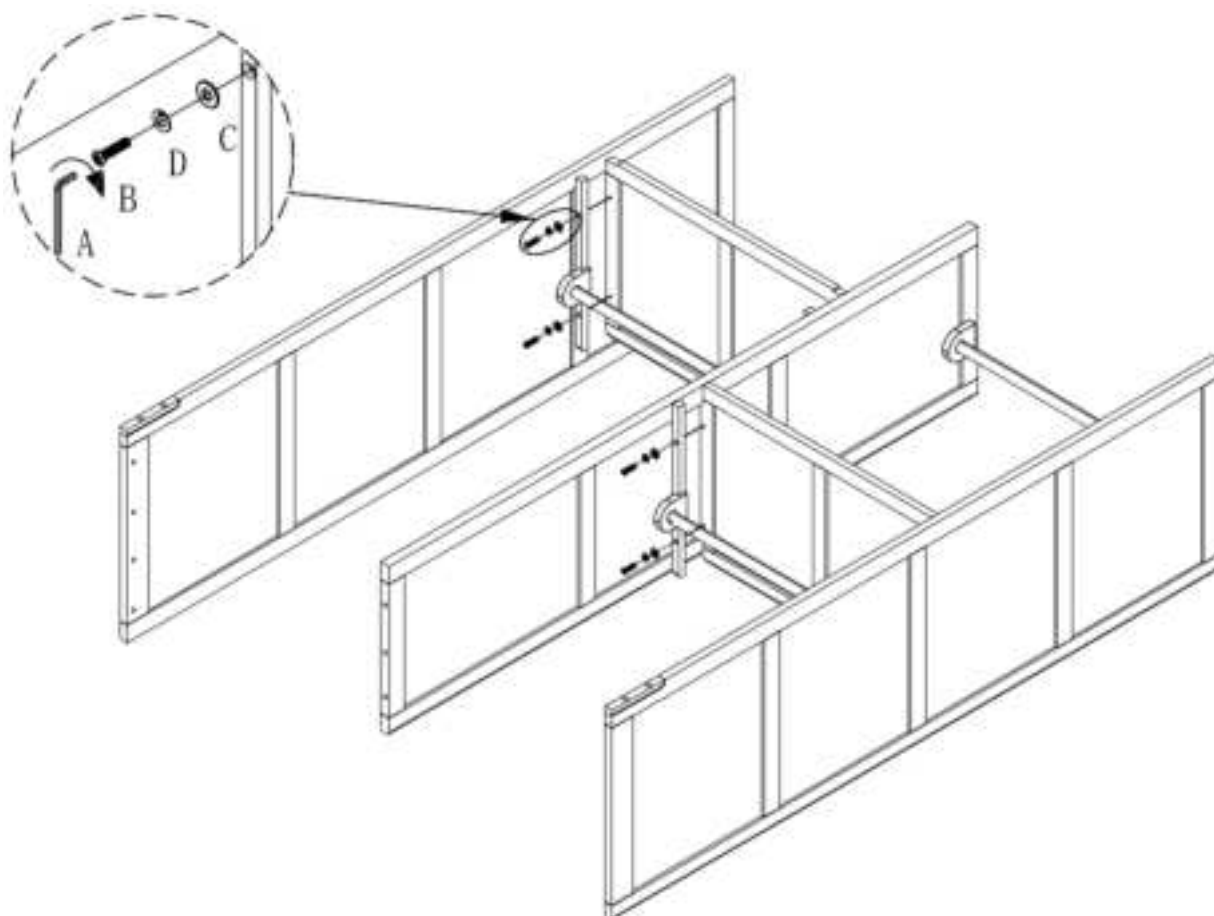

Step 2: Install the top panel, bottom panel, and detachable kickboard

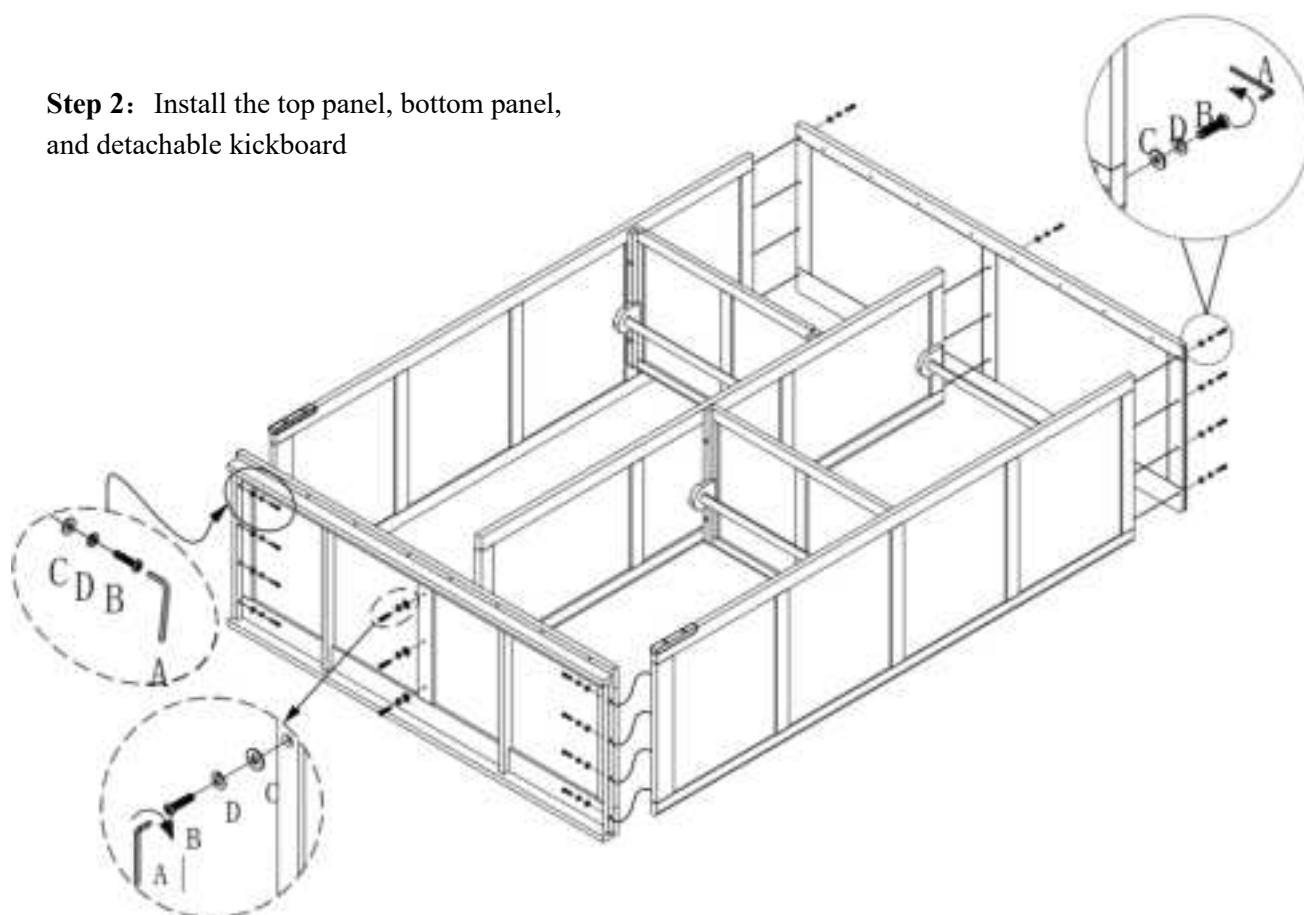


Step 3: Install the back panel.

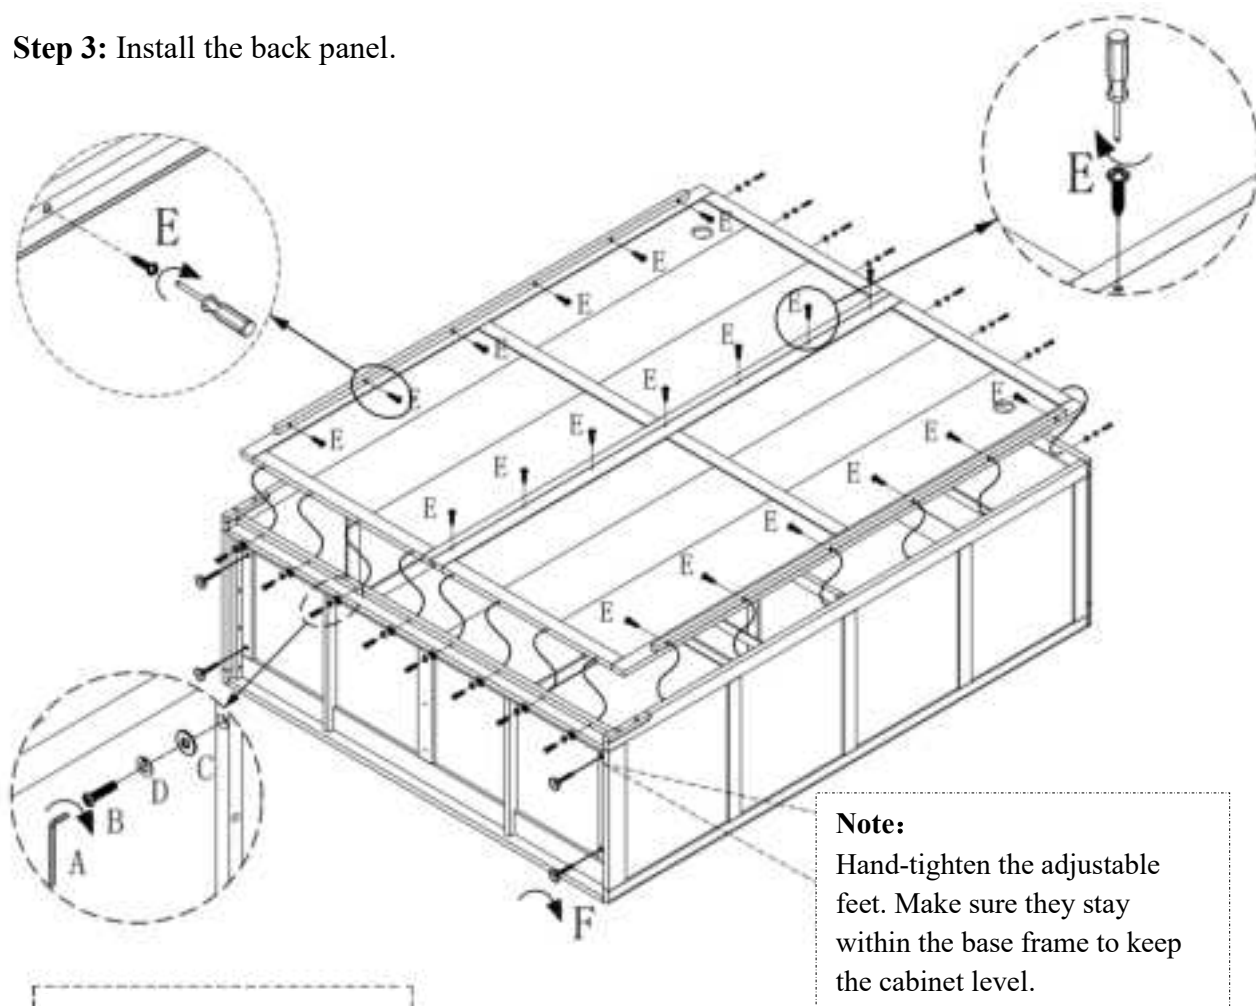

Note:
Remove the skirting board with Allen key (A), if needed.

Step 4: Install the wardrobe doors.

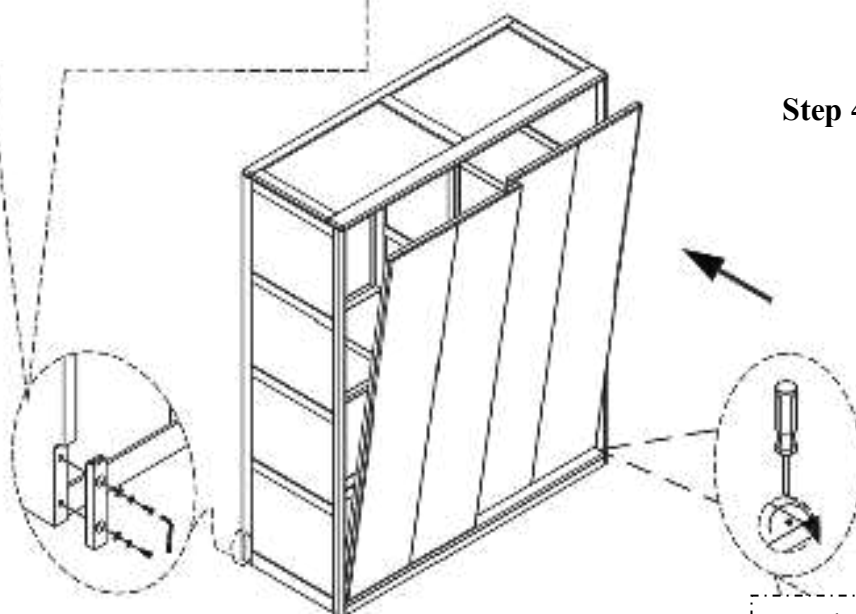

Use the adjustment holes at the four corners of the wardrobe base to level the cabinet.