

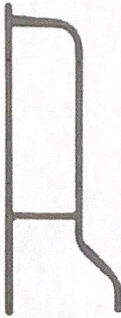
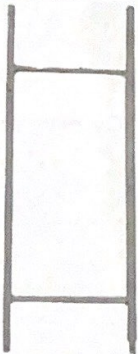
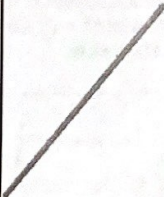







Toilet rack & washing machine shelf installation instructions

Attention before installation:

3 tiers shelf parts list(Pls check all parts before install)

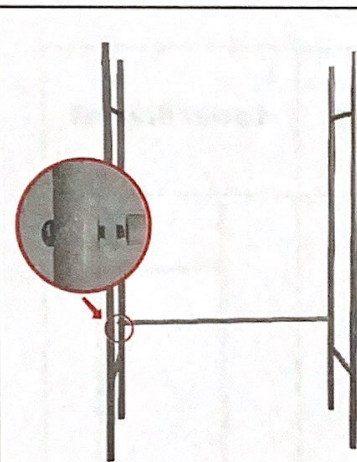
Large Clapboard		Small Clapboard		Upper Bracket		Lower Bracket	
							
Pole	Foot pad screw stopper	Reinforcement buckle		Screw	Upper bracket cap	Foot pad	
							

3 tiers installations steps

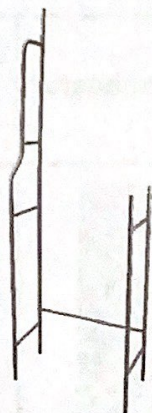
Notice: pls contact us if you have any problem as quality problem, parts missing and installation difficulty

Step one:

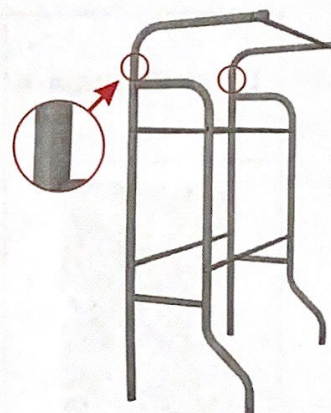
Install two pcs lower bracket with one pole as photo.

**Step two:**

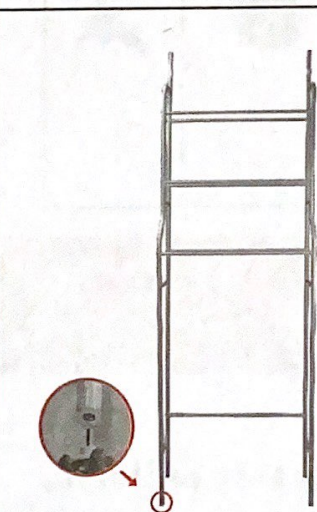
Put the upper bracket cover the lower bracket (pls atten upper bracket curve direction)

**Step three:**

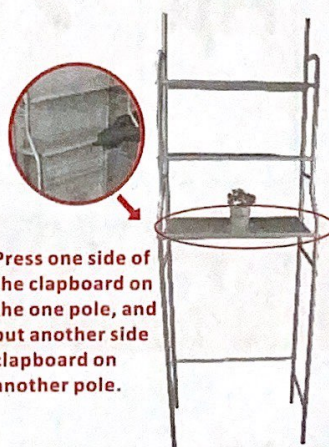
Install 6pcs poles with the upper bracket as photo. (If the towel rack is installed as shown in the diagram)

**Step four:**

Put 4pcs foot pad screw stopper into the lower bracket pipe, and install the foot pad as photo.

**Step five:**

Put the clapboard on the pole as photo.



Press one side of the clapboard on the one pole, and put another side clapboard on another pole.

Step six:

Stick one side of the double-sided tape with Reinforcement buckle, put the Reinforcement buckle on the pipe which is against the wall and stick it to the wall after adjust right distance. (Atten: pls clean the wall before stick) Adjust the foot pad to right height which will no pull the Reinforcement buckle.

