


ASSEMBLING MESH TWO DOOR CABINETS

ASSEMBLING A MESH TWO DOOR CABINET

- Make sure you have the below components.

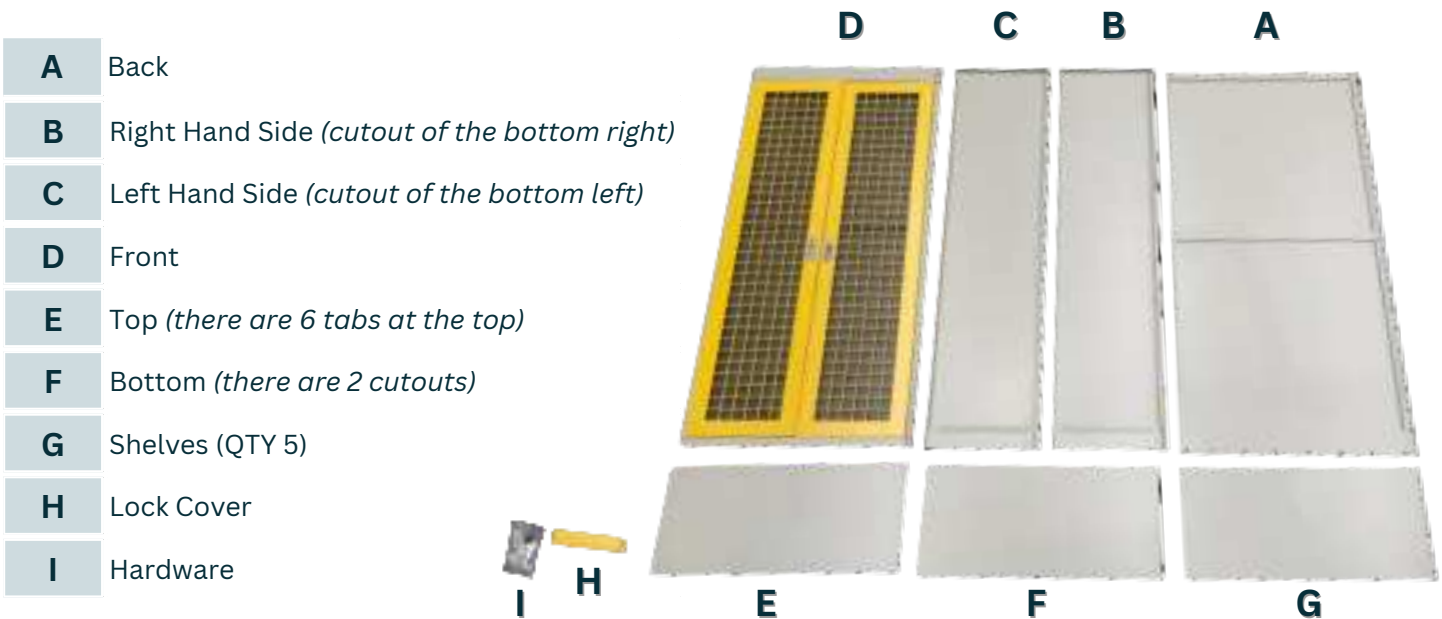

STEP ONE:

- Place the back (A) flat on the floor.

STEP TWO:

- Place the RHS (B) under the edge of the back and screw in only where the 2 holes meet in the middle and then screw in the bottom (*don't screw the top, you will come back to this later*).

STEP THREE:

- Repeat "Step Two" with the LHS (C).

ASSEMBLING MESH TWO DOOR CABINETS

- Stand up the unit (*see image below*).




STEP FOUR:

- Connect the 2 sides with the door (*D*) by making it lock into place. No screws necessary.

STEP FIVE:

- Entering from inside of the locker, put the top (*E*) into place by putting 2 screws in either side of the back and pushing the front tabs into the door frame.

NOTE: It's a good idea to do 1 screw at the back and then to the opposite diagonal front tab. This helps avoid the top from falling in, or the door coming out of place.

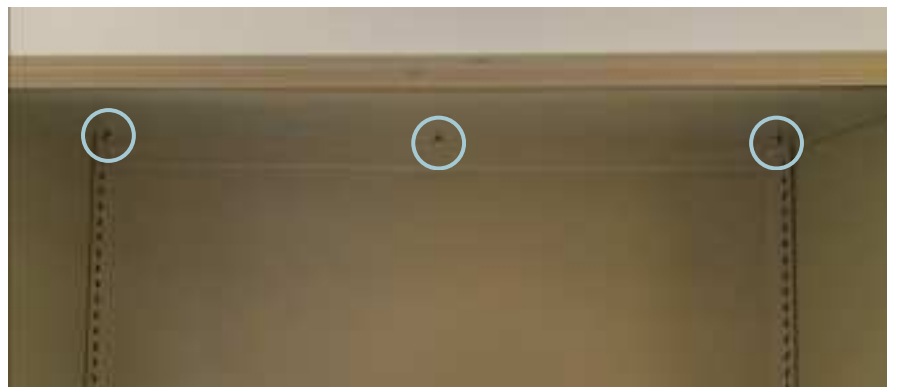

ASSEMBLING MESH TWO DOOR CABINETS

STEP SIX:

- Entering from inside of the locker, put the bottom (*F*) into place (*the front lip goes over the door edge*). No screws necessary.



STEP SEVEN:


- Put the shelves (*G*) into place (4 shelf clips required per shelf).



ASSEMBLING MESH TWO DOOR CABINETS

STEP EIGHT:

- Put the lock cover into place with a screw.

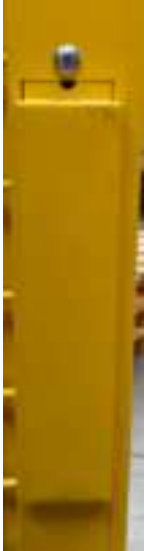

STEP NINE:

- Plastic covers inside the doors (one for each side) and you are done.

