





VERO INSTALLATION 65W

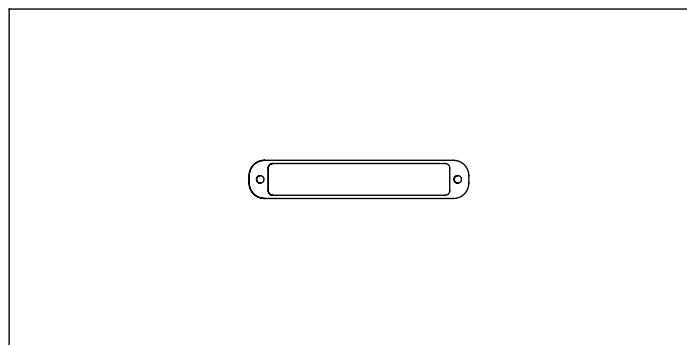

PRECISION MACHINE CUTOUT INTO DESK OR JOINERY
AS PER THE SIZE/TOLERANCE LISTED ON THE
TECHNICAL DRAWING OF THE MODEL SELECTED

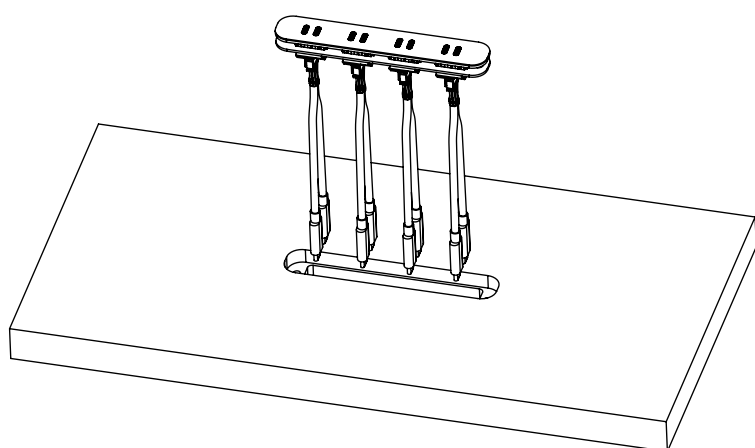


INSTALLING THE USB UNIT INTO THE CUTOUT-
INSTALL USB CABLES INTO THE KEYSTONE JACKS
(NOTING THE CORRECT ALIGNMENT OF
THE CONNECTIONS)
INSERT UNIT INTO THE CUTOUT AND SECURE THE UNIT
FROM BELOW USING THE SCREWS
PROVIDED (DO NOT OVER TIGHTEN)

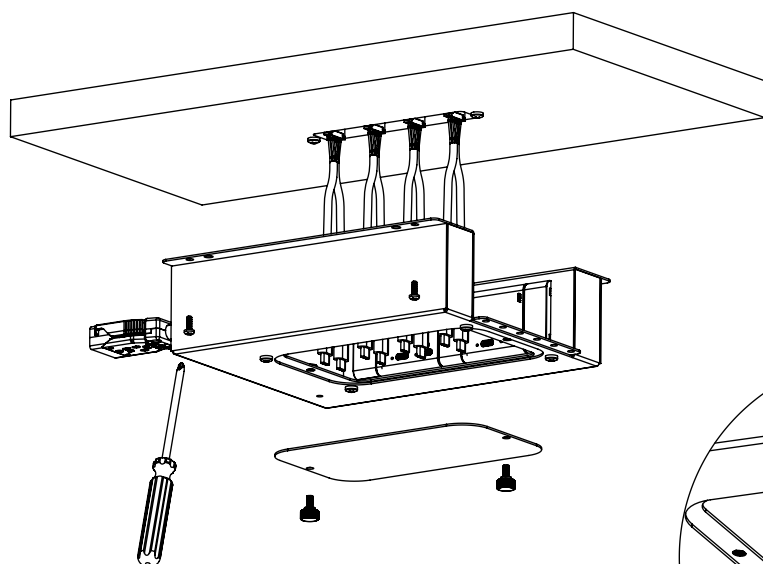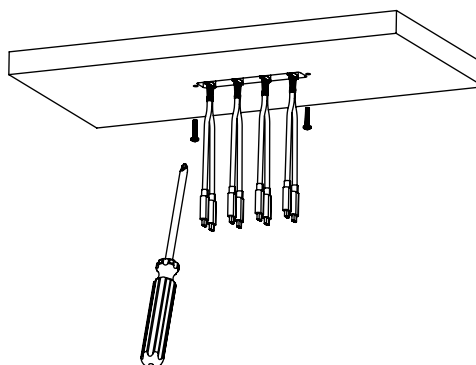

INSTALL THE POWER UNDERCARRIAGE
EQUALLY DISTANCE AROUND THE USB UNIT CUTOUT
USING THE CORRECT LENGTH SELF TAPPING SCREWS

REMOVING THE ACCESS HATCH ALLOWS ACCESSIBILITY
TO PLUG IN THE USB LEADS INTO THE USB CHARGER PORTS
(ORANGE TOUGNE LEADS = 65W PORT /
BLACK TOUGNE LEADS = 18W PORT)
REFER TO CMS DATA SHEET FOR USB CHARGER SPECS

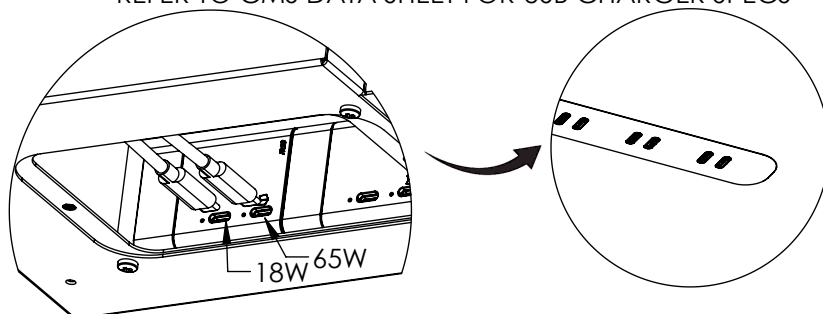

REPLACE THE ACCESS HATCH AND PLUG IN
CONNECTOR TO POWER THE UNIT

