





# VERO INSTALLATION 65W

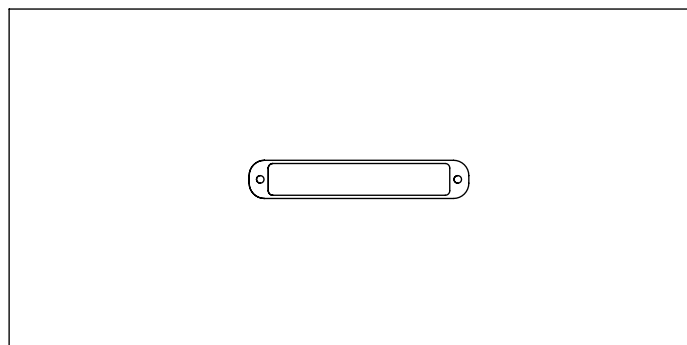

PRECISION MACHINE CUTOUT INTO DESK OR JOINERY  
AS PER THE SIZE/TOLERANCE LISTED ON THE  
TECHNICAL DRAWING OF THE MODEL SELECTED

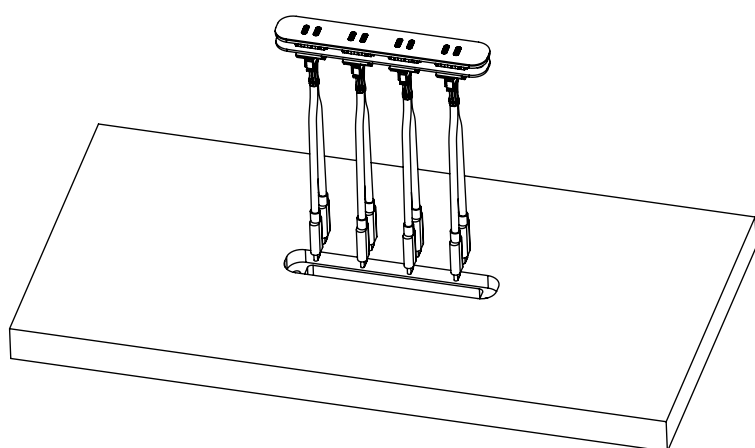


INSTALLING THE USB UNIT INTO THE CUTOUT-  
INSTALL USB CABLES INTO THE KEYSTONE JACKS  
(NOTING THE CORRECT ALIGNMENT OF  
THE CONNECTIONS)  
INSERT UNIT INTO THE CUTOUT AND SECURE THE UNIT  
FROM BELOW USING THE SCREWS  
PROVIDED (DO NOT OVER TIGHTEN)

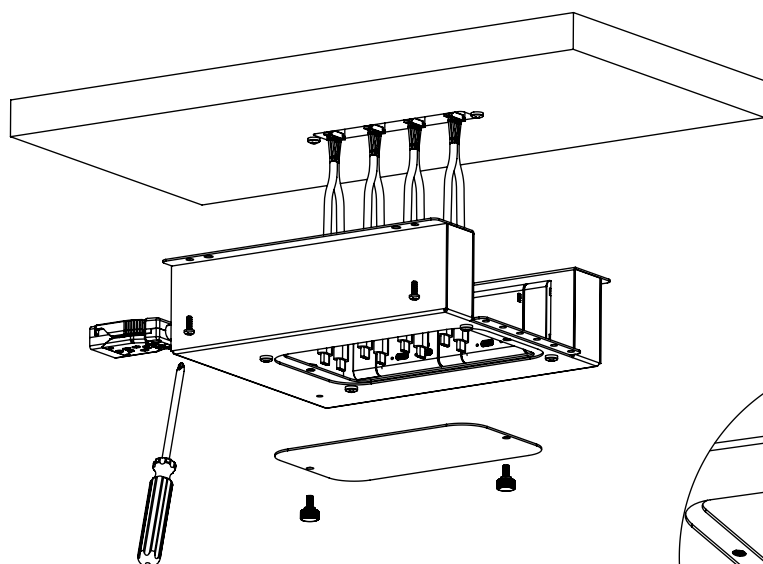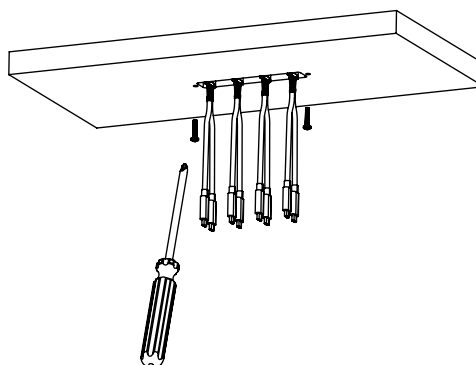

INSTALL THE POWER UNDERCARRIAGE  
EQUALLY DISTANCE AROUND THE USB UNIT CUTOUT  
USING THE CORRECT LENGTH SELF TAPPING SCREWS

REMOVING THE ACCESS HATCH ALLOWS ACCESSIBILITY  
TO PLUG IN THE USB LEADS INTO THE USB CHARGER PORTS  
(ORANGE TOUGNE LEADS = 65W PORT /  
BLACK TOUGNE LEADS = 18W PORT)  
REFER TO CMS DATA SHEET FOR USB CHARGER SPECS

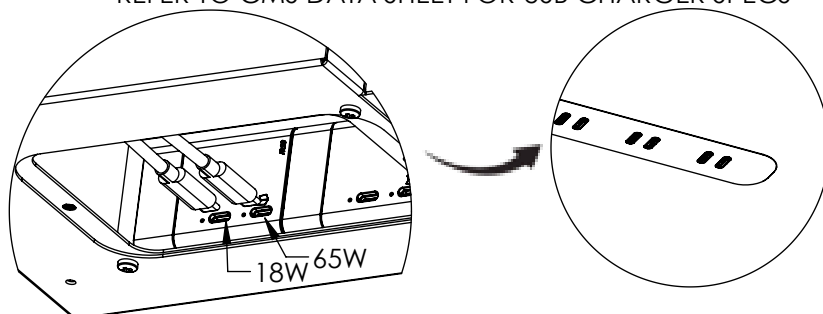

REPLACE THE ACCESS HATCH AND PLUG IN  
CONNECTOR TO POWER THE UNIT

