


HELMET BUNGEE UPGRADE

USER MANUAL

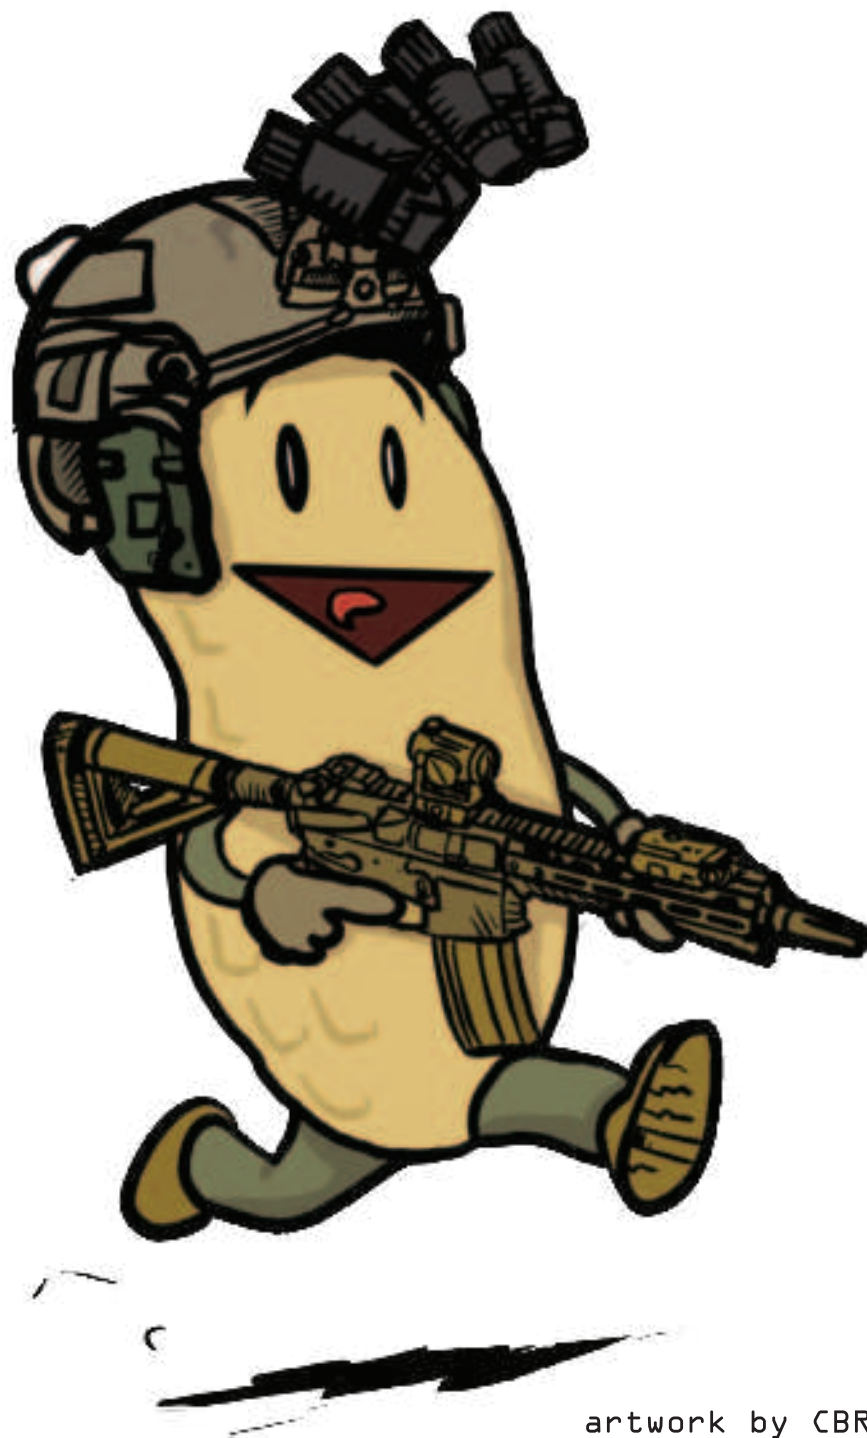

artwork by CBRNart



Pass the bungee cord end through the mini spring hooks.



Pull the bungee cord until the spring hook reaches the midpoint of the cord.





Secure the spring hooks using the provided heat shrinks.





Weave both ends through the large eyelet.




Pass each individual end through the smaller ones.






Remove all the screws and the existing bungee cord from your helmet.



A close-up photograph showing a person's hand holding a brown bungee cord. The cord is being aligned with a small hole in a tan-colored helmet's rail system. The helmet has a textured surface and a black strap with a buckle is visible below. The background is plain white.

Align the bungee retainer with their respective rail holes, then screw the helmet back together.

A close-up photograph of the back of a tan helmet. A central tan-colored plastic component is being held by two hands. This component has a central slot and two side slots. Brown bungee cords are attached to the sides of the helmet, passing through the side slots of the central component. The hands are adjusting the length of the cords. The background is plain white.

On both sides, adjust the length of the bungee cord so that when both spring hooks are connected, the cord has a slight amount of tension.

Secure both ends it with an overhand knot.



Connect the spring hooks and make any necessary adjustments to achieve the desired tension one last time.



Trim off any excess bungee cord.





Burn both ends of the bungee cord to prevent fraying.



Installation completed.



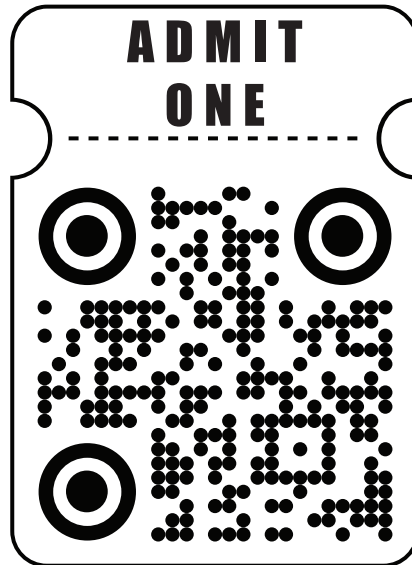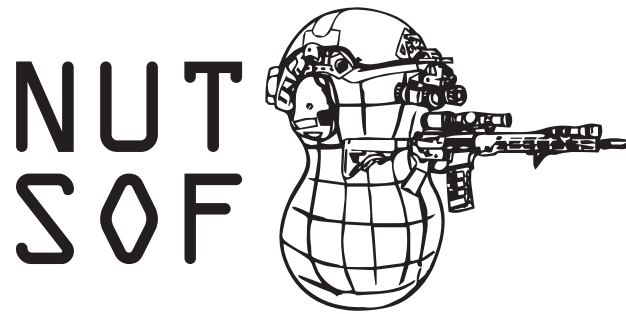

www.nutsof.com



[instagram.com/nutsof/](https://www.instagram.com/nutsof/)



[facebook.com/nutsofllc](https://www.facebook.com/nutsofllc)



(603) 865-7951



contact@nutsof.com