bouncepad

Original Elevate


Assembly Instructions

Tools Required:

- Socket Driver
- 10mm Spanner

Sheet Code: BP-IM-111_REV0 Release Date: 10/02/2025 Copyright 2025 SpotSpot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the

copyright holder.

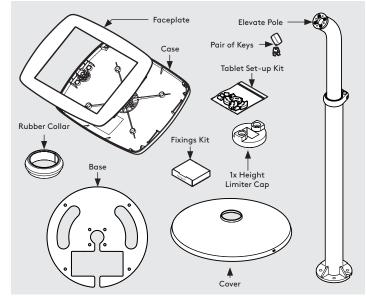












Fixings List * Due to the modular nature of our product range you may receive additional fixings in the fixings kit

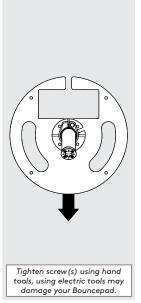

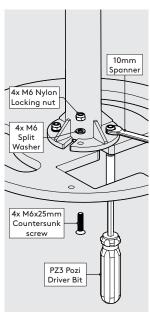

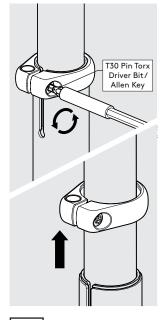

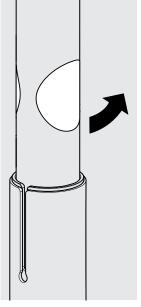

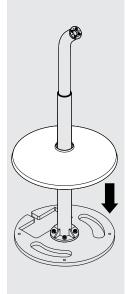


Orientate, locate & secure the Elevate Pole to the Base as shown. Ensure that all fixings are installed correctly.

Loosen & remove the Clamp.


Peel the Protective 3 Stickers off the Elevate Pole.

Attach the Cover as Shown.

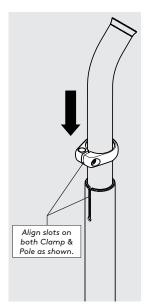

T20 Pin Torx Driver Bit 4x M4x16mm Button head screv Case Washer 4x M4 Split Washer



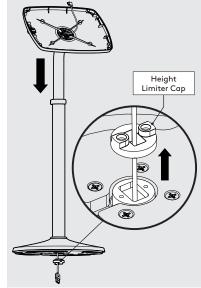

Locate & secure the Case onto the Elevate Pole as shown. Tighten by hand.


Unlock & remove the Faceplate from the Bouncepad Case.

Feed the Power Cable through 8 the Case, Elevate Pole & Height Limiter Cap.




Reattach the Clamp without tightening.


6

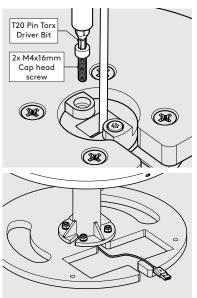



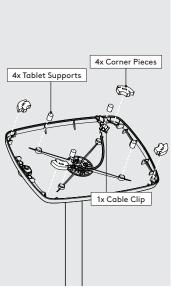


Install the Tablet Setup 10 Kit. Each kit is specific per device & case.

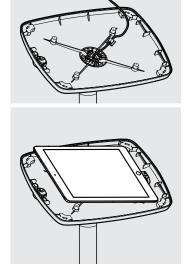


Install the Tablet into the 11 Case & connect to Power Cable.




Locate & lock the 12 Faceplate to the Case.

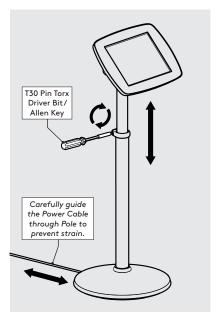


Adjust the Elevate Pole to your 13 desired height & tighten the Clamp.

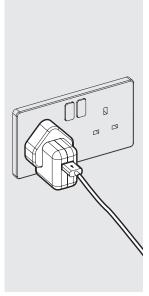

Connect the Power 14.1 Cable to its mains power source.

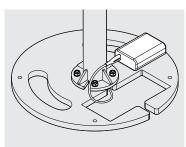


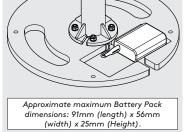


If installing a Battery Pack,


connect the Power Cable & locate into the Base.

14.2

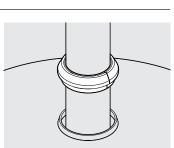


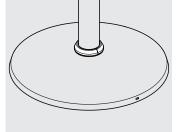

With the Cover on the 15 ground, locate & fit the Rubber Collar.

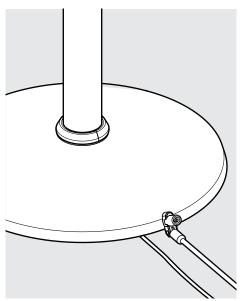

Use a Kensington® Microsaver product to tether to a secure object. (refer to your Kensington® instructions for full details)

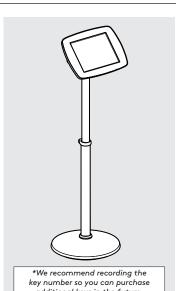

key number so you can purchase additional keys in the future.

Installation is now complete.