


Ergo-Series E6 Barrel Sauna 59D" x 81H"






Front & Back Walls

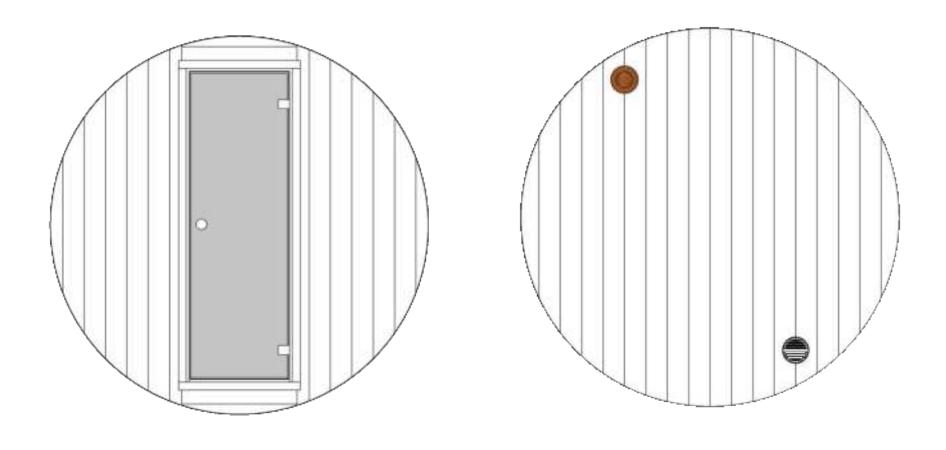



E6 Barrel Sauna 59D" x 81H" **Details list.** 6c 4 6d 4 6a 🦠 6b **9** 63" + 87 16" + 33 14" 591/e. 10//. 862/. 12/2/. 12/2/ (x2)(x1) (x1) (x2) (x2)(x1) (x1)(x2) (x1)10a 15a (x2) 258/22, 35/32, x2/3 L=~256" .5d (x2) x2 drain set (x2)(x2) (x2)(x2) (x2) **▶ B1** 5911° 1018 • 8698 (x4)(x1) (x38/50/62)20d 20b (x5/7/8)(x2)(x2)(x2) Bit PH2 (x16) (x2) ~2lbs. (x15) (x90) (x45) (x150) (x50) (x1)20c ₹ (x2) 20a (x3)


Tools needed

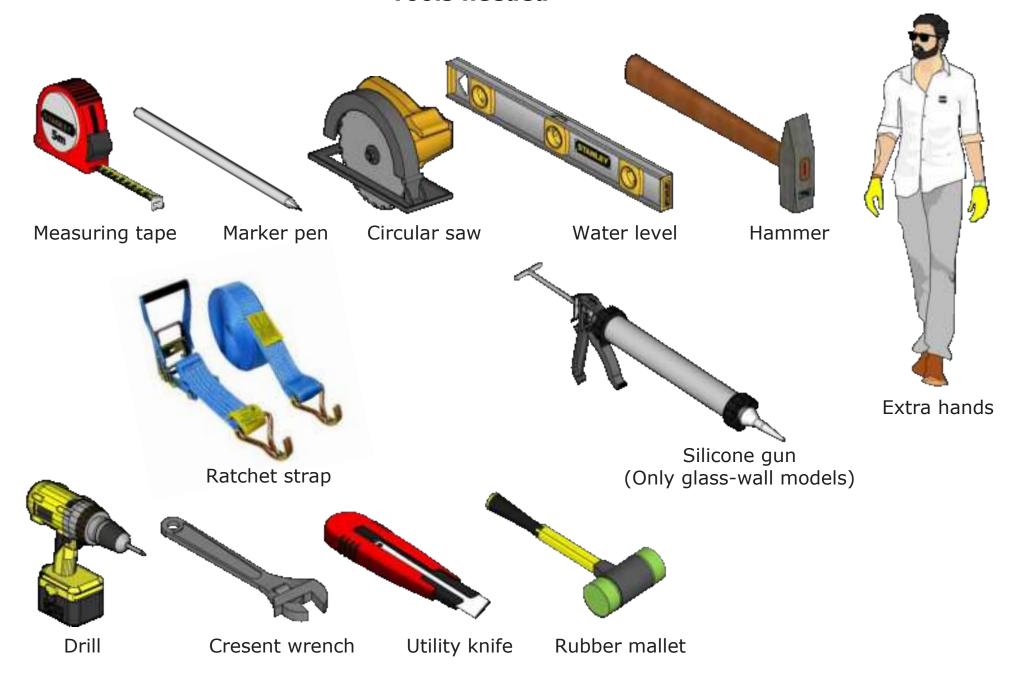


Wooden front wall installation

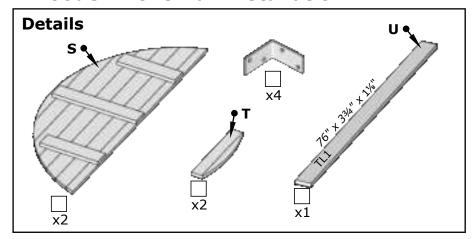


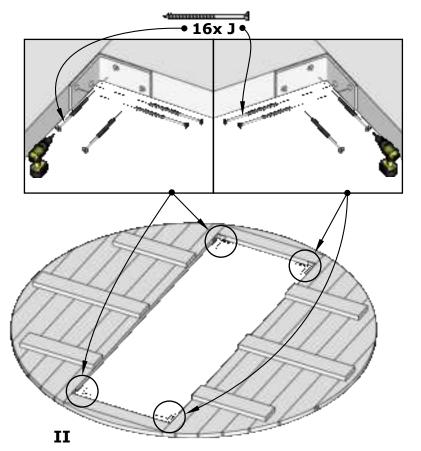


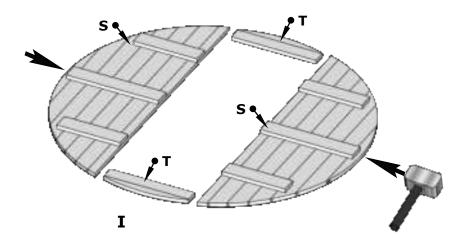


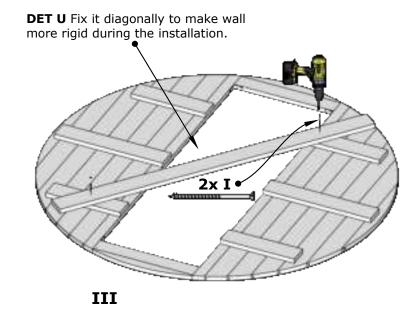


Wooden back wall installation

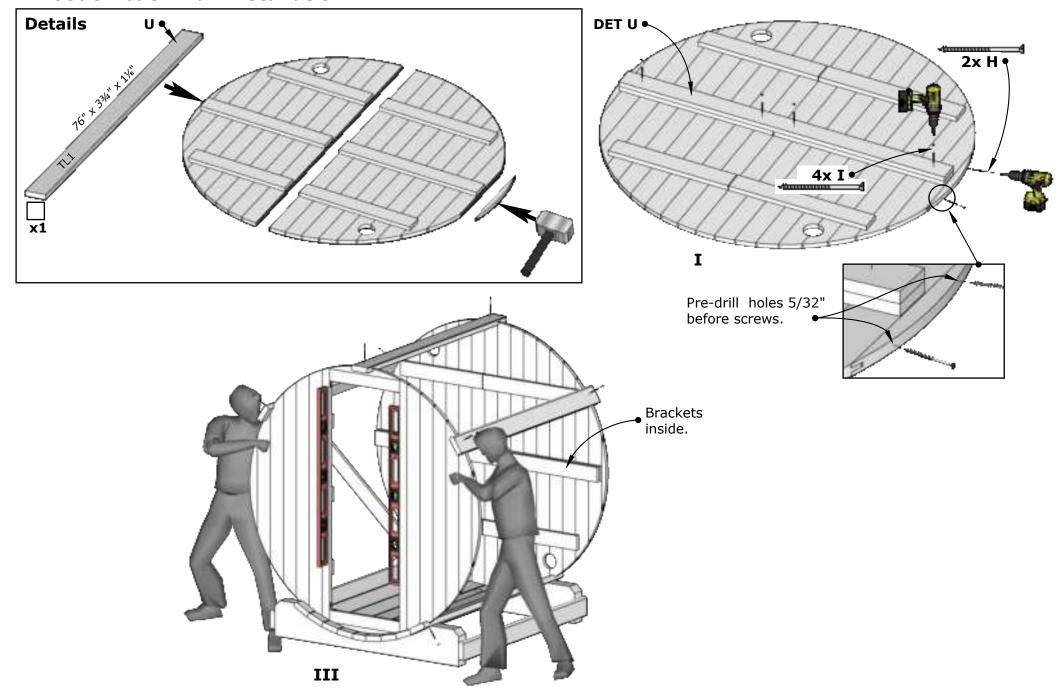


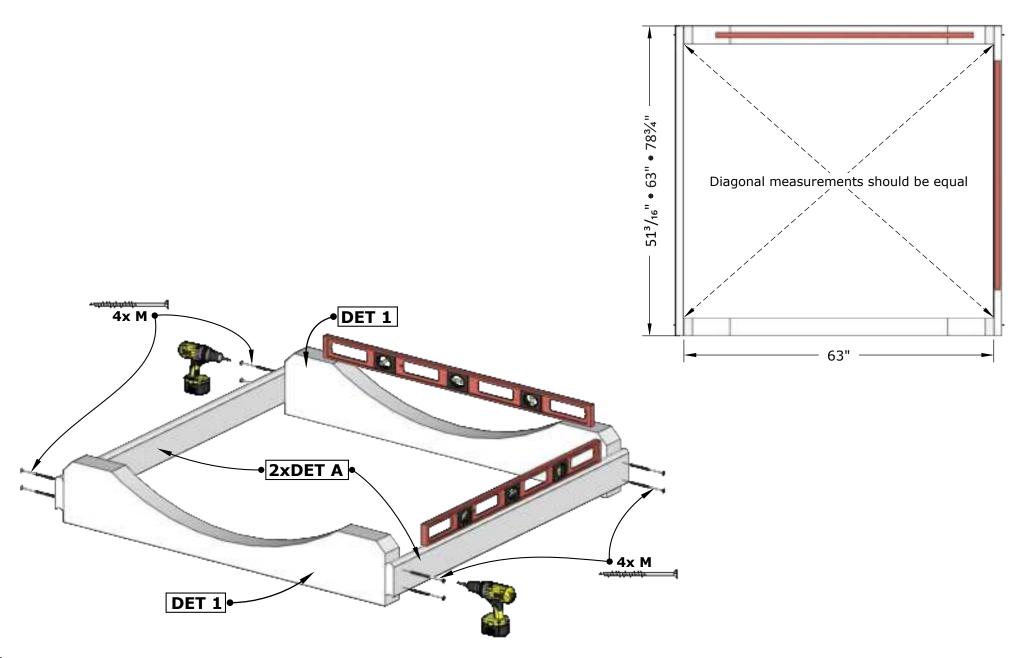


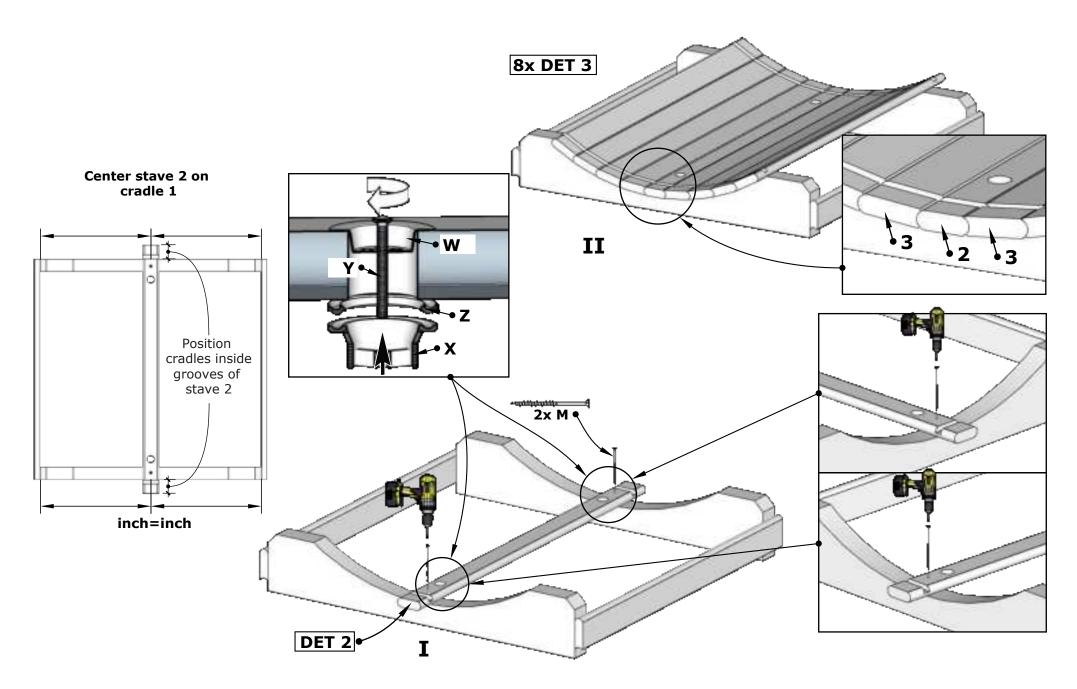


E6 Barrel Sauna 59D" x 81H"

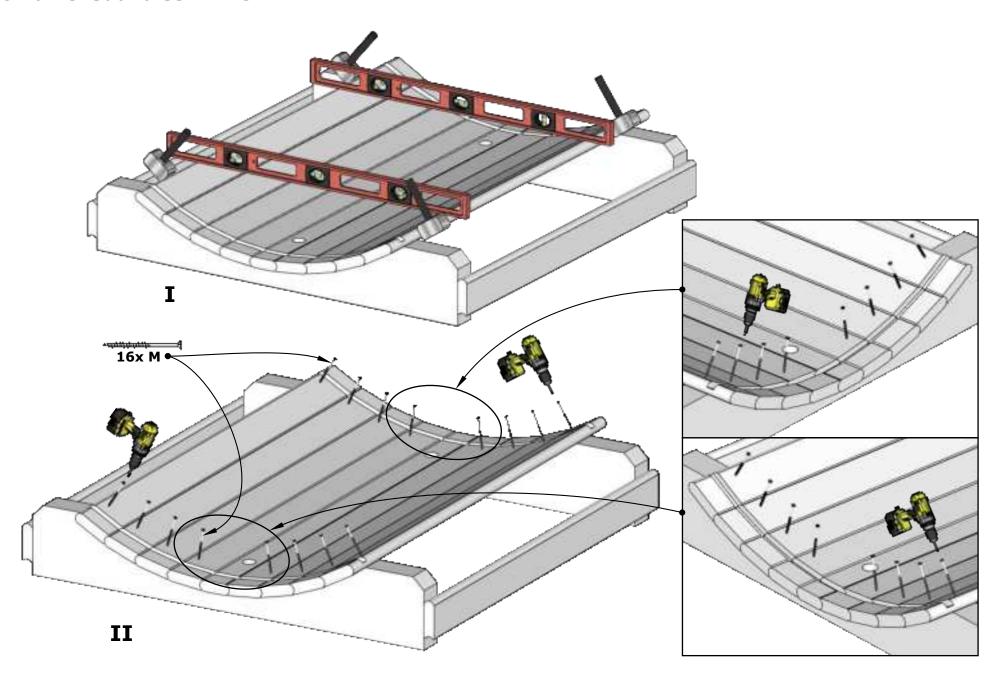

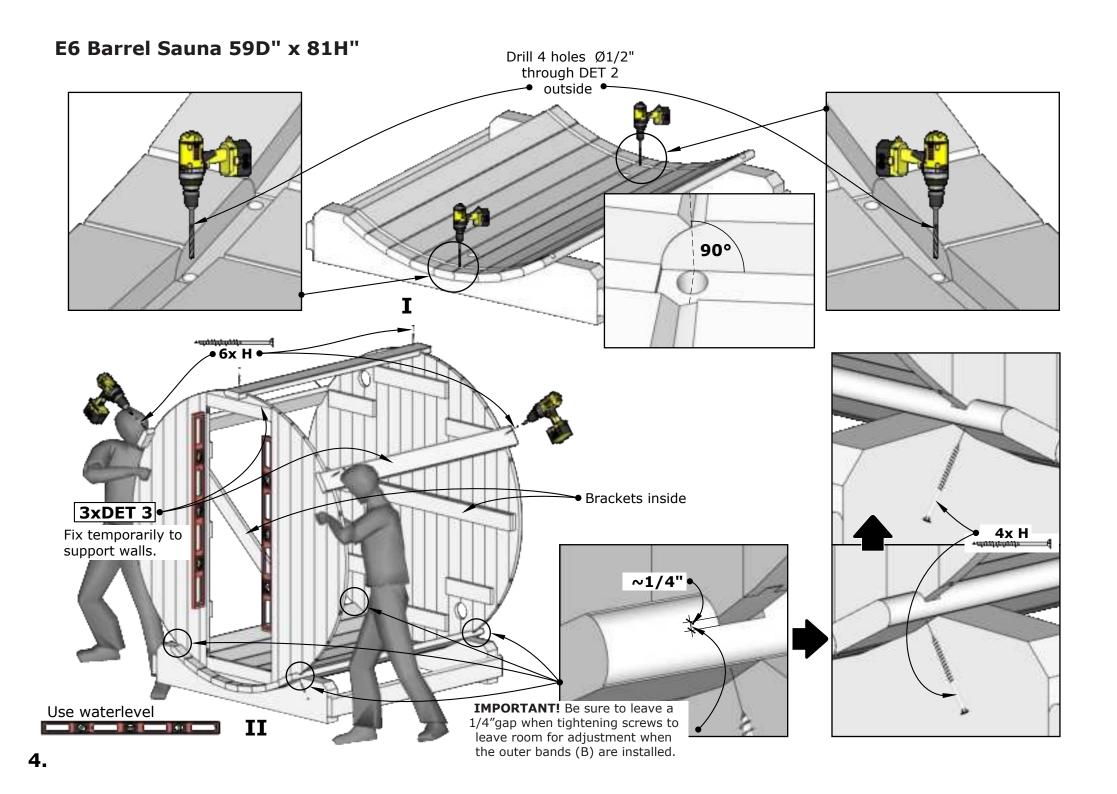


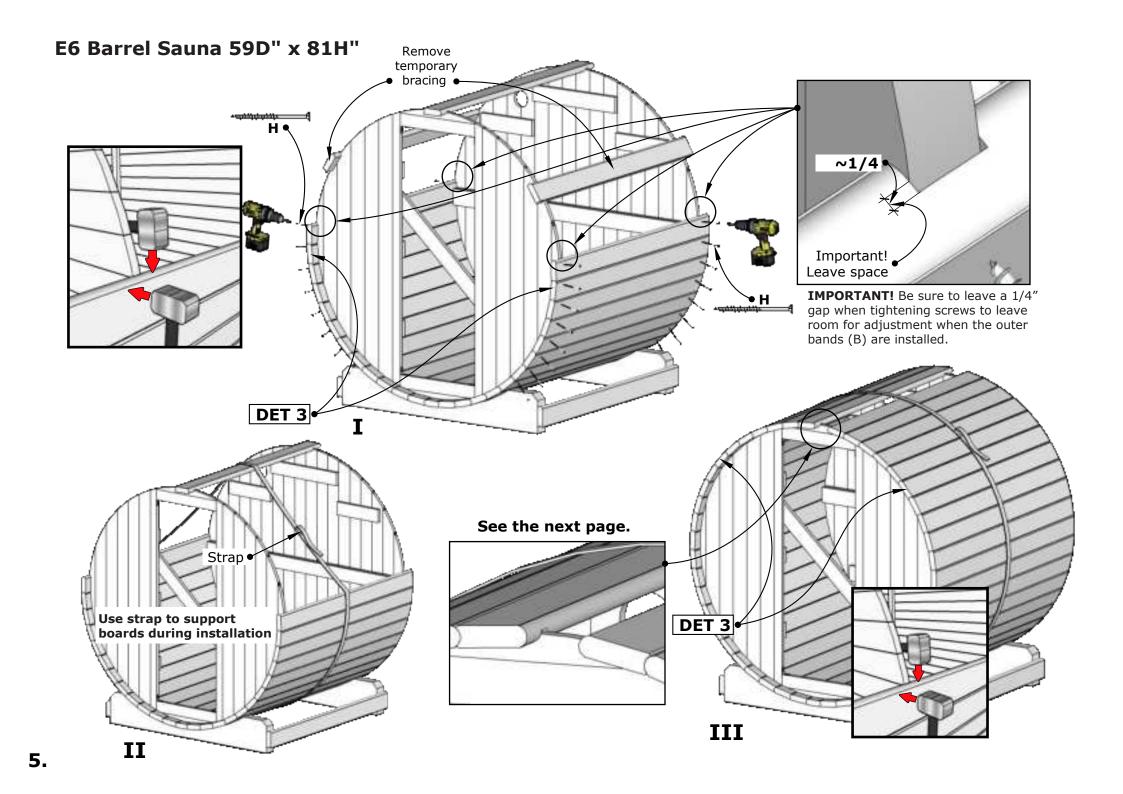


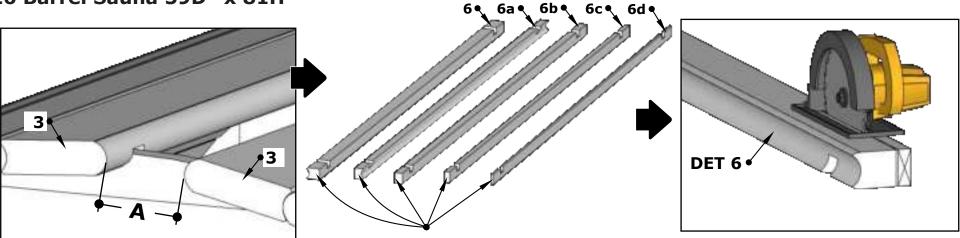

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

If needed, trim the flat edge of the board to create the desired width.

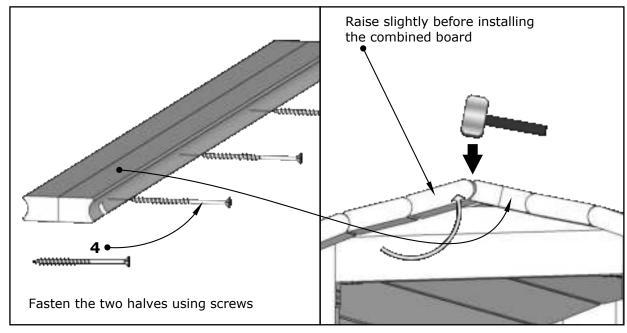


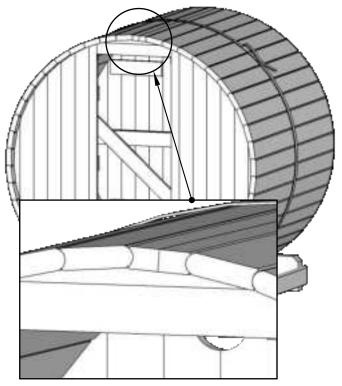

III

II

Ι

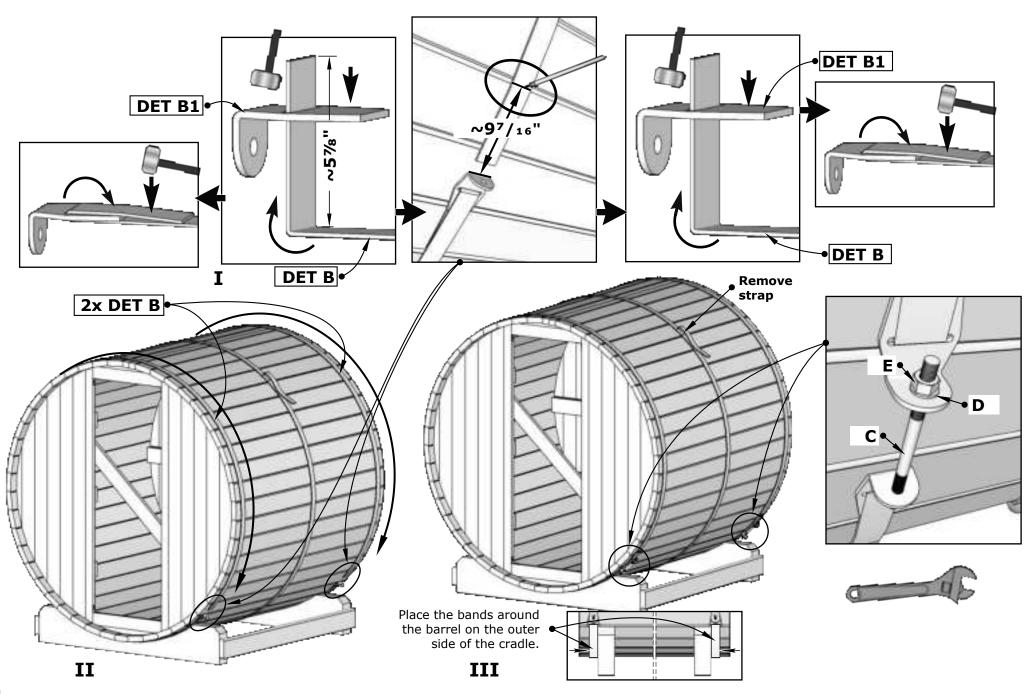

E6 Barrel Sauna 59D" x 81H", Remove all temporary braces 1x DET G ● 6x K Upper vent •3x DET F Lower vent **●** 6x K • • 2x DET 10a • 2x H • Pre-drill holes Ø5/32" before screws. 2x DET 10 72" and 88" Saunas

NB! If Your sauna equipped with front-glass

wall, see front-glass wall installation manual

for proper benches installation.


III


8.


with front-glass wall

have 4 pc. of DET 10a.


II

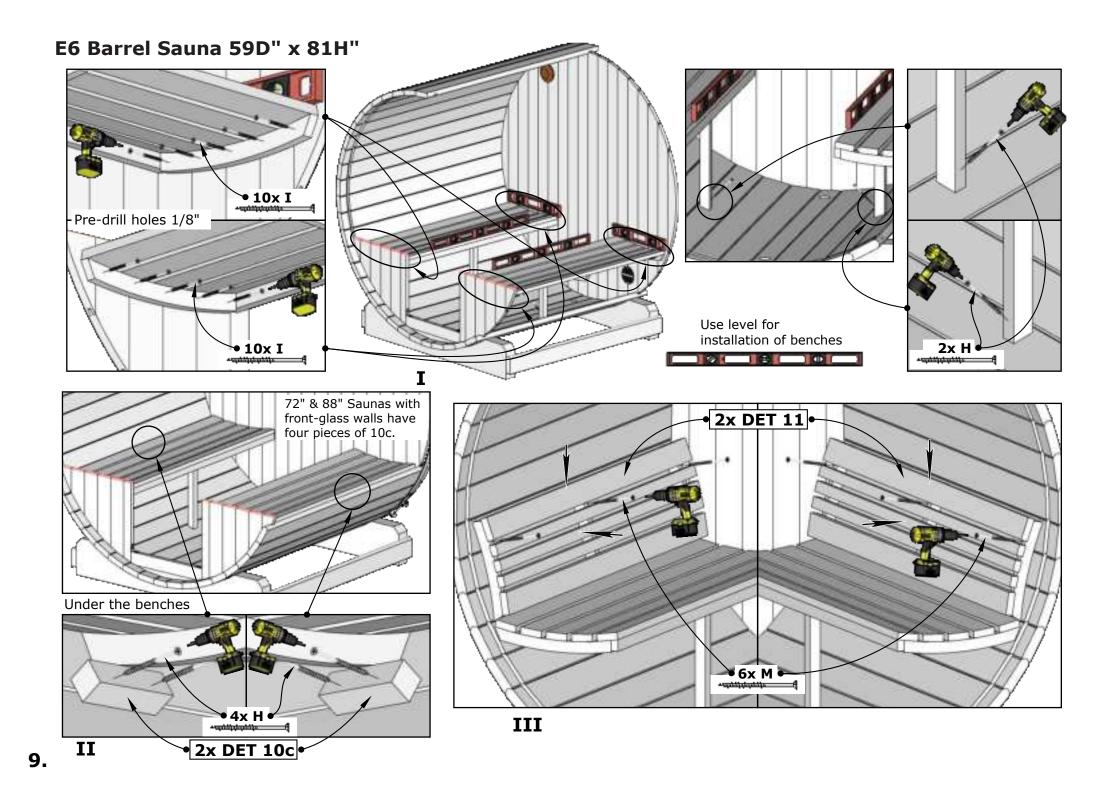

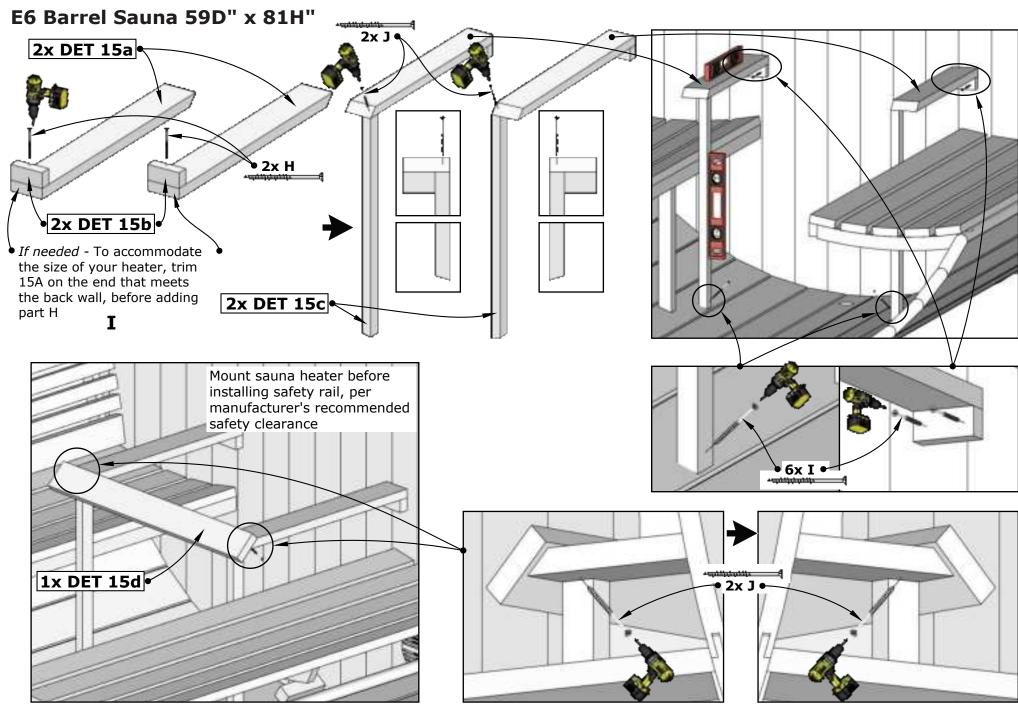

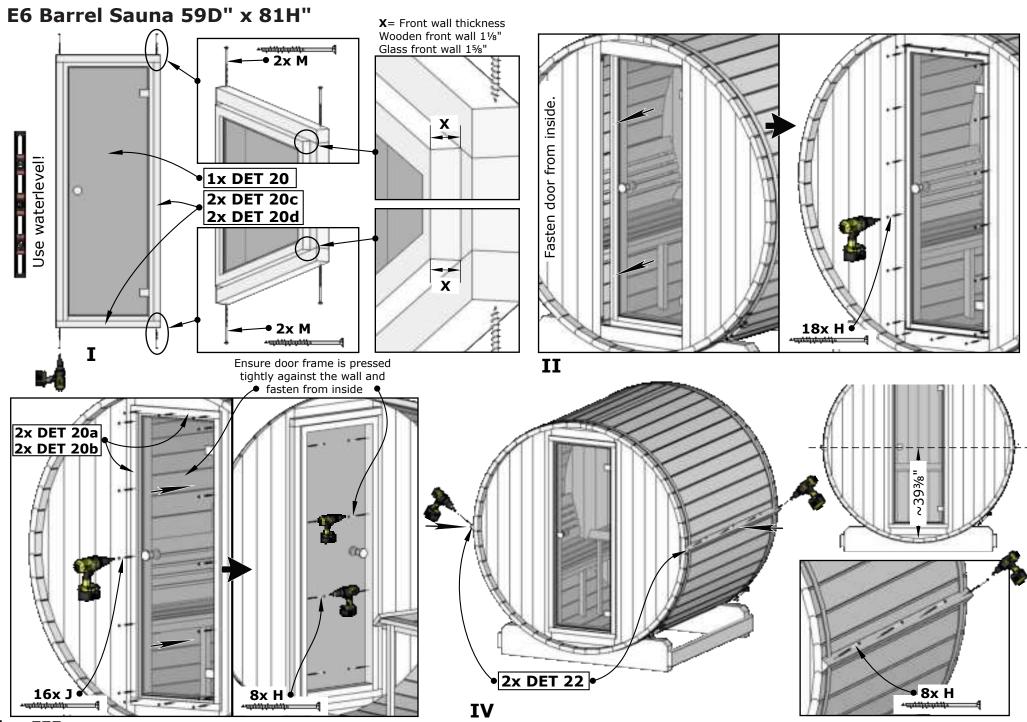

11. III

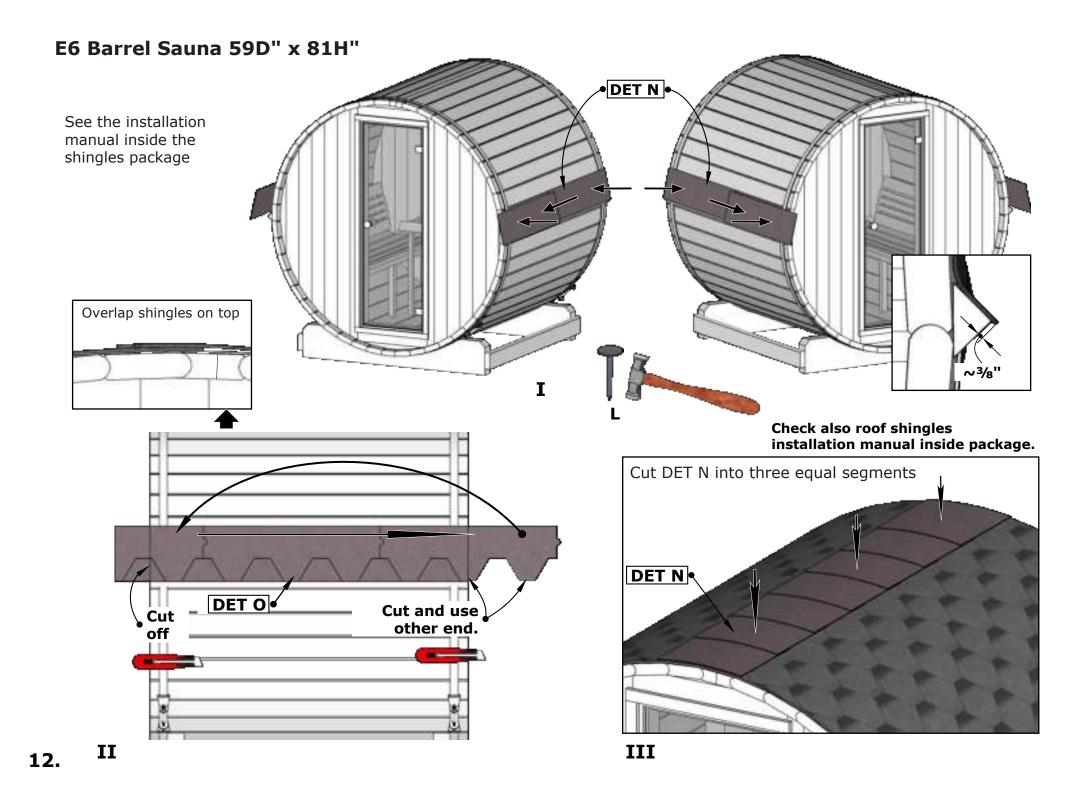

E6 Barrel Sauna 59D" x 81H"

