


# USER'S MANUAL Farmhouse TV Stand SKU: HILI000021001/HILI00002401

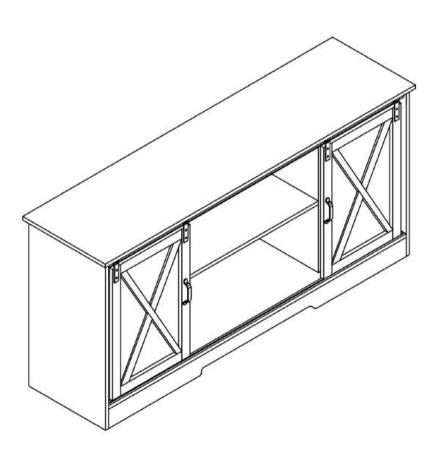


# **BOARD IDENTIFICATION**

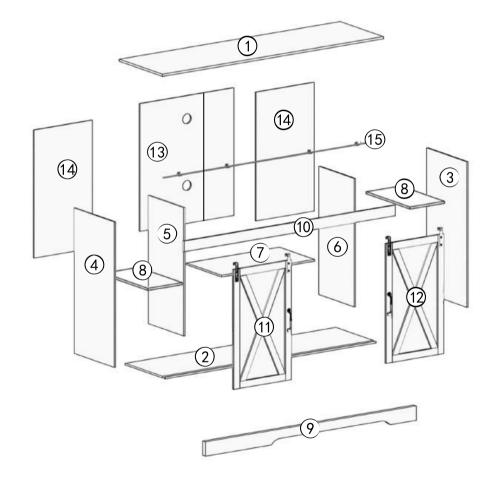

# Part List

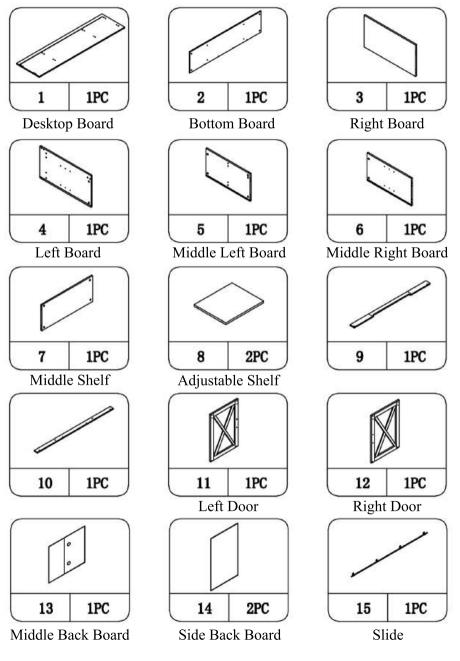

#### Hardware List

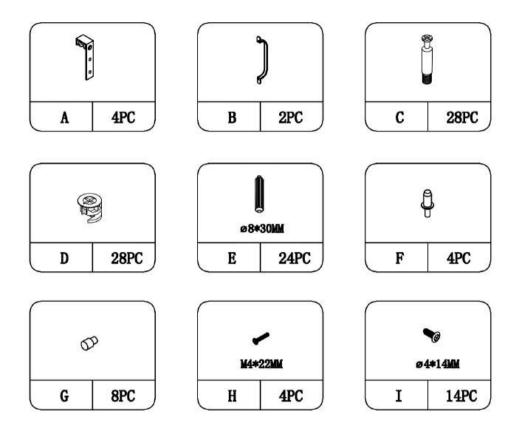

#### REPLACEMENT PARTS

We are devoted to provide the best products and services for customers. Please contact us via the "Contact seller" button in the detail page of your order for any concern and we'll response as soon as possible.

### STEP 1


# **Product Assembly**

Insert cam bolt (C) to part (5,6) with screwdriver.

Insert dowel (E) into part (7).

Attach Part (5,6) into part (7) through bolt (C) and dowel (E).

Insert and secure cam lock (D) to part (7) to lock part (5,6).

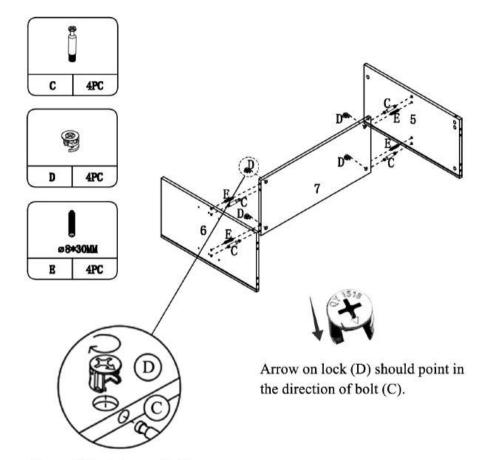


Be careful not to over tighten.

Insert cam bolt (C) to part (2) with screwdriver.

Attach Part (2) into part (9) through bolt (C).

Insert and secure cam lock (D) to part (9) to lock part (2).

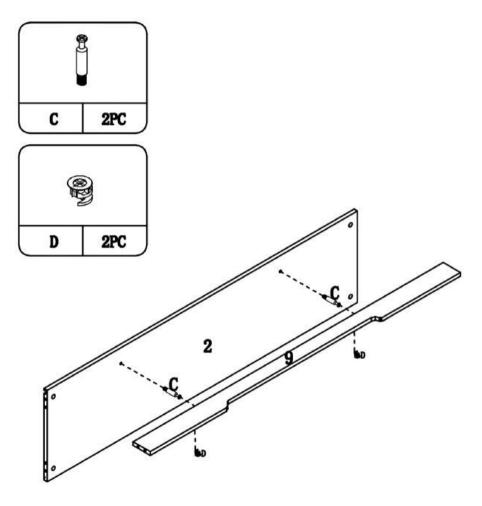


### STEP 3

Insert cam bolt (C) to part (2) with screwdriver.


Insert dowel (E) into part (2).

Attach part (5,6) into part (2) through bolt (C) and dowel (E).

Insert and secure cam lock (D) to part (5,6) to lock part (2).

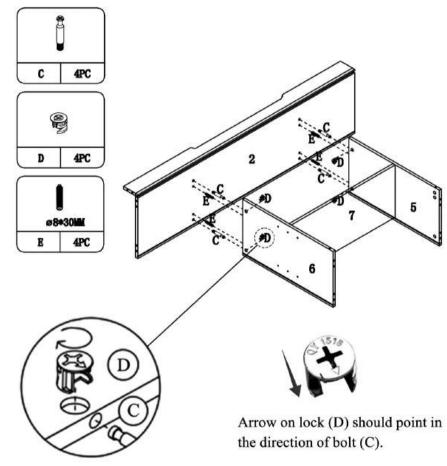

Insert cam bolt (C) to part (10) with screwdriver. Attach part (10) into part (5,6) through bolt (C). Insert and secure cam lock (D) to part (5,6) to lock part (10).

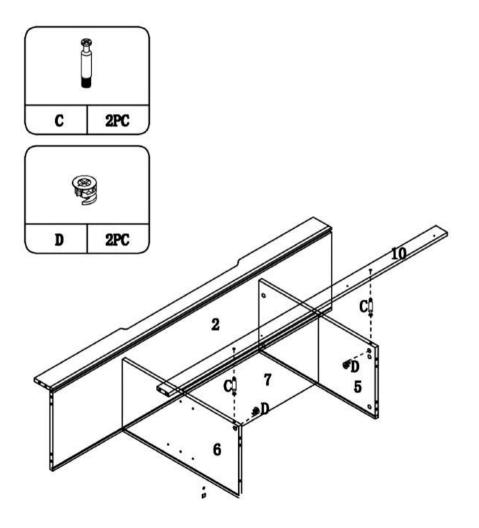


### STEP 5

Insert cam bolt (C) to part (3,4) with screwdriver.

Insert dowel (E) into part (3,4).

Attach part (3,4) into part (2,9,10) through bolt (C) and dowel (E).

Insert and secure cam lock (D) to part (2,9,10) to lock part (3,4).

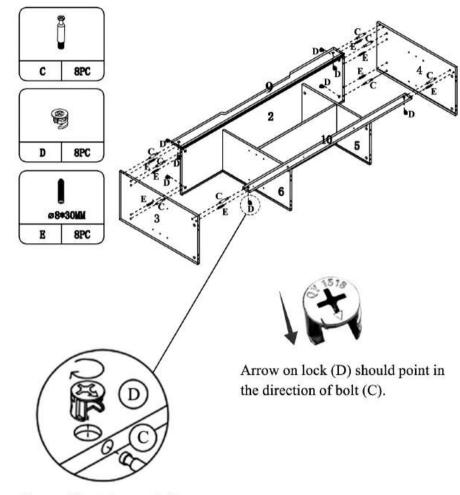


Be careful not to over tighten.

Stand up the whole tv stand.

Slide part (13) into grooves of part (5) and part (6) as per diagram.

Slide part (14) into grooves of part (4,5) and part (3,6) as per diagram.

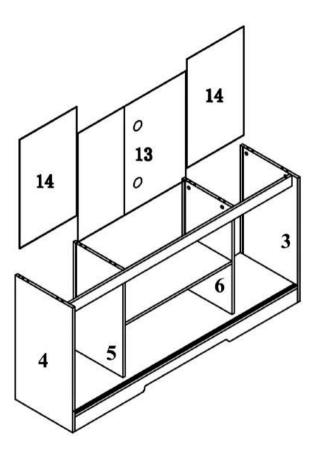


### STEP 7

Insert cam bolt (C) to part (1) with screwdriver.

Insert dowel (E) to part (3,4,5,6) with screwdriver.


Attach part (1) into part (3,4,5,6) through bolt (C) and dowel (E).

Insert and secure cam lock (D) to part (3,4,5,6) to lock part (1).

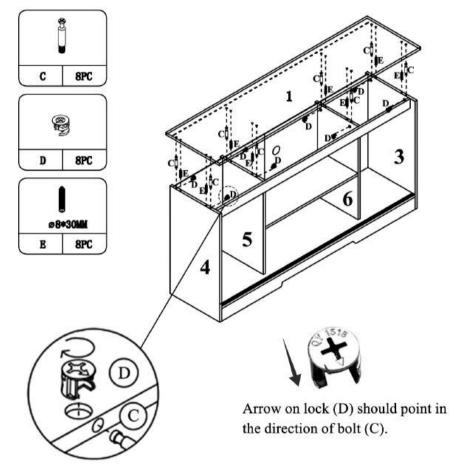

Be careful not to over tighten.

Attach part (15) to part (10) using screw (I) with screwdriver.

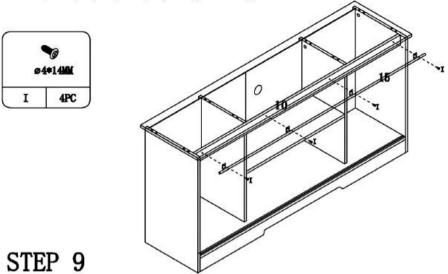


Insert bolt (G) to part (3,4,5,6).

Insert part (8) horizontally between part (4,5) and part (3,6).


Put part (8) on top of bolt (G).



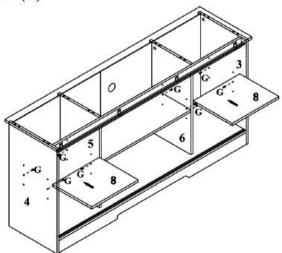


# STEP 10

Attach handle (B) to part (11,12) using screw (H) with screwdriver. Attach part (A) to part (11,12) using screw (I) with screwdriver. Install part (F) on bottom of part (11,12).

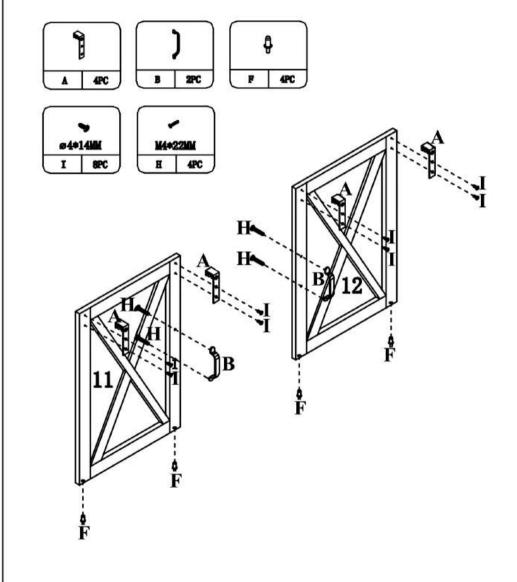

Hang part (11,12) on top of part(15) through part (A). Insert part (F) stuck in the groove of part (2) as per diagram.

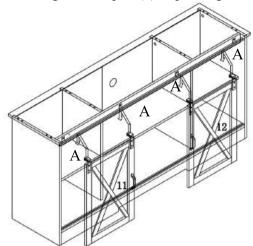

# STEP 12

Attach part (7) to part (13) using screw (I) with screwdriver.

