


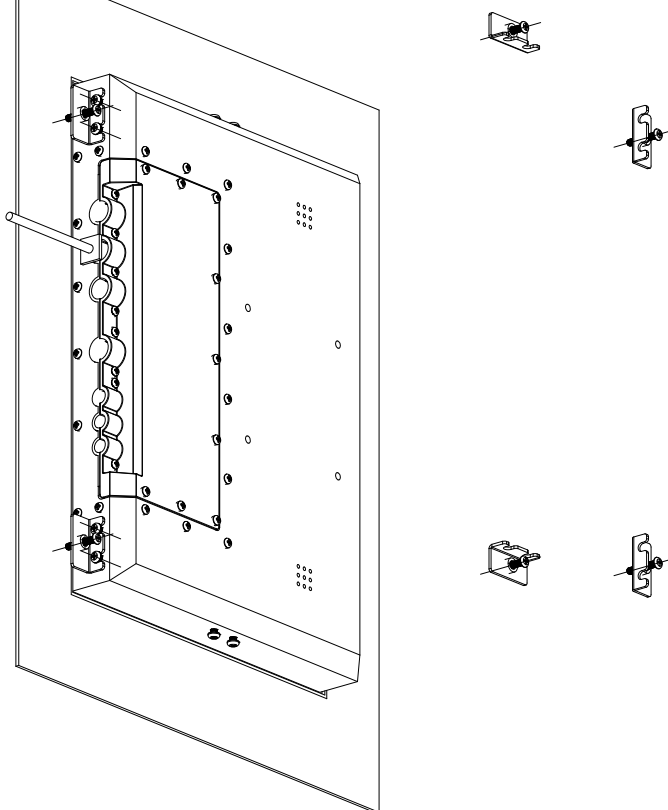
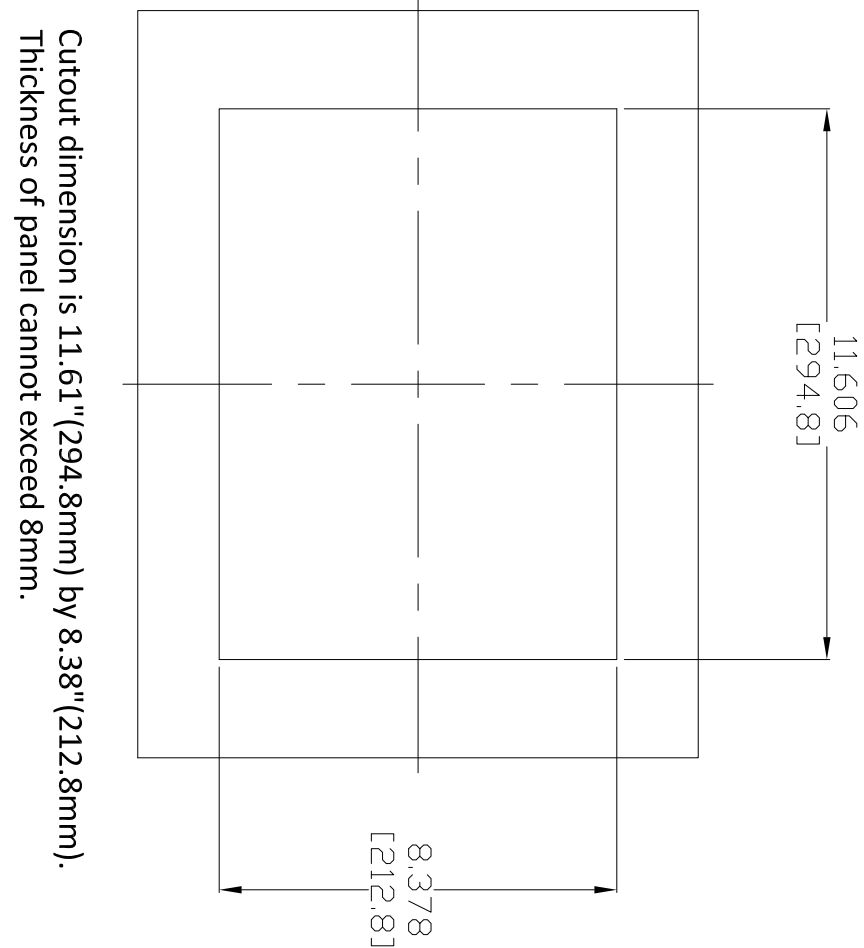


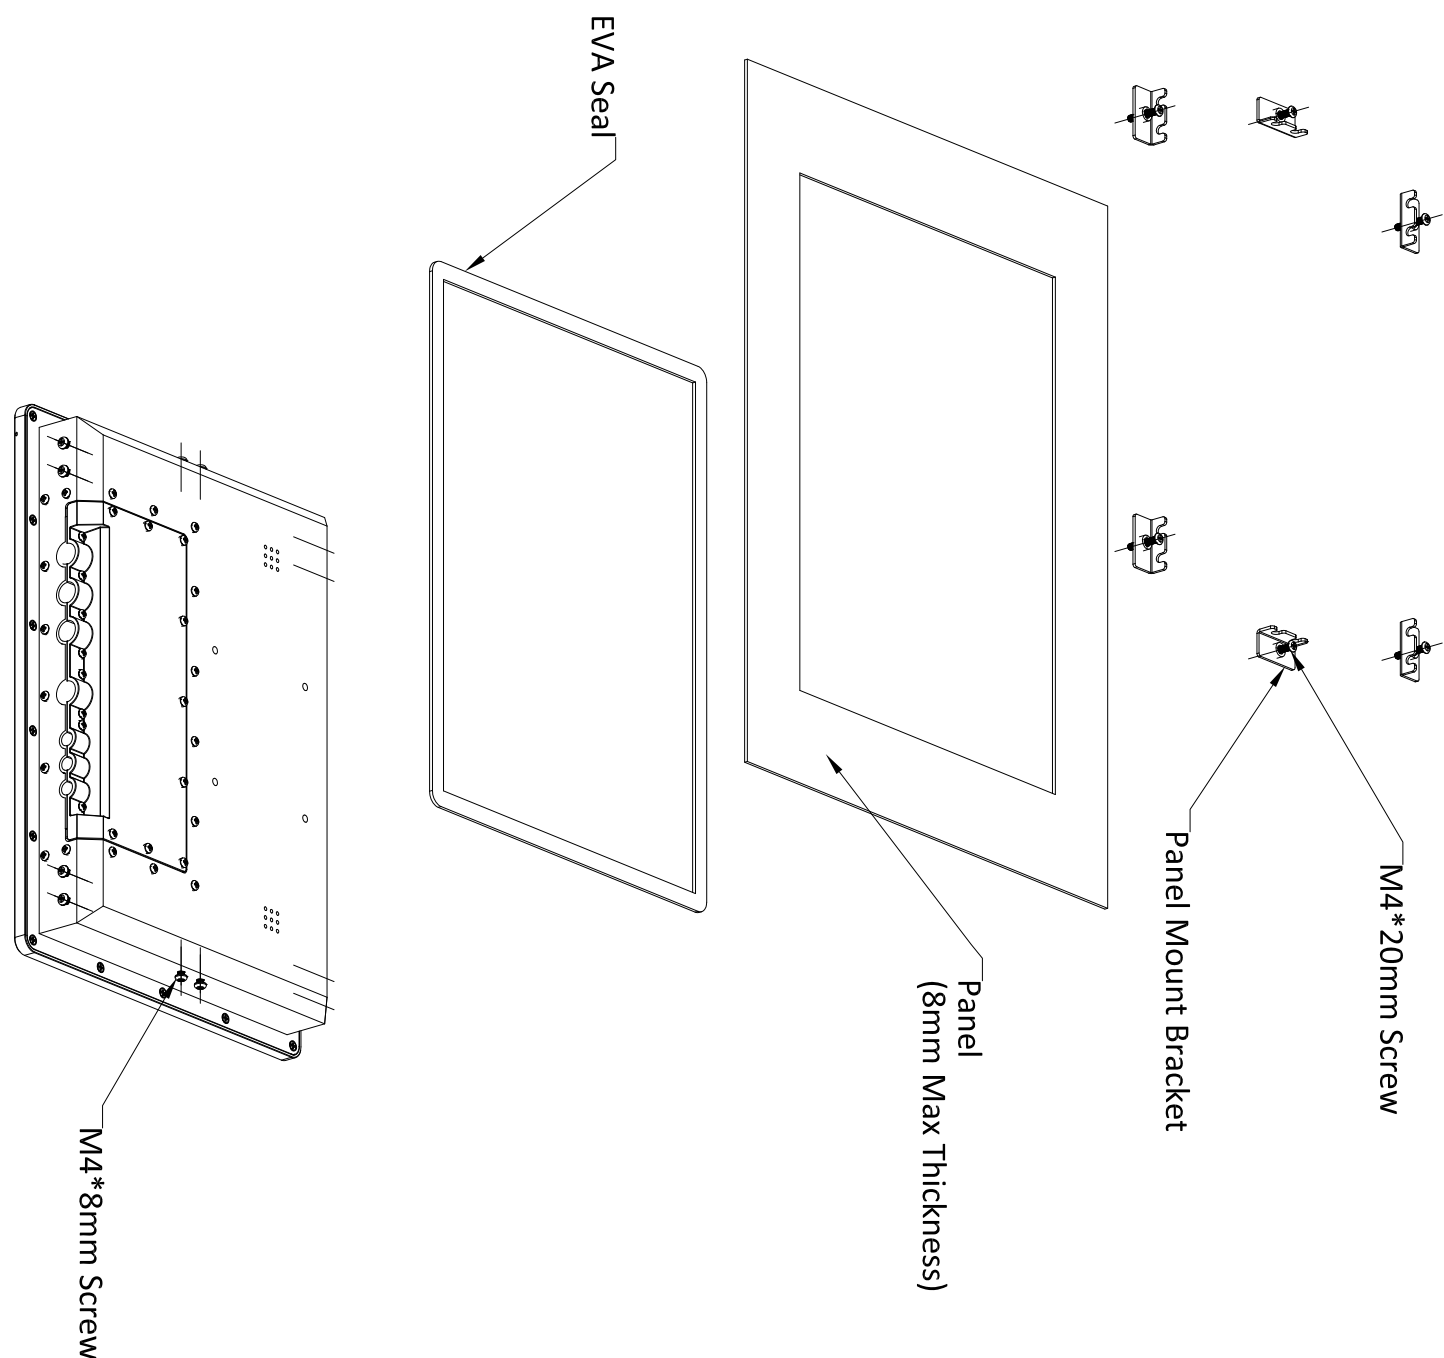


Step 2: Place the monitor into the panel cutout.

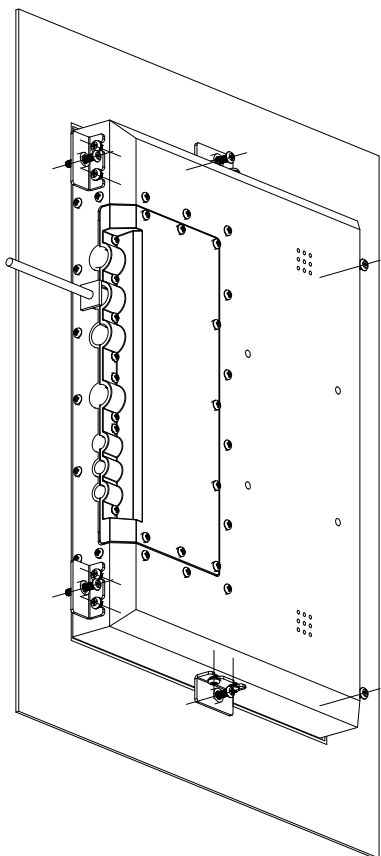

Step 3: Install the four remaining brackets. One on the left, one on the right, and two on top.

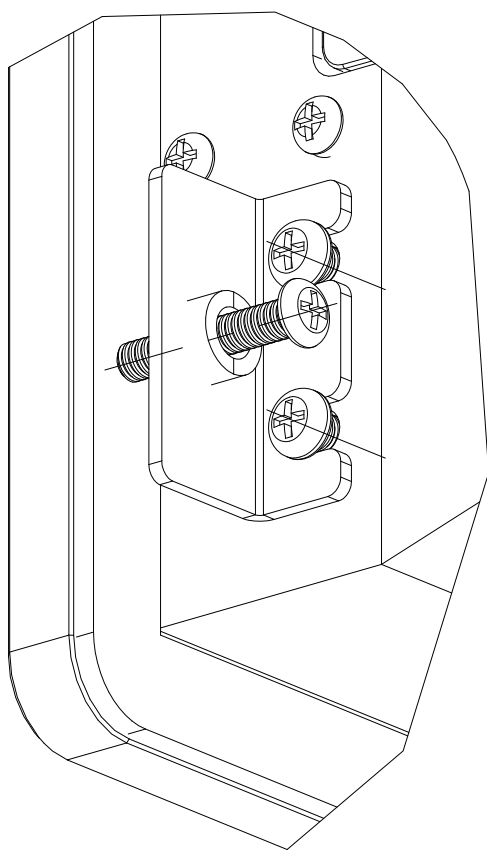

Step 4: Tighten the shorter M4x8mm screws to secure the bracket and tighten the longer M4x20mm screws to secure the monitor against the panel.

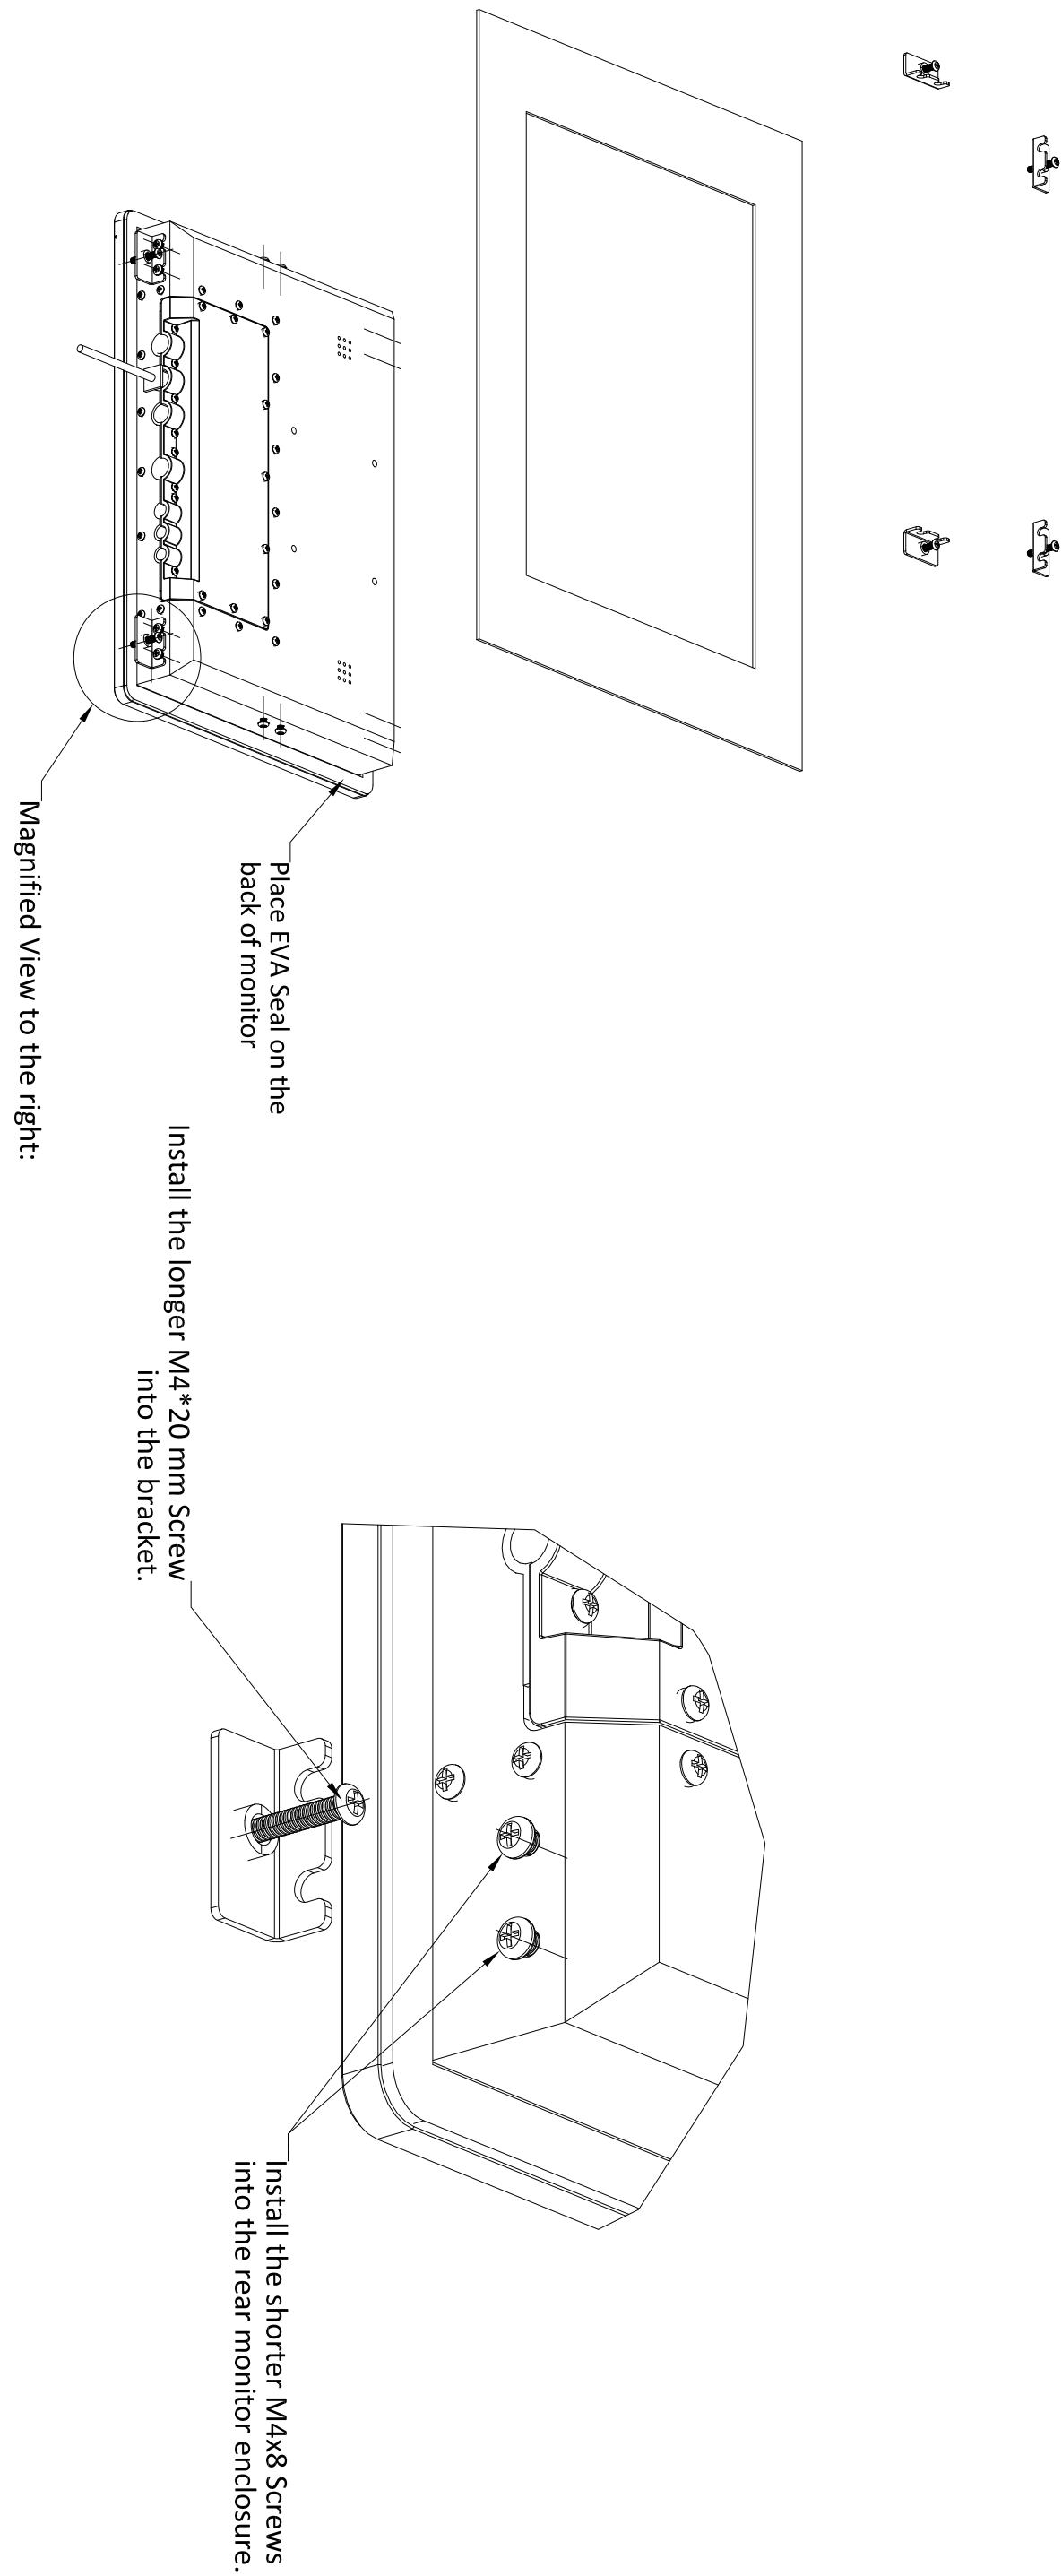

Step 1: Create panel cut out, place EVA seal, and install two bottom brackets.

