



	MAS90: 5043-43256
	SUMMIT ROOMSAVER HARDWARE
<u>QTY:</u>	<u>DESCRIPTION:</u>
8	100MM DECORATIVE HEAD LAG BOLTS
1	4MM ALLEN WRENCH
10	6 X 1 1/4" PHIL FLAT PARTICLE BOARD SCREW
1	4MM POWER DRILL DRIVER
2	4" X 2" MENDING PLATES
2	710124 F 2" MENDING PLATES
16	#8 X 1" PHIL PAN SMS ZINC SCREWS
4	2 1/4" L BRACKET
16	#8 X 3/4" PHIL PAN SMS ZINC SCREWS



LAG BOLT




4MM ALLEN WRENCH




PHIL FLAT PARTICLE BOARD SCREW



4MM POWER DRILL DRIVER

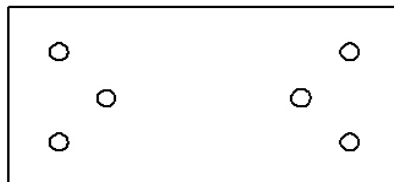


4" X 2" MENDING PLATE



2" MENDING PLATE



#8 X 1" PHIL PAN SMS ZINC SCREWS

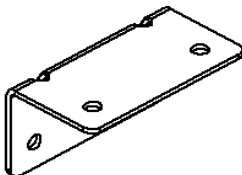

2 1/4" "L" BRACKET



#8 X 3/4" PHIL PAN SMS ZINC SCREWS

ASSEMBLY: 1 PERSON AND 45 MINUTES

TOOLS:

- 1) 4mm Allen Wrench (INCLUDED)
- 2) 4mm Allen Drill Bit
(Be sure to FULLY SEAT the bit into bolt head before turning)
- 3) Phillips Screwdriver

We recommend using a power driver with the drill bits if available

BE SURE THE LAG BOLTS ARE STARTED INTO THE HOLES ON THE FRAME RAILS DURING ASSEMBLY. DO NOT FULLY TIGHTEN UNTIL ASSEMBLY IS LOOSELY COMPLETE.



PARTS LIST:



- A) 8 - 100mm Decorative Head Lag Bolts
- B) 1 - Roomsaver Headboard (same Headboard for Twin and Full bed)
- C) 2 - End Assembly w/ doors. Doors open outward to determine Right side or Left side.
- D) 2 - 3 1/4" x 75" Mattress Rails w/Support Cleats
- E) 3 - 3 1/2" x 38 3/4" Loose Slats for Twin bed, or 3 - 3 1/2" x 53 3/4" Loose Slats for Full
- F) 10 - 1 1/4" Wood Screws
- G) 2 - 2" x 4" Mending Plates
- H) 2 - 1/2" x 2" Straight Brackets
- I) 16 - #8 x 1" Screws
- J) 2 - 2 1/4" L-brackets
- K) 8 - #8 x 3/4" Screws

ASSEMBLY INSTRUCTIONS:


Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

- 1) Attach two mattress rails (E) to headboard/footboard assemblies (D) with 8 lag bolts and 8 washers, and tighten.
- 2) Spread Slat roll out across bed frame from end to end. Place wood screws in 4 outside corners with slat pushed tightly up against the bed end. Place 3 loose slats into gaps in slat roll, and screw down with wood screws. See Slat installation information on following pages.
- 3) SEE NEXT PAGE FOR HEADBOARD INSTALLATION and L BRACKET INSTALL FOR UNDERDRESSER


HEADBOARD BRACKET PLACEMENT



When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

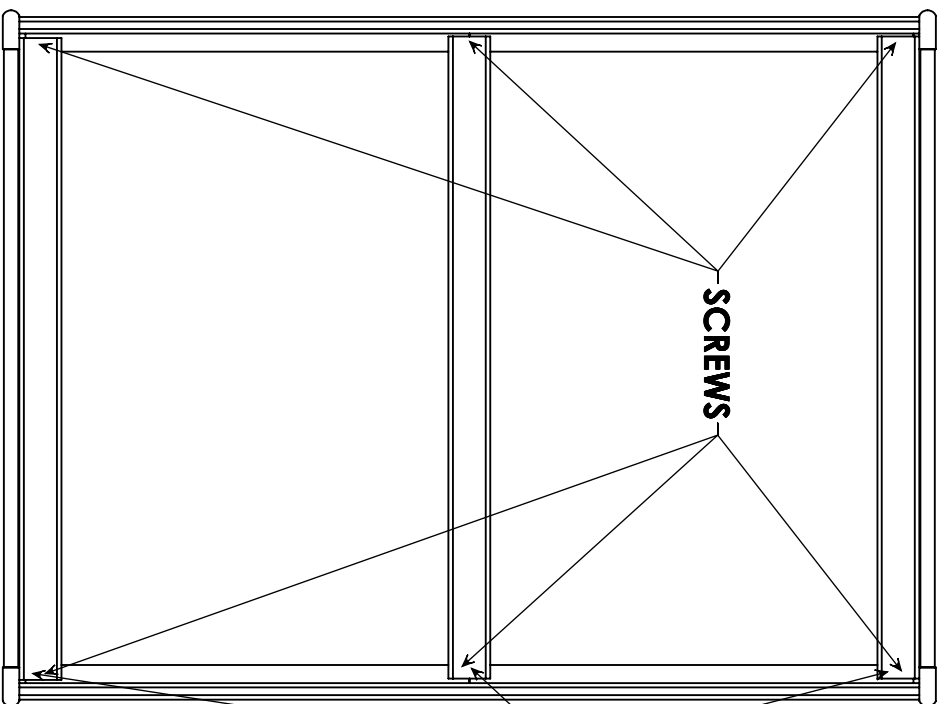

Installation of individual slats for use with Bunkie Board
(Bunkie Board sold separately)
See your retailer for purchase of Bunkie Board

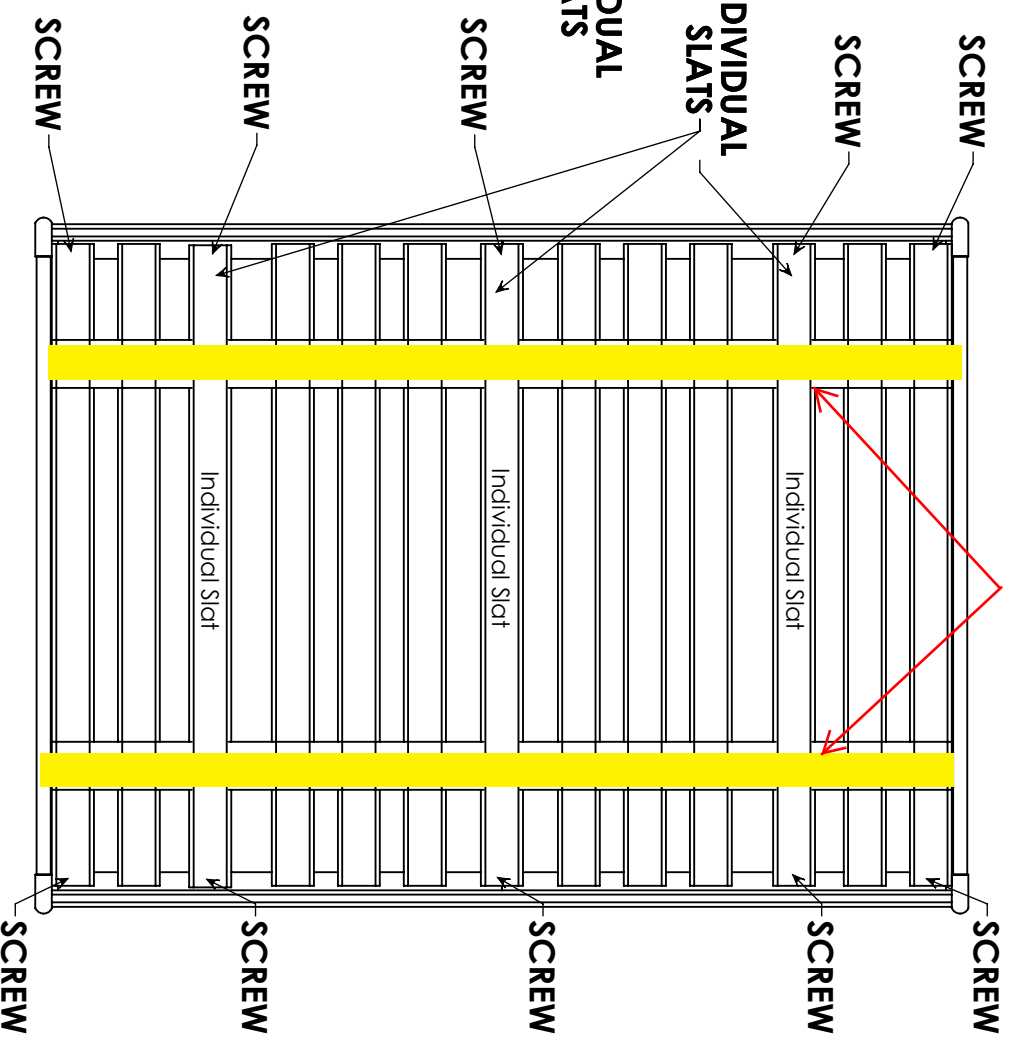

Installation of individual slats for use with Slot Roll
(Slot roll sold separately)
See your retailer for purchase of Slot Roll