




ASSEMBLY INSTRUCTIONS

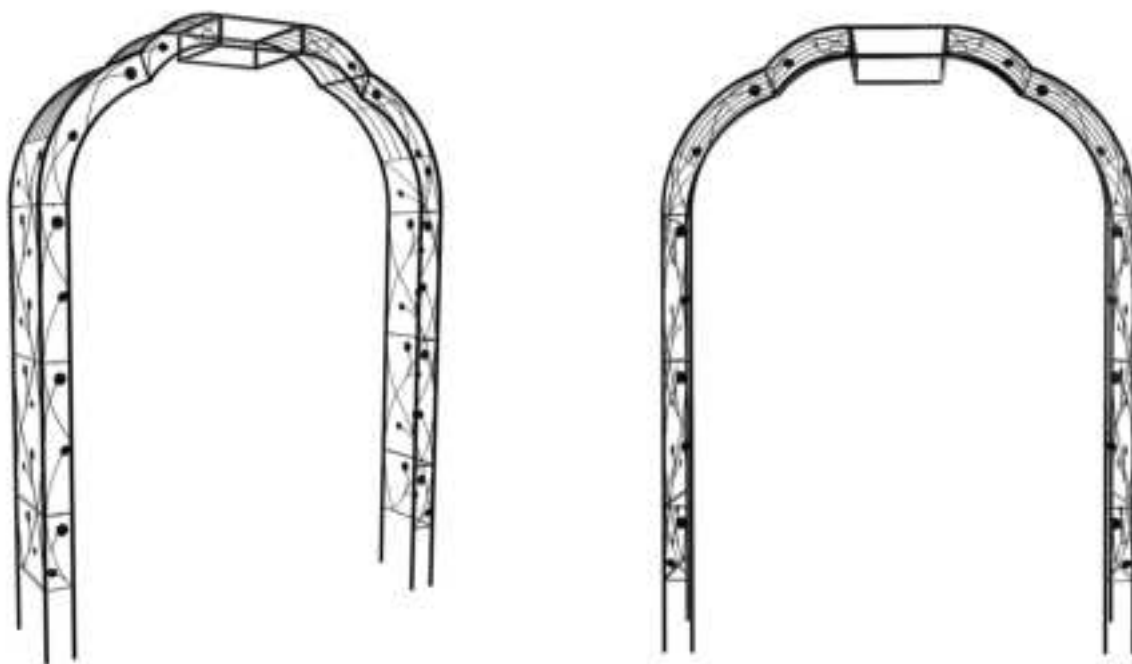

<p>①</p> <p>1pc</p>	<p>②</p> <p>1pc</p>	<p>③</p> <p>2pcs</p>	<p>④</p> <p>1pc</p>
<p>⑤</p> <p>1pc</p>	<p>⑥</p> <p>1pc</p>	<p>⑦</p> <p>2pcs</p>	<p>⑧</p> <p>1pc</p>
<p>⑨</p> <p>2pcs</p>	<p>⑩</p> <p>4pcs</p>	<p>⑪</p> <p>M6*25mm</p> <p>6pcs</p>	<p>⑫</p> <p>M6*20mm</p> <p>8pcs</p>
<p>⑬</p> <p>M6*12mm</p> <p>24pcs</p>			

Step1: Assemble the top.




Parts: ⑨x2, ⑩x4, ⑫x8.

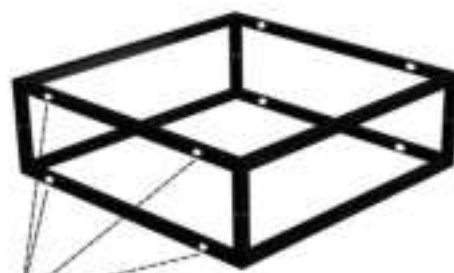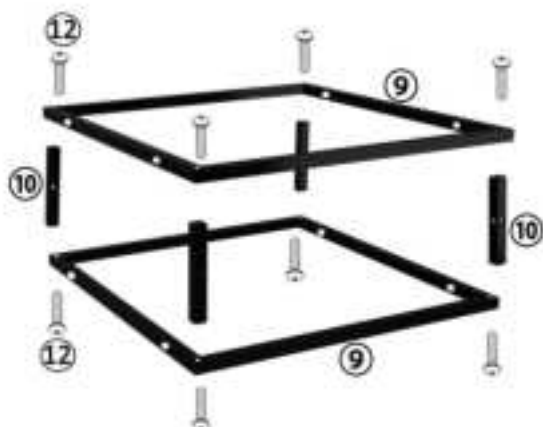

Make sure all four holes are on the same side.




Step2: Assemble the 2 side parts. Place parts ①~⑧ on the ground as shown.

Use ⑬x24.

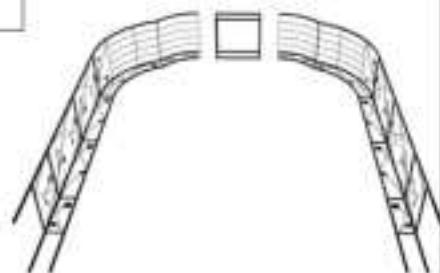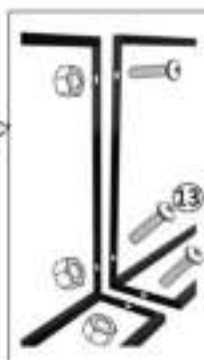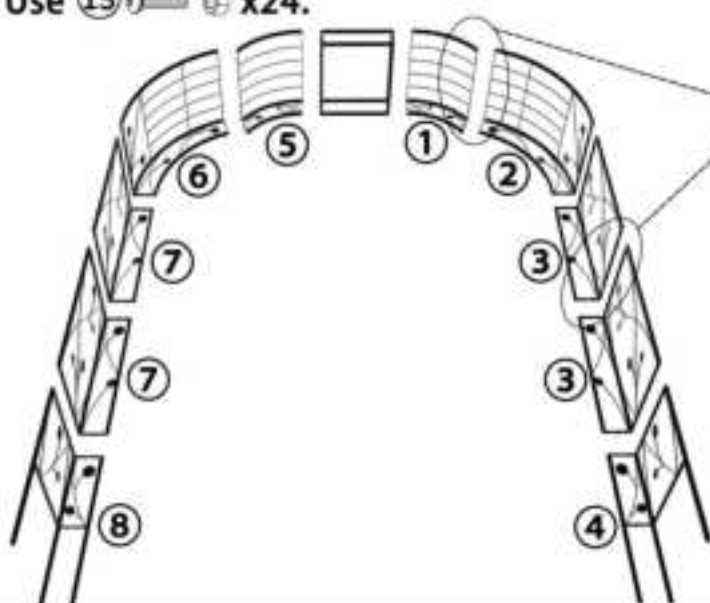

Step3: Connect the 2 parts with the top.

Use ⑫x6.

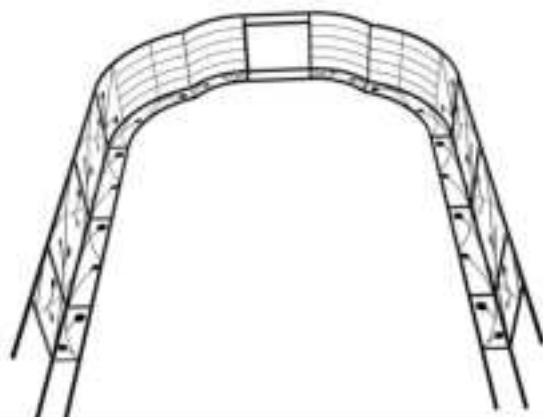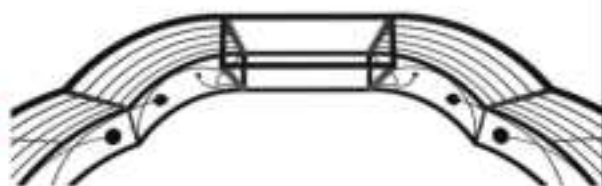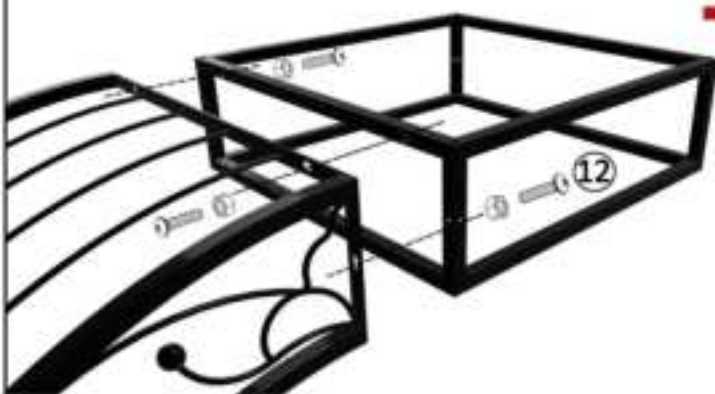

Before setting up the arch, all the screws must be 100% tightened with wrench and screwdriver.