


PRODUCT MANUAL

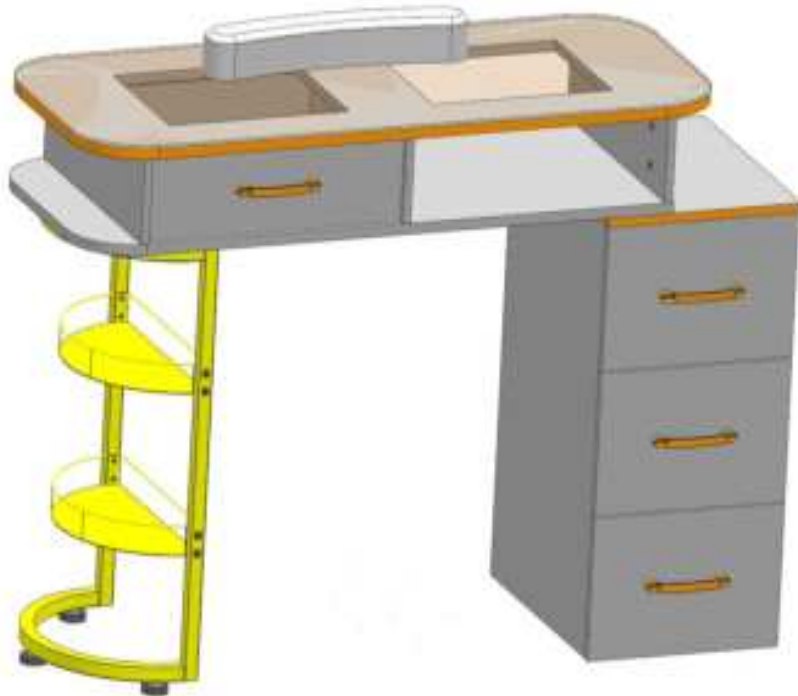

ATTENTION! PLEASE READ THESE INSTRUCTIONS BEFORE USING THIS DEVICE

PRODUCT MANUAL



NOTICE:

If your package is missing parts or you are having issues with assembly, please call us directly. Our customer service team will address any questions or concerns you may have. Have this manual open and ready for reference.




SAFETY









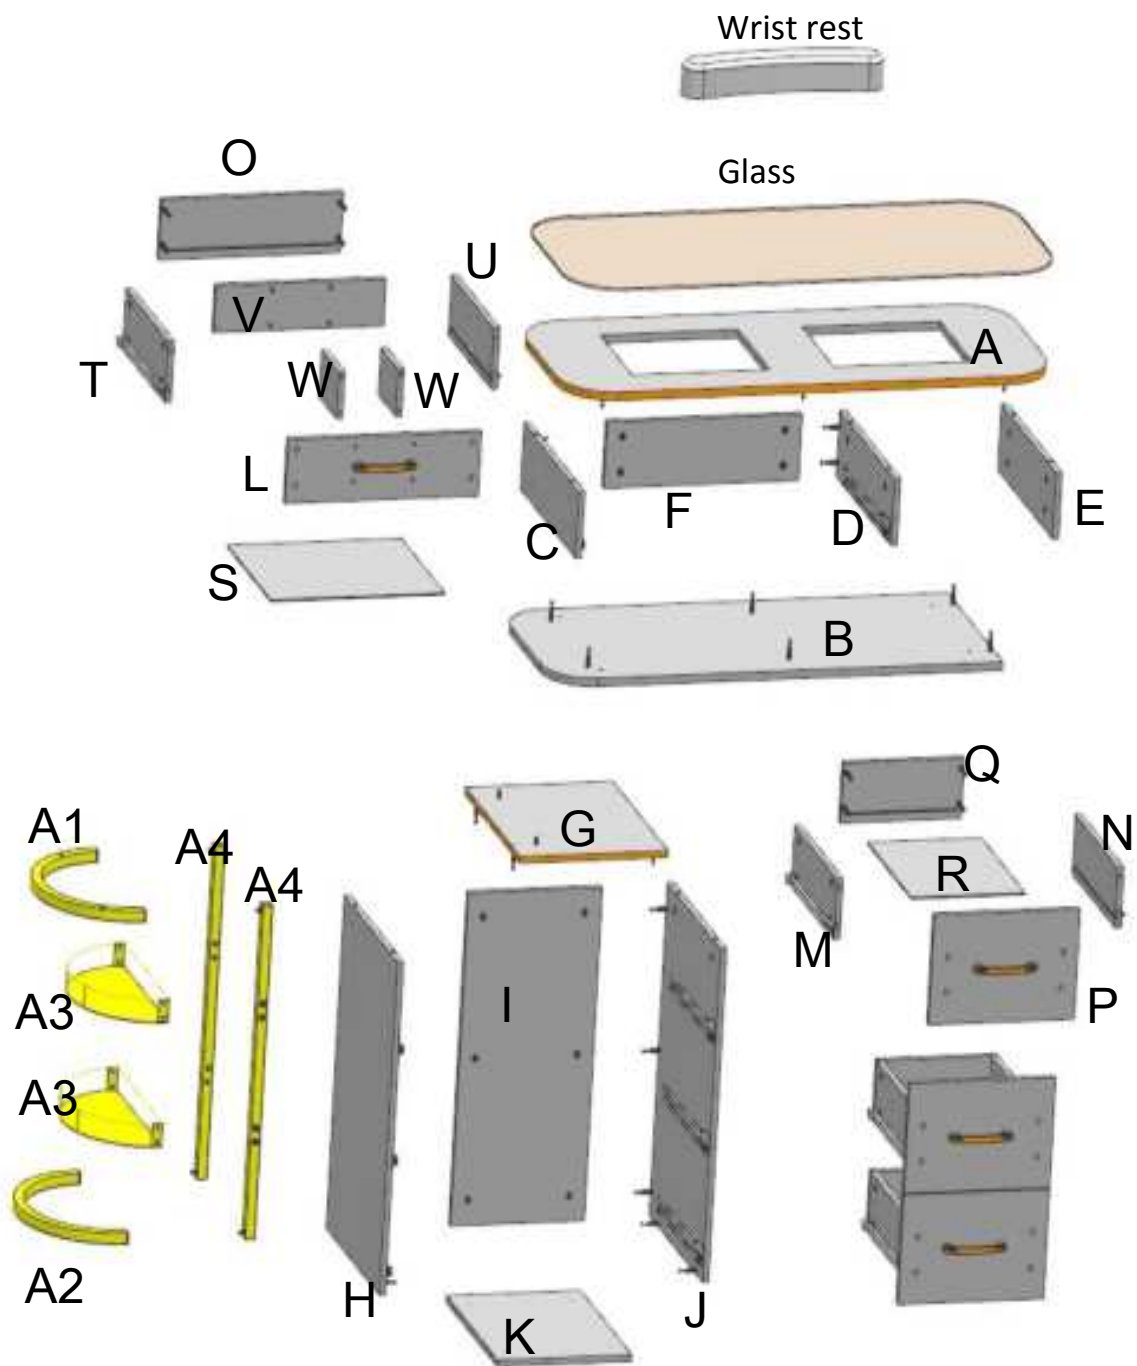



To reduce risk of injury when installing & using the Tool trolley, follow this precaution:

- Read all of these instructions before installing and using your salon Tool trolley.

OTHER ITEMS YOU WILL NEED (not included)

- Hand Tools: Wrench, Rubber Mallet, Screwdriver (Phillips), Sturdy box



	a*62		h*4
 φ4x12	b*32		j*3
 M4x18	c*8		k*1
	d*4		l*1
 M6x25	e*10	 Rubber pad	m*4
 M6x30	f*6		
	g*12		

Installation instruction

Installation Method for Connecting boards

Step 1 . Install threaded pins into the reserved plastic thread holes by screwdriver .


Step 2 .Insert the installed threaded pins into the side holes one to one .

Step 3 .Install Eccentric wheels into the larger holes of the board ,The arrow groove on the surface of the eccentric wheel must point to the side hole .




Step 5 . tighten them by cross-head screwdriver

Please follow up the Example beside.

Example:

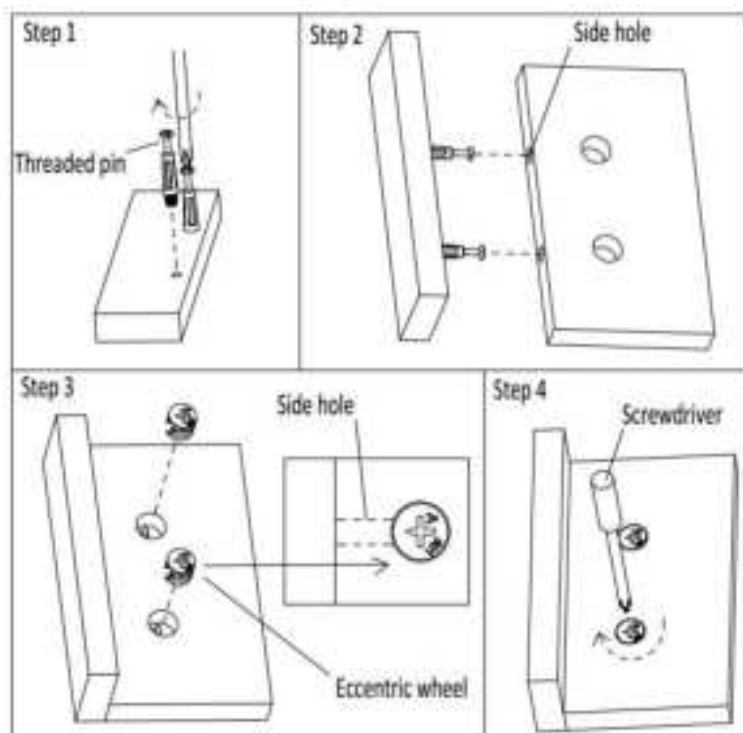

1

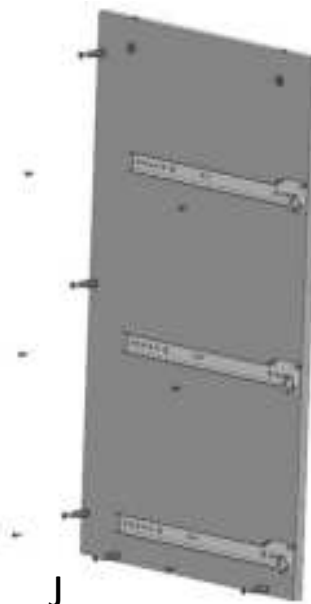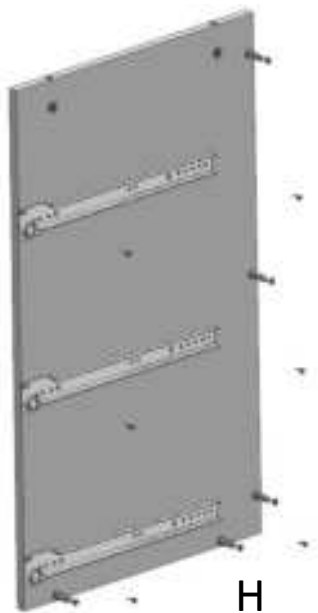


2



H




I

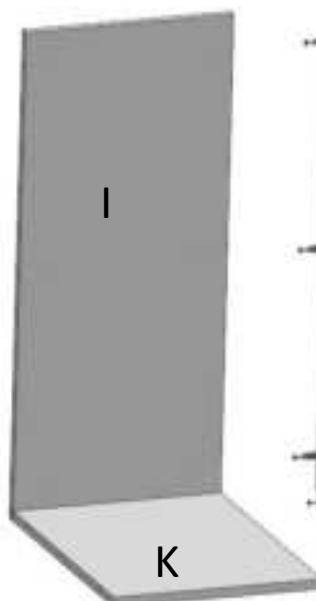


K

J

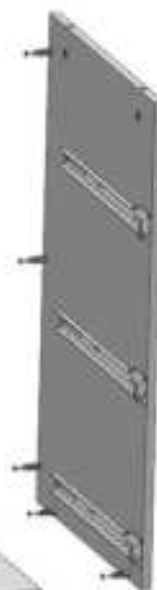


3

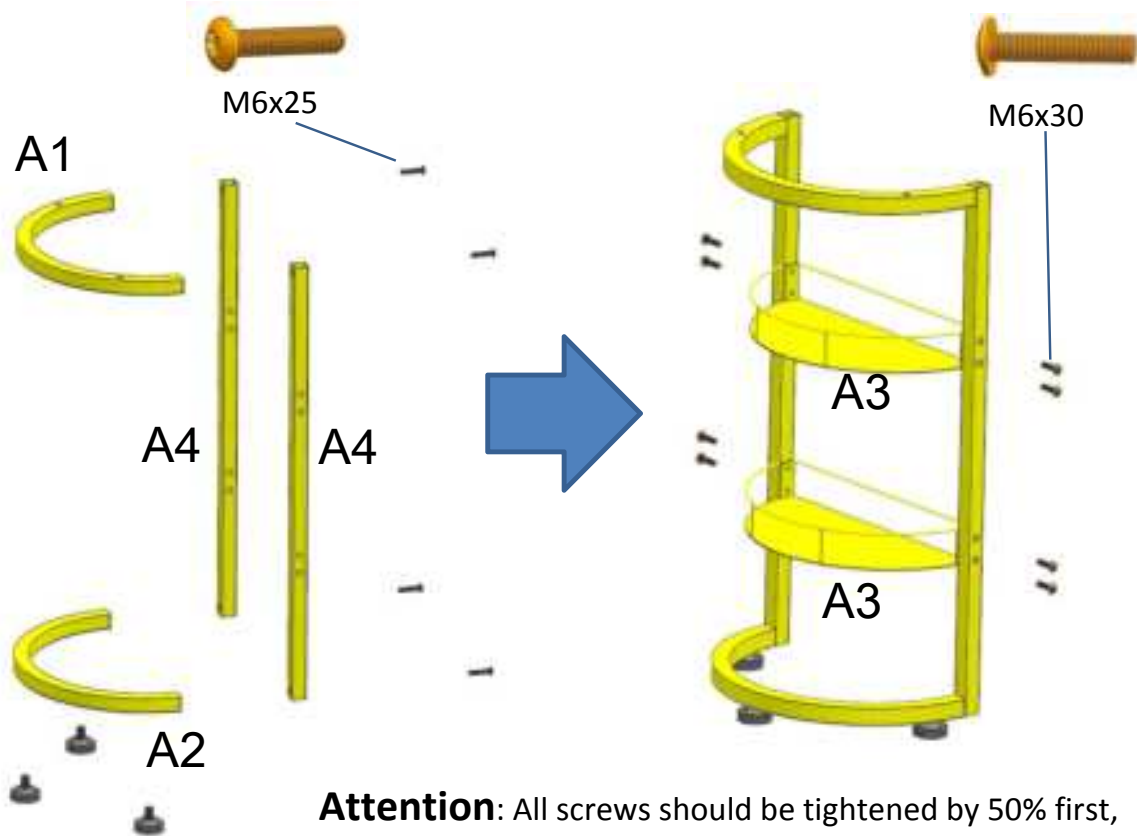


Attention: All screws should be tightened by 50% first, and then tightened to 100% after all screws are installed


4

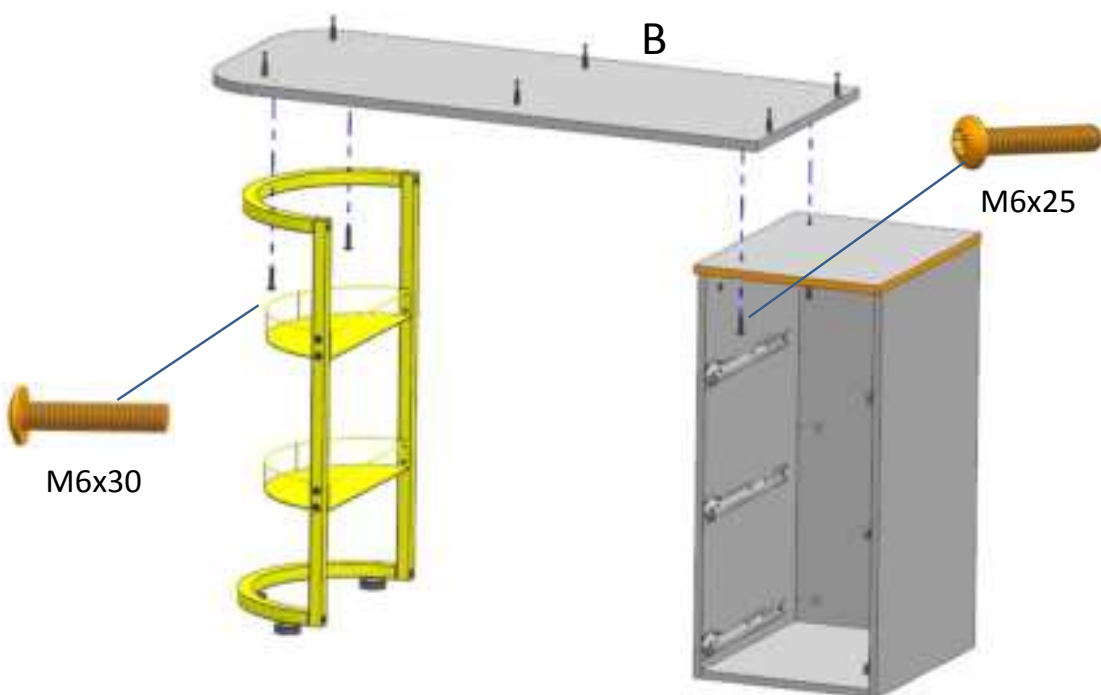


5

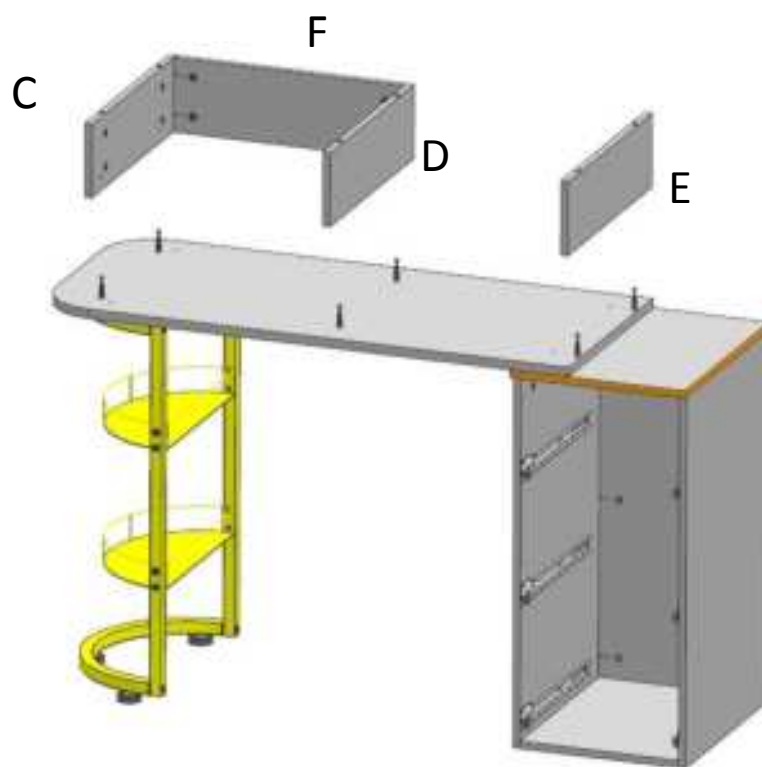


6

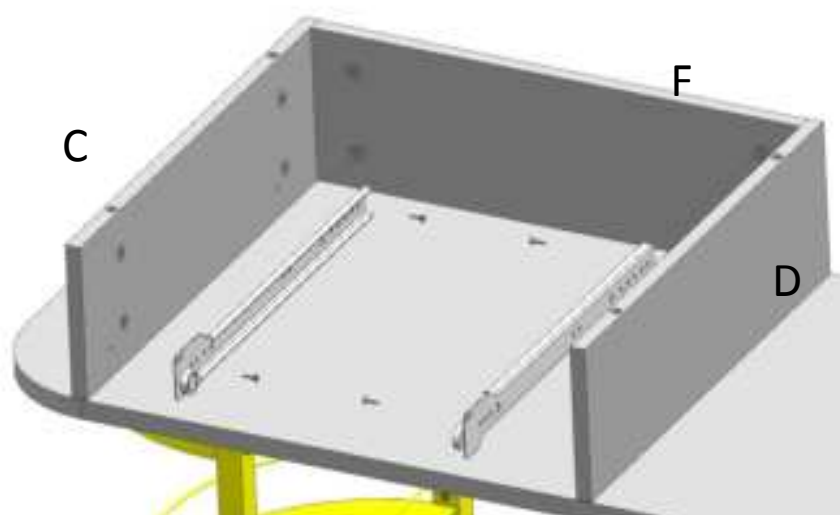


7

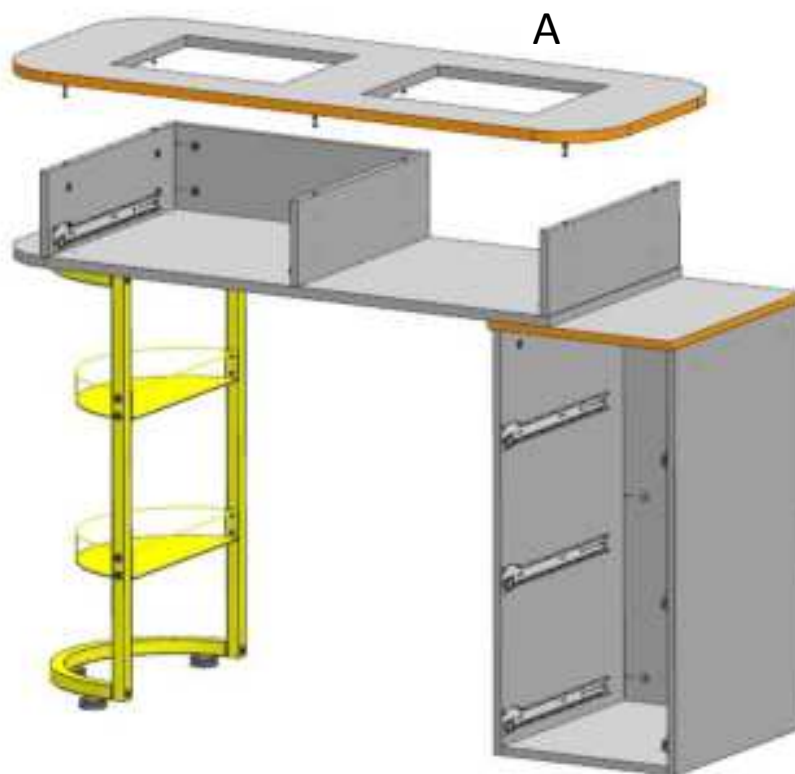

8

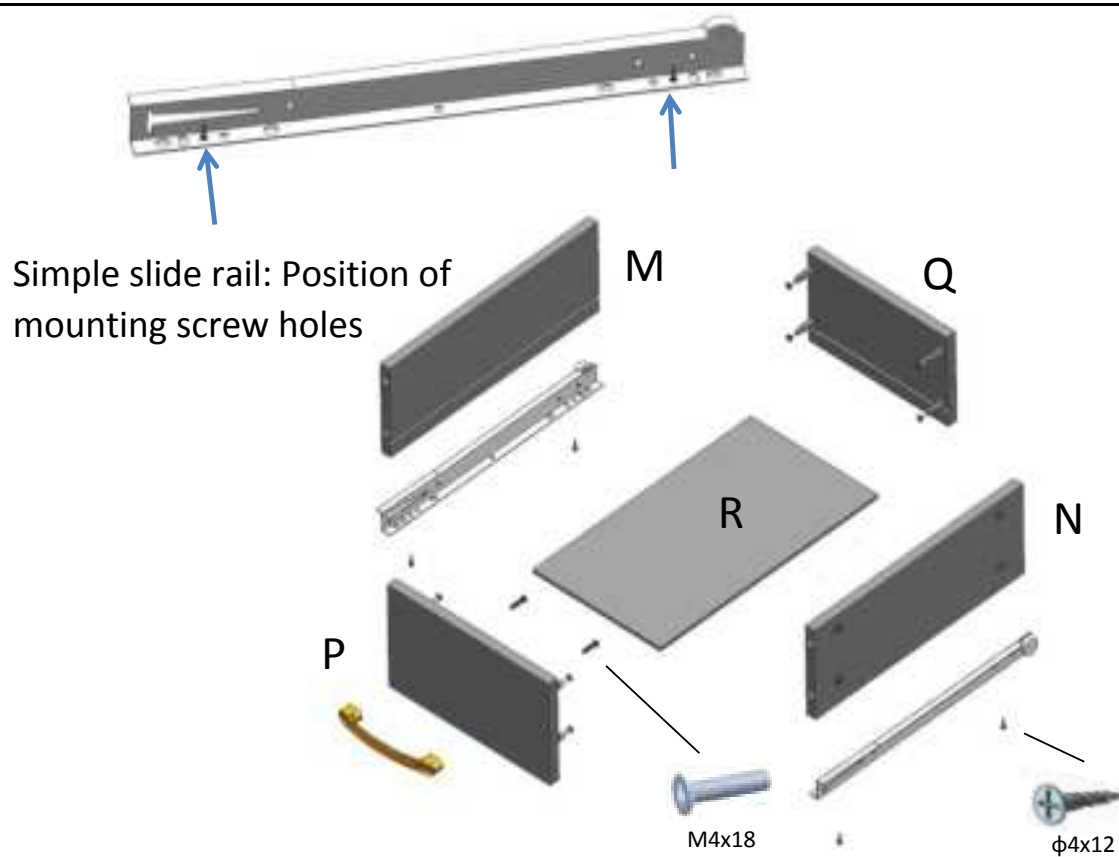

9

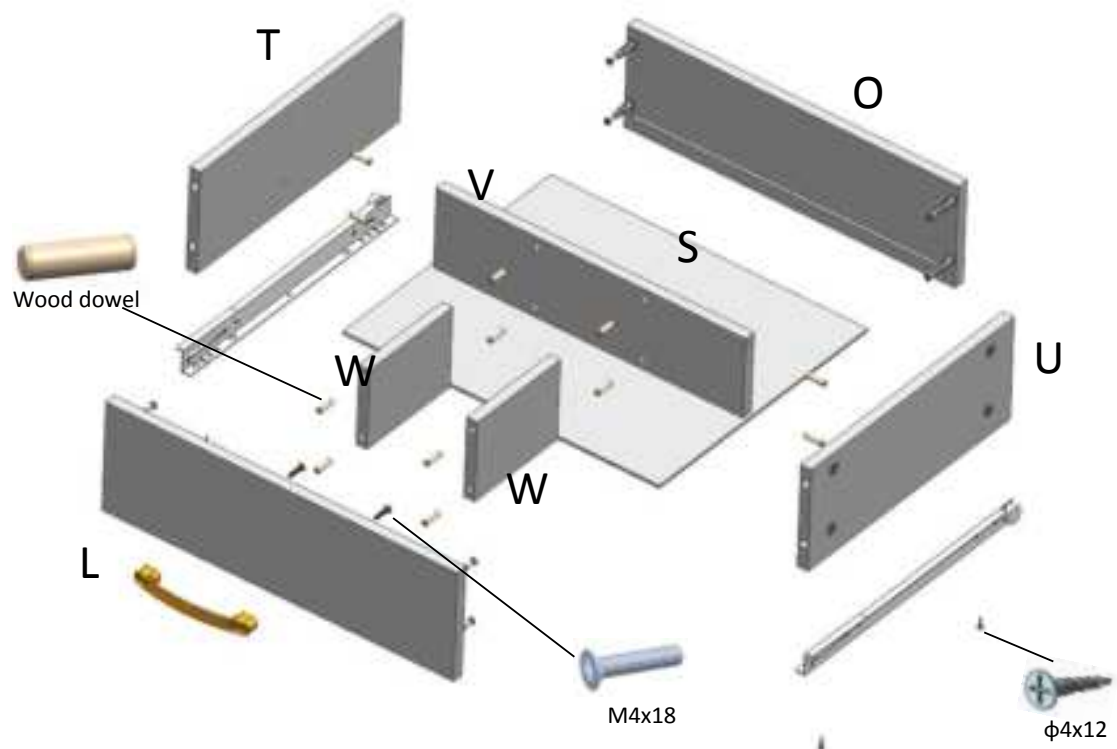

10

