


108S Conversion Kit for Schlage® and Corbin Russwin Cylinders

ASSA ABLOY

When used in 5300LN, 4700LN, or NexTouch® Series Cylindrical Locks

Installation Instructions

1. Remove the key from the cylinder.
2. Remove threaded collar and tailpiece.
3. Install tailpiece with threaded collar. (Adjust collar for proper end play of plug.)
4. Attach adapter sleeve on the cylinder and slide cylinder into cylinder sleeve (if required for fit).
5. Follow instructions packed with lock to install cylinder into lever handle.

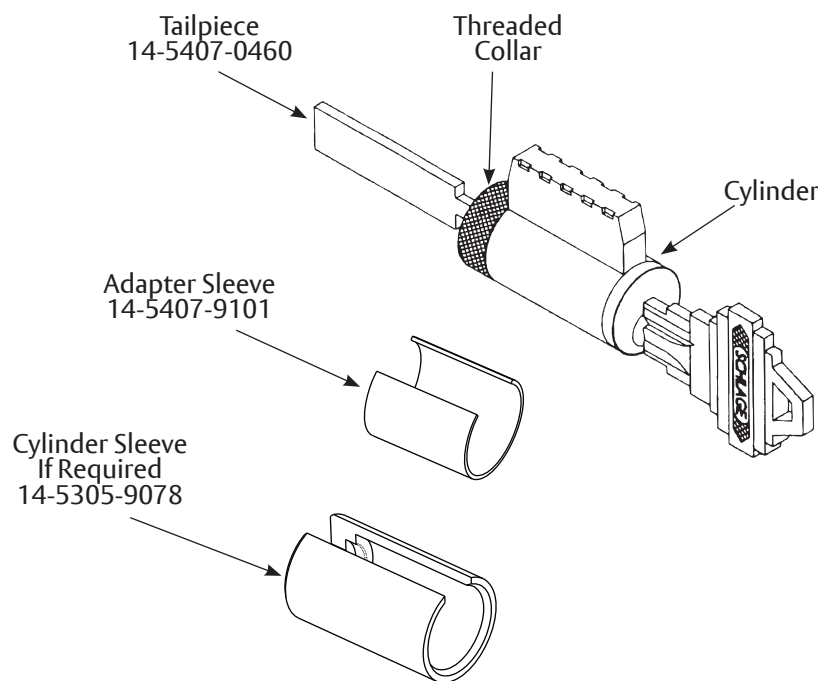

Note: 4700LN and NexTouch® series manufactured since 2021 no longer require the cylinder sleeve. The sleeve is only required on legacy models of these series.



WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.



WARNING

Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.

80-9150-0061-010 11/23

1-800-438-1951 • www.assaabloy.com

Experience a safer
and more open world