
VEVOR Affordable. Reliable. Home Improvement.

DRYER VENT KIT


MODEL:HG-04







MODEL:HG-04



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.


Safety Instructions

Read and understand this entire manual before assembling, installing, operating, or servicing this product. Failure to follow these warnings and instructions can cause personal injury or damage to valuable property.


WARNING: Please carefully read the following instructions in order to reduce the risk of injuries, accidents or damage to the product by itself.

- 1. Products shall be installed by adults;
- 2. Products are installed away from children and pets;
- 3. Please wear gloves to install the product to avoid hand injury;
- 4. This product is only suitable for indoor use


PART LIST

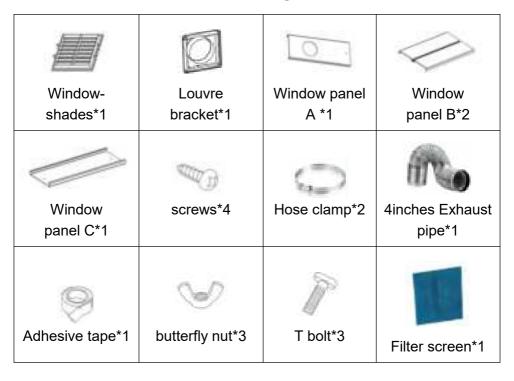

STRUCTURE DIAGRAM AND COMPONENTS

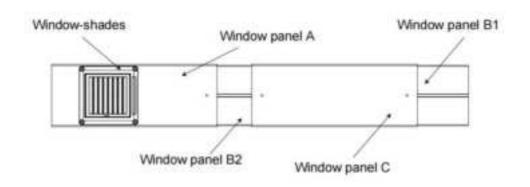

PRODUCT SIZE

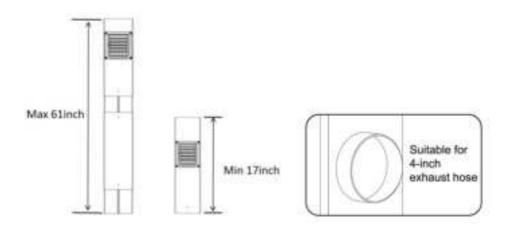


INSTALLATION AND INSTRUCTION


Connection: We recommend using a metal 90 degree elbow (also known as a "right Angle elbow") on the back of the dryer to prevent the transition hose from being squeezed against the wall. This elbow needs to be purchased separately.

1. First, put the filter screen into the louver bracket, then insert the two


protrusions of the louver into the holes in the bracket, and finally press the louver into the bracket.

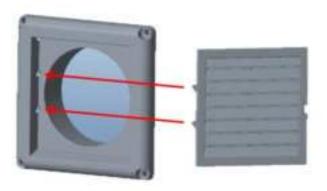


2.Use four screws to secure the shutter to window panel A. Attention: Make sure the fan blades are facing downwards, otherwise water will seep back in when it rains.

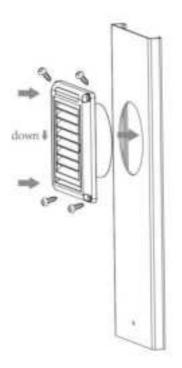


3.Connect the exhaust pipe of the dryer, tighten the screw of the hose clamp to connect the exhaust pipe with the bracket.

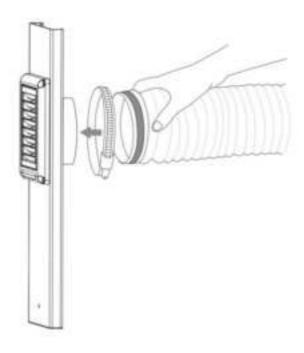


3. Measure the window frame size first, then adjust the length of the window panel, and then assemble the required window panel using T-bolts. To match the window frame size, you can cut the window panel short



Note: The installation order of the window panel is to insert the window panel B into the window panel A, the window panel C to cover the window panel B, and the panel B into the panel C.




4.Fix the window panel to the window, seal the gap between the window and the window panel with aluminum foil tape and the gap between the exhaust pipe and the louver bracket. The sliding position of the window can be sealed with rubber tape; aluminum foil tape needs to be purchased separately.

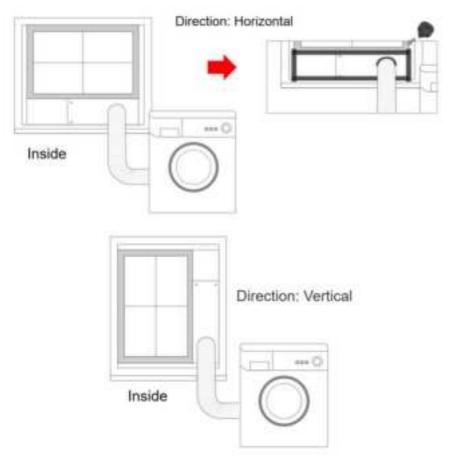

Attention:Whether installed vertically or horizontally, make sure the blades are facing down, otherwise water will seep in during rain

5.If your dryer is close to the wall, we recommend that you purchase a metal 90 degree elbow for yourself and install it on the dryer to avoid damage and poor exhaust due to folding of the exhaust pipe.

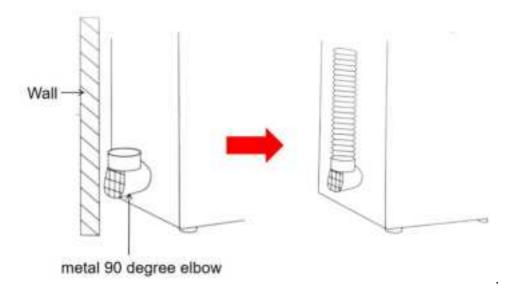

Note:Clean the filter screen with a brush once every 3 to 5 batches of clothes have been dried.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim

Place, Rancho Cucamonga, CA 91730

UK	REP	YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX
EC	REP	E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.

