


## CM9-975B VEHICLE EXIT WAND

### Exit Wand Installation

1. On your concrete drive-way, use a 1 inch concrete bit and drill a 5 inch deep at the desired position.
2. Cut a straight line 1 inch deep and 3/16 inch width from the exit wand to the motor.
3. Install the exit wand in the hole and make sure it is snug fit to the bottom. You should have 1.75" to the ground level.
4. Install the exit wand wire (we recommend using electric conduit to extends the cable life).
5. Follow the wiring diagram and connect while main power is OFF.

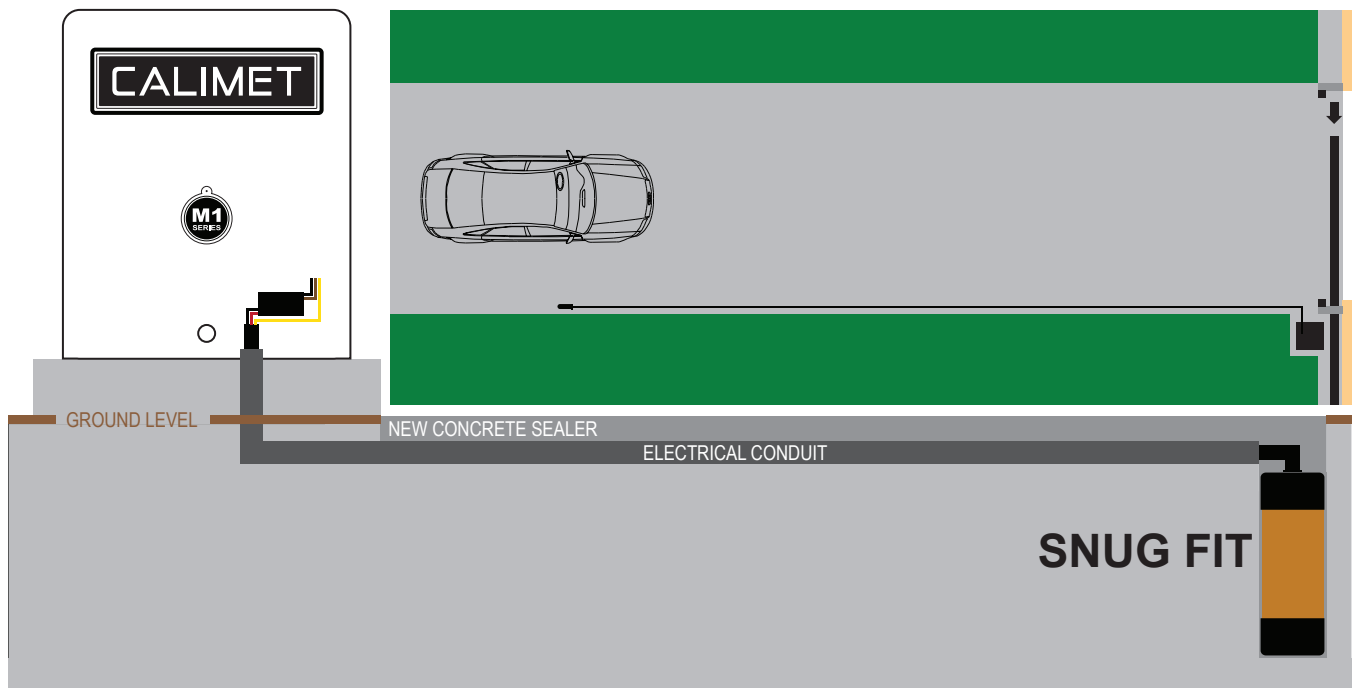

### Exit Wand Wire Connection Diagram

