


# WaterCop Classic Outdoor Wiring Guide

1. REMOVE THE FRONT COVER FROM INDOOR CONTROL UNIT. (4 SCREWS)
2. INSERT THE OUTDOOR CABLE THROUGH THE CABLE FITTING ON SIDE OF THE CONTROL UNIT.
3. PLUG THE WIRE LEADS FROM THE CABLE INTO THE INTERNAL WIRE HARNESS LEADS.  
RED / RED, BLUE / BLUE & BLACK / BLACK
4. REINSTALL THE COVER USING THE 4 SCREWS. TIGHTEN THE CABLE FITTING TO SECURE THE OUTDOOR CABLE.
5. REFER TO OWNER'S MANUAL FOR INSTALLATION AND OPERATION.

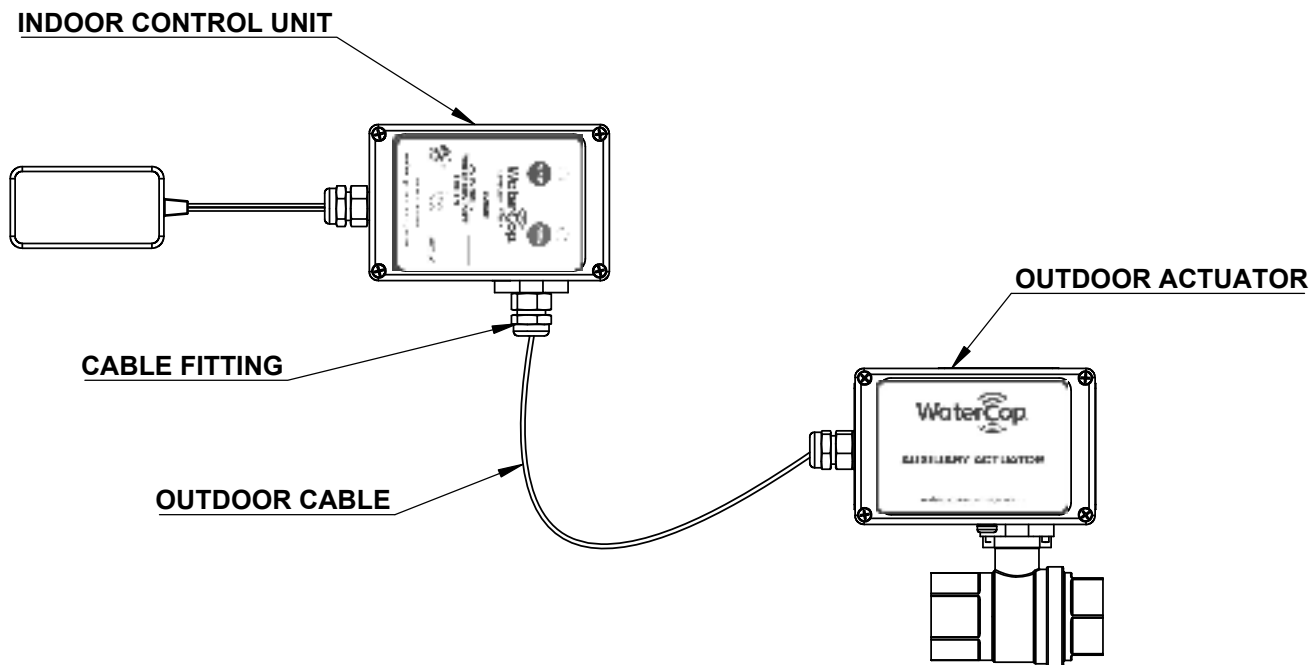

192513 REV. D