

MO-6010/MO-6022

Responsible Lighting®

INSTALLATION INSTRUCTION

Lucio LED Monopoint

MO-6010/MO-6022

WAC LIGHTING

Responsible Lighting®

ACCESSORIES:

With the power off, follow steps below. Reference specification sheet for compatible accessories.

Glare Control Accessory Installation:

Step 1: Gently move front cap forward to remove it. One torsion spring will remain engaged while other will slide out completely. (See **Fig 2**)

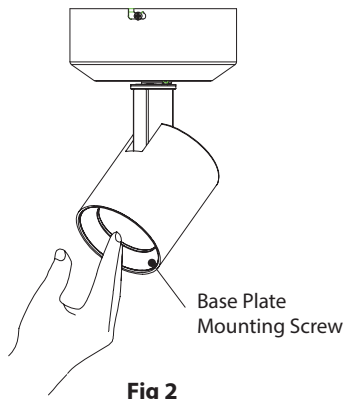


Fig 2

Step 2: Insert glare control accessory through the front frame. (See **Fig 3**)

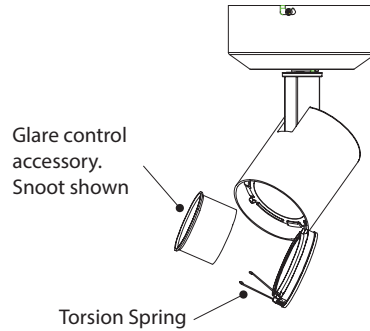


Fig 3

Step 3: Reinstall front cap back in place. Ensure torsion spring securely goes back into spring slot on fixture. (See **Fig 4**)

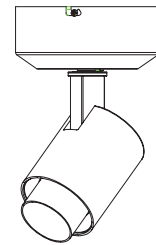


Fig 4

Lens Accessory Installation:

Step 1: Gently move front cap forward to remove it. (See **Fig 5**)



Fig 5

Step 2: Rotate lens holder with ears anticlockwise to remove it. (See **Fig 6**)

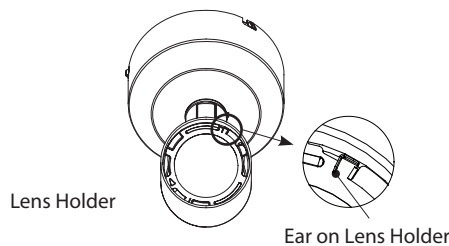


Fig 6

Step 3: Replace existing lens with new lens. (See **Fig 7**)

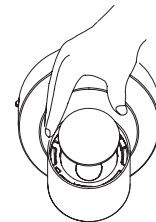


Fig 7

Lens Accessory Installation:

Step 4: Align the triangle mark on the lens holder to the one on the reflector holder, then rotate clockwise to lock it. (See **Fig 8**)

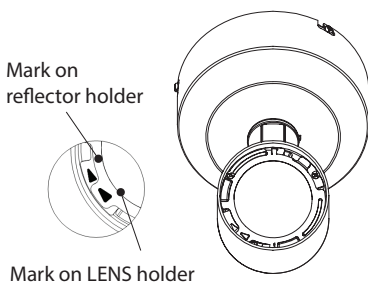


Fig 8

Step 5: Reinstall front cap back in place. Ensure torsion spring securely goes back into spring slot on fixture. (See **Fig 9**)

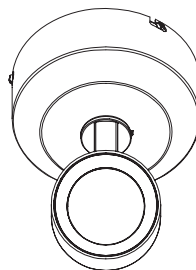


Fig 9

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585